

**NOTE**

Your clock's display is protected by a piece of film during shipping. Open the front cover and peel off this film before using the clock.

**Setting the Date and Time**

- When you set the date, the clock automatically sets the day of the week.
- To switch between the 12- and 24- hour time formats, press **12/24**. In the 12-hour time format, **P** appears for a PM hour.
- If you press , , or during the time setting, the clock automatically returns to the previous setting.
- While setting the time or alarm time, if you do not press any key within 30 seconds, the clock returns to the current time/temperature display.

Thank you for purchasing the RadioShack Multifunction Travel Alarm Clock. It combines the versatility of a clock, picture frame, and name card holder into one convenient system. You can insert a picture into the frame to make a special keepsake. The 60-year calendar goes from 1990 to 2050.

**REMOVING THE BATTERY INSULATION STRIP**

To prevent battery drain during shipping, your clock is shipped with an insulation strip that you must remove before use. Turn the clock over and pull up the back cover. Firmly grasp the strip end and gently pull it out. The clock beeps. **12:00** and the current temperature appear.

**SETTING THE DATE AND TIME**

1. Hold down until the clock sounds a long beep and the hour digits flash.
2. Repeatedly press or hold down **▲** or **▼** to set the hour.
3. Press to store the hour. The minute digits flash.

4. Repeat Steps 2 and 3 to set the minute, year, month, and date. When you finish, the current time appears.

**SETTING THE ALARM TIME**

You can set the clock to sound an alarm at a specified time.

1. Hold down until the clock beeps. **12:00** or the preset alarm time appears. The hour digits flash.
2. Repeatedly press or hold down **▲** or **▼** to set the alarm hour.
3. Press . The minute digits flash.
4. Repeatedly press or hold down **▲** or **▼** to set the alarm minute.
5. Press to store the alarm time. The alarm turns on and appears. At the preset alarm time, the alarm sounds for one minute then automatically turns off. To silence the alarm sooner, press any key (except **SNOOZE/light**).
6. To turn the alarm on or off at any time, press . To turn off the alarm when it sounds, press twice. disappears.

**! IMPORTANT !**

If an icon appears at the end of a paragraph, go to the box on that page with the corresponding icon for pertinent information.

— Warning      — Note

NOTE

Using Snooze

- Each time you press **SNOOZE/light**, the backlight shines for about five seconds.
- Pressing **SNOOZE/light** during the snooze alarm time initiates a new snooze cycle.

Care

Keep the clock dry; if it gets wet, wipe it dry immediately. Use and store the clock only in normal temperature environments. Handle the clock carefully; do not drop it. Keep the clock away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

WARNING

Keep button-cell batteries away from children. Swallowing a button-cell battery can be fatal.

BATTERY NOTES

- Dispose of old batteries promptly and properly.
- Do not burn or bury batteries.
- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries.
- If you do not plan to use the clock for a month or more, remove the batteries. Batteries can leak chemicals that can damage electronic parts.

USING SNOOZE

To temporarily silence the alarm for five minutes, press **SNOOZE/light**. z<sup>z</sup> appears. After about five minutes, the alarm sounds for one minute then automatically turns off. This cycle is repeated four times. You may temporarily silence the alarm during the snooze cycle by pressing any key (except **SNOOZE/light**).

To cancel the snooze function while the alarm sounds, press **ON OFF** twice. z<sup>z</sup> and disappear. To cancel the snooze function before the next snooze cycle begins, press **ON OFF** once. z<sup>z</sup> and disappear.


RESETTING THE CLOCK

If the clock displays segmented digits, does not work properly, or locks up, you can reset the clock. Open the back cover and use a pointed object, such as a straightened paper clip, to press **RESET**. The clock beeps once. Reset the date and time.

REPLACING THE BATTERY

Your clock comes with two CR 2032 lithium batteries for power. One battery is to power the light, and the other is to power the clock. When the display dims, or the clock stops working properly, replace the batteries. Batteries are available at your local RadioShack store or online at [www.radioshack.com](http://www.radioshack.com).

1. Open the back cover.
2. Use a Phillips screwdriver to loosen the screw from the battery compartment cover. Then remove the cover.
3. Use a screwdriver to gently remove the two batteries from the battery holders.
4. Insert two new batteries into the battery holders with their positive (+) side up.

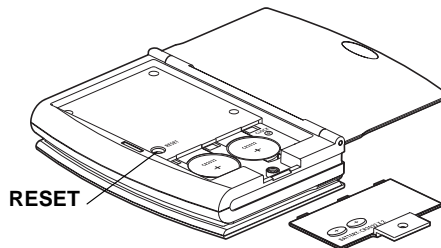

5. Replace the cover and secure it with the screw.

SPECIFICATIONS

Power .....	Two CR 2032 Batteries (supplied)
Clock Accuracy .....	±0.67 Sec/Day
Temperature Accuracy .....	±2°F (±1°C)
Operating Temperature .....	16°F to 129°F (-9°C to 54°C)
Clock Battery Life (alarm once a day) ....	400 Days
Light Battery Life (light 20 sec/day) .....	350 Days
Photo Size (HW) .....	2.12 x 3.54 inches (54 x 90 mm)
Dimensions (HWD) .....	4 <sup>3</sup> / <sub>8</sub> x 3 <sup>1</sup> / <sub>8</sub> x 1 <sup>5</sup> / <sub>16</sub> Inches (110 x 79 x 24 mm)
Weight (with batteries) .....	4.94 oz (140 g)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>