

Handsfree Speakerphone Kit for LG/Touchpoint

17-916

OWNER'S MANUAL — Please read before using this equipment.

Your RadioShack Handsfree Speakerphone Kit is easy to use. It turns your cellular or PCS phone into a speakerphone in your car or truck. Just plug it into any standard (negative ground) 12-volt power source, such as a cigarette-lighter socket, connect it to your phone, plug in the microphone, and it is ready to use. It even automatically recharges the phone's battery.

Warning: Always wear your seat belt. Never place a phone where it could damage or interfere with the operation of any passive safety device (airbags or seat belts).

Notes:


- For safety and the best performance, hold your phone upright with a dash-mounted phone holder, available at your local RadioShack store.
- To avoid lockup of the speakerphone system, always disconnect the speakerphone kit from power before starting your vehicle.

IMPORTANT

VOLUME ADJUSTMENT: Please note that for optimal use, the earpiece volume must be set to maximum. It is important that the volume is adjusted in two places. First set the phone's volume and then set the volume on the speakerphone, using the side buttons.

KEYPAD TONES: When placing a call, you will not always hear the touch-tones through the speakerphone. This is a normal condition and not a defect.

A QUICK LOOK AT YOUR SPEAKERPHONE KIT

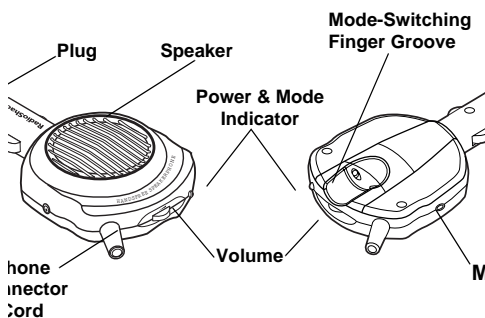

PREPARATION

1. Insert the speakerphone's plug into your vehicle's 12-volt power source or cigarette-lighter socket. The green POWER indicator lights. Turn the speaker grill toward you to allow at least 2 inches of clearance so you can use the mode switch on the back.

Notes:

- You might have to turn the ignition key to Accessory or ON to power the cigarette-lighter socket.
- If your vehicle's cigarette-lighter socket is difficult to reach, outlet adapters are available at your local RadioShack store.

2. Plug the phone connector, located on the end of the coiled cord, into the slot on the base of the phone. **TOP** should face the same direction as the keypad. The connector will only fit one way; do not force it.

3. Plug the microphone into the **MIC** jack located on the side of the speakerphone.

Note: Replacement microphones (RSU 12294229) are available through your local RadioShack store.

4. You can attach the microphone to either your car's visor or your clothing.

To use the supplied visor clip to attach the microphone to the visor, tuck the wire into the space between the windshield glass and trim, or under the trim, whichever is easier. Run the wire down to the dash and around the dash edge, being careful not to put the wire where it can be pinched by the door. Plug the microphone's plug into the side of the speakerphone. Make sure the microphone is pointed toward you.

To use the small supplied lapel clip to attach the microphone to your clothing, attach the clip about 6 inches below your chin. Leave a comfortable length of cord between the microphone and the speaker. Wrap up the excess cord so it does not interfere with vehicle operation.

Note: To avoid feedback, position the microphone so it is not directly in line with the speaker. You might need to turn the speaker slightly.

5. Turn the phone on if it has not turned on automatically. The speakerphone beeps to indicate it is working, and the POWER indicator lights.

Note: If you are unable to make a call in handsfree mode, contact your phone store to update the phone's software.

Changing Modes

You can use the speakerphone in either handsfree or privacy mode. To change modes, briefly insert your finger in the mode-switching finger groove on the back of the speaker. The switch is an electronic optical device. When your finger breaks the beam the indicator changes color.

Note: Disconnecting and reconnecting the cord does not change the mode.

In handsfree mode, the phone's internal microphone and speaker are disabled and the phone operates like a speakerphone. The POWER indicator lights steadily green. You can talk and listen without holding the phone.

In privacy mode, the phone operates normally and the internal microphone and speaker are active. The POWER indicator turns red. Pick up the phone and use it like any other handset.

Note: Anytime the indicator is lit, power is on and the phone's battery is charging.

Battery Discharge

If your cigarette-lighter socket or power outlet remains on when the vehicle is turned off, and you plan to leave your vehicle for more than a week, unplug the speakerphone to prevent excessive battery discharge and difficulty starting your vehicle.

HANDSFREE OPERATION

Outgoing Calls

With the speakerphone set to handsfree, dial a number as you would normally, and speak in a normal voice. When you complete your call, press END.

Incoming Calls

When an incoming call rings on the speakerphone, press TALK and begin speaking. Press END when you are finished.

Note: It may take a moment for the speakerphone to alternate between you and the person you are talking to on the phone. You may need to pause for a moment to hear.

Adjusting the Volume

For optimal use, adjust the volume on your phone's menu to the maximum setting. See the phone's owner's manual for proper setting instructions. The volume control buttons on the phone should also be set to maximum.

To adjust the speakerphone volume to a comfortable level, move the volume control toward the POWER indicator (louder), or away from the POWER indicator (softer).

Lockup

Be sure to unplug the speakerphone before starting the vehicle, or you may cause it to lock up. If you cannot change the mode for either the phone or the speakerphone, the circuitry has locked up.



RadioShack

www.radioshack.com

© 2002 RadioShack Corporation.
All Rights Reserved.

RadioShack and RadioShack.com are trademarks
used by RadioShack Corporation.

Reset the phone and speakerphone by disconnecting the speakerphone from power, then reconnecting it.

A Note About Voice Quality

Wireless phones use radio waves to accommodate many users on a radio network. Radio communications do not always provide the same voice quality and reliability as your land-line phone.

When using your wireless phone, you may experience dropped calls, crosstalk, echo, speech distortion, or other voice quality degradation. These distortions are generally caused by the wireless network.

Your Handsfree Speakerphone Kit cannot improve the phone's performance. Variations in voice quality that you experience in the privacy mode will be heard with the speaker and may be louder because they are being amplified.

If you are experiencing a badly distorted call, check to see that the phone has a good signal level, since low signal levels are typically associated with poor voice quality. If your signal level is good and you are still experiencing poor voice quality, hang up and redial the number to get a different channel.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>