



EN  
It's important to read this instruction prior to using your new product for the first time.

FCC Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

 
Mounting Instructions

TOOLS NEEDED:

- 1) Electric drill with 1/4" bit;
2) Phillips-head (cross style) Screwdriver.


STEP 1
If your cabinet does NOT have an overhang:
a) Place the Mounting Template in the desired location inside or underneath the cabinet...

If your cabinet DOES have an overhang:
a) Measure the thickness of the cabinet overhang (see Figure 1).

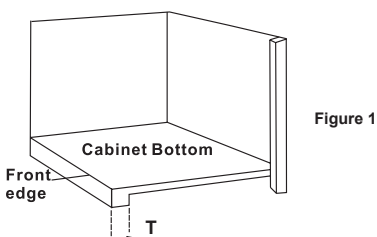

b) Fold the Mounting Template along the guideline that is closest to the thickness (see dimension "T" in illustration) of your cabinet overhang.

 Safety Precautions

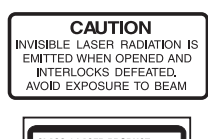

The symbol for Class II (Double Insulation)

SEE MARKING ON BACK OF PRODUCT

The lightning flash with an arrowhead symbol, within the equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure...

The exclamation point within the equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in this owner's manual.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

Important Safety Instructions

- Some of the following information may not apply to your particular product; however, as with any electronic product, precautions should be observed during handling and use.
- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus.
- Do not defeat the safety purpose of the polarized or grounding-type plug.
- Protect the power cord from being walked on or pinched.
- Only use attachments / accessories specified by the manufacturer.
- Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution.



Safety Precautions

WARNING: THE APPARATUS SHALL NOT BE EXPOSED TO DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON THE APPARATUS.

CAUTION: USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. MAIN PLUG IS USED AS THE DISCONNECTED DEVICE, IT SHALL REMAIN OPERABLE AND SHOULD NOT BE OBSTRUCTED DURING INTENDED USE.

- ON SAFETY
- Before operating, make sure the voltage requirement of the mains plug matches your local voltage.
- Disconnect the mains plug immediately if liquid spills into or onto the unit, or if an object falls into the unit.
- Do not open the cabinet. Lasers used in rays employed by the unit may damage your eyes.
- When you are not going to use the unit for a long period of time, disconnect the mains plug.

ON PLACEMENT

- Do not leave, mount or use the unit in places which are extremely hot, cold, dusty, or humid.
- Allow adequate air circulation to prevent internal heat build-up. Do not place the unit on a surface or near materials (a curtain ex. rugs, blankets, curtains, etc.) which might block the ventilation holes.

ON CONDENSATION

- When left in a heated room where it is warm and damp, water droplets or condensation may form inside the CD player. When there is condensation inside the unit, the unit may not function normally. Let it stand for 1 to 2 hours before turning the power on, or gradually heat the room and allow the unit to dry before use.

For your safety

The AC power plug is polarized (one blade is wider than the other) and only fits into AC power outlets one way. If the plug won't go into the outlet completely, turn the plug over and try to insert it the other way.

Removing the power supply is the only way to completely remove power from your product. Make sure the power plug remains easily accessible.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, THEN FULLY INSERT.

Before You Begin

Useful Advice

- Do not use your system immediately after transporting it from a cold place to a warm place, as condensation may cause the system to malfunction.
- This system is fitted with a laser. To avoid accidents, it is to be opened by qualified technicians only.
- Do not place the system near wet areas such as bathrooms and pool inside.
- Ensure minimum distance around the apparatus for sufficient ventilation.

c) Tape Mounting Template to the underside of the cabinet with the folded portion of the Mounting Template flush up against the cabinet overhang (see Figure 2). Go to STEP 2.

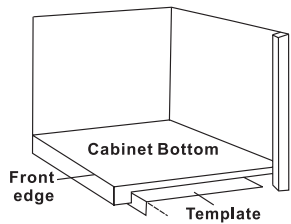 


Figure 2

STEP 2
Use an electric drill with a 1/4" bit (not included) to drill all four holes marked on the Mounting Template (see Figure 3). To reduce splintering, place a small piece of masking tape over each hole location before drilling.

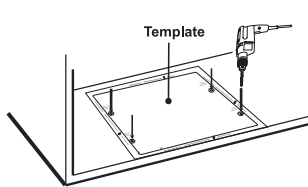 


Figure 3

STEP 3
If your cabinet does NOT have an overhang:
a) Four screws are provided with the unit. Select the screw length which will go completely through your cabinet bottom...

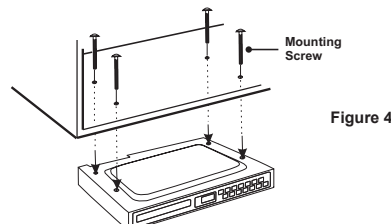 


Figure 4

c) Hold the unit up against the bottom of the cabinet, and align the four holes on the top of the unit with the screws. Partially tighten each screw, but do not fully tighten the screws until all of them have been started.

d) Gently tighten each screw until they are firmly holding the unit in place. Go to STEP 4.

If your cabinet DOES have an overhang:

a) Four screws are provided with the unit. Select the screw length which will go completely through your cabinet bottom, and extend at least will go completely through your cabinet bottom, and extend at least 3/8" past the bottom of your cabinet overhang.

b) This unit includes two sets of four spacers of various lengths. The spacers can be put together to form longer spacers to accommodate various cabinet overhang thicknesses.

c) Insert the four selected screws through each hole from the inside of the cabinet going down (see Figure 5).

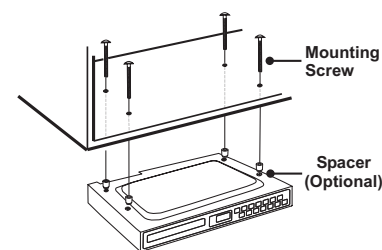 


Figure 5

Mounting Instructions

- d) Hold each screw head down and push the unit and spacers onto the screws, then hold the unit up until spacers are firmly against the bottom of the cabinet.
e) Partially tighten each screw, but do not fully tighten the screws until all of them have been started.
f) Gently tighten each screw until they are firmly holding the unit in place. The top front edge of the unit should clear the overhang.

Go to STEP 4.

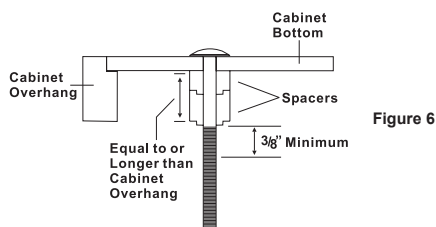 


Figure 6

STEP 4
Plug the cord into the wall outlet
a) Before connecting power cord, make sure the voltage of the unit matches with your local voltage.

b) Plug the power cord directly into the nearest wall outlet, and wrap the remaining cord around the cord storage knob at the rear of the unit.

 
MOUNTING SUGGESTIONS

- 1) If your cabinet has obstructions inside it which prevent you from using the template, cut out the corresponding area on the template, but do NOT cut out or through the screw holes.
2) If your cabinet has obstructions underneath it, which will interfere with the mounting of the unit, remove the obstruction before mounting the unit.
3) It is recommended that you wear safety glasses while drilling to prevent eye injuries.
4) For wood cabinets, you may want to mark the hole locations with a nail, pressed gently but firmly into the wood so that a slight impression is made.
5) Hold the drill firmly against the cabinet to keep the drill from "walking".

CAUTION: TO REDUCE THE RISK OF FIRE, DO NOT PLACE ANY HEATING OR COOKING APPARATUS BENEATH THIS UNIT.

General Controls

Front Panel Controls

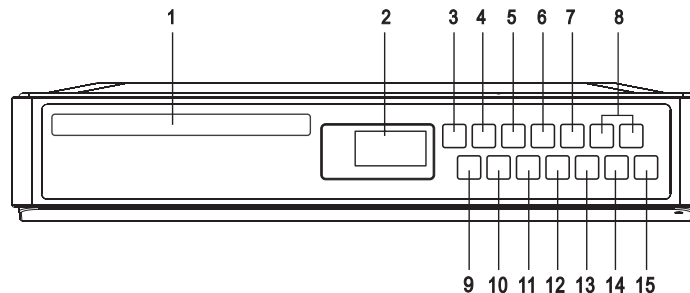

- 1. CD Drawer
2. LCD Display
3. POWER Button
4. PLAY/PAUSE Button
5. STOP Button
6. PREV/-TUNE Button
7. NEXT/TUNE+ Button
8. VOLUME +/- Button

- 9. OPEN/CLOSE Button
10. AM/FM Band Button
11. CD-RADIO Button
12. REPEAT/PRESET Button
13. CLOCK SET/MEM Button
14. TIMER Button
15. Display Button



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>