

OWNER'S MANUAL —  
Please read before using this equipment.


40-1430 **A**

**POWER OFF/ON** — Slide to **ON** to turn on your speakers. Slide to **OFF** to turn off the speakers.

**TONE LOW/HI** — Slide to **LOW** to listen at a lower tone. Slide to **HI** to listen at higher tones.

**VOLUME MIN/MAX** — Slide to **MIN** to listen at the lowest level. Slide to **MAX** to listen at the loudest level.

Latch

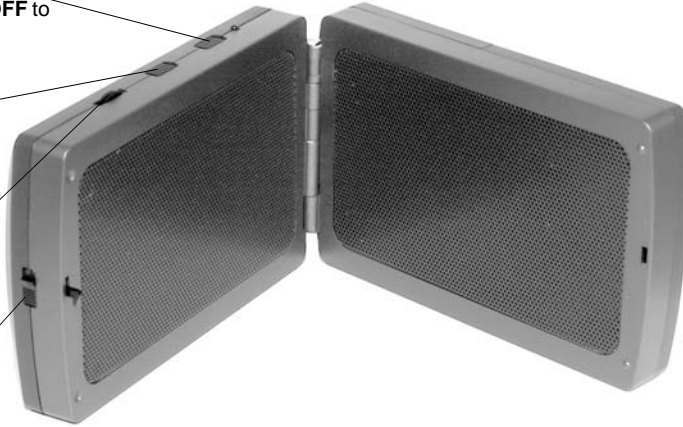

Your RadioShack Fold-up Amplified Speaker System is ideal for use with your notebook computer or personal stereo. The dual 2-inch full-range speakers are magnetically shielded for use near a notebook computer. The built-in retractable connector cable allows easy connection and cable storage. The speakers fold to fit into the supplied carrying pouch.

## POWERING THE SPEAKERS

### BATTERY POWER

1. Slide **POWER** to **OFF**.
2. Push the battery compartment forward to remove it.

### ! IMPORTANT !

If an icon appears at the end of a paragraph, go to the box on that page with the corresponding icon for pertinent information.

⚠ — Warning  
⚡ — Caution

! — Important  
💡 — Hint


📄 — Note

© 2003 RadioShack Corporation.  
All Rights Reserved.  
RadioShack and RadioShack.com  
are trademarks used by  
RadioShack Corporation.

### **BATTERY NOTES**

- Dispose of old batteries promptly and properly.
- Do not burn or bury batteries.
- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- If you do not plan to use the speakers for more than two weeks, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.



3. Install four AA batteries according to the polarities marked inside the battery compartment. 
4. Replace the battery compartment cover.
5. To test the battery power, slide **POWER** to **ON**. The indicator lights.

### **AC POWER**

You can also power the speakers from a standard AC outlet using an optional AC adapter (not supplied).

DC 6V Jack

Speaker Cable  
Stereo Plug




#### **Cautions:**




You must use a Class 2 power source that supplies 6V DC and delivers at least 400 mA. Its center tip must be set to positive and its plug must fit the speaker's **DC 6V** jack. Using an adapter that does not meet these specifications could damage the speakers or the adapter.

### **NOTE**


When you connect AC power, the battery power is automatically disconnected.

Slide **POWER** to **OFF**, then connect the AC adapter's barrel plug to the portable speaker's **DC 6V** jack. Plug the other end of the AC adapter into a standard 120V AC outlet. 

## OPERATION

1. Place the unopened speakers on a level surface.
2. Slide **POWER** to **OFF** and rotate **VOLUME** to **MIN** until it stops.
3. Pull the speaker cable's 3.5mm stereo plug on the right side all the way out and stop pulling when the white stripe on the cable appears. Insert it into the notebook computer's or the stereo's audio output jack.
4. Push the speaker cabinet's latch on the left side of the cabinet up and hold it. Then open the speaker cabinet.
5. Slide **POWER** to **ON**. The indicator lights.
6. Adjust **VOLUME** and **TONE** as desired.
7. When you finish using the speakers, slide **POWER** to **OFF**. The indicator goes off. Close the speaker cabinet until it clicks.
8. Disconnect the cable then pull the cable again so it automatically retracts back into the cabinet. Hold onto the stereo plug while retracting the cable to keep it from hitting your hand or other objects. 

## CARE

Keep the speakers dry; if they get wet, wipe them dry immediately. Use and store the speakers only in normal temperature environments. Handle the speakers carefully; do not drop them. Keep the speakers away from dust and dirt, and wipe them with a damp cloth occasionally to keep them looking new. 

## SERVICE AND REPAIR

If your speakers are not performing as they should, take them to your local RadioShack store for assistance. To locate your nearest RadioShack, use the store locator feature on RadioShack's website ([www.radioshack.com](http://www.radioshack.com)), or call 1-800-The Shack (843-7422) and follow the menu options. Modifying or tampering with the speaker's internal components can cause a malfunction and might invalidate their warranty.

### **NOTE**

- Pulling the cable so it exceeds the white stripe prevents the cable from retracting smoothly. If the cable stops or retracts back while pulling, slightly pull the cable to release it for retraction. Then pull the cable to the desired length to release it.
- If the cable stops during retraction, pull it again and hold it until it completely retracts back into the cabinet.

### **CAUTION**

You might permanently damage your speakers by cleaning them with a vacuum cleaner. Use a feather duster or a soft loose cloth instead.

# SPECIFICATIONS

Speaker .....	2 inches full range amplified speaker (50mm)
Output Power .....	0.5W/per channel maximum power
Frequency Range .....	200–12,000 Hz
Speaker Plug .....	3.5mm stereo plug
Operating Voltage .....	DC 6V
Power Source .....	4 AA batteries or input 120V AC, output 6V DC 400mA adapter
Battery Life .....	About 22 hours (alkaline batteries, continuous play)
Speaker Impedance .....	8 Ohms
Drive Current (At 0.5W) .....	350mA
Dimensions (WHD) .....	6 × 3 <sup>7</sup> / <sub>8</sub> × 2 <sup>1</sup> / <sub>8</sub> inches (155 × 100 × 53 mm)
Weight (including batteries) .....	16.58 oz (470g)

## Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99

RadioShack Corporation  
Fort Worth, Texas 76102

40-1430 **A**  
03A03  
Printed in China

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>