

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102


12/99

BATTERY NOTES

- Dispose of old batteries promptly and properly.
- Do not burn or bury batteries.
- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.
- If you do not plan to use the micro vacuum for a month or more, remove the batteries. Batteries can leak chemicals that can damage electronic parts.

NOTE

Do not immerse the micro vacuum in water. Doing so could damage the vacuum. For optimal use, let vacuum rest for 10 minutes between each use.

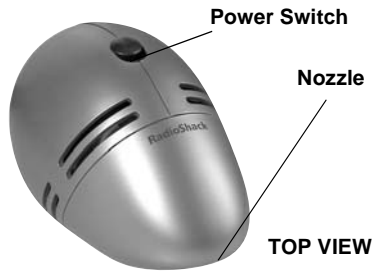


Thank you for buying the RadioShack Micro Vacuum. With the vacuum's collection cup and filter design, you never need to buy a replacement bag. Its powerful suction is perfect for the desktop and office use. Its ergonomic shape is comfortable for use, and its stylish design and compact size make the micro vacuum an attractive decoration for your desktop.

INSTALLING BATTERIES

Your micro vacuum requires two AA batteries (not supplied) for power. We recommend alkaline batteries, available at your local RadioShack store or online at www.radioshack.com.

1. Make sure the power switch is set to **OFF**.
2. Press and pull down the latch marked **PUSH** on the back of the vacuum to remove the battery compartment cover.
3. Insert two batteries into the battery compartment according to the polarity symbols (+ and -) marked on the compartment.

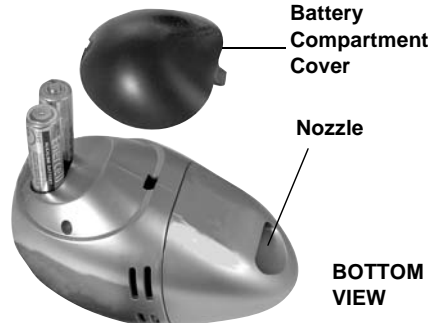

4. Insert the locking tab on the cover into the locking slot on the compartment, and then press the latch down to snap the cover in place.

Note: When the batteries are installed in reverse, the mini vacuum also sucks the dust and dirt with weak suction.

When the micro vacuum's suction power weakens, replace the batteries.

USING THE VACUUM

To turn the vacuum on, push the power switch toward the nozzle. Use the nozzle at the bottom of the micro vacuum to suck up dust and dirt.

To turn off the vacuum, push the power switch away from the nozzle.

CLEANING THE VACUUM

1. Rotate the collection cup at the front of the vacuum clockwise and remove it.
2. Lift off the filter screen from the collection cup. Dump out the dirt or dust.
3. Rinse and wash out the filter screen and collection cup if necessary. Then pat dry.
4. Replace the filter screen.
5. Align the collection cup's upper tab with the upper indentation on the vacuum. Then rotate the collection cup counterclockwise until it locks in place.

CARE

Keep the vacuum dry; if it gets wet, wipe it dry immediately. Use and store the vacuum only in normal temperature environments. Handle the vacuum carefully; do not drop it. Keep the vacuum away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

SPECIFICATIONS

| | |
|--------------------------------|--|
| Power Source | Two AA Batteries (Not Supplied) |
| Battery Life | 35 Three-Minute Uses |
| Dimension (HWD) | 3 ¹ / ₈ × 4 ¹⁵ / ₁₆ × 2 ¹⁵ / ₁₆ Inches (80 × 125 × 75 mm) |
| Weight (Without Battery) | 4.44 ounces (126 g) |

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

! IMPORTANT !

If an icon appears at the end of a paragraph, go to the box on that page with the corresponding icon for pertinent information.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>