



e-STUDIO232

e-STUDIO282



Document User Function Guide Manager



Networking Documents.

TOSHIBA

TRADEMARKS AND COPYRIGHT

Trademarks

- The official name of Windows 98 is Microsoft Windows 98 Operating System.
- The official name of Windows Me is Microsoft Windows Me Operating System.
- The official name of Windows 2000 is Microsoft Windows 2000 Operating System.
- The official name of Windows XP is Microsoft Windows XP Operating System.
- The official name of Windows Server 2003 is Microsoft Windows Server 2003 Operating System.
- Microsoft, Windows, Windows NT, and the brand names and product names of other Microsoft products are trademarks of Microsoft Corporation in the US and other countries.
- Apple, AppleTalk, Macintosh, Mac, TrueType, and LaserWriter are trademarks of Apple Computer, Inc. in the US and other countries.
- Postscript is a trademark of Adobe Systems Incorporated.
- Netscape is a trademark of Netscape Communications Corporation.
- IBM, AT and AIX are trademarks of International Business Machines Corporation.
- NOVELL, NetWare, and NDS are trademarks of Novell, Inc.
- Other company names and product names in this manual are the trademarks of their respective companies.

Copyright

© 2005 TOSHIBA TEC CORPORATION All rights reserved

Under the copyright laws, this manual cannot be reproduced in any form without prior written permission of TTEC. No patent liability is assumed, however, with respect to the use of the information contained herein.

TABLE OF CONTENTS

TABLE OF CONTENTS	1
PREFACE	3
FEATURES OF THE e-STUDIO202L/232/282	4
1. MANAGING ADDRESS BOOK (ADDRESS MENU)	5
1. MANAGING ADDRESS BOOK	6
• About Managing Contacts in Address Book	6
• Registering Contacts	7
• Editing Contacts	10
• Deleting Contacts	12
• Searching Contacts	14
2. MANAGING GROUPS	18
• About Managing Groups in Address Book	18
• Creating New Group	19
• Editing Groups	22
• Deleting Groups	28
• Searching Groups	30
• Confirming the Members of the Groups	34
2. MANAGING COUNTERS (COUNTER MENU)	35
1. TOTAL COUNTER	36
• Displaying Print Counter	36
• Displaying Scan Counter	37
2. PRINT OUT TOTAL COUNTER	38
3. DEPARTMENT COUNTER	39
• Displaying Print Counter for Department Code	39
• Displaying Scan Counter for Department Code	41
• Displaying Fax Communication Counter for Department Code	43
4. MANAGING DEPARTMENT CODE	45
• Logging On As Administrator	45
• Printing Department Codes List	47
• Enabling Department Code	48
• Resetting All Department Counters	49
• Deleting All Department Codes	50
• Registering a New Department Code	51
• Editing the Department Code	54
• Deleting the Department Code	58
• Resetting the Counter of Each Department	60
• Setting Output Limitations for All Departments	62
3. SETTING ITEMS (USER)	63
1. SETTING GENERAL FUNCTIONS	64
• Setting the Auto Clear Mode	64
• Changing the Display Language	65
• Setting the Reversed Display Mode	66
2. SETTING COPY FUNCTIONS	68
3. SETTING FAX FUNCTIONS	70
4. SETTING SCAN FUNCTIONS	72
5. PRINTING LISTS	74
• Printing the Address Book List	74
• Printing the Group Numbers List	75
• Printing the Function List (User)	76
6. CHECKING E-MAIL	77
7. SETTING DRAWER	78
8. TURN OFF THE POWER (SHUT DOWN)	79
4. SETTING ITEMS (ADMIN)	81
1. ENTERING TO ADMIN MENU	82
2. SETTING GENERAL FUNCTIONS	84
• Setting the Device Information	84
• Setting the Notification	86
• Changing the Administrator Password	88
• Setting the Date and Time	90
• Setting the Weekly Timer	92
• Setting the Auto Power Save Mode	95
• Setting the Sleep Mode	97
• Setting the Drawer Setup Pop-Up	99

3. SETTING NETWORK FUNCTIONS	100
• Setting the TCP/IP Protocol.....	100
• Setting the IPX/SPX Protocol	105
• Setting the NetWare Settings	107
• Setting the SMB Protocol.....	109
• Setting the AppleTalk Protocol	112
• Setting the HTTP Network Service	114
• Setting the Ethernet Speed.....	116
• Setting the LDAP and SNMP Network Service.....	118
4. SETTING COPY FUNCTIONS	120
5. SETTING FAX FUNCTIONS	122
• Setting the Terminal ID	122
• Setting the Fax Initial Setup.....	125
• Setting the Line-2 Mode.....	127
• Setting the RX Printing	130
• Setting the Recovery Transmission	134
6. SETTING FILE FUNCTIONS.....	136
7. SETTING E-MAIL FUNCTIONS	137
• Setting the Scan to E-mail Message Properties	137
• Setting the Scan to E-mail Fragmentation	138
8. SETTING INTERNET FAX FUNCTIONS	139
• Setting the Internet Fax Message Properties	139
• Setting the Internet Fax Fragmentation	140
• Setting the Internet Fax Body String Transmission	141
9. SETTING LIST/REPORT	142
• Setting the Transmission / Reception Journal	142
• Setting the Communication Report.....	144
• Setting the Reception List.....	147
10. PRINTING LISTS	149
11. SETTING PRINTER/E-FILING FUNCTIONS	150
12. WIRELESS SETTINGS AND Bluetooth SETTINGS	151
5. APPENDIX	153
1. LIST PRINT FORMAT	154
• Total Counter List	154
• Department Code List.....	155
• Address Book List.....	156
• Group Numbers List.....	157
• Function List (User)	158
• NIC Configuration Page	159
• Function List (Administrator).....	160
• PS3 Font List	175
• PCL Font List.....	176
INDEX.....	177

PREFACE

Thank you for purchasing the Toshiba Multifunctional Digital System e-STUDIO202L/232/282. This Operator's Manual describes the following:

- How to set up the Multifunctional Digital System.
- How to operate the functions in the [USER FUNCTIONS] button.

Before using the Multifunctional Digital System, thoroughly read and understand this Operator's Manual. To ensure that clean copies are made at all times and to keep your Multifunctional Digital System in optimum working order, this Operator's Manual should be readily available for future reference.

To ensure correct and safe use of the Toshiba Multifunctional Digital System e-STUDIO202L/232/282, this Operator's Manual describes safety precautions according to the following three levels of warning:

Before reading this Operator's Manual, you should fully understand the meaning and importance of these signal words.

- **Warning**
Indicates a potentially hazardous situation which, if not avoided, could result in death, serious injury, or serious damage, or fire in the equipment or surrounding assets.
- **Caution**
Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury, partial damage of the equipment or surrounding assets, or loss of data.
- **Note**
Indicates a procedure you should follow to ensure the optimal performance of the Multifunctional Digital System and problem-free copying.

- **Tip**
Describes handy information that is useful to know when operating the Multifunctional Digital System.
- **Advice**
Describes an operation you should follow to keep the Multifunctional Digital System in good working order.

FEATURES OF THE e-STUDIO202L/232/282

The e-STUDIO202L/232/282 is a Multifunctional Digital Systems that is capable of using each function via networks. The e-STUDIO202L/232/282 also has various optional paper handling devices to meet the needs of your office.

The e-STUDIO202L/232/282 offers the following convenient features, functions and options.

- The copying speed is 20 copies (LT) per minute for e-STUDIO202L, 23 copies (LT) per minute for e-STUDIO232, 28 copies (LT) per minute for the e-STUDIO282.
- Considering eco-friendliness and energy saving, the used toner free recycle system is adopted, warm-up time is shortened to approximately 25 seconds and the ozone generation amount in the equipment is reduced by 75% compared with current models.
- Improving the scanning speed allows you to scan, fax and copy with ease. You can also make duplex copies at the equivalent speed.
- An all-in-one controller is installed to perform the effective network functions. (To use the print, scan and Internet Fax functions, optional printer kit, scanner kit, printer/scanner kit, etc. are required.)
- The input/output interface is designed for internet connection (access) environment.
- A 1/2 VGA wide panel improves operability and efficiency.
- A universal design is adopted for the control panel whose angle can be changed.
- The e-Filing function allows you to scan, save, reuse, and re-edit the original data via client PCs from the scanning section.
- Received Fax documents can be stored in the e-Filing without printing them. (Optional FAX board is required.)
- Scanned originals can be sent via Fax and E-mail simultaneously. (To send them via Fax, optional FAX board is required. To send them via E-mail, optional printer/scanner kit or scanner kit is required.)
- Electric sorting improves copying productivity.
- Comes with rich editing functions such as trimming, masking and mirror.
- Loading the page memory and hard disk as standard equipment enables 2 in 1/4 in 1, Electronic sorting and magazine sorting, etc.
- The job build function enables the copying and storing collectively of up to 1,000 original pages by scanning each page with the optimum original mode or image adjustment and setting the desired finishing mode.
- A fixing system that uses less oil reduces the amount of oil affixed to the paper.
- By simply replacing the cartridge, you can add toner without dirtying your hands.
- A wide variety of media from thick paper (up to 110 lb. Index), sticker labels, OHP films, etc. is acceptable.
- Printing and copying on envelopes are also possible.
- Installing an optional finisher offers quick automatic sorting, stapling and hole punching (optional) of copies.
- Installing a finisher with an optional saddle stitching function attached allows you to select the saddle stitching mode which will automatically staple the center of the documents just like a book.
- When the optional printer/scanner kit, both printer kit and scanner kit, or Fax board is installed, the machine will enter a Sleep mode and will re-activate when a job is received.

1. MANAGING ADDRESS BOOK (ADDRESS MENU)

1. MANAGING ADDRESS BOOK.....	6
• About Managing Contacts in Address Book.....	6
• Registering Contacts.....	7
• Editing Contacts.....	10
• Deleting Contacts.....	12
• Searching Contacts.....	14
2. MANAGING GROUPS.....	18
• About Managing Groups in Address Book.....	18
• Creating New Group.....	19
• Editing Groups.....	22
• Deleting Groups.....	28
• Searching Groups.....	30

1. MANAGING ADDRESS BOOK

About Managing Contacts in Address Book

1





Contacts in the Address Book will be displayed such as in the [ADDRESS] button screen that is displayed by pressing the [FAX] button on the Control Panel. These are also used to specify the recipients for Scan to E-mail documents.

In Address Book, you can register up to 1000 contacts that can contain a fax number, an E-mail address, or both in each contact. Also you can specify the option settings for the fax transmission in each contact, such as Transmission type, ECM, Quality transmission, Line select, and subaddress settings.

Note

- You can register the E-mail addresses in the Address Book, however, you can use them to specify the destinations for Scan to E-mail or Internet Fax only when the Scanner Kit is installed, or when the Printer/Scanner Kit is installed.
- You can register the fax numbers in the Address Book, however, you can use them to specify the destinations for fax transmission only when the optional Fax unit is installed.

In the Address Book button menu, you can perform following operations to manage contacts.


-  P.7 "Registering Contacts"
-  P.10 "Editing Contacts"
-  P.12 "Deleting Contacts"
-  P.14 "Searching Contacts"

Registering Contacts

The following procedure describes how to register new contact in the Address Book.


1

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2 Press the [ADDRESS] button, and then press the [ADDRESS BOOK] button on the touch panel.

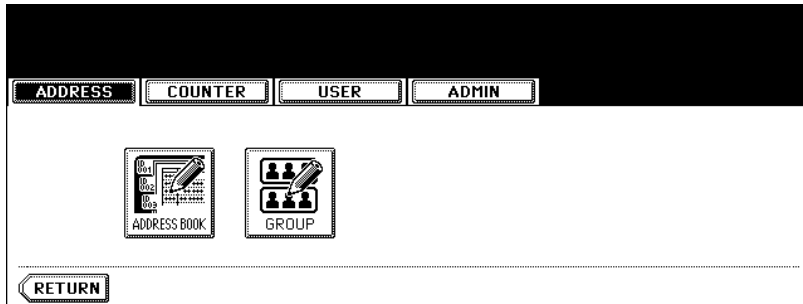

- The ADDRESS BOOK screen is displayed.

- 3 Press undefined button that you want to register new contact and press the [ENTRY] button.

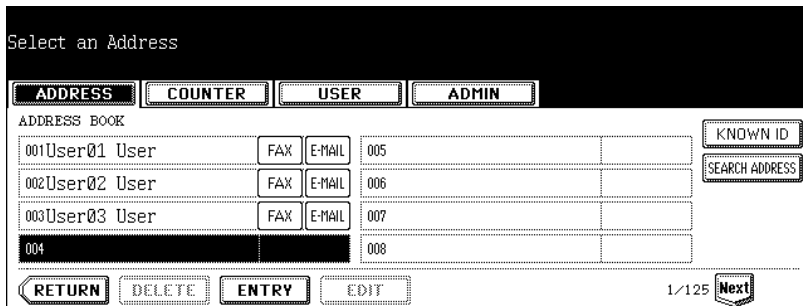

- The ADDRESS BOOK REGISTRATION screen is displayed.

Tip

If the touch panel does not display an undefined contact, press the [Next] button to display the next screen.

1

4 Press each button on the touch panel to enter following contact information.

The screenshot shows a touch panel interface for 'ADDRESS BOOK REGISTRATION'. At the top, there are four tabs: ADDRESS, COUNTER, USER, and ADMIN. Below the tabs, the title 'ADDRESS BOOK REGISTRATION' is displayed. The form contains several input fields with the following values: FIRST NAME (User04), LAST NAME (User), FAX NO. (0000000004), 2ND FAX (empty), E-MAIL (user04@ifax.com), CORP. (12345 COMPANY), DEPT. (Dept01), and KEYWORD (empty). At the bottom of the form, there are three buttons: OPTION, CANCEL, and ENTER.

- **[FIRST NAME]** — Enter the first name of the contact. This name will appear in the address book list on the touch panel.
- **[LAST NAME]** — Enter the last name of the contact. This name will appear in the address book list on the touch panel.
- **[FAX NO.]** — Enter the fax number of the contact.
- **[2ND FAX]** — Enter the second fax number of the contact.
- **[E-MAIL]** — Enter the E-mail address of the contact.
- **[CORP.]** — Enter the company name of the contact.
- **[DEPT.]** — Enter the department name of the contact.
- **[KEYWORD]** — Enter the keyword of the contact. This keyword can be used to search for this contact.

Note

You must at least enter either the **[FIRST NAME]** or **[LAST NAME]** button, and either the **[FAX NO.]** or **[E-MAIL]** button to register the contact.

Tip

When you press each button, the input screen is displayed. Enter the value using the keyboard and digital keys and press the **[ENTER]** button to set the entry.

5 Press the **[OPTION]** button to specify the default settings for a fax transmission.

Note

This is available only when the optional fax unit is installed.

6 Specify following items as you required.

ADDRESS				COUNTER	USER	ADMIN
TX TYPE	MEMORY TX	DIRECT TX	SUB			
ECM	ON	OFF	SID			
QUALITY TX	ON	OFF	SEP			
LINE SELECT	LINE1	LINE2	PWD			
				RESET	CANCEL	ENTER

- **TX TYPE** — This sets the type of the fax transmission mode. Press the [MEMORY TX] button to select the memory transmission mode or the [DIRECT TX] button to select the direct transmission mode.
- **ECM** — Select whether enabling or disabling the ECM (Error Correction Mode) to automatically resend any portion of the document affected by phone line noise or distortion. Press the [ON] button to enable the ECM, or the [OFF] button to disable the ECM.
- **QUALITY TX** — Select whether a document is sent in the Quality TX mode. This feature allows to send a document at a slower speed than a normal so that the transmission will be less affected by line condition. Press the [ON] button to enable the Quality TX, or [OFF] button to disable the Quality TX.
- **LINE SELECT** — Select the line to be used for the fax transmission. Press the [LINE1] button to use the Line 1, or [LINE2] button to use Line 2. The [LINE2] button can be selected only when the optional 2nd line board is installed.
- **[SUB]** — Enter the mailbox number if you want to send originals to the mailbox in the remote fax.
- **[SID]** — Enter the password to input a document into the mailbox in the remote facsimile.
- **[SEP]** — Enter the mailbox number if you want to retrieve a document from the mailbox in the remote fax.
- **[PWD]** — Enter the password to retrieve a document from the mailbox in the remote facsimile.

Tip

When you press the [SUB], [SID], [SEP], and [PWD] buttons, the input screen is displayed. Enter the value using the keyboard and digital keys, and press the [ENTER] button to set the entry.

7 Press the [ENTER] button to save option settings.

8 Press the [ENTER] button to register the contact.


ADDRESS				COUNTER	USER	ADMIN
ADDRESS BOOK REGISTRATION						
FIRST NAME	User04	E-MAIL	user04@ifax.com			
LAST NAME	User	CORP.	12345 COMPANY			
FAX NO.	00000000004	DEPT.	Dept01			
2ND FAX		KEYWORD				
				OPTION	CANCEL	ENTER

Editing Contacts

The following procedure describes how to edit existing contact in the Address Book.


1

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2 Press the [ADDRESS] button, and then press the [ADDRESS BOOK] button on the touch panel.

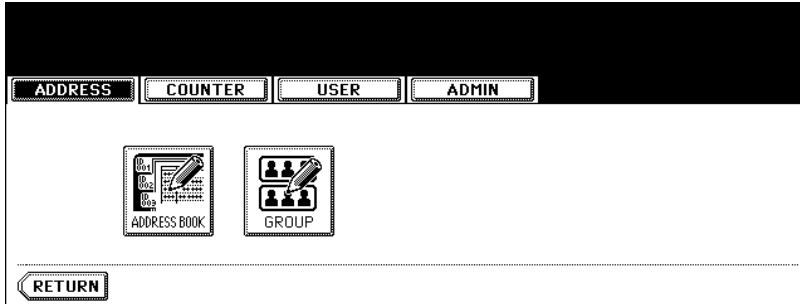

- The ADDRESS BOOK screen is displayed.

- 3 Press the contact that you want to edit and press the [EDIT] button.

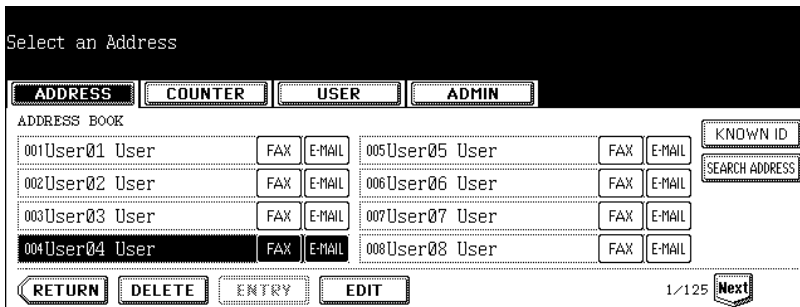

- The ADDRESS BOOK EDIT screen is displayed.

Tips

- If the touch panel does not display the contact that you want to edit, press the [Next] button to display the next screen.
- You can quickly search for the contact that you want to edit. To search for the contact, see the "Searching Contacts". P.14

4 Press each button on the touch panel to edit the contact information.

The screenshot shows a touch panel interface with a black header bar containing four buttons: ADDRESS, COUNTER, USER, and ADMIN. Below the header, the text 'ADDRESS BOOK EDIT' is displayed. The main area contains several input fields arranged in two columns. The left column includes fields for FIRST NAME (User04), LAST NAME (User), FAX NO. (00000000004), and 2ND FAX. The right column includes fields for E-MAIL (user04@ifax.com), CORP. (12345 COMPANY), DEPT. (Dept01), and KEYWORD. At the bottom of the screen, there are three buttons: OPTION, CANCEL, and ENTER.

- For the description of each item, see the Step 4 in the procedure of “Registering Contacts” in the previous section.

5 Press the [OPTION] button to specify the default settings for a fax transmission.

Note

This is available only when the optional fax unit is installed.

6 Specify the items as you required.

The screenshot shows the same touch panel interface as in Step 4. The 'ADDRESS BOOK EDIT' screen now displays transmission options. On the left, there are sections for TX TYPE (MEMORY TX and DIRECT TX), ECM (ON and OFF), QUALITY TX (ON and OFF), and LINE SELECT (LINE 1 and LINE 2). On the right, there are input fields for SUB, SID, SEP, and PWD. At the bottom, there are three buttons: RESET, CANCEL, and ENTER.

- For the description of each item, see the Step 6 in the procedure of “Registering Contacts” in the previous section.

7 Press the [ENTER] button to save option settings.

8 Press the [ENTER] button to save the contact.

The screenshot shows the same touch panel interface as in Step 4. The 'ADDRESS BOOK EDIT' screen now displays the contact information after saving the options. The fields for FIRST NAME, LAST NAME, FAX NO., 2ND FAX, E-MAIL, CORP., DEPT., and KEYWORD are visible. At the bottom, there are three buttons: OPTION, CANCEL, and ENTER.


- The contact is edited.

Deleting Contacts

The following procedure describes how to delete existing contact in the Address Book.


1

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2 Press the [ADDRESS] button, and then press the [ADDRESS BOOK] button on the touch panel.

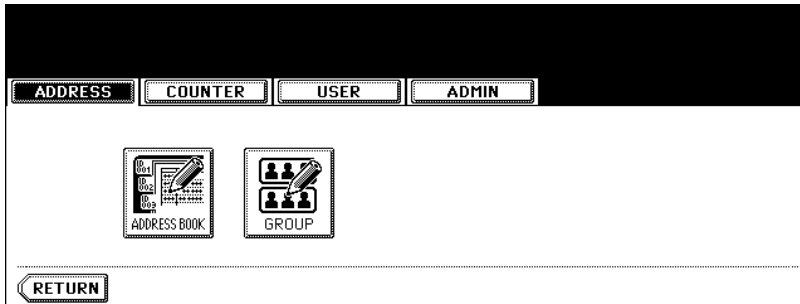

- The ADDRESS BOOK screen is displayed.

- 3 Press the contact that you want to delete and press the [DELETE] button.

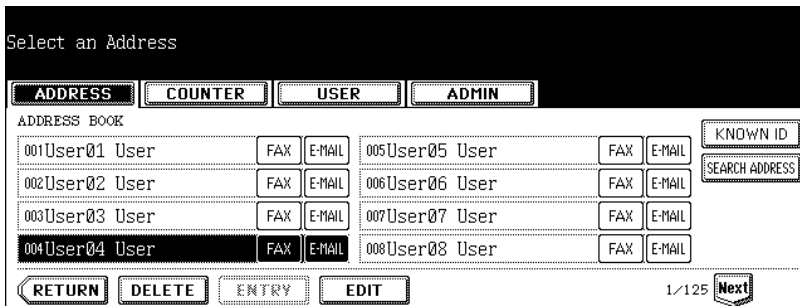


- The delete confirmation screen is displayed.

Tip

If the touch panel does not display the contact that you want to delete, press the [Next] button to display the next screen.

4 Press the [YES] button to delete the contact, or the [NO] button to cancel deleting.

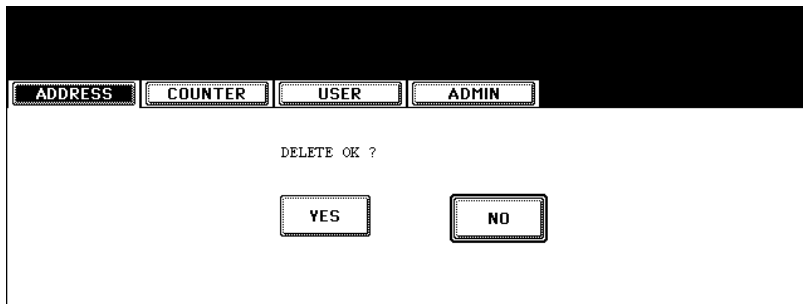

- When you press the [YES] button, the selected contact is deleted.

Searching Contacts


1

The following procedure describes how to search for contacts in the Address Book. This function is useful to find the contact that you want to edit.

You can search for the contacts by entering a ID number or the search strings.


Searching a Contact by ID Number

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2 Press the [ADDRESS] button, and then press the [ADDRESS BOOK] button on the touch panel.

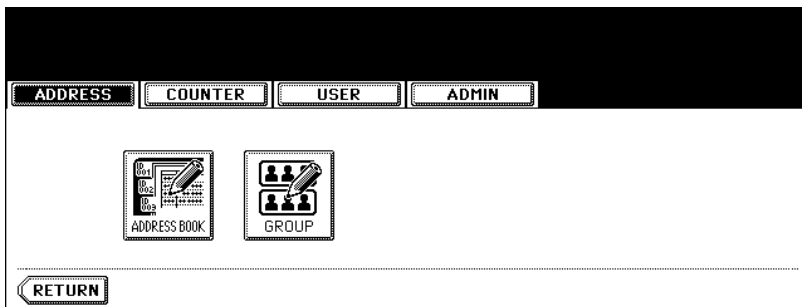


- The ADDRESS BOOK screen is displayed.

- 3 Press the [KNOWN ID] button.

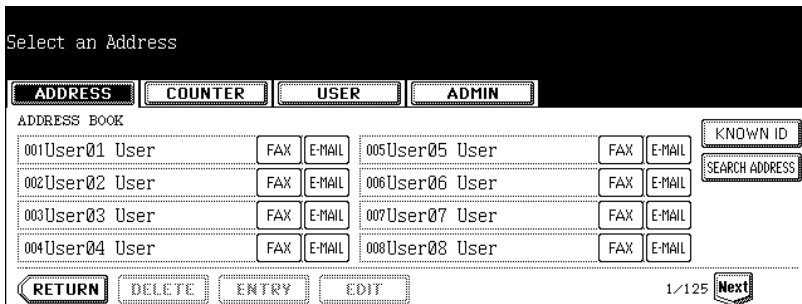


- The KNOWN ID screen is displayed.

- 4 Enter the ID Number using the digital keys and press the [ENTER] button.

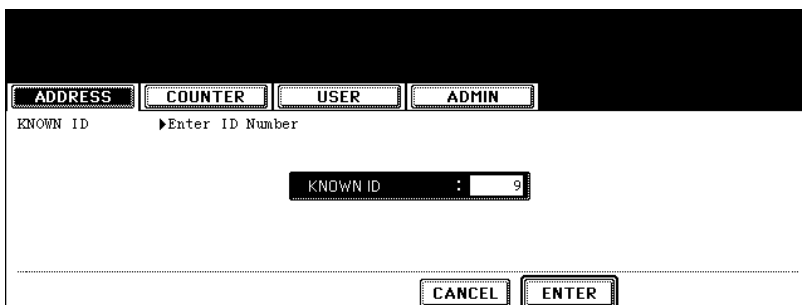


- 5** The touch panel displays the screen that contains the searched contact. Press the contact and press the [EDIT] button to edit the contact information, or press the [DELETE] button to delete the contact.

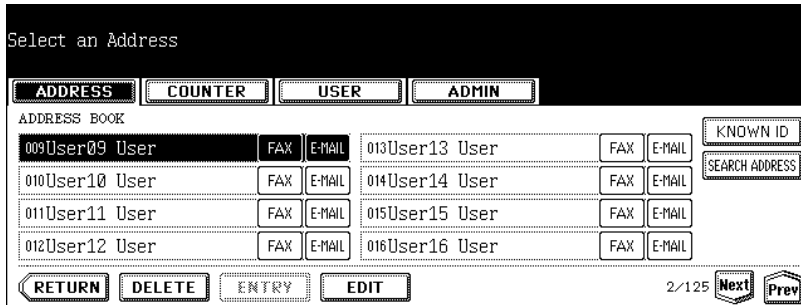

- See "Editing Contacts" for the instruction to edit the contact. P.10


Searching Contacts by Entering Search String

- 1** Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2** Press the [ADDRESS] button, and then press the [ADDRESS BOOK] button on the touch panel.

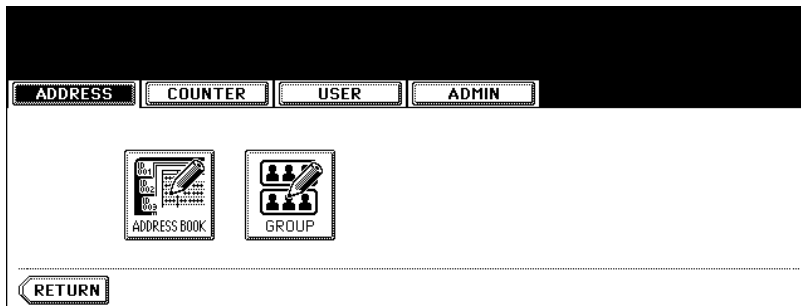

- The ADDRESS BOOK screen is displayed.

- 3** Press the [SEARCH ADDRESS] button.

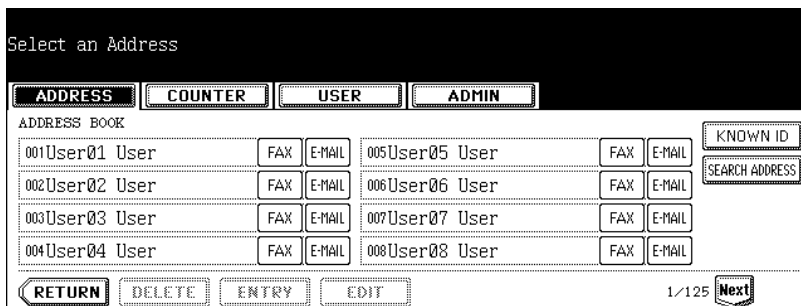

- The SEARCH ADDRESS screen is displayed.

1

4 Press the button that is used for searching to specify the search string.

ADDRESS SEARCH

FIRST NAME CORP.

LAST NAME DEPT.

FAX NO. KEYWORD

E-MAIL

CLEAR CANCEL SEARCH

- When you press each button, the input screen is displayed.

5 Enter the search string using the keyboard and digital keys, and press the [ENTER] button.

User_

! " # \$ % & ' () = ~ | \ { } Back Space

* < > ? _ ^ @ + | | ; : / \ < >

Q W E R T Y U I O P

A S D F G H J K L

Z X C V B N M , . Shift Caps Lock

Space CANCEL ENTER Next

Tip

It will search for the contacts that contain the search text in the specified items.

6 Specify the search string in the items that you require and press the [SEARCH] button.

ADDRESS SEARCH

FIRST NAME CORP.

LAST NAME User DEPT. Dept01


FAX NO. KEYWORD

E-MAIL

CLEAR CANCEL SEARCH

7 The touch panel displays the screen that contains the searched contacts. Press the contact and press the [ENTER] button to edit the contact information.

1

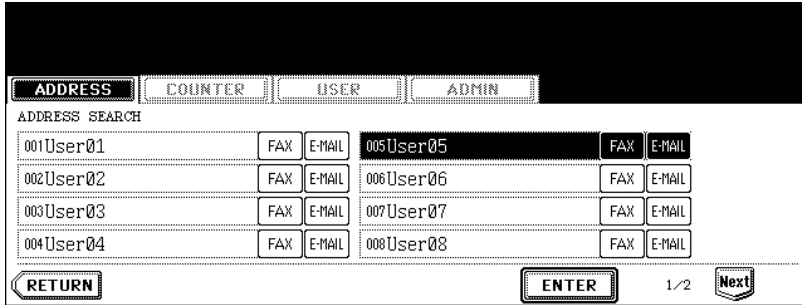

- See "Editing Contacts" for the instruction to edit the contact. P.10

2. MANAGING GROUPS

About Managing Groups in Address Book

1





You can create groups that contain the multiple members of contacts. This enables you to specify the groups instead of specifying each recipient separately when operating Scan to E-mail, or fax or Internet Fax transmission. You can also delete groups.

In Address Book, you can register up to 200 groups and each group can contain up to 1000 members.

Note

- One fax number or one E-mail address is counted as one destination. If you select the contact that contains both fax number and E-mail address, it results in two destinations in the group.
- You can register the E-mail addresses in the Groups, however, you can use them to specify the destinations for Scan to E-mail or Internet Fax only when the Scanner Kit is installed, or when the Printer/Scanner Kit is installed.
- You can register the fax numbers in the Groups, however, you can use them to specify the destinations for fax transmission only when the optional Fax unit is installed.

In the Group button menu, you can perform following operations to manage groups.


-  P.19 "Creating New Group"
-  P.22 "Editing Groups"
-  P.28 "Deleting Groups"
-  P.30 "Searching Groups"

Creating New Group

The following procedure describes how to create new group in the Address Book.


1

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2 Press the [ADDRESS] button, and then press the [GROUP] button on the touch panel.

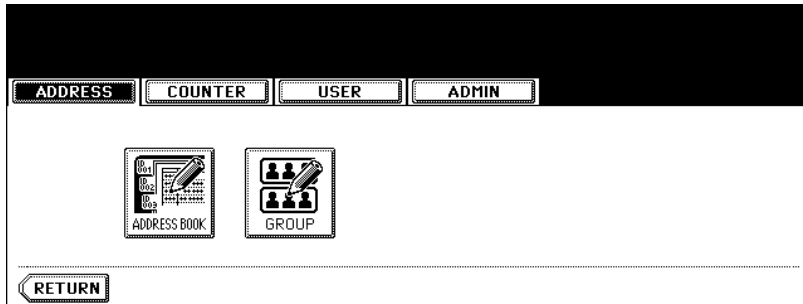

- The GROUP screen is displayed.

- 3 Press undefined button that you want to create new group and press the [ENTRY] button.

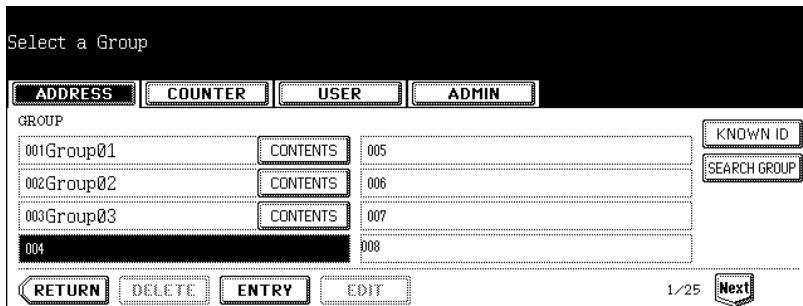


- The GROUP NO. REGISTRATION screen is displayed.

Tip

If the touch panel does not display an undefined group, press the [Next] button to display the next screen.


- 4 Press the [GROUP NAME] button.

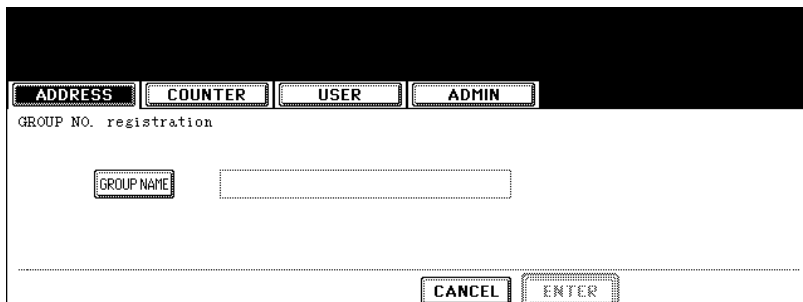


- The input screen is displayed.

1

- 5** Enter the group name using the keyboard and digital keys, and press the [ENTER] button.

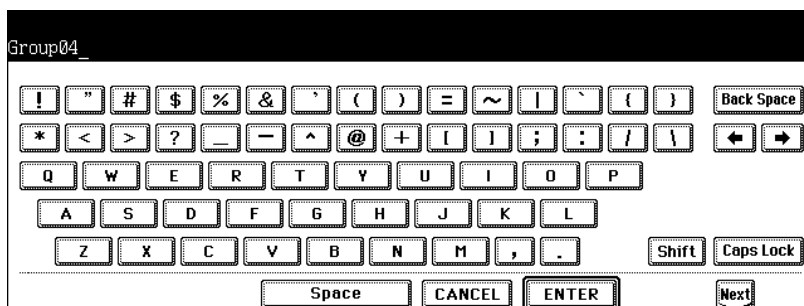


- 6** Press the [ENTER] button.

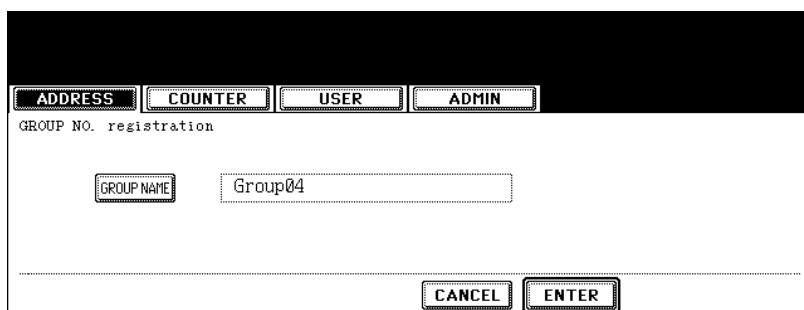

- The CHECK OF GROUP MEMBER screen is displayed.

- 7** Select the contacts that you want to add to the group, and then press the [ENTER] button.

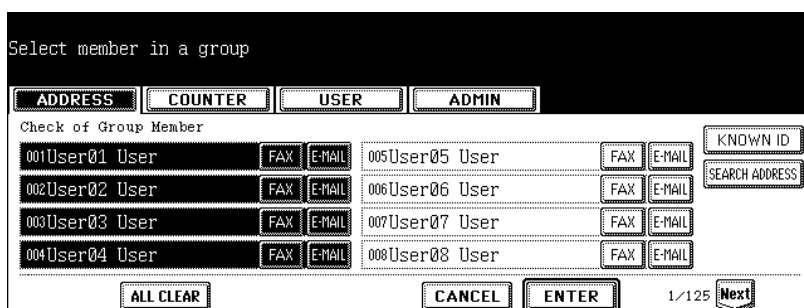

- To add or remove the contacts by selecting each contacts manually, see “Adding or Removing Contacts”. P.24
- To add the contacts by searching them with the ID number, see “Adding Contacts by Searching with ID Number”. P.25
- To add the contacts by searching them with search string, see “Adding Contacts by Searching with Search String”. P.26

8 New Group is created and appears on the touch panel.

Select a Group

ADDRESS COUNTER USER ADMIN

GROUP

001Group01	CONTENTS	005	KNOWN ID
002Group02	CONTENTS	006	SEARCH GROUP
003Group03	CONTENTS	007	
004Group04	CONTENTS	008	

RETURN DELETE ENTRY EDIT 1/25 Next


Editing Groups

The following procedure describes how to edit the name of groups, add or remove the members in groups.

1


Editing Group Name

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2 Press the [ADDRESS] button, and then press the [GROUP] button on the touch panel.

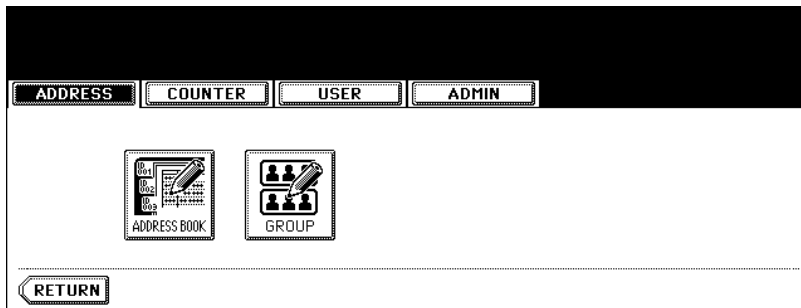

- The GROUP screen is displayed.

- 3 Press the group that you want to edit and press the [EDIT] button.

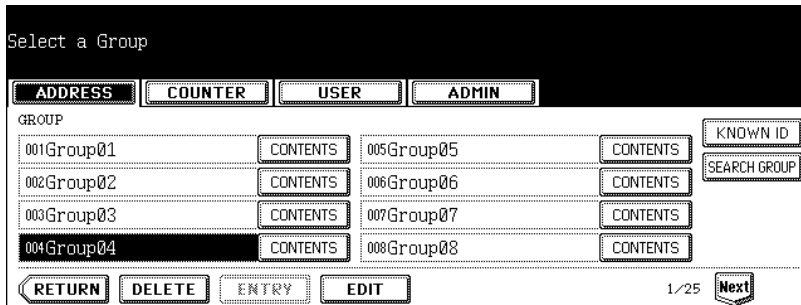

- The GROUP NO. EDIT screen is displayed.

Tip

If the touch panel does not display the group that you want to edit, press the [Next] button to display the next screen.

4 Press the [GROUP NAME] button to edit the group name.

The screenshot shows a menu with four options: ADDRESS, COUNTER, USER, and ADMIN. Below the menu, the text "GROUP NO. edit" is displayed. A button labeled "GROUP NAME" is positioned to the left of a text input field containing "Group04". At the bottom of the screen, there are two buttons: "CANCEL" and "ENTER".

- The input screen is displayed.

5 Enter the group name using the keyboard and digital keys, and press the [ENTER] button.

The screenshot shows a screen titled "Group04 Edit". It features a full QWERTY keyboard layout with various function keys. The keys include: !, ", #, \$, %, &, ', (,), =, ~, |, \, {, }, Back Space; *, <, >, ?, _ (underscore), ^, @, +, | (pipe), ;, :, /, \, left arrow, right arrow; Q, W, E, R, T, Y, U, I, O, P; A, S, D, F, G, H, J, K, L; Z, X, C, V, B, N, M, comma, period; Shift, Caps Lock; Space, CANCEL, ENTER, and Next.

6 Press the [ENTER] button.

The screenshot shows the same menu as in step 4. The text "GROUP NO. edit" is displayed. The "GROUP NAME" button is now to the left of a text input field containing "Group04 Edit". At the bottom of the screen, there are two buttons: "CANCEL" and "ENTER".

- The CHECK OF GROUP MEMBER screen is displayed.

1

7 In the screen, the contacts that have been registered in the group are highlighted.

- To add or remove the contacts by selecting each contacts manually, see “Adding or Removing Contacts”. [P.24](#)
- To add the contacts by searching them with the ID number, see “Adding Contacts by Searching with ID Number”. [P.25](#)
- To add the contacts by searching them with search string, see “Adding Contacts by Searching with Search String”. [P.26](#)

8 To finish editing the group, press the [ENTER] key to save the settings.

Adding or Removing Contacts

1 Press the contacts that are not highlighted to add to the group, or press the highlighted contacts to remove from the group.

- To add both the fax number and E-mail address of a contact to the group, press over the contact name.
- To add only the fax number of a contact to the group, press the [FAX] button of the contact.
- To add only the E-mail address of a contact to the group, press the [E-MAIL] button of the contact.

Tips

- Press the [Prev] button or [Next] button to display the contacts in the different page.
- You can also clear the all highlighted contacts by pressing the [ALL CLEAR] button.

2 Press the [ENTER] button to save the group.

- The group is modified.

Adding Contacts by Searching with ID Number

1 Press the [KNOWN ID] button.

Select member in a group

ADDRESS COUNTER USER ADMIN

Check of Group Member

001 User01 User	FAX	E-MAIL	005 User05 User	FAX	E-MAIL
002 User02 User	FAX	E-MAIL	006 User06 User	FAX	E-MAIL
003 User03 User	FAX	E-MAIL	007 User07 User	FAX	E-MAIL
004 User04 User	FAX	E-MAIL	008 User08 User	FAX	E-MAIL

KNOWN ID SEARCH ADDRESS

ALL CLEAR CANCEL ENTER 1/125 Next

- The KNOWN ID screen is displayed.

2 Enter the ID Number using the digital keys and press the [ENTER] button.

KNOWN ID

▶Enter ID Number

KNOWN ID : 50

CANCEL ENTER

3 The touch panel displays the screen that contains the searched contact. Press the contact to be added to the group.

Select member in a group

ADDRESS COUNTER USER ADMIN

Check of Group Member

049 User49 User	FAX	E-MAIL	053 User53 User	FAX	E-MAIL
050 User50 User	FAX	E-MAIL	054 User54 User	FAX	E-MAIL
051 User51 User	FAX	E-MAIL	055 User55 User	FAX	E-MAIL
052 User52 User	FAX	E-MAIL	056 User56 User	FAX	E-MAIL

KNOWN ID SEARCH ADDRESS

ALL CLEAR CANCEL ENTER 7/125 Next Prev

- To add both the fax number and E-mail address of a contact to the group, press over the contact name.
- To add only the fax number of a contact to the group, press the [FAX] button of the contact.
- To add only the E-mail address of a contact to the group, press the [E-MAIL] button of the contact.

Tips

- Press the [Prev] button or [Next] button to display the contacts in the different page.
- You can also clear the all highlighted contacts by pressing the [ALL CLEAR] button.

1

4 Press the [ENTER] button to add to the group.

- The contacts in the group is modified.

Adding Contacts by Searching with Search String

1 Press the [SEARCH ADDRESS] button.

Select member in a group

ADDRESS COUNTER USER ADMIN

Check of Group Member

001	User01	User	FAX	E-MAIL	005	User05	User	FAX	E-MAIL	KNOWN ID
002	User02	User	FAX	E-MAIL	006	User06	User	FAX	E-MAIL	SEARCH ADDRESS
003	User03	User	FAX	E-MAIL	007	User07	User	FAX	E-MAIL	
004	User04	User	FAX	E-MAIL	008	User08	User	FAX	E-MAIL	

ALL CLEAR CANCEL ENTER 1/125 Next

- The SEARCH ADDRESS screen is displayed.

2 Press the button that is used for searching to specify the search string.

ADDRESS SEARCH

FIRST NAME

LAST NAME

FAX NO.

E-MAIL

CORP.

DEPT.

KEYWORD

CLEAR CANCEL SEARCH

- When you press each button, the input screen is displayed.

3 Enter the search string using the keyboard and digital keys, and press the [ENTER] button.

Dept06_

! " # \$ % & ' () = ~ | \ { } Back Space

* < > ? _ - ^ @ + | | ; : / \ ← →

Q W E R T Y U I O P

A S D F G H J K L

Z X C V B N M , . Shift Caps Lock

Space CANCEL ENTER Next

Tip

It will search for the contacts that contain the search string in the specified items.

- 4** Specify the search string in the items that you require and press the [SEARCH] button.

- 5** The touch panel displays the screen that contains the searched contacts. Press the contacts that you want to add to the group.

- To add both the fax number and E-mail address of a contact to the group, press over the contact name.
- To add only the fax number of a contact to the group, press the [FAX] button of the contact.
- To add only the E-mail address of a contact to the group, press the [E-MAIL] button of the contact.

Tip

Press the [Prev] button or [Next] button to display the contacts in the different page.

- 6** Press the [ENTER] button to save the group.


- The contacts in the group is modified.

Deleting Groups

The following procedure describes how to delete a group in the Address Book.


1

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2 Press the [ADDRESS] button, and then press the [GROUP] button on the touch panel.

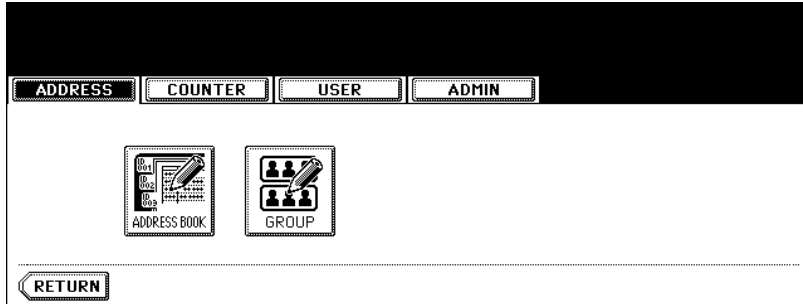

- The GROUP screen is displayed.

- 3 Press the group that you want to delete and press the [DELETE] button.

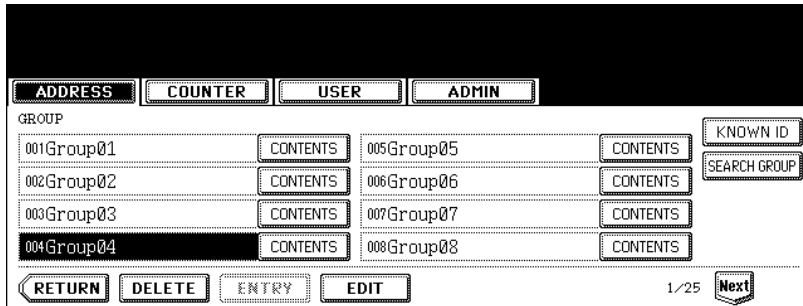


- The delete confirmation screen is displayed.

Tip

If the touch panel does not display the group that you want to delete, press the [Next] button to display the next screen.

4 Press the [YES] button to delete the contact, or [NO] button to cancel deleting.

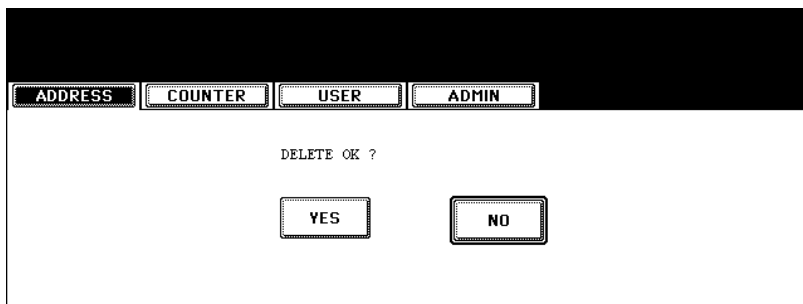

- When you press the [YES] button, the selected group is deleted.

Searching Groups


1

The following procedure describes how to search for groups in the Address Book. This function is useful to find the contact that you want to edit.

You can search for the groups by entering the ID number or the search string.


Searching a Group by ID Number

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2 Press the [ADDRESS] button, and then press the [GROUP] button on the touch panel.

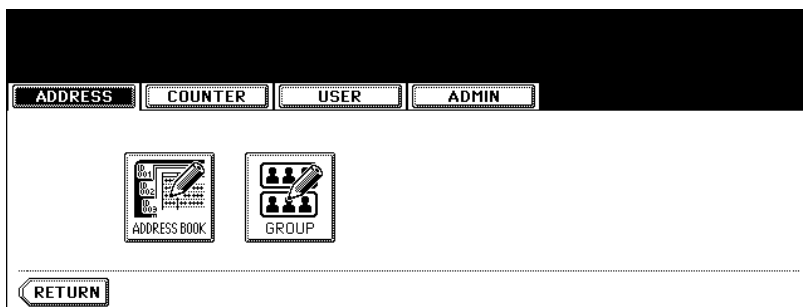


- The GROUP screen is displayed.

- 3 Press the [KNOWN ID] button.

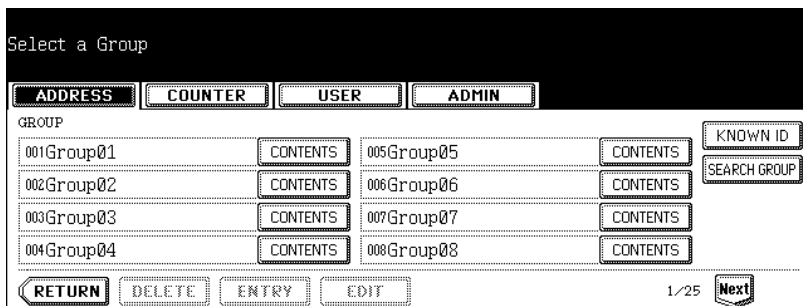


- The KNOWN ID screen is displayed.

- 4 Enter the ID Number using the digital keys and press the [ENTER] button.

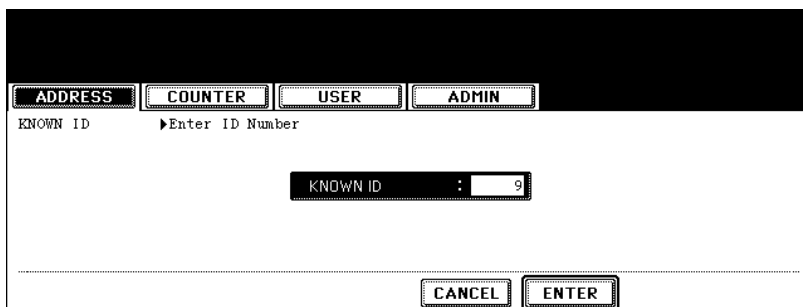


- 5** The touch panel displays the screen that contains the searched group. Press the group and press the [EDIT] button to edit the group information.

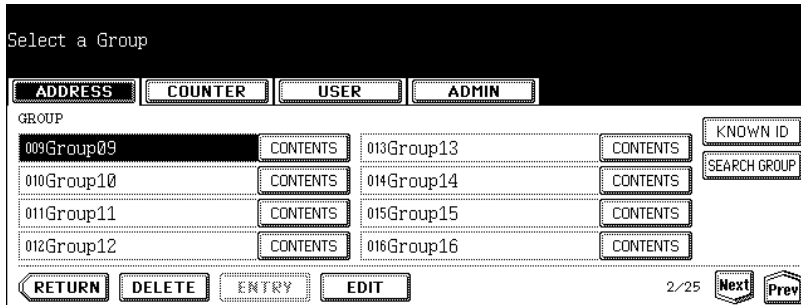

- See "Editing Groups" for the instruction to edit the group. P.22


Searching Groups by Group Name

- 1** Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2** Press the [ADDRESS] button, and then press the [GROUP] button on the touch panel.

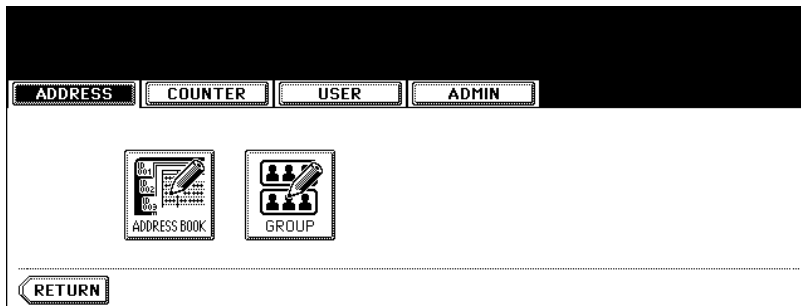

- The GROUP screen is displayed.


- 3** Press the [SEARCH GROUP] button.

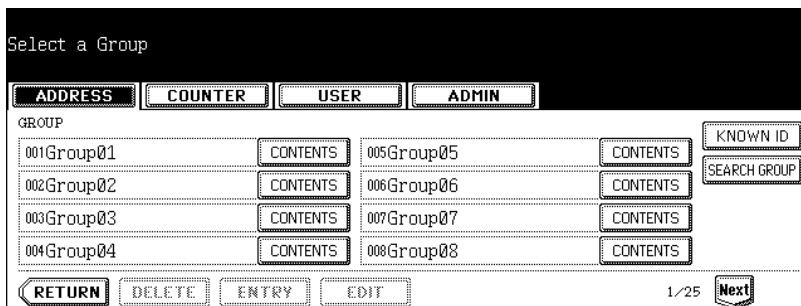

- The SEARCH GROUP screen is displayed.


1

4 Press the [GROUP NAME] button to specify the search string.

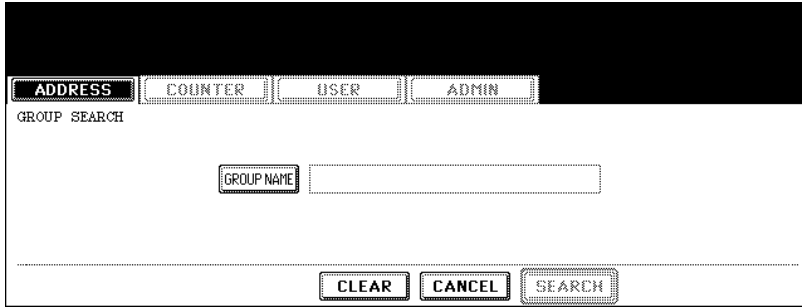

- The input screen is displayed.


5 Enter the search string using the keyboard and digital keys, and press the [ENTER] button.

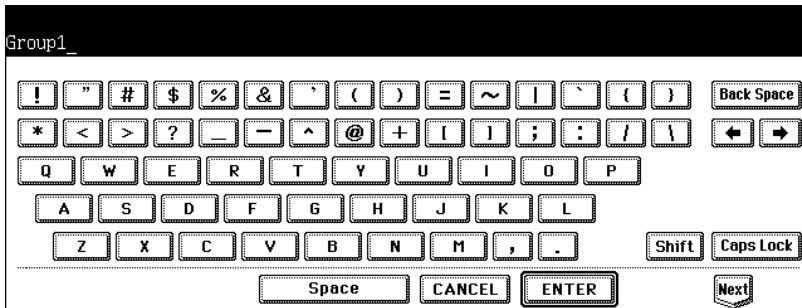

Tip

It will search for the groups that contain the search string in the group name field.

6 Press the [SEARCH] button.

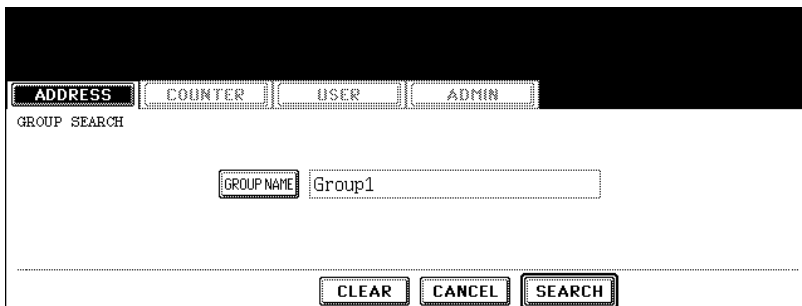

7 The touch panel displays the screen that contains the searched groups. Press the group and press the [ENTER] button to edit the group information.

ADDRESS	COUNTER	USER	ADMIN
GROUP SEARCH			
010Group10		014Group14	
011Group11		015Group15	
012Group12		016Group16	
013Group13			

RETURN ENTER 1/1


- See "Editing Groups" for the instruction to edit the contact. P.22

Confirming the Members of the Groups

The following procedure describes how to confirm the contacts that are added in the group.


1

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2 Press the [ADDRESS] button, and then press the [GROUP] button on the touch panel.

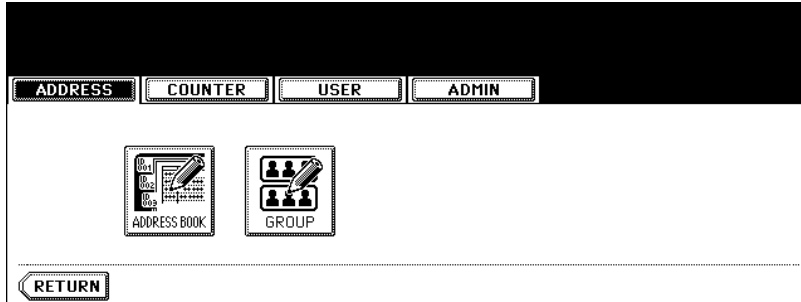


- The GROUP screen is displayed.

- 3 Press the [CONTENTS] button of the group that you want to confirm the members.

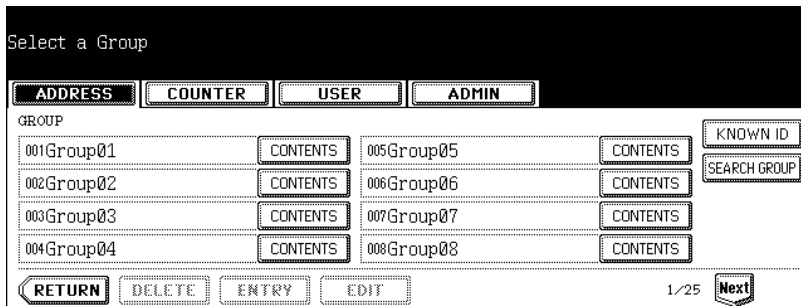

- 4 The contacts added to the group are displayed.

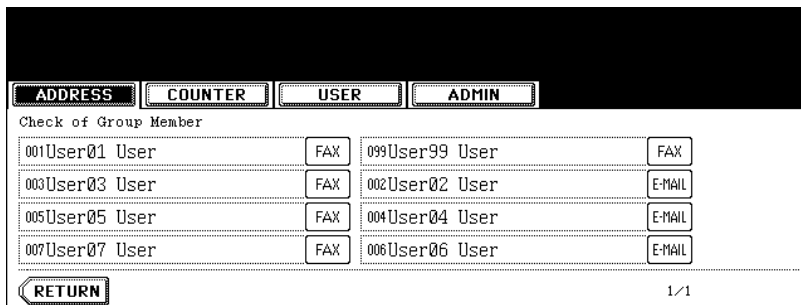

2. MANAGING COUNTERS (COUNTER MENU)

1. TOTAL COUNTER	36
• Displaying Print Counter	36
• Displaying Scan Counter	37
2. PRINT OUT TOTAL COUNTER.....	38
3. DEPARTMENT COUNTER.....	39
• Displaying Print Counter for Department Code.....	39
• Displaying Scan Counter for Department Code.....	41
• Displaying Fax Communication Counter for Department Code	43
4. MANAGING DEPARTMENT CODE.....	45
• Logging On As Administrator	45
• Printing Department Codes List	47
• Enabling Department Code.....	48
• Resetting All Department Counters.....	49
• Deleting All Department Codes.....	50
• Registering a New Department Code	51
• Editing the Department Code.....	54
• Deleting the Department Code.....	58
• Resetting the Counter of Each Department	60
• Setting Output Limitations for All Departments	62

1. TOTAL COUNTER


Displaying Print Counter

This feature allows you to display the total number of the print counter.

The print counter contains following counters:


- **Copy Counter** — indicates the number of sheets that has been printed by copy operations.
- **Fax Counter** — indicates the number of sheets that has been printed by fax receptions.
- **Printer Counter** — indicates the number of sheets that has been printed by print operations and E-mail receptions (Internet Fax receptions).
- **List Counter** — indicates the number of sheets that has been printed by system page print operations.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2 Press the [COUNTER] button, and then press the [TOTAL COUNTER] button on the touch panel.

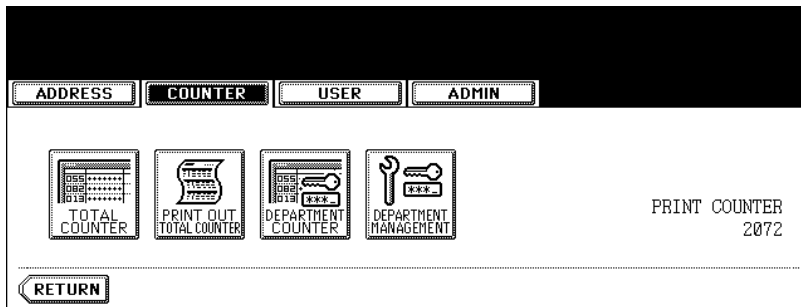


- The TOTAL COUNTER menu is displayed.

- 3 Press the [PRINT COUNTER] button.

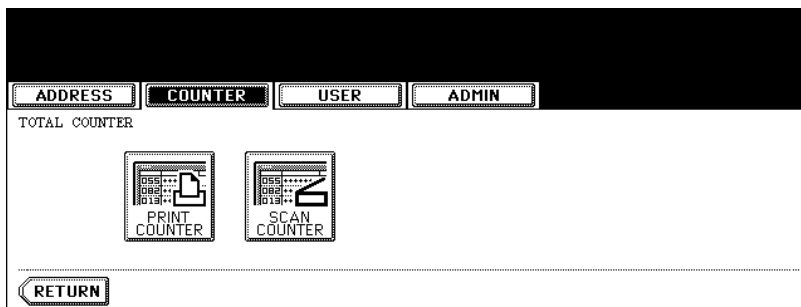

- 4 The Print Counter is displayed.

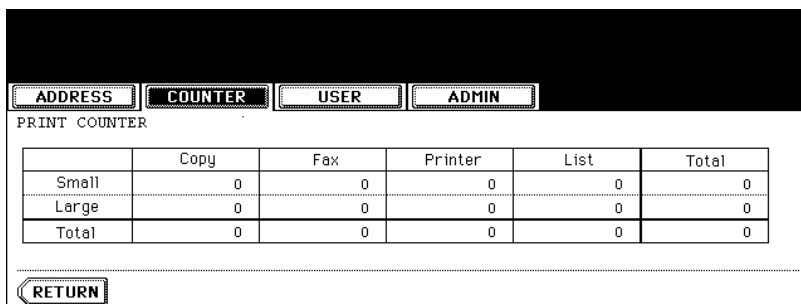


Displaying Scan Counter

This feature allows you to display the total number of the scan counter.

The scan counter contains following counters:


- **Copy Counter** — indicates the number of originals that has been scanned by copy operations.
- **Fax Counter** — indicates the number of originals that has been scanned by fax and Internet Fax transmissions.
- **Network Counter** — indicates the number of originals that has been scanned by scan operations.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2 Press the [COUNTER] button, and then press the [TOTAL COUNTER] button on the touch panel.

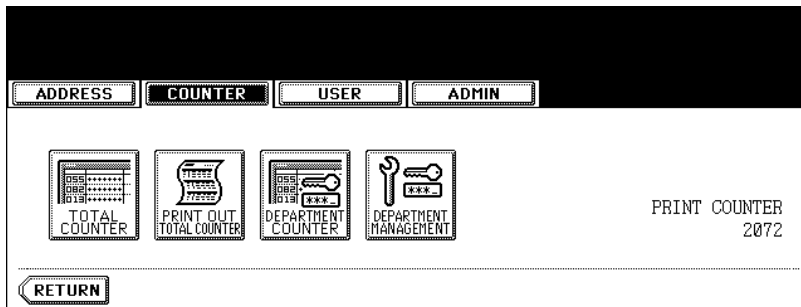


- The TOTAL COUNTER menu is displayed.

- 3 Press the [SCAN COUNTER] button.

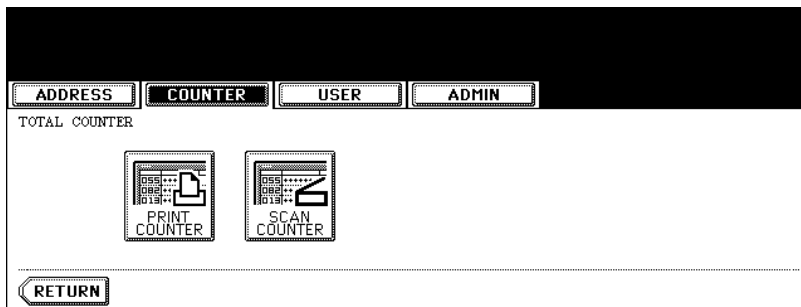


- 4 The Scan Counter is displayed.

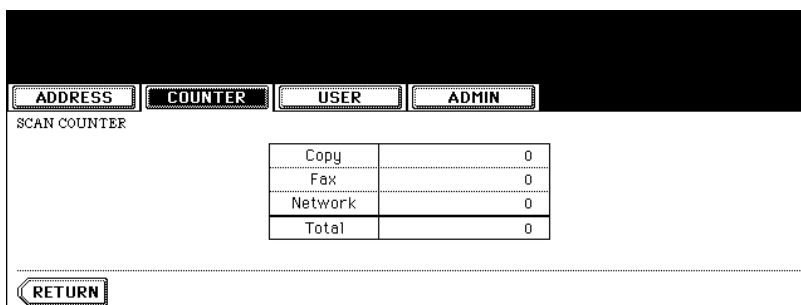

2. PRINT OUT TOTAL COUNTER

This feature allows you to print the total counter list.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2 Press the [COUNTER] button, and then press the [PRINT OUT TOTAL COUNTER] button on the touch panel.

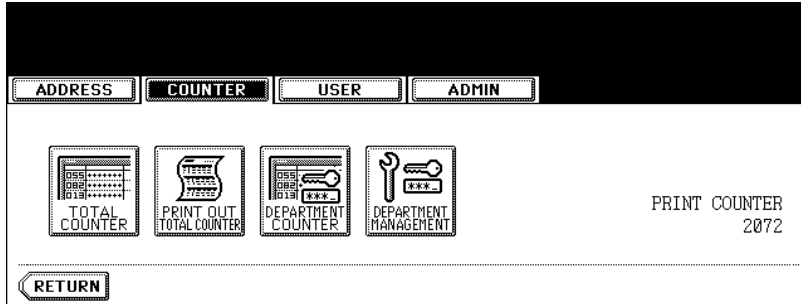

- The total counter list is printed.

Tip

For an output example of the total counter list, see "Total Counter List".  P.154

3. DEPARTMENT COUNTER

Displaying Print Counter for Department Code

This feature allows you to display the number of the print counter for each department code.


Note

The department counter is available only when this equipment has been managed with the department code. P.45 “4.MANAGING DEPARTMENT CODE”

The print counter contains following counters:


- **Copy Counter** — indicates the number of sheets that has been printed by copy operations.
- **Fax Counter** — indicates the number of sheets that has been printed by polling operations.
- **Printer Counter** — indicates the number of sheets that has been printed by print operations.
- **List Counter** — indicates the number of sheets that has been printed by system page print operations.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2 Press the [COUNTER] button, and then press the [DEPARTMENT COUNTER] button on the touch panel.

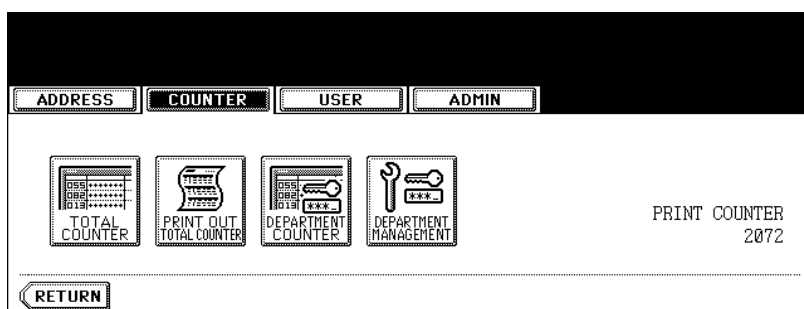


- The DEPARTMENT CODE screen is displayed.

- 3 Enter the department number using the digital keys, and then press the [ENTER] button.

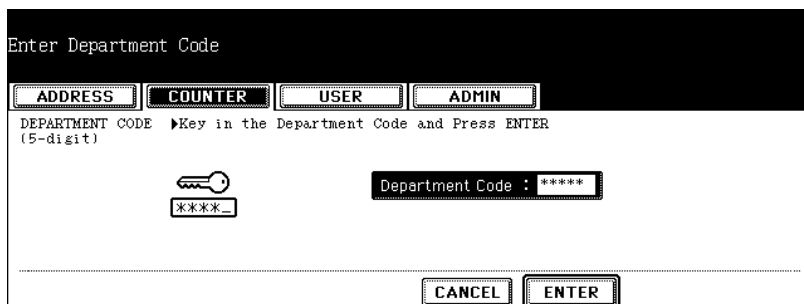

4 Press the [PRINT COUNTER] button.

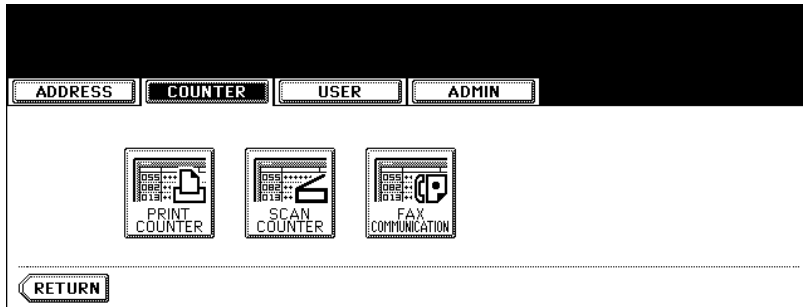

5 The Print Counter for the specified department code is displayed.


The screenshot shows the 'PRINT COUNTER' screen with a table of counts. The table has five columns: Copy, Fax, Printer, List, and Total. The rows are Small, Large, and Total. All counts are zero. A RETURN button is located at the bottom left of the screen.

	Copy	Fax	Printer	List	Total
Small	0	0	0	0	0
Large	0	0	0	0	0
Total	0	0	0	0	0

Displaying Scan Counter for Department Code

This feature allows you to display the number of the scan counter for each department code.


Note

The department counter is available only when this equipment has been managed with the department code.  P.45 “4.MANAGING DEPARTMENT CODE”

The scan counter contains following counters:


- **Copy Counter** — indicates the number of originals that has been scanned by copy operations.
- **Fax Counter** — indicates the number of originals that has been scanned by fax and Internet Fax transmissions.
- **Network Counter** — indicates the number of originals that has been scanned by scan operations.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2 Press the [COUNTER] button, and then press the [DEPARTMENT COUNTER] button on the touch panel.

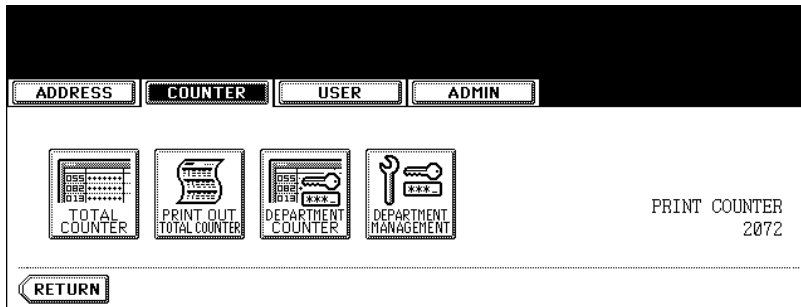


- The DEPARTMENT CODE screen is displayed.


- 3 Enter the department number using the digital keys, and then press the [ENTER] button.

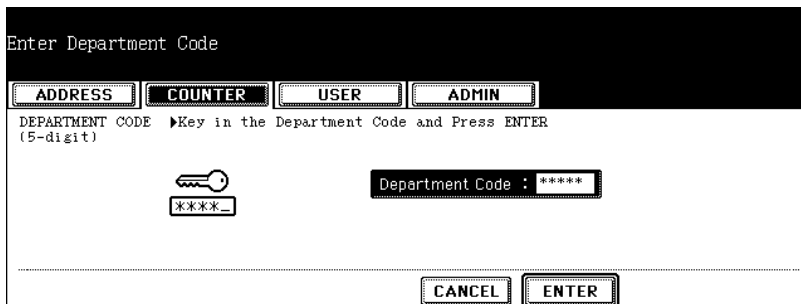

4 Press the [SCAN COUNTER] button.

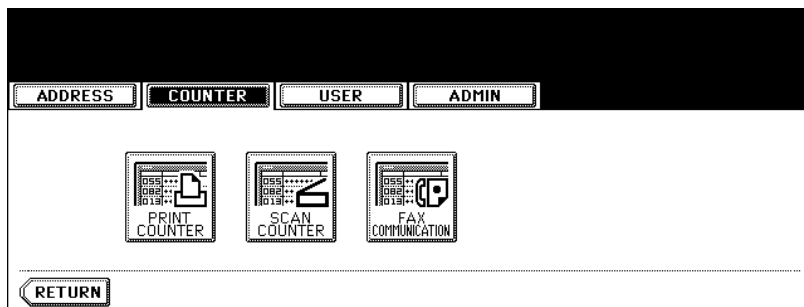


5 The Scan Counter for the specified department code is displayed.

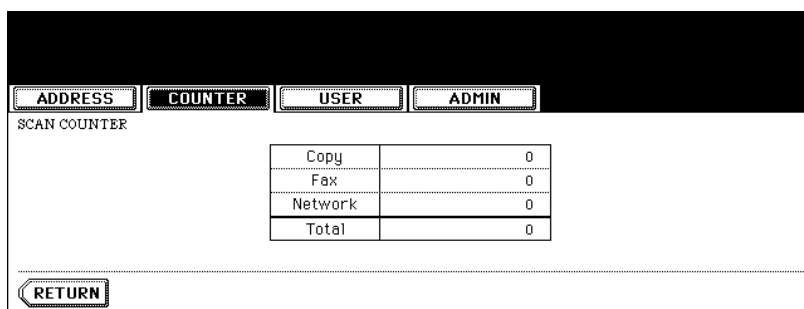

Displaying Fax Communication Counter for Department Code

This feature allows you to display the number of the Fax and Internet Fax Transmission and Reception counter for each department code.


Note

The department counter is available only when this equipment has been managed with the department code.  P.45 "4.MANAGING DEPARTMENT CODE"

The fax communication counter contains following counters:


- **Transmit** — indicates the number of pages that are sent by Fax transmissions.
- **Reception** — indicates the number of pages that are received by polling operations.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2 Press the [COUNTER] button, and then press the [DEPARTMENT COUNTER] button on the touch panel.

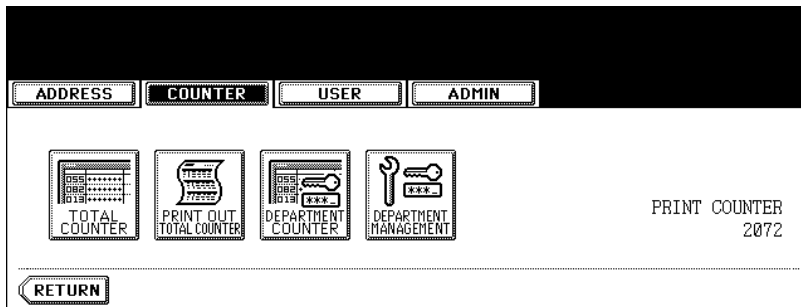


- The DEPARTMENT CODE screen is displayed.


- 3 Enter the department number using the digital keys, and then press the [ENTER] button.

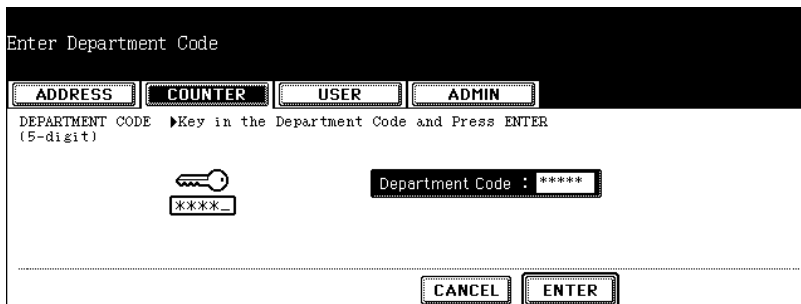

4 Press the [FAX COMMUNICATION] button.

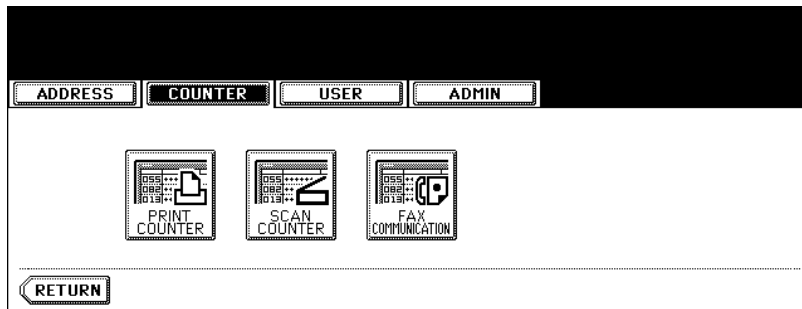

5 The Fax Communication Counter for the specified department code is displayed.

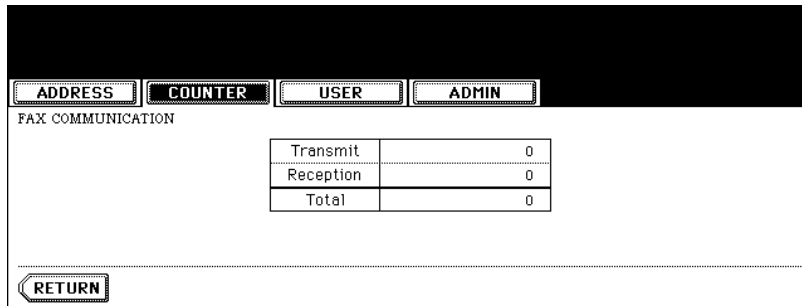

4. MANAGING DEPARTMENT CODE

Logging On As Administrator


You can audit the copy quantity of copy, print, scan, and facsimile pages performed by setting a department code. Up to 1000 department codes can be registered.

To manage the department code, you must know the administrator password for this equipment. Therefore, it is recommended to be performed by an authorized administrator in your place.

Note


If the User Management Setting is enabled and you login with the user name that has the Account Manager privilege, you do not have to enter the administrator password to display the DEPARTMENT MANAGEMENT menu.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2 Press the [COUNTER] button, and then press the [DEPARTMENT MANAGEMENT] button on the touch panel.

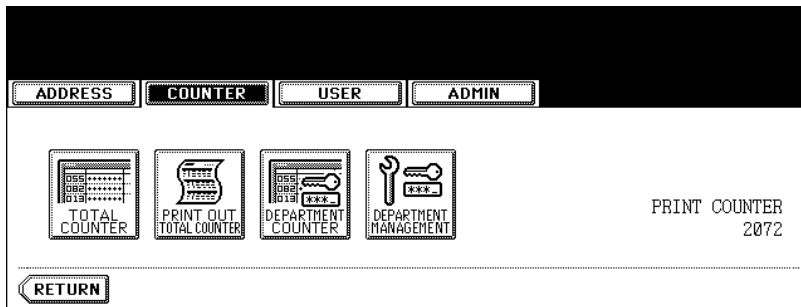


- The ADMINISTRATOR PASSWORD screen is displayed.

- 3 Press the [PASSWORD] button.

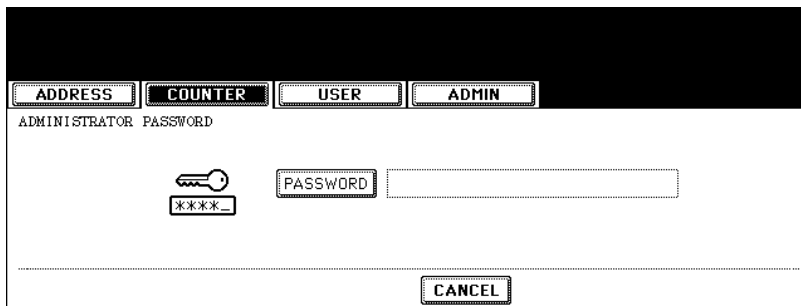


- The input screen is displayed.

4 Enter the administrator password and press the [ENTER] button.

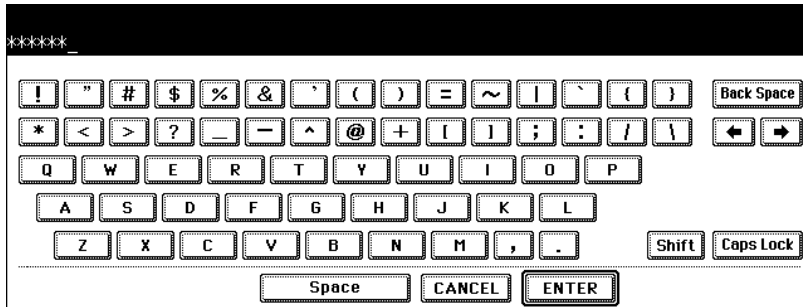

- The DEPT. MANAGEMENT menu is displayed.

5 Continue the operation that you want.

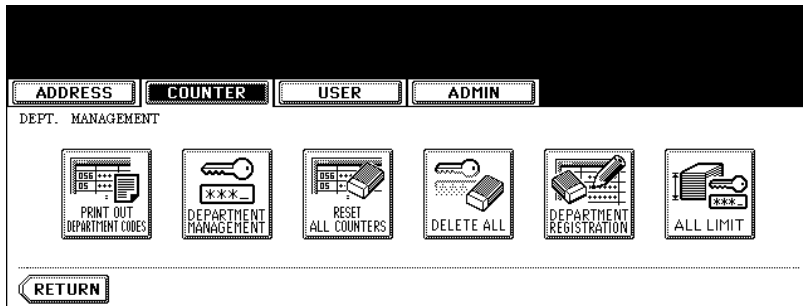


- P.47 "Printing Department Codes List"
- P.48 "Enabling Department Code"
- P.49 "Resetting All Department Counters"
- P.50 "Deleting All Department Codes"
- P.51 "Registering a New Department Code"
- P.54 "Editing the Department Code"
- P.58 "Deleting the Department Code"
- P.60 "Resetting the Counter of Each Department"
- P.62 "Setting Output Limitations for All Departments"

Printing Department Codes List

You can print out the department codes list and counters for each department code.

- 1 In the DEPT. MANAGEMENT menu, press the [PRINT OUT DEPARTMENT CODES] button.

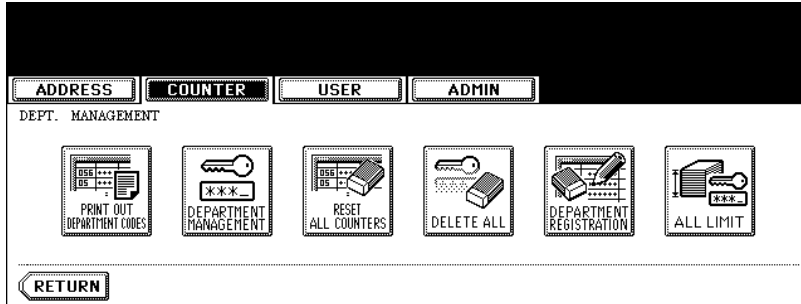

- Printing begins.


Tips

- For the procedure to display the screen above, see "Logging On As Administrator". P.45
- For an output example of the department code list, see "Department Code List". P.155


Enabling Department Code

In the initial setting, the department code feature is disabled. If you want to manage the counter separately by the department codes, you must enable the department code. When the department management is enabled, the department code input screen will be displayed before entering the copy, scan, fax, and e-Filing operation screen to manage the operations for each department code. Also the print jobs that are sent from computers can be managed for each department code.

Note


- The [DEPARTMENT MANAGEMENT] button will be available after registering a department code. Before enabling the department code, register the required department code.
 P.51 "Registering a New Department Code"
- Using TopAccess, you can also configure the Department Code Enforcement setting that sets whether the invalid jobs, which a department code is not specified or invalid department code is specified, will be printed or stored in the invalid job list when the department management is enabled. For instructions on how to set the Department Code Enforcement, see **TopAccess Guide**.
- When the User Management Setting is enabled, the Department Code feature cannot be disabled. If you want to disable the Department Code, you must disable the User Management Setting and then disable the Department Code.

1 In the DEPT. MANAGEMENT menu, press the [DEPARTMENT MANAGEMENT] button.

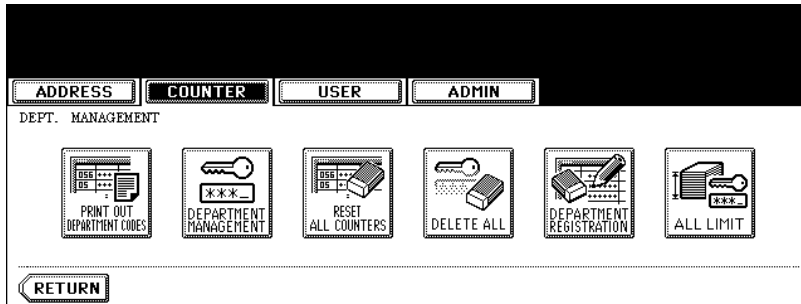


- The DEPARTMENT MANAGEMENT screen is displayed.

Tip

For the procedure to display the screen above, see "Logging On As Administrator".  P.45

2 Press the [ENABLE] button to enable the department code, or [DISABLE] button to disable the department code.

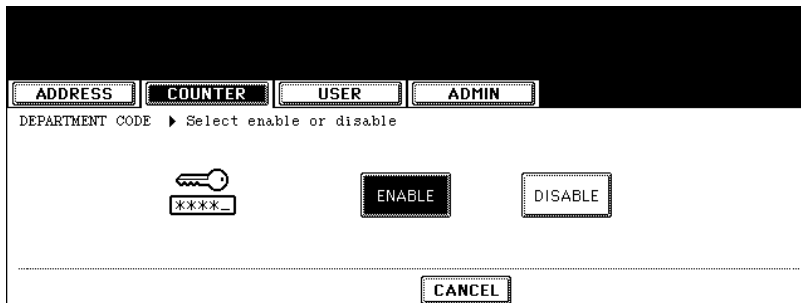

Resetting All Department Counters


This function clears all department counters to “0”.

Note

- This function is available only when the department code is enabled.
- This function clears only the department counters. You cannot clear the total counter.


2

1 In the DEPT. MANAGEMENT menu, press the [RESET ALL COUNTERS] button.

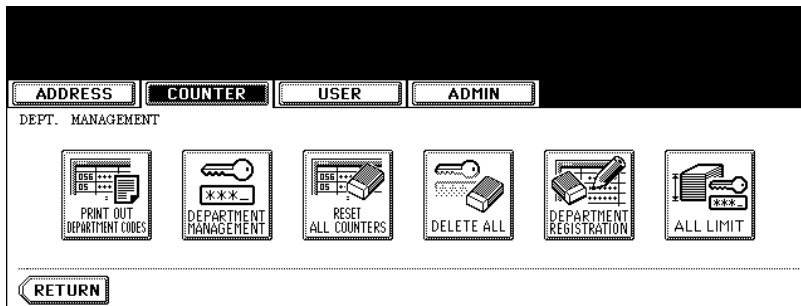


- The clear confirmation screen is displayed.

Tip

For the procedure to display the screen above, see “Logging On As Administrator”.  P.45

2 Press the [YES] button to clear all department counters, or [NO] button to cancel clearing.

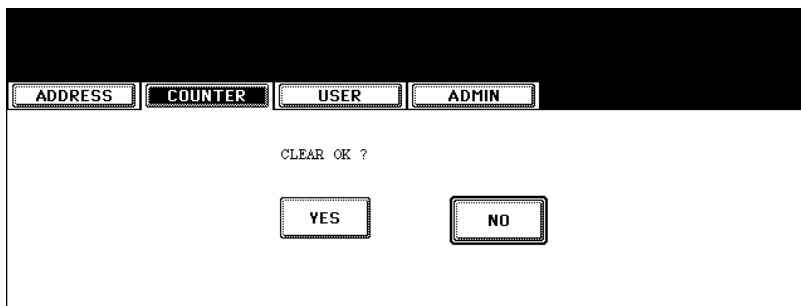

Deleting All Department Codes


This function deletes all department codes that have been registered.

Note

The [DELETE ALL] button will be available after registering a department code.

📖 P.51 “Registering a New Department Code”

1 In the DEPT. MANAGEMENT menu, press the [DELETE ALL] button.

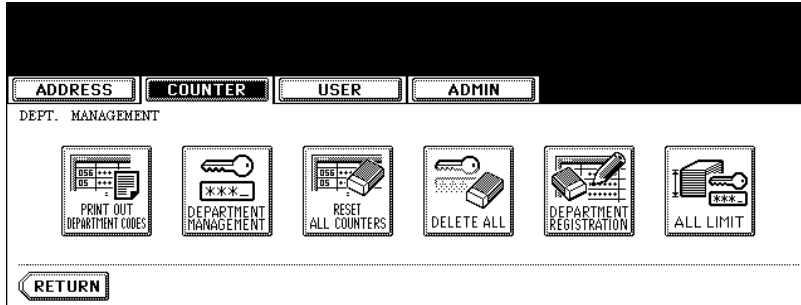


- The delete confirmation screen is displayed.

Tip

For the procedure to display the screen above, see “Logging On As Administrator”. 📖 P.45

2 Press the [YES] button to delete all department codes, or [NO] button to cancel deleting.

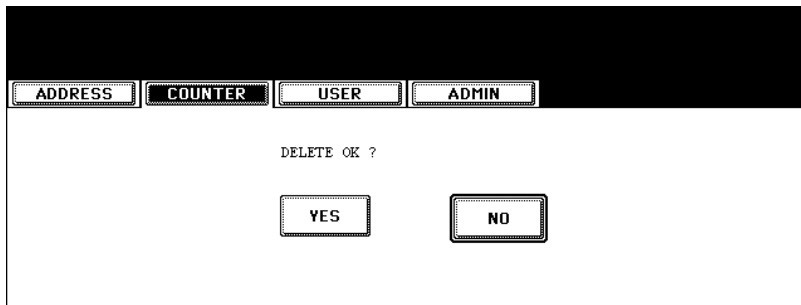

Registering a New Department Code

The function allows you to register new department code.


Note

After registering the department code(s), you must enable the Department Code function.

📖 P.48 “Enabling Department Code”

2

1 In the DEPT. MANAGEMENT menu, press the [DEPARTMENT REGISTRATION] button.

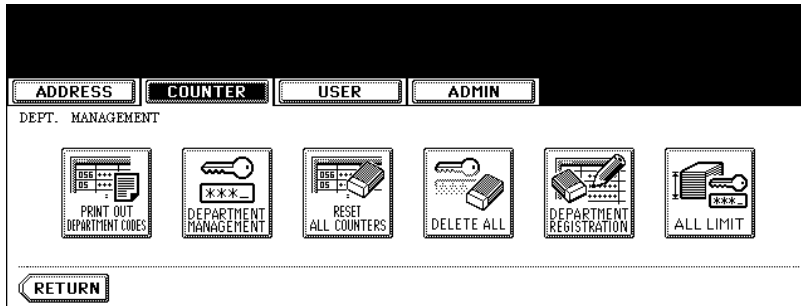


- The DEPARTMENT CODE screen is displayed.

Tip

For the procedure to display the screen above, see “Logging On As Administrator”. 📖 P.45

2 Press the undefined department code and press the [CHANGE] button.

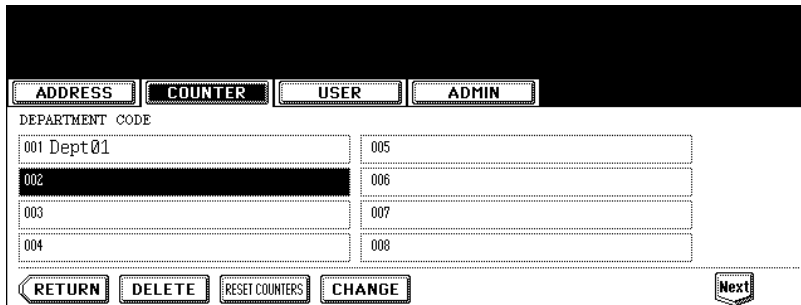


- The input screen is displayed.

Tip


If the touch panel does not display an undefined department code, press the [Next] button to display the next screen.

3 Enter the department name using the keyboard and digital keys, and press the [ENTER] button.

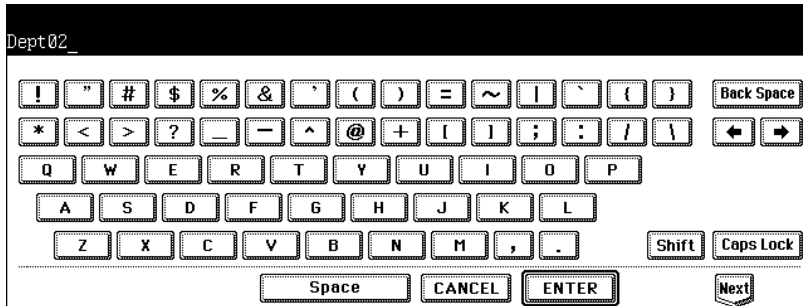

- The REGISTRATION DEPARTMENT CODE screen is displayed.

4 Enter the 5-digit code in the “New Code” field using the digital keys, and then press the [SET] button to set the entry.

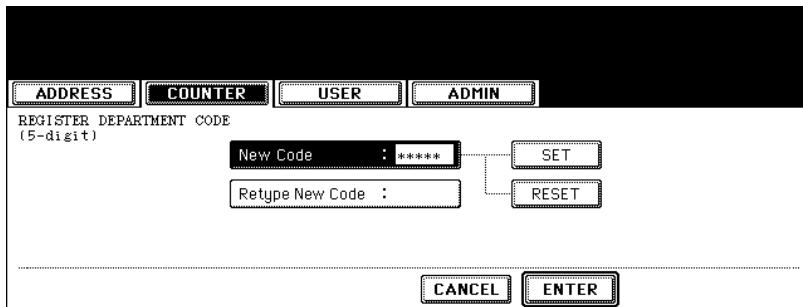


- If you enter the code, asterisks (*) appear in the “New Code” field.
- If you want to clear the code to retype it, press the [CLEAR] button on the Control Panel.
- After pressing the [SET] button, the “Retype New Code” field is highlighted.

Note

The department code must be the 5-digit code except “00000”.

5 Enter the 5-digit code again in the “Retype New Code” field using the digital keys, and then press the [SET] button to set the entry.

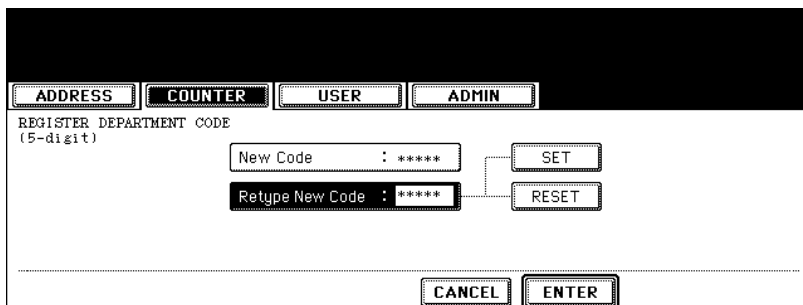

- If you enter the code, asterisks (*) appear in the “Retype New Code” field.
- If you want to clear the code to retype it, press the [CLEAR] button on the Control Panel.

Tip

If you want to return to the “New Code” field to retype it, press the [RESET] button.

6 Press the [ENTER] button at the bottom of the touch panel.

- The LIMITATION screen is displayed.

7 Set the limitation of this department code as required.

ADDRESS COUNTER USER ADMIN

LIMITATION ▶Key in the number

ON OFF

Limitation : -

PRINT COUNTER : 0

CANCEL ENTER

- Press the [ON] button to enable the output limitation for this department code. When you select the [ON] button, press the “Limitation” field and enter the maximum number of the outputs for this department code using the digital keys. You can enter up to “99999999”. If you do not set the output limitation for outputs, press the [OFF] button.

Note

If you enter “0” for the limitation, it will disable printing any copies or prints using this department code.


8 Press the [ENTER] button.

- New department code is registered.

Editing the Department Code

The function allows you to edit the existing department code.

- 1 In the DEPT. MANAGEMENT menu, press the [DEPARTMENT REGISTRATION] button.

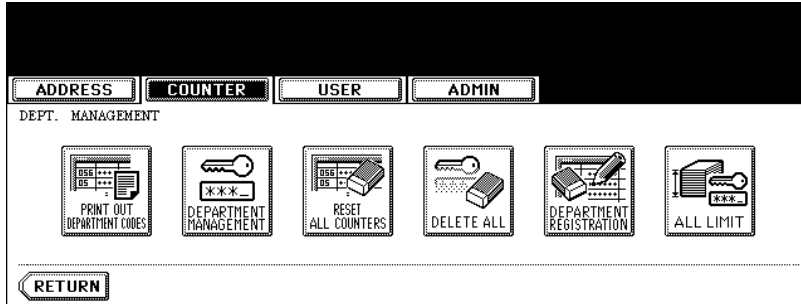


- The DEPARTMENT CODE screen is displayed.

Tip

For the procedure to display the screen above, see “Logging On As Administrator”. P.45

- 2 Press the department button that you want to edit and press the [CHANGE] button.

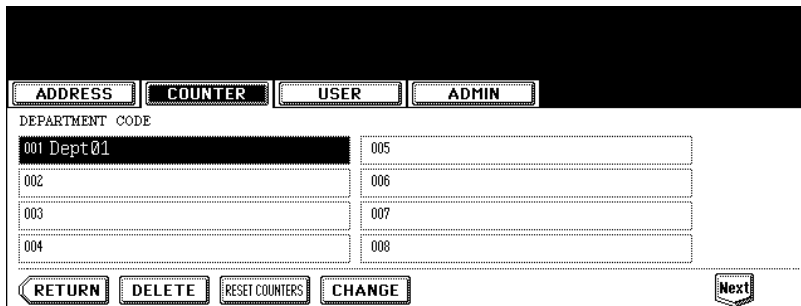

- The message “This department code is already registered. Do you wish to replace this code?” is displayed.

Tip

If the touch panel does not display the department code that you want to edit, press the [Next] button to display the next screen.

3 Press the [ENTER] button.

ADDRESS COUNTER USER ADMIN

This department code is already registered
Do you wish to replace this code?

CANCEL ENTER

- The input screen is displayed.

4 Enter the department name using the keyboard and digital keys, and press the [ENTER] button.

Dept01 Edit_

! " # \$ % & ' () = ~ | \ { } Back Space

* < > ? _ - ^ @ + | | ; : / \ ← →

Q W E R T Y U I O P

A S D F G H J K L

Z X C V B N M , . Shift Caps Lock

Space CANCEL ENTER Next

- The CHANGE DEPARTMENT CODE screen is displayed.

5 Enter current department code in the “Current Code” field using the digital keys, and then press the [SET] button to set the entry.

ADDRESS COUNTER USER ADMIN

CHANGE DEPARTMENT CODE
(5-digit)

Current Code : ***** SET

New Code : RESET

Retype New Code :

CANCEL ENTER

- If you enter the code, asterisks (*) appear in the “Current Code” field.
- If you want to clear the code to retype it, press the [CLEAR] button on the Control Panel.
- After pressing the [SET] button, the “New Code” field is highlighted.

6 Enter new 5-digit code in the “New Code” field using the digital keys, and then press the [SET] button to set the entry.

ADDRESS
COUNTER
USER
ADMIN

CHANGE DEPARTMENT CODE
(5-digit)

Current Code : *****

New Code : *****

Retype New Code :

SET

RESET

CANCEL

ENTER

- If you enter the code, asterisks (*) appear in the “New Code” field.
- If you want to clear the code to retype it, press the [CLEAR] button on the Control Panel.
- After pressing the [SET] button, the “Retype New Code” field is highlighted.

Note

The department code must be the 5-digit code except “00000”.

Tip

If you want to return to the “Current Code” field to retype it, press the [RESET] button.

7 Enter new 5-digit code again in the “Retype New Code” field using the digital keys, and then press the [SET] button to set the entry.

ADDRESS
COUNTER
USER
ADMIN

CHANGE DEPARTMENT CODE
(5-digit)

Current Code : *****

New Code : *****

Retype New Code : *****

SET

RESET

CANCEL

ENTER

- If you enter the code, asterisks (*) appear in the “Retype New Code” field.
- If you want to clear the code to retype it, press the [CLEAR] button on the Control Panel.

Tip

If you want to return to the “Current Code” field or “New Code” field to retype them, press the [RESET] button.

8 Press the [ENTER] button at the bottom of the touch panel.

- The LIMITATION screen is displayed.

9 Set the limitation of this department code as required.

The screenshot shows a menu interface with four tabs: ADDRESS, COUNTER, USER, and ADMIN. The COUNTER tab is selected. Below the tabs, the text 'LIMITATION' is followed by a right-pointing arrow and the instruction 'Key in the number'. There are two buttons, 'ON' and 'OFF', with 'OFF' being highlighted. Below these buttons is a field labeled 'Limitation' with a colon and a dash '-' to its right. Underneath this field, the text 'PRINT COUNTER' is followed by a colon and the number '0'. At the bottom of the screen are two buttons: 'CANCEL' and 'ENTER'.

- Press the [ON] button to enable the output limitation for this department code. When you select the [ON] button, press the "Limitation" field and enter the maximum number of the outputs for this department code using the digital keys. You can enter up to "99999999". If you do not set the output limitation for outputs, press the [OFF] button.

Note

If you enter "0" for the limitation, it will disable printing any copies or prints using this department code.


10 Press the [ENTER] button.

- The department code is edited.

Deleting the Department Code

The function allows you to delete the existing department code.

- 1 In the DEPT. MANAGEMENT menu, press the [DEPARTMENT REGISTRATION] button.

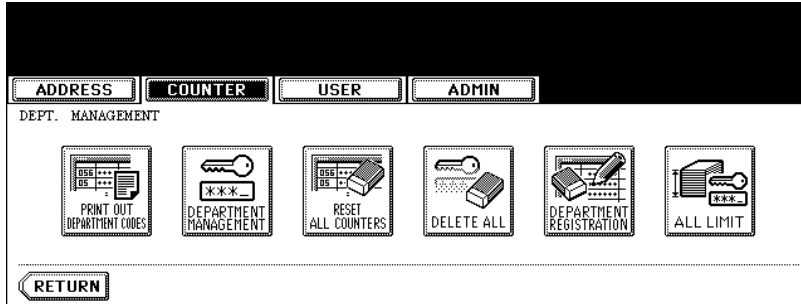


- The DEPARTMENT CODE screen is displayed.

Tip

For the procedure to display the screen above, see “Logging On As Administrator”. P.45

- 2 Press the department button that you want to delete and press the [DELETE] button.

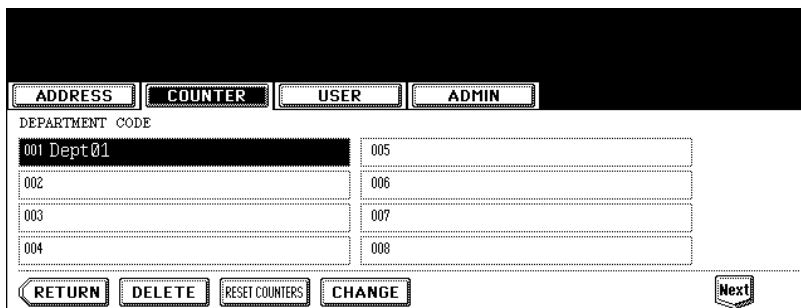


- The delete confirmation screen is displayed.

Tip

If the touch panel does not display the department code that you want to delete, press the [Next] button to display the next screen.

3 Press the [YES] button to delete the department code, or [NO] button to cancel deleting.

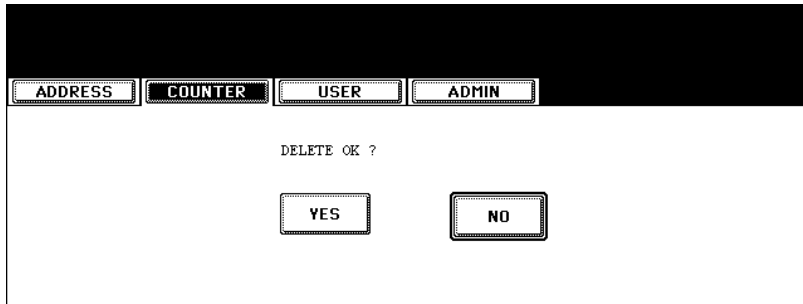


The screenshot shows a terminal window with a black header bar. Below the header, there are four menu items: ADDRESS, COUNTER, USER, and ADMIN. The COUNTER menu item is highlighted with a black background. Below the menu items, the text "DELETE OK ?" is displayed. At the bottom of the terminal, there are two buttons: YES and NO.

- When you press the [YES] button, the department code is deleted.

Resetting the Counter of Each Department

The function allows you to reset the counter of specific department code only.

- 1 In the DEPT. MANAGEMENT menu, press the [DEPARTMENT REGISTRATION] button.

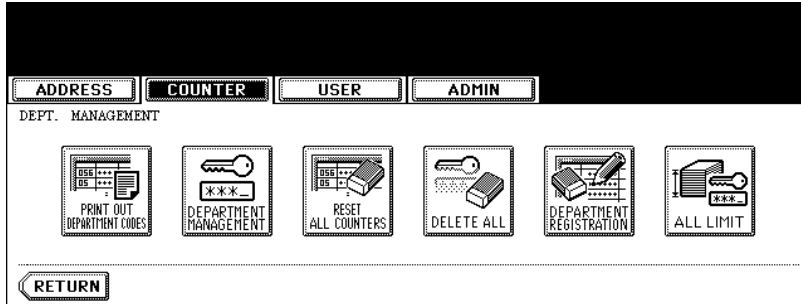


- The DEPARTMENT CODE screen is displayed.

Tip

For the procedure to display the screen above, see “Logging On As Administrator”. P.45

- 2 Press the department button that you want to reset the counter and press the [RESET COUNTERS] button.

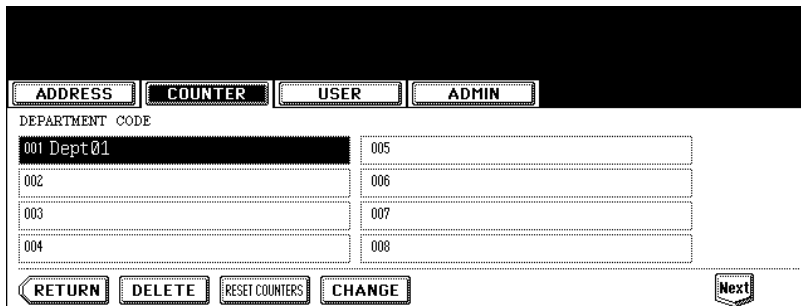


- The clear confirmation screen is displayed.

Tip

If the touch panel does not display the department code that you want to clear the counter, press the [Next] button to display the next screen.

3 Press the [YES] button to clear the counter of the department code, or [NO] button to cancel clearing the counter.

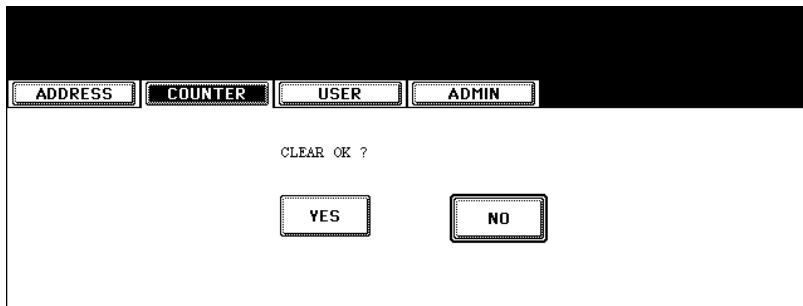

The screenshot shows a terminal window with a black header bar. Below the header, there are four menu items: ADDRESS, COUNTER, USER, and ADMIN. The COUNTER menu item is highlighted with a white background. Below the menu items, the text "CLEAR OK ?" is displayed. At the bottom of the terminal, there are two buttons: YES and NO.

- When you press the [YES] button, the counter of the department code is cleared.

Setting Output Limitations for All Departments


This function allows you to set the output limitation for all departments by a single operation. When you select [ON], the output will be disabled for all departments. When you select [OFF], the infinite outputs will be allowed for all departments.

Tip

When you select [ON], the limitation setting for each department code will be set to [ON] and the "Limitation" field will be set to "0". If you want to change the limitation setting for each department code, change the limitation setting by editing a department code.

📖 P.54 "Editing the Department Code"

1 In the DEPT. MANAGEMENT menu, press the [ALL LIMIT] button.

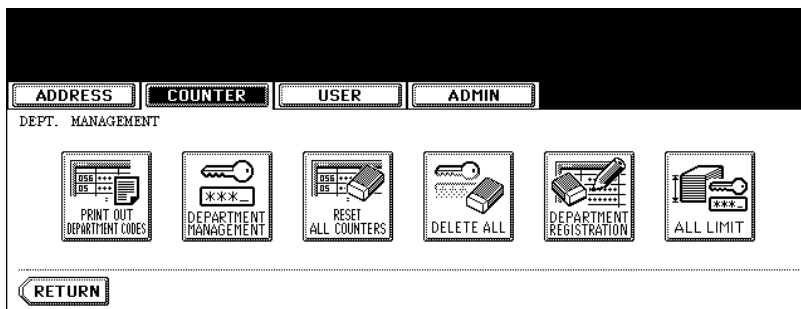


- The ALL LIMIT screen is displayed.

Tip

For the procedure to display the screen above, see "Logging On As Administrator". 📖 P.45

2 Press the [ON] button to disable the copies/prints for all departments, or [OFF] button to permit infinite copies/prints for all departments.

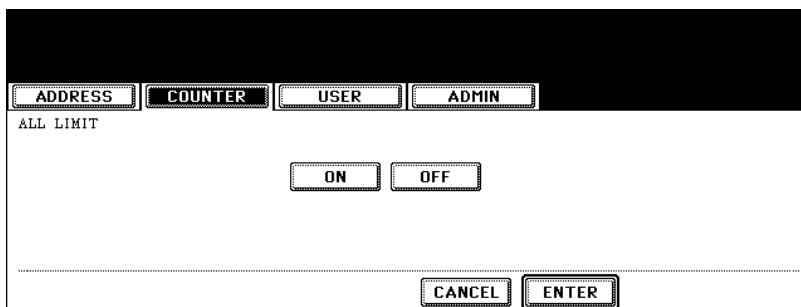

3 Press the [ENTER] button.

- The output limitation settings are saved.

3. SETTING ITEMS (USER)


1. SETTING GENERAL FUNCTIONS	64
• Setting the Auto Clear Mode	64
• Changing the Display Language	65
• Setting the Reversed Display Mode	66
2. SETTING COPY FUNCTIONS	68
3. SETTING FAX FUNCTIONS	70
4. SETTING SCAN FUNCTIONS	72
5. PRINTING LISTS	74
• Printing the Address Book List	74
• Printing the Group Numbers List	75
• Printing the Function List (User)	76
6. CHECKING E-MAIL	77
7. SETTING DRAWER	78
8. TURN OFF THE POWER (SHUT DOWN)	79

1. SETTING GENERAL FUNCTIONS

Setting the Auto Clear Mode


This function sets how long the machine waits before clearing the previous functions set on the control panel.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2 Press the [USER] button, and then press the [GENERAL] button on the touch panel.

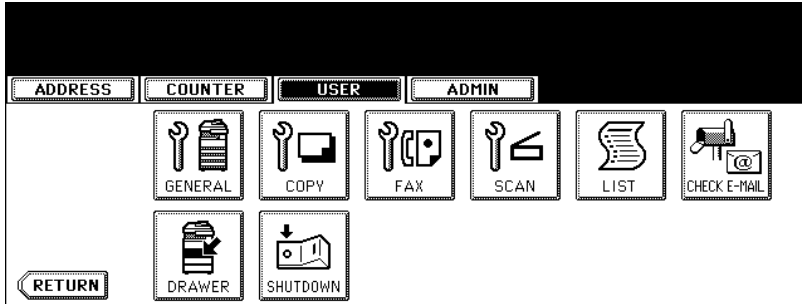


- The GENERAL menu is displayed.

- 3 Press the [AUTO CLEAR] button.

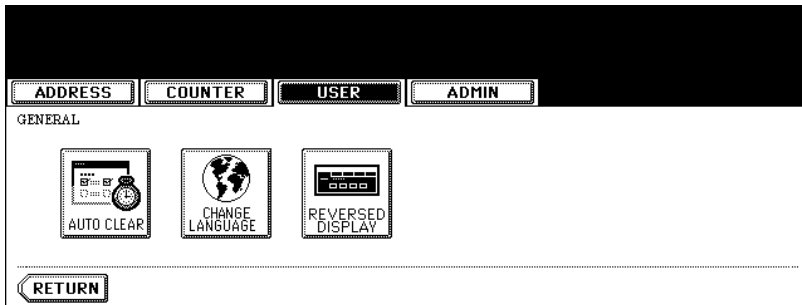

- The AUTO CLEAR screen is displayed.

- 4 Press the button that indicates the desired time in seconds.

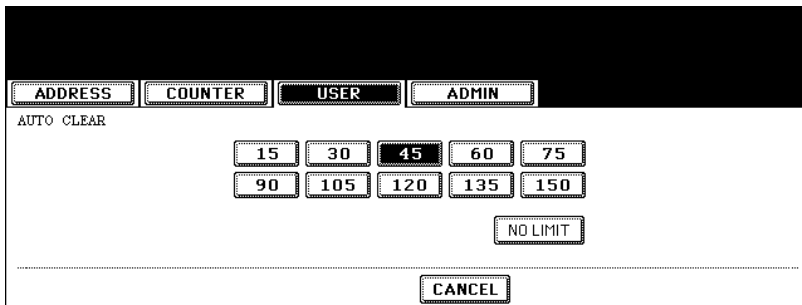

- The Auto Clear mode has been set to selected time.


Tips

- If you want to disable the Auto Clear mode, press the [NO LIMIT] button.
- Even if the [NO LIMIT] button is selected, the screen will be cleared after 45 seconds in case that users operate in the USER FUNCTION, JOB STATUS, or TEMPLATE screen.

Changing the Display Language


The language used on the touch panel can be changed to a different one.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2 Press the [USER] button, and then press the [GENERAL] button on the touch panel.

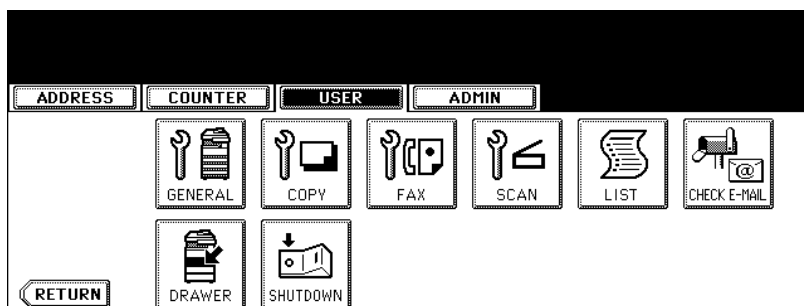


- The GENERAL menu is displayed.

- 3 Press the [CHANGE LANGUAGE] button.

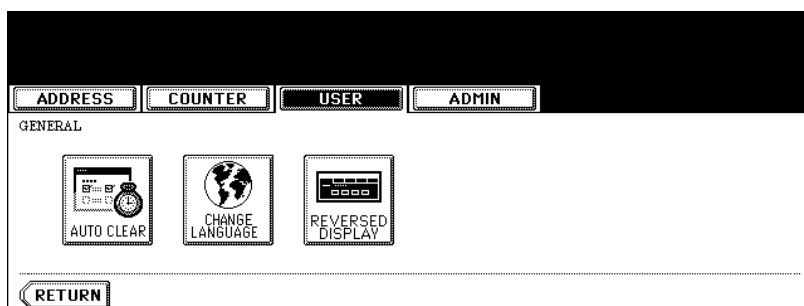

- The CHANGE LANGUAGE screen is displayed.

- 4 Press the desired language button.

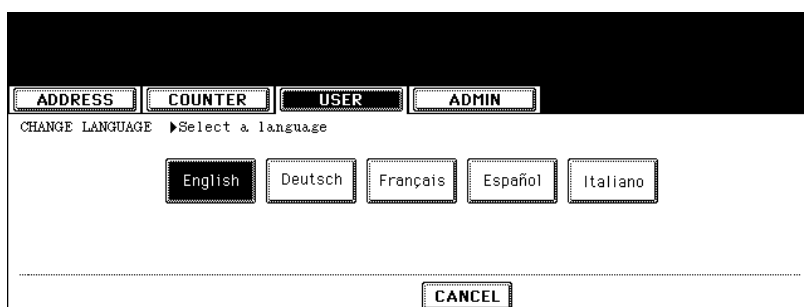


- The touch panel is displayed in the selected language.

Setting the Reversed Display Mode

You can change the touch panel to be displayed in the Reversed Display mode (which the white portion will be black and the black portion will be white).


Changing to the Reversed Display mode helps you to display the touch panel more clearly where it is too bright to see the touch panel.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2 Press the [USER] button, and then press the [GENERAL] button on the touch panel.

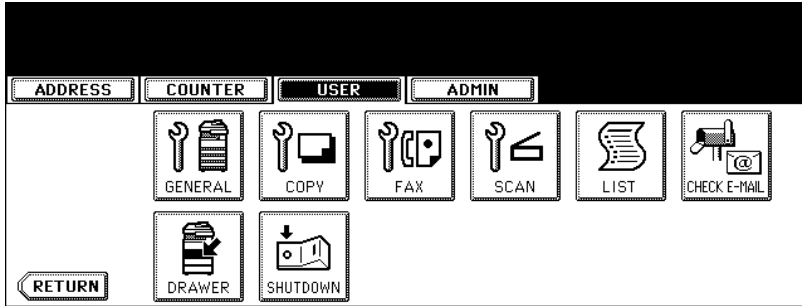


- The GENERAL menu is displayed.

- 3 Press the [REVERSED DISPLAY] button.

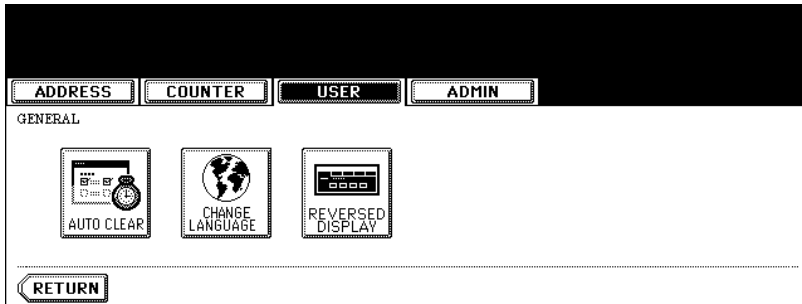


- The REVERSED DISPLAY screen is displayed.

4 Press the [ON] button to enable the Reversed Display, or [OFF] button to disable the Reversed Display.

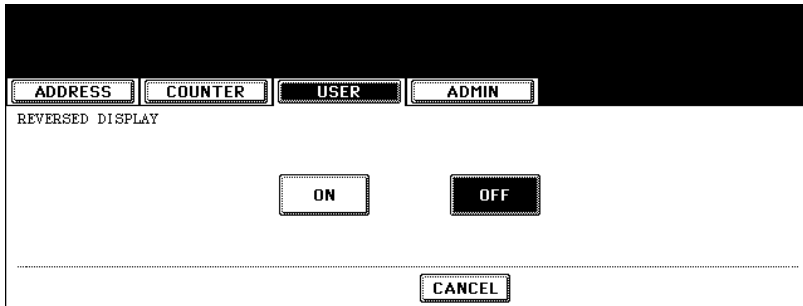


- When you select the [ON] button, the touch panel is displayed in the Reversed Display mode.

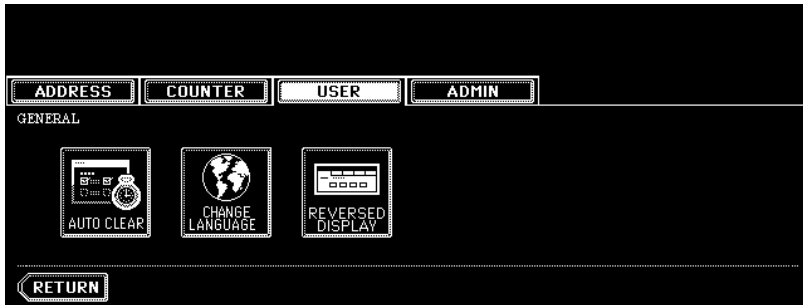

2. SETTING COPY FUNCTIONS


You can change the initial setting (default setting) of copy job.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2 Press the [USER] button, and then press the [COPY] button on the touch panel.

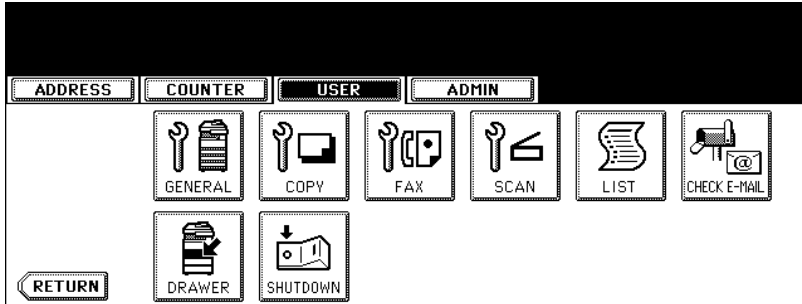

- The COPY screen is displayed.

- 3 Specify the following items as you require.

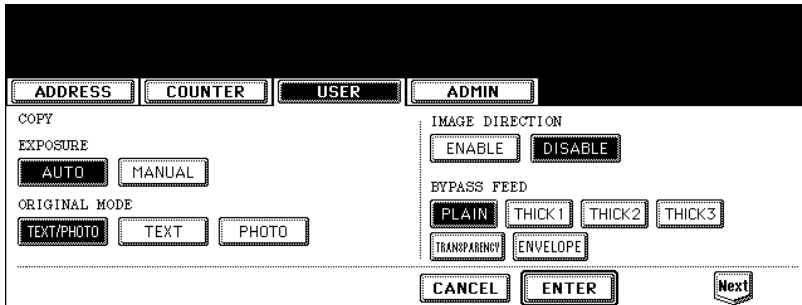

- In the "EXPOSURE MODE" option, press the desired mode button.
- In the "ORIGINAL MODE" option, press the desired mode button.
- In the "IMAGE DIRECTION" option, press the desired mode button.
When this is enabled, the portrait originals that are placed in R direction can be detected as portrait original and perform the duplex copy correctly. This is usually enabled only when you want to perform duplex copy from the large size of portrait originals such as A3 or LD-size portrait originals.
- In the "BYPASS FEED" option, press the desired media type button.

Tip

For more information about the paper type, please see the *Operator's Manual For Basic Functions*.

- 4 Press the [Next] button to display the next screen.

5 Specify the following items as you require.

ADDRESS COUNTER USER ADMIN

COPY

2IN1/4IN1

WRITE VERTICALLY WRITE LATERALLY

MAGAZINE SORT

OPEN FROM RIGHT OPEN FROM LEFT

BOOK -> 2

OPEN FROM RIGHT OPEN FROM LEFT

CANCEL ENTER Prev

- In the "2IN1/4IN1" option, press the desired mode button.
 - [WRITE VERTICALLY]** — Press this to print each two pages or four pages from left to right or top to bottom for the 2IN1/4IN1 copy. When the portrait originals are copied using 2in1 or 4in1, it copies them from left to right. When the landscape originals are copied using 2in1 or 4in1, it copies them from top to bottom.
 - [WRITE LATERALLY]** — Press this to print each two pages or four pages are copied from right to left or top to bottom for the 2IN1/4IN1 copy. When the portrait originals are copied using 2in1 or 4in1, it copies them from right to left. When the landscape originals are copied using 2in1 or 4in1, it copies them from top to bottom.
- In the "MAGAZINE SORT" option, press the desired mode button.
 - [OPEN FROM RIGHT]** — Press this to perform magazine sort copy to create a booklet that can be opened from right pages.
 - [OPEN FROM LEFT]** — Press this to perform magazine sort copy to create a booklet that can be opened from left pages.
- In the "DUPLEX BOOK -> 2" option, press the desired mode button.
 - [OPEN FROM RIGHT]** — Press this when you copy the booklet that can be opened from right pages.
 - [OPEN FROM LEFT]** — Press this when you copy the booklet that can be opened from left pages.

6 Press the [ENTER] button.

- The default settings for each mode are changed as you specified.


3. SETTING FAX FUNCTIONS

You can change the initial setting (default setting) of fax and Internet Fax features.

Note


The [FAX] button in the [USER] menu will be available only when the Scanner Kit or Printer/Scanner Kit is installed, or when the optional Fax unit is installed.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2 Press the [USER] button, and then press the [FAX] button on the touch panel.

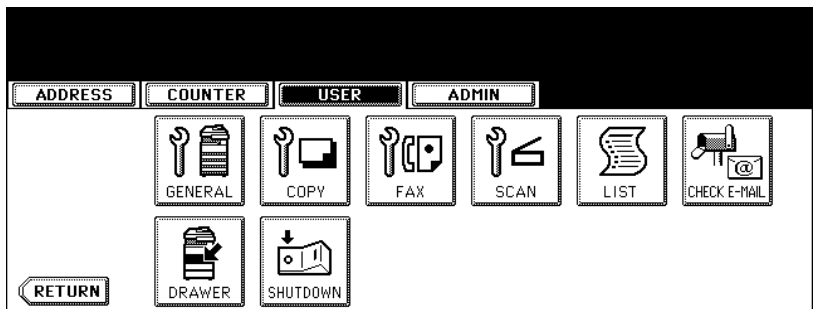

- The FAX screen is displayed.

- 3 Specify the following items as you require.

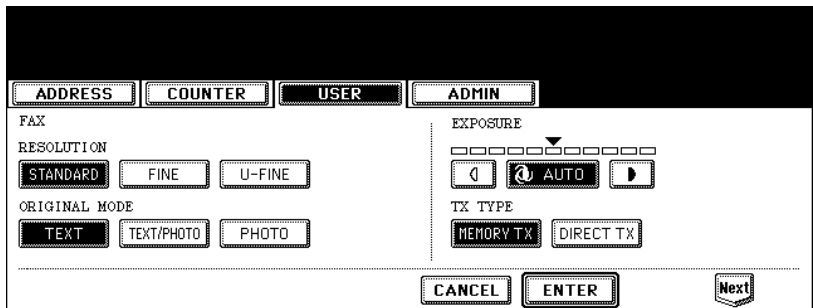

- In the "RESOLUTION" option, press the desired mode button.
- In the "ORIGINAL MODE" option, press the desired mode button.
- In the "EXPOSURE" option, press light or dark buttons to specify the default exposure manually, or press the [AUTO] button to select auto mode for the default exposure mode.
- In the "TX TYPE" option, press the desired mode button.
[MEMORY TX] — Press this to set the Memory TX mode as default transmission mode that will send after scanning and saving all originals in the memory. This mode enables to multi-address transmission.
[DIRECT TX] — Press this to set the Direct TX mode as default transmission mode that will send originals page by page after every original has been scanned. This mode enable to single-address transmission only.

Note

The "TX TYPE" option is available only when the optional Fax unit is installed.

- 4 Press the [Next] button to display the next screen.

5 Specify the following items as you require.

FAX

ADDRESS COUNTER **USER** ADMIN

TTI

ON OFF

RTI

ON OFF

ECM

ON OFF

CANCEL ENTER Prev

- In the “TTI” option, specify whether the TTI is enabled or disabled as default setting.
[ON] — Press this to print a transmission header (TTI) on received faxes to clearly identify the sender name of received faxes.
[OFF] — Press this not to print a transmission header (TTI) on received faxes.
- In the “RTI” option, specify whether the RTI is enabled or disabled as default setting.
[ON] — Press this to print a reception header (RTI) on received faxes to clearly identify the time, date, and page count of received faxes.
[OFF] — Press this not to print a reception header (RTI) on received faxes.
- In the “ECM” option, specify whether the ECM is enabled or disabled as default setting.
[ON] — Press this to enable the ECM (Error Correction Mode) to automatically re-send any portion of the document affected by phone line noise or distortion.
[OFF] — Press this to disable the ECM.

Note

- The “TTI”, “RTI”, and “ECM” options are available only when the optional Fax unit is installed.
- The “TTI” option is not displayed depending on the region.

6 Press the [ENTER] button.

- The default settings for each mode are changed as you specified.


4. SETTING SCAN FUNCTIONS

You can change the initial setting (default setting) of scan job.

Note


The [SCAN] button in the [USER] menu will be available only when the Scanner Kit is installed, or when the Printer/Scanner Kit is installed.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2 Press the [USER] button, and then press the [SCAN] button on the touch panel.

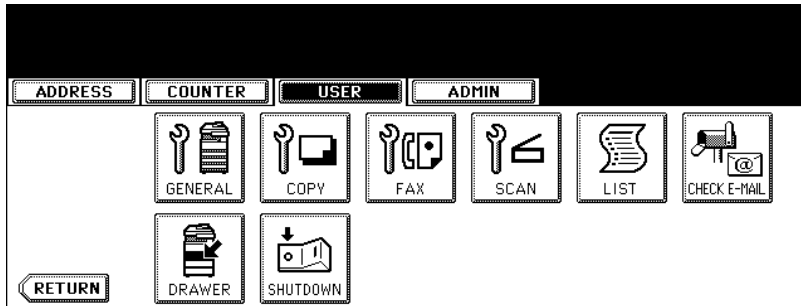

- The SCAN screen is displayed.

- 3 Specify the following items as you require.

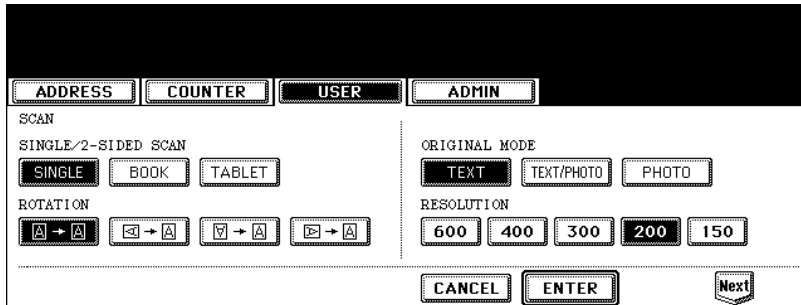

- In the "SINGLE/2-SIDE SCAN" option, press the desired mode button.
[SINGLE] — Press this to set single page scan as default scan mode.
[BOOK] — Press this to set book scan mode as default scan mode. This enables to scan both side of originals in the same direction.
[TABLET] — Press this to set tablet scan mode as default scan mode. This enables to scan front page in the general direction, and scan back page rotated 180 degree.
- In the "ROTATION" option, press the desired mode button.
- In the "ORIGINAL MODE" option, press the desired mode button applied for scans.
- In the "RESOLUTION" option, press the desired mode button applied for scans.

- 4 Press the [Next] button to display the next screen.

5 Specify the following items as you require.

The screenshot shows a menu interface with four tabs at the top: ADDRESS, COUNTER, USER, and ADMIN. The 'USER' tab is selected. Below the tabs, the word 'SCAN' is displayed. The main area is titled 'EXPOSURE' and features a row of ten small square buttons. The third button from the left is highlighted and contains the text 'AUTO'. Below this row are three larger buttons: a left arrow, the 'AUTO' button, and a right arrow. At the bottom of the screen are two buttons: 'CANCEL' and 'ENTER'. A 'Prev' button is located in the bottom right corner.

- In the "EXPOSURE" option, press light or dark buttons to specify the default exposure for scans manually, or press the [AUTO] button to select auto mode for the default exposure mode for scans.

6 Press the [ENTER] button.


- The default settings for each mode are changed as you specified.

5. PRINTING LISTS

Printing the Address Book List


You can print the address book list that shows all registered contacts and groups in this equipment.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2 Press the [USER] button, and then press the [LIST] button on the touch panel.

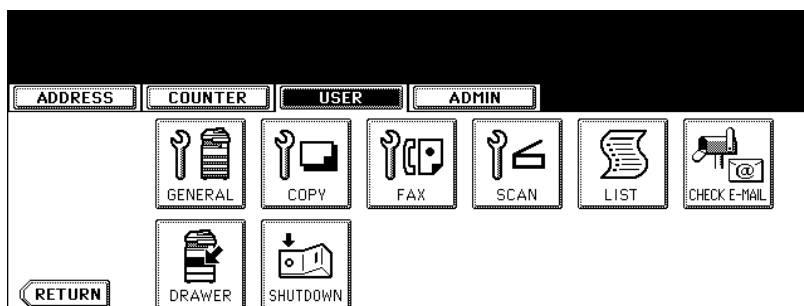


- The LIST menu is displayed.

- 3 Press the [ADDRESS BOOK] button.

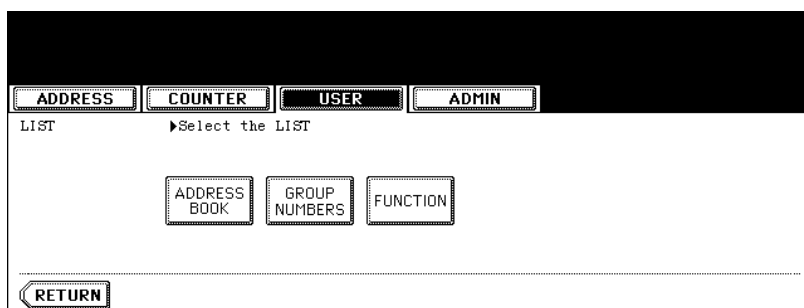

- The ADDRESS BOOK menu is displayed.

- 4 Press the [ID SORT] button to print it as sorted by the ID number, or [NAME SORT] button to print it as sorted by the last name.

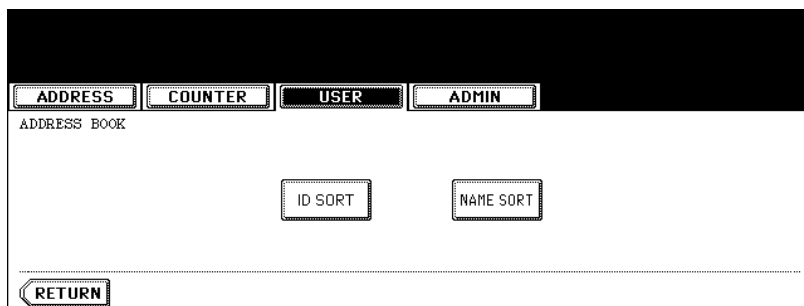

- When the department management is disabled, the address book list is printed.
- When the department management is enabled, the screen to input the department code is displayed. Enter the department code using the digital keys and press the [ENTER] button to print the address book list.


Tip

For an output example of the address book list, see "Address Book List". P.156

Printing the Group Numbers List


You can print the group numbers list that shows all registered groups and members in this equipment.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2 Press the [USER] button, and then press the [LIST] button on the touch panel.

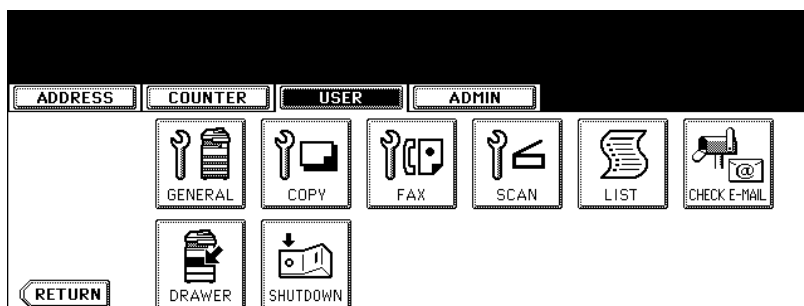

- The LIST menu is displayed.

- 3 Press the [GROUP NUMBERS] button.

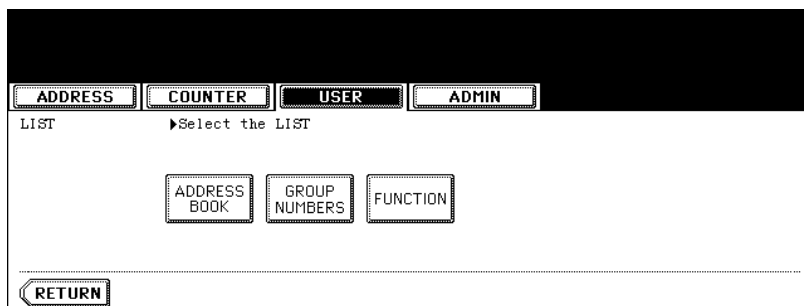

- When the department management is disabled, the group numbers list is printed.
- When the department management is enabled, the screen to input the department code is displayed. Enter the department code using the digital keys and press the [ENTER] button to print the group numbers list.


Tip

For an output example of the group numbers list, see "Group Numbers List".  P.157

Printing the Function List (User)


You can print the function list that shows the function flow under the [USER] button of the User Functions.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2 Press the [USER] button, and then press the [LIST] button on the touch panel.

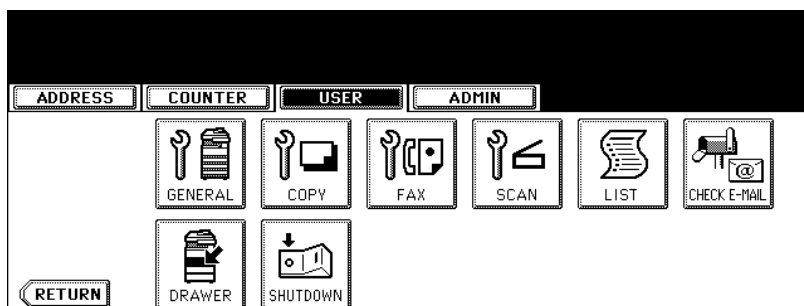

- The LIST menu is displayed.

- 3 Press the [FUNCTION] button.

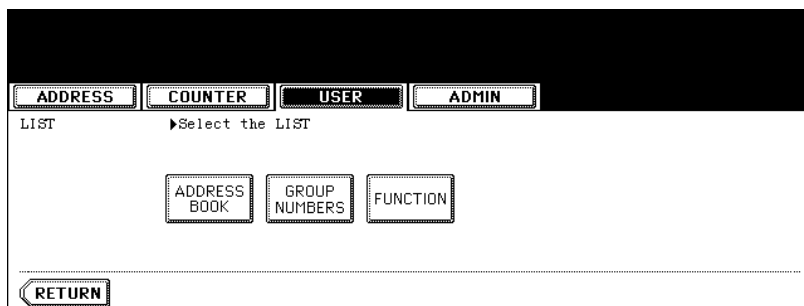

- When the department management is disabled, the function list is printed.
- When the department management is enabled, the screen to input the department code is displayed. Enter the department code using the digital keys and press the [ENTER] button to print the function list.

Tip

For an output example of the function list, see "Function List (User)". P.158

6. CHECKING E-MAIL

This function allows you to check for new E-mails (Internet Faxes) on the POP3 server.

Note


The [CHECK E-MAIL] button in the [USER] menu will be available only when the Scanner Kit is installed, or when the Printer/Scanner Kit is installed.

Tip

This equipment also automatically checks for new E-mails on the POP3 server.

3

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2 Press the [USER] button, and then press the [CHECK E-MAIL] button on the touch panel.

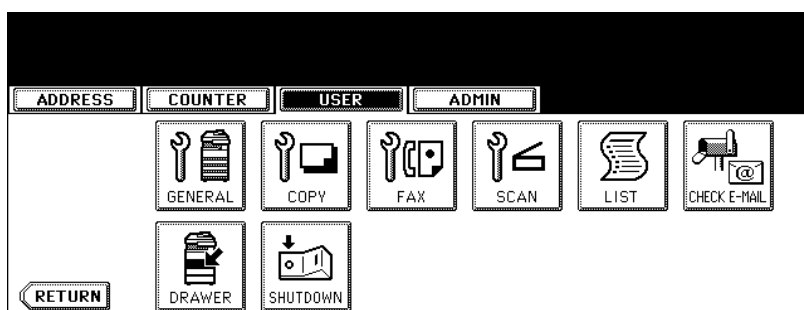


- This equipment starts communicating to the POP3 server.
- If new E-mail to this machine is on the POP3 server, it will be automatically printed after retrieving the E-mail data from the POP3 server.
- If new E-mail of the Offramp Gateway document is on the POP3 server, this equipment starts dialing the specified fax number to transmit the received E-mail to remote facsimile.


7. SETTING DRAWER

This function allows you to set the paper size and paper type of each drawer.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2 Press the [USER] button, and then press the [DRAWER] button on the touch panel.

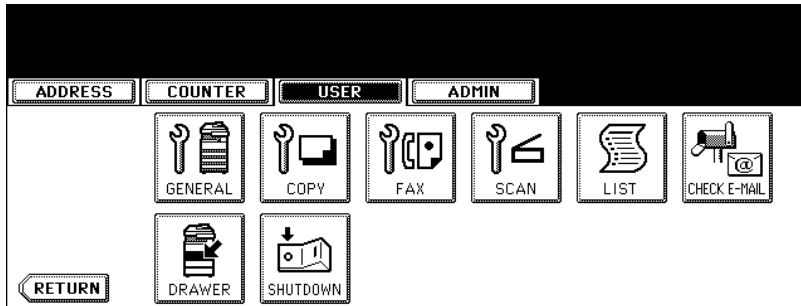

- 3 Press the drawer portion in the illustration to highlight the drawer where you want to change the paper size and paper type, then press the desired paper size button and paper type button.

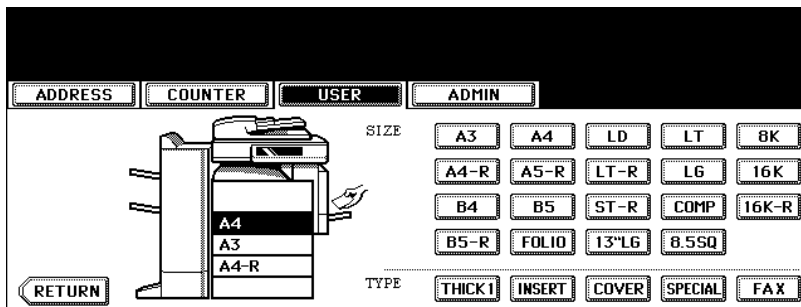

- The paper size in the selected drawer changes to the selected paper size.


8. TURN OFF THE POWER (SHUT DOWN)

When turning off the power of the equipment, perform the following shutdown procedure. DO NOT turn off the power by switching off the power switch of the equipment as it can cause the failure of the hard disk.


Before turning off the power, be sure that the following 3 conditions are satisfied.

- No jobs are left in the printing job list.
- The ERROR lamp is not blinking.
- No PCs access the equipment via network.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.**
- 2 Press the [USER] button, and then press the [SHUTDOWN] button on the touch panel.**

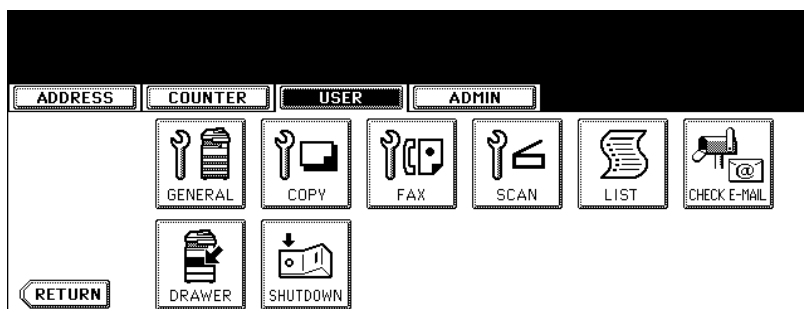


- 3 “Processing job will be deleted. Are you sure you want to shutdown?” appears on the screen. Press the [YES] button.**

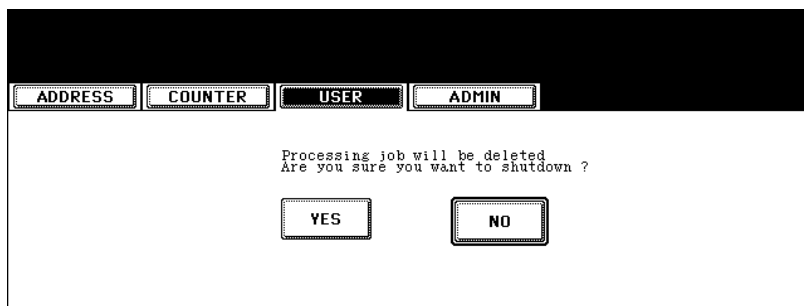

- To cancel the shutdown operation, press the [NO] button.

4 “Shutdown in progress” appears on the screen, and then the equipment is shut down.

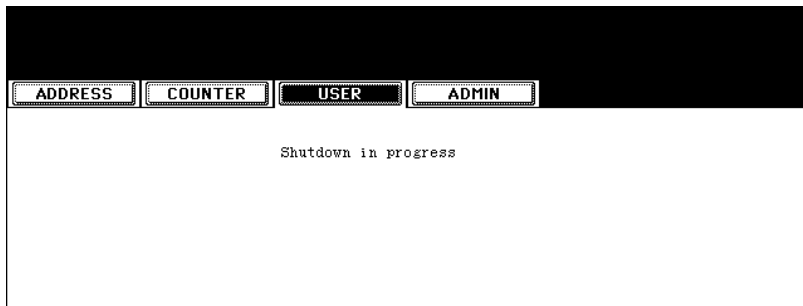

- The power switch automatically returns to the OFF position.


4. SETTING ITEMS (ADMIN)

1. ENTERING TO ADMIN MENU	82
2. SETTING GENERAL FUNCTIONS	84
• Setting the Device Information	84
• Setting the Notification	86
• Changing the Administrator Password	88
• Setting the Date and Time	90
• Setting the Weekly Timer	92
• Setting the Auto Power Save Mode	95
• Setting the Sleep Mode	97
• Setting the Drawer Setup Pop-Up	99
3. SETTING NETWORK FUNCTIONS	100
• Setting the TCP/IP Protocol	100
• Setting the IPX/SPX Protocol	105
• Setting the NetWare Settings	107
• Setting the SMB Protocol	109
• Setting the AppleTalk Protocol	112
• Setting the HTTP Network Service	114
• Setting the Ethernet Speed	116
• Setting the LDAP and SNMP Network Service	118
4. SETTING COPY FUNCTIONS	120
5. SETTING FAX FUNCTIONS	122
• Setting the Terminal ID	122
• Setting the Fax Initial Setup	125
• Setting the Line-2 Mode	127
• Setting the RX Printing	130
• Setting the Recovery Transmission	134
6. SETTING FILE FUNCTIONS	136
7. SETTING E-MAIL FUNCTIONS	137
• Setting the Scan to E-mail Message Properties	137
• Setting the Scan to E-mail Fragmentation	138
8. SETTING INTERNET FAX FUNCTIONS	139
• Setting the Internet Fax Message Properties	139
• Setting the Internet Fax Fragmentation	140
• Setting the Internet Fax Body String Transmission	141
9. SETTING LIST/REPORT	142
• Setting the Transmission / Reception Journal	142
• Setting the Communication Report	144
• Setting the Reception List	147
10. PRINTING LISTS	149
11. SETTING PRINTER/E-FILING FUNCTIONS	150
12. WIRELESS SETTINGS AND Bluetooth SETTINGS	151

1. ENTERING TO ADMIN MENU


When the administrator password has been set, you must enter the administrator password to enter the [ADMIN] menu in the User Functions screen.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2 Press the [ADMIN] button.
 - The ADMINISTRATOR PASSWORD screen is displayed.
- 3 Press the [PASSWORD] button.

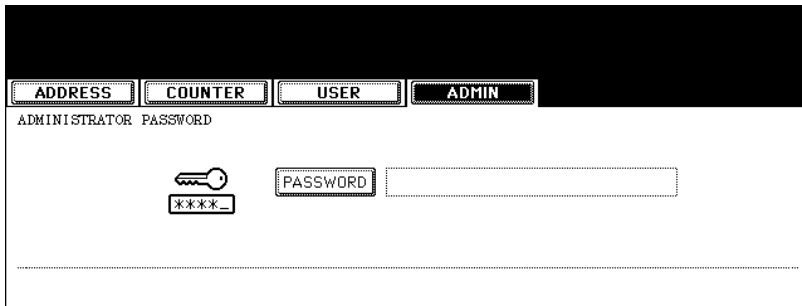

- The input screen is displayed.

- 4 Enter the administrator password and press the [ENTER] button.

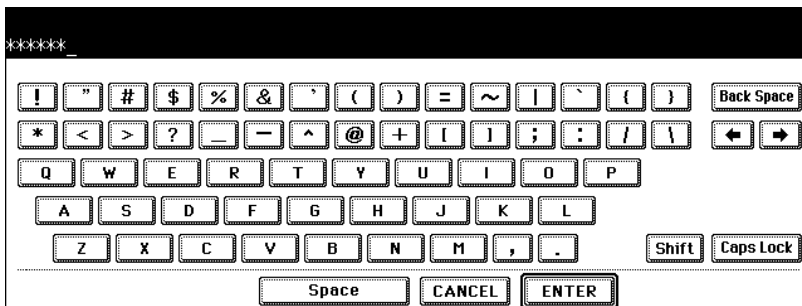

- The ADMIN menu is displayed.


Tip

If the administrator password has not been changed before, enter the default administrator password "123456".

Note

If you enter the incorrect password continuously three times, the equipment cannot be operated for about 30 seconds. In that case, wait until the screen becomes operatable and then try again.

5 The ADMIN menu is displayed. Continue the administrative operation that you require.

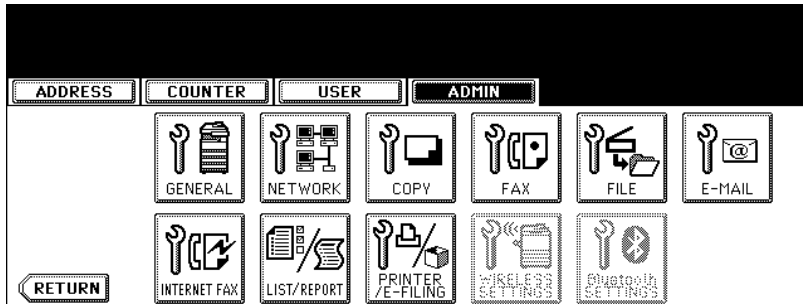

- P.84 "2.SETTING GENERAL FUNCTIONS"
- P.100 "3.SETTING NETWORK FUNCTIONS"
- P.120 "4.SETTING COPY FUNCTIONS"
- P.122 "5.SETTING FAX FUNCTIONS"
- P.136 "6.SETTING FILE FUNCTIONS"
- P.137 "7.SETTING E-MAIL FUNCTIONS"
- P.139 "8.SETTING INTERNET FAX FUNCTIONS"
- P.142 "9.SETTING LIST/REPORT"
- P.149 "10.PRINTING LISTS"

Note


- There are also the [WIRELESS SETTINGS] button in the ADMIN menu. This button will be available only when the optional Wireless LAN Module is installed. For the instructions on how to operate the WIRELESS SETTINGS, please refer to the **GN-1040 Operator's Manual for Wireless LAN**.
- There are also the [Bluetooth SETTINGS] button in the ADMIN menu. This button will be available only when the optional Bluetooth Module is installed. For the instructions on how to operate the Bluetooth SETTINGS, please refer to the **GN-2010 Operator's Manual for Bluetooth**.

2. SETTING GENERAL FUNCTIONS

Setting the Device Information

You can set the device information of this equipment. These items appear in the Device page of TopAccess, that is the web-based device management utility.

1 Press the [GENERAL] button in the ADMIN menu.

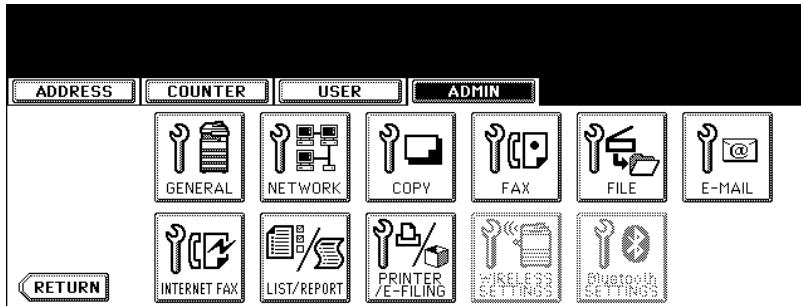


- The GENERAL menu is displayed.

Tip


To display the ADMIN menu, see "1. ENTERING TO ADMIN MENU". P.82

2 Press the [DEVICE INFORMATION] button.

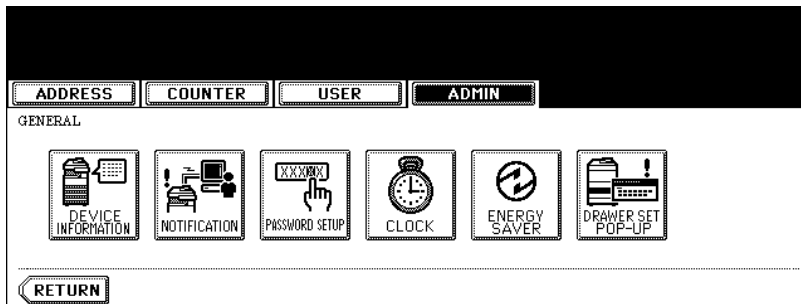

- The DEVICE INFORMATION screen is displayed.

3 Press each button on the touch panel to enter following items.

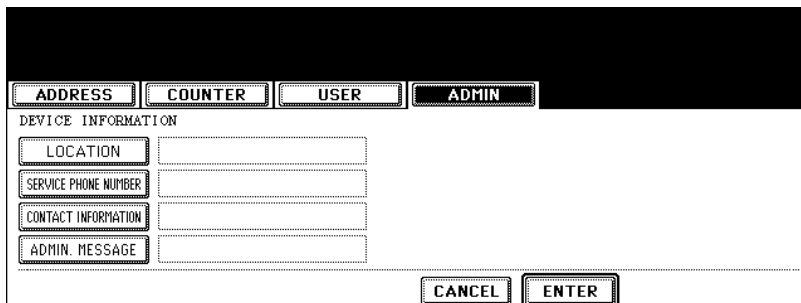

- **[LOCATION]** — Press this button to enter the location where this device is located.
- **[SERVICE PHONE NUMBER]** — Press this button to enter the service call number.
- **[CONTACT INFORMATION]** — Press this button to enter the name of the service technician.
- **[ADMIN. MESSAGE]** — Press this button to enter the administration message for users.

Tip

When you press each button, the input screen is displayed. Enter the value using the keyboard and digital keys, and press the [ENTER] button to set the entry. To enter the [SERVICE PHONE NUMBER], enter the number using only the digital keys.

4 Press the [ENTER] button.

Setting the Notification


You can set the notification mail to send a notification message when specified events occur on this equipment such as toner empty, paper empty, serviceman call, and so on.

You can specify up to 3 E-mail addresses for the destination of the notification message.

Note

- You can specify the events that you want to be notified using the TopAccess web utility. For instructions on how to specify the events for the notification, please refer to **TopAccess Guide**.
- To enable this function, there must be a SMTP server in your network. In addition, the settings to enable the Internet Fax transmission on this equipment must be configured correctly.

1 Press the [GENERAL] button in the ADMIN menu.

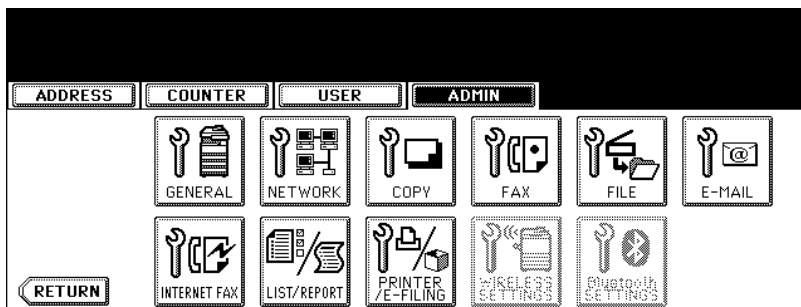


- The GENERAL menu is displayed.

Tip

To display the ADMIN menu, see "1. ENTERING TO ADMIN MENU". P.82

2 Press the [NOTIFICATION] button.

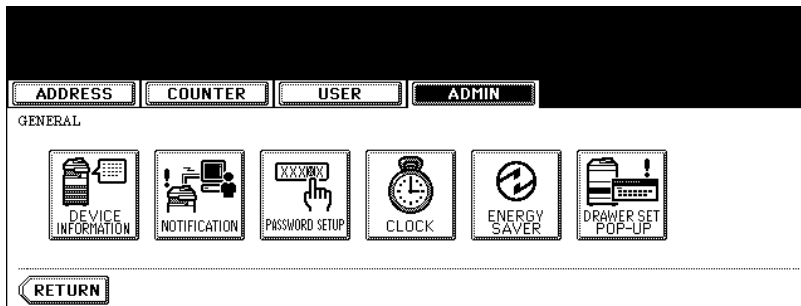

- The NOTIFICATION screen is displayed.

3 Press the [E-MAIL] buttons.

ADDRESS COUNTER USER ADMIN

NOTIFICATION

ON	OFF	E-MAIL	
ON	OFF	E-MAIL	
ON	OFF	E-MAIL	

CANCEL ENTER

- The input screen is displayed.

4 Enter the E-mail address using the keyboard and digital keys, and press the [ENTER] key to set the entry.

4

administrator@ifax.com

! " # \$ % & ' () = ~ | \ ` { } * < > ? _ - ^ @ + | | ; : / \ Q W E R T Y U I O P A S D F G H J K L Z X C V B N M , . Space Caps Lock

CANCEL ENTER

- You can specify up to three E-mail addresses to which the notification message will be sent, as required. When you enable the notification, you must enter at least one E-mail address.

5 After entering the E-mail addresses that you require, press the [ON] button of the E-mail address that you want to enable the notification.

ADDRESS COUNTER USER ADMIN

NOTIFICATION

ON	OFF	E-MAIL	administrator@ifax.com
ON	OFF	E-MAIL	
ON	OFF	E-MAIL	

CANCEL ENTER

- To disable the notification for an E-mail address, press the [OFF] button.

Note


You can select only the [ON] button of which an E-mail address is entered.

6 Press the [ENTER] button.

Changing the Administrator Password

You can change the administrator password. The administrator password must be alphanumeric characters of 6 or more and 10 or less.

1 Press the [GENERAL] button in the ADMIN menu.

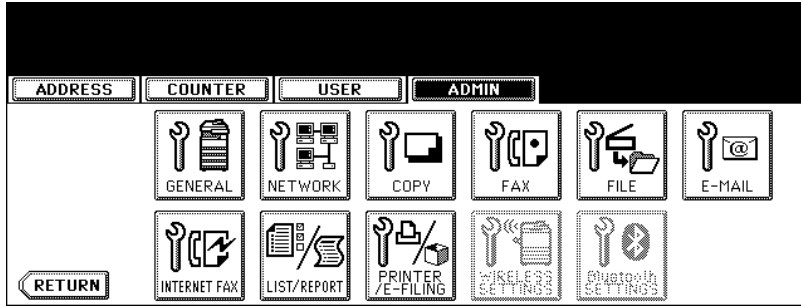


- The GENERAL menu is displayed.

Tip


To display the ADMIN menu, see "1. ENTERING TO ADMIN MENU". P.82

2 Press the [PASSWORD SETUP] button.

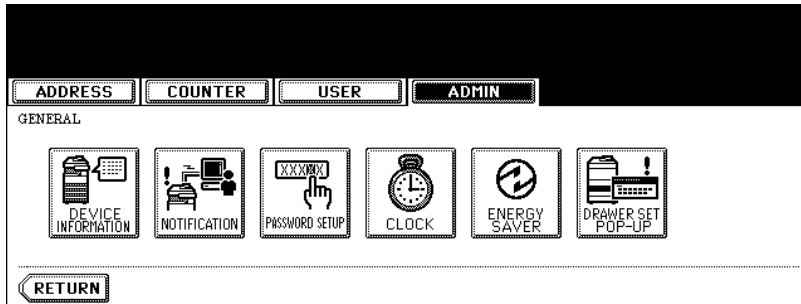


- The PASSWORD SETUP screen is displayed.

3 Press the [OLD PASSWORD] button.

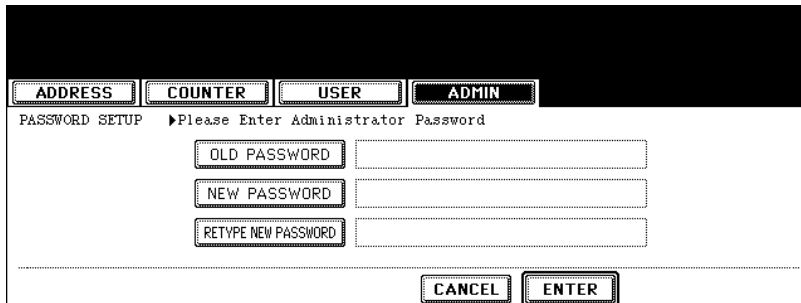

- The input screen is displayed.

4 Enter the current administrator password and press the [ENTER] button.

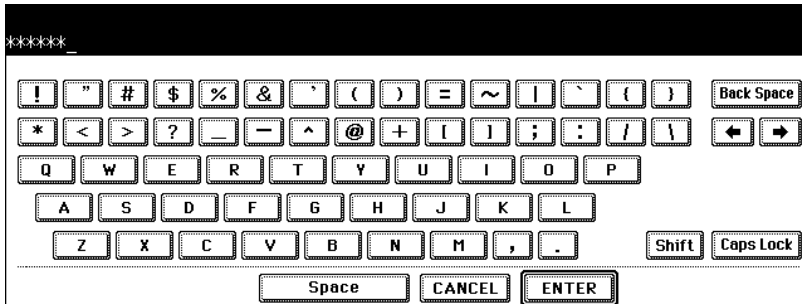


- The input password appears as asterisks (*).

Tip

If the administrator password will be changed at the first time, enter "123456" in the "Old Password" field.

5 Same as "OLD PASSWORD", press the [NEW PASSWORD] and [RETYPE NEW PASSWORD] buttons and enter the new password.

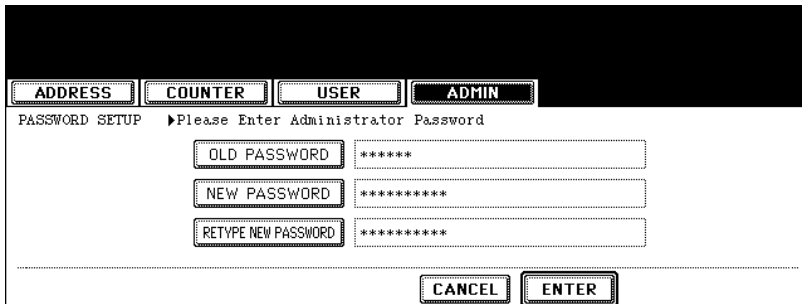

- You can enter alphanumeric characters of 6 or more and 10 or less for the administrator's password. You cannot enter any symbol characters.

Tip


You cannot leave these fields blank to set no administrator password. You must set the administrator password.

6 Press the [ENTER] button at the bottom of the touch panel.

Setting the Date and Time

The clock built in to this equipment can be set by entering the date, day of the week and time using the digital keys. Also, you can easily change the clock to and from the daylight saving system at the touch of a button.

1 Press the [GENERAL] button in the ADMIN menu.

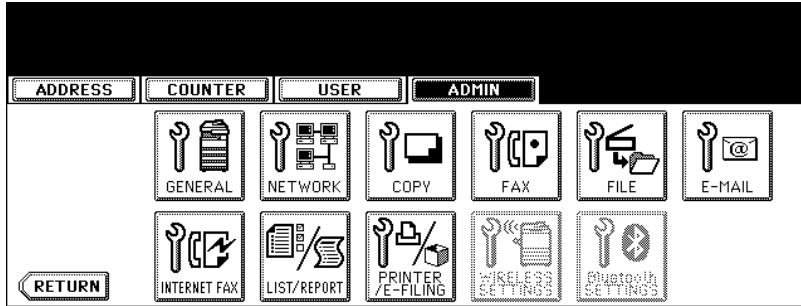


- The GENERAL menu is displayed.

Tip


To display the ADMIN menu, see "1. ENTERING TO ADMIN MENU". P.82

2 Press the [CLOCK] button.

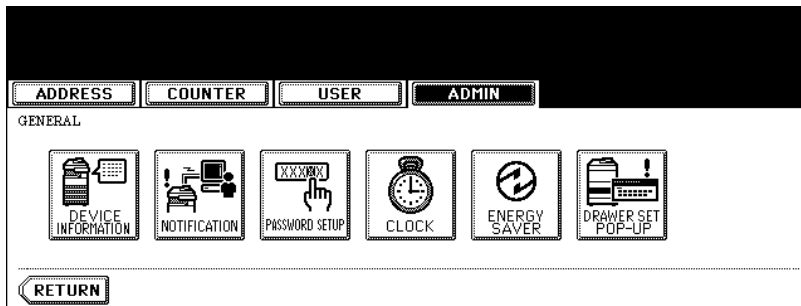


- The CLOCK menu is displayed.

3 Press the [DATE/TIME] button.

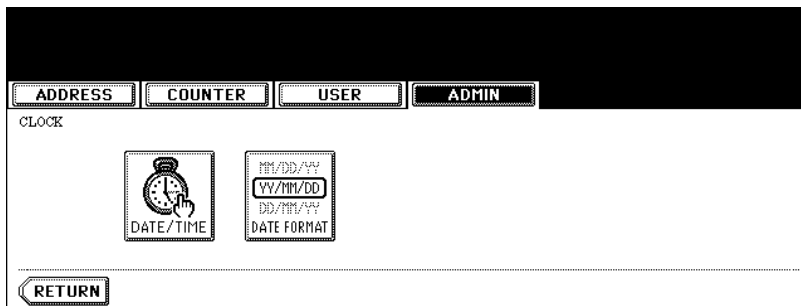

- If you want to change the date format only, skip to step 10.
- When you press the [DATE/TIME] button, the DATE/TIME screen is displayed.

4 Highlight the section that you want to edit using the arrow buttons, and enter the number using the digital keys.

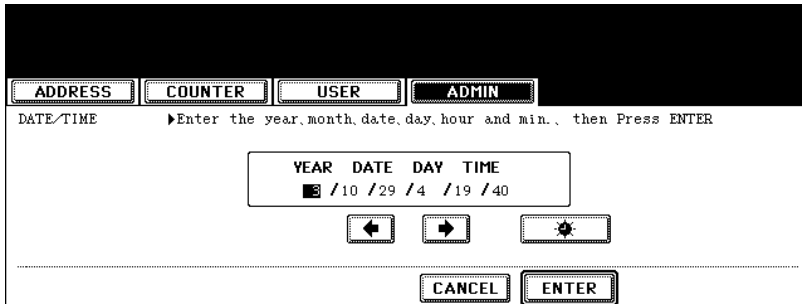

- The "DAY" section describes the day of week with a number. The numbers corresponding to the days of week as following:
1: Sun, 2: Mon, 3: Tue, 4: Wed, 5: Thu, 6: Fri, 7: Sat


5 To enable the daylight saving system, press the button.

- The daylight saving button is highlighted.

6 Press the [ENTER] button.


- Returns you to the CLOCK menu.

7 Press the [DATE FORMAT] button.

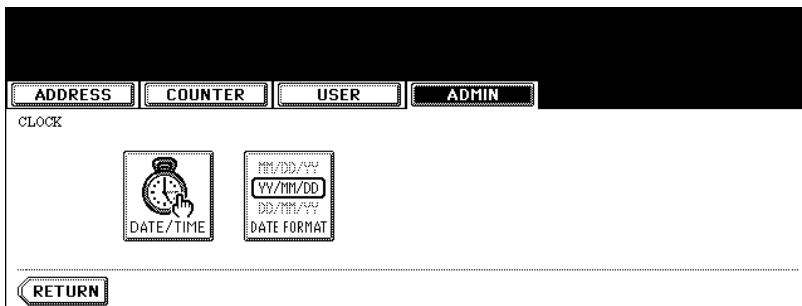

- The DATE FORMAT screen is displayed.

8 Press the desired date format button.

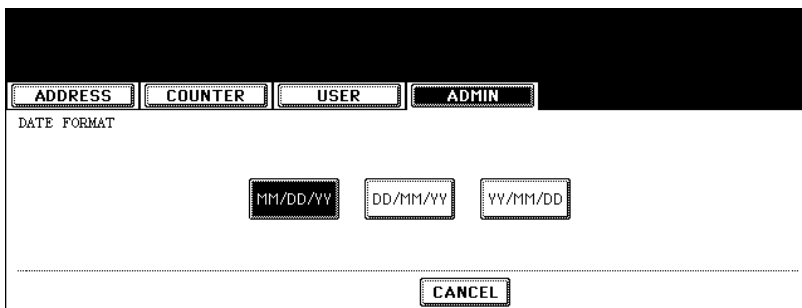

Setting the Weekly Timer

Using the built-in weekly timer, you can have this equipment automatically turned ON and OFF at specified times. For instance, you can set the timer for the starting time and closing time of your office so that the copier will automatically turn itself ON and OFF at those specified times.

Tip


You can turn on the power simply pressing the [START] button on the control panel when the device is OFF-mode by the weekly timer. If you leave the device for a while after the latest operation, it will automatically return to OFF-mode again by the weekly timer.

Note

When the power switch is turned off, the weekly timer does not work.

4

1 Press the [GENERAL] button in the ADMIN menu.

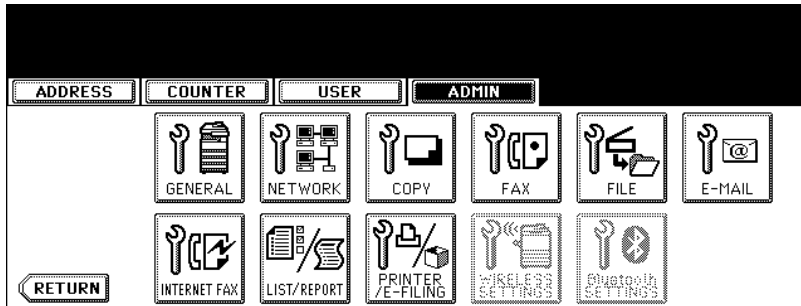


- The GENERAL menu is displayed.

Tip


To display the ADMIN menu, see "1. ENTERING TO ADMIN MENU". P.82

2 Press the [ENERGY SAVER] button.

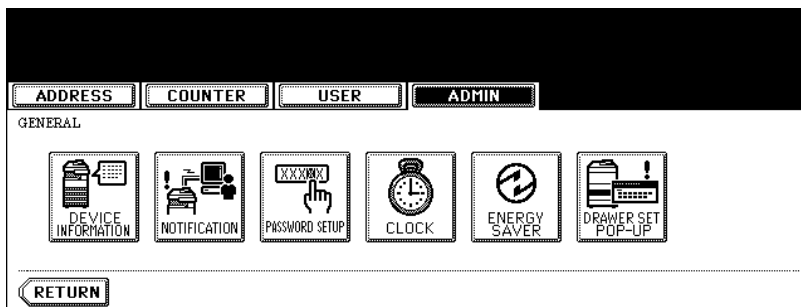


- The ENERGY SAVER menu is displayed.

3 Press the [WEEKLY TIMER] button.

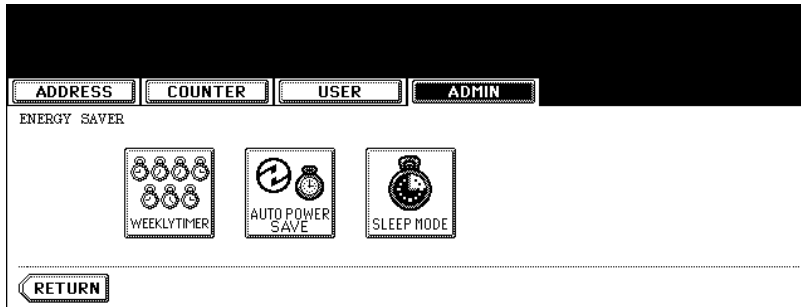


- The TIMER screen is displayed.

4 Check the settings on the display, and if corrections are necessary, press the [CHANGE] button.

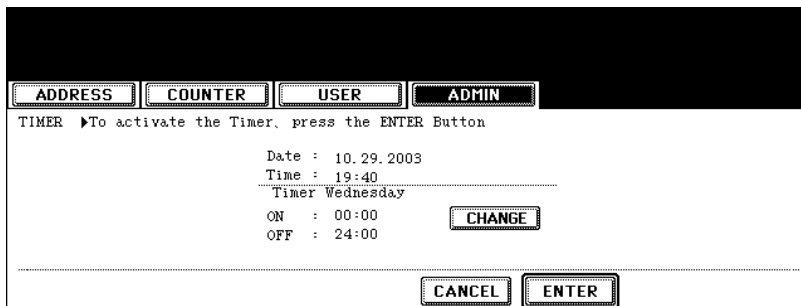


- If no correction is needed, press the [ENTER] button and complete the operation.

5 Press the [<-Sun] or [Sat->] buttons to switch the days of the week. Then in the "ON" field, enter the hour and minute that the device will automatically turn on the power using the digital keys and press the [SET] button to set each entry.

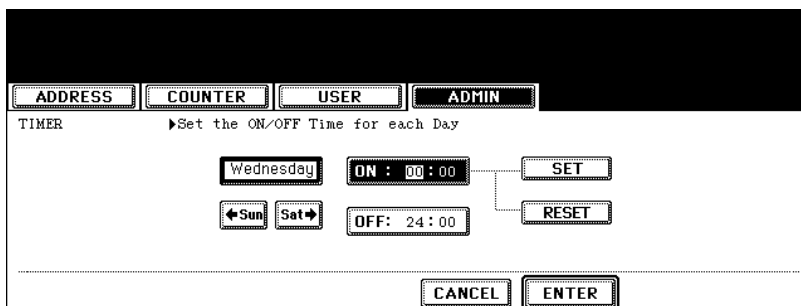

- If you want to clear entered time to retype it, press the [CLEAR] button on the Control Panel.
- After pressing the [SET] button, the "OFF" field will be highlighted.

- 6** In the “OFF” field, enter the hour and minute that the device will automatically turn off the power using the digital keys and press the [SET] button to set each entry.

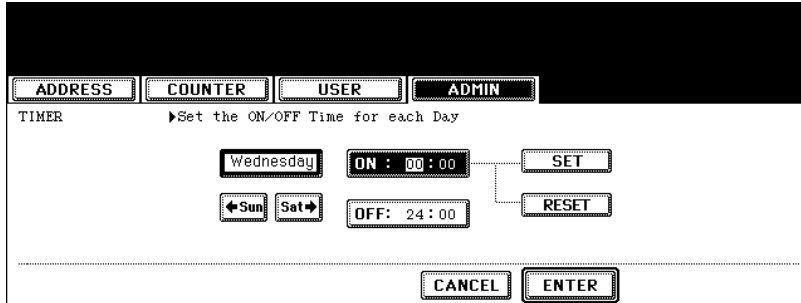

- If you want to clear entered time to retype it, press the [CLEAR] button on the Control Panel.

Tips


- If you want to return to the “OFF” field to retype it, press the [RESET] button.
- If you want this equipment not to be turned ON, enter the same time in both “ON” and “OFF” field.
- If you want to disable the Weekly Timer, enter “00:00” for the ON time and “24:00” for the OFF time.

- 7** Press the [ENTER] button at the bottom of the touch panel.

Setting the Auto Power Save Mode

This function allows this equipment automatically to go into the energy saving mode (unnecessary electricity is cut off at standby) if it is left inactive for a certain period of time.

1 Press the [GENERAL] button in the ADMIN menu.

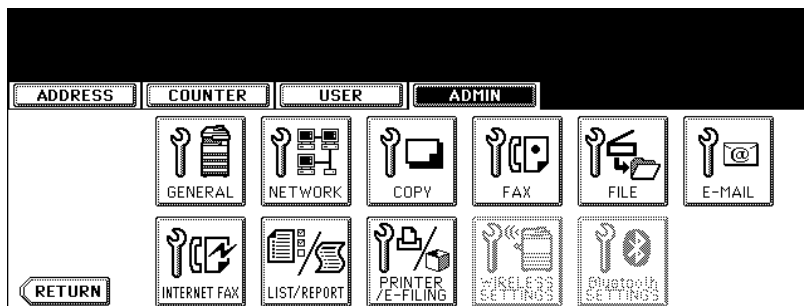


- The GENERAL menu is displayed.

Tip


To display the ADMIN menu, see "1. ENTERING TO ADMIN MENU".  P.82

2 Press the [ENERGY SAVER] button.

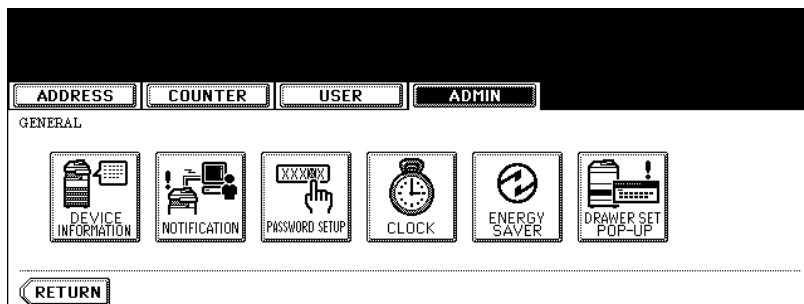

- The ENERGY SAVER menu is displayed.

3 Press the [AUTO POWER SAVE] button.

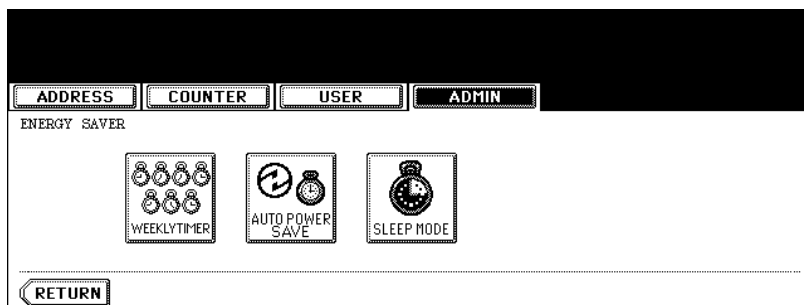

- The AUTO POWER SAVE screen is displayed.

4 Press the desired period of time (in minutes) that this equipment waits before the Automatic Power Save mode is activated.

The screenshot shows a menu interface with a black header bar containing four tabs: ADDRESS, COUNTER, USER, and ADMIN. Below the tabs, the text 'AUTO POWER SAVE' is followed by a right-pointing arrow and the instruction 'Select the amount of minutes to reduce power consumption'. A grid of ten buttons is displayed, each containing a number representing minutes: 3, 4, 5, 7, 10 in the first row, and 15, 20, 30, 45, 60 in the second row. The '15' button is highlighted with a dark background. At the bottom of the menu, a 'CANCEL' button is visible.


- The Auto Power Save mode setting is completed.

4

Setting the Sleep Mode

This function allows this equipment goes into the sleep mode that stands by with the minimum power consumption.

1 Press the [GENERAL] button in the ADMIN menu.

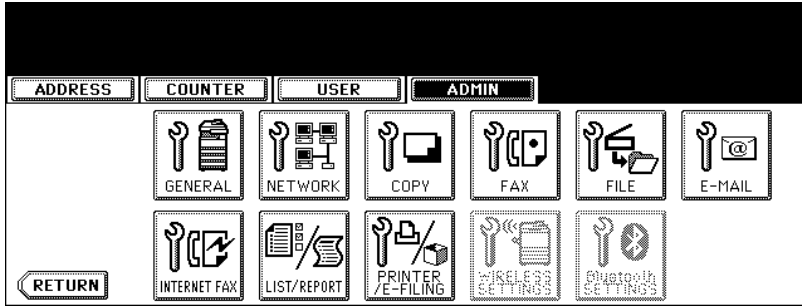


- The GENERAL menu is displayed.

Tip


To display the ADMIN menu, see "1. ENTERING TO ADMIN MENU". P.82

2 Press the [ENERGY SAVER] button.

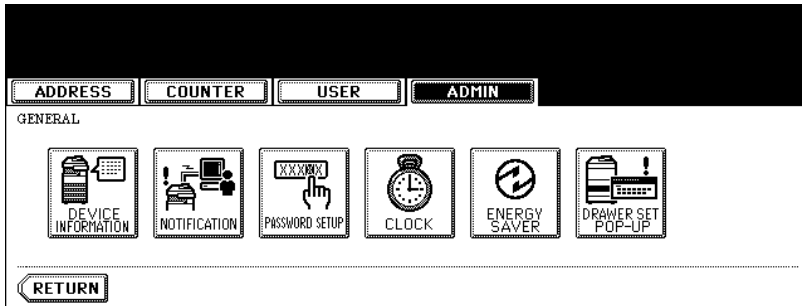

- The ENERGY SAVER menu is displayed.

3 Press the [SLEEP MODE] button.

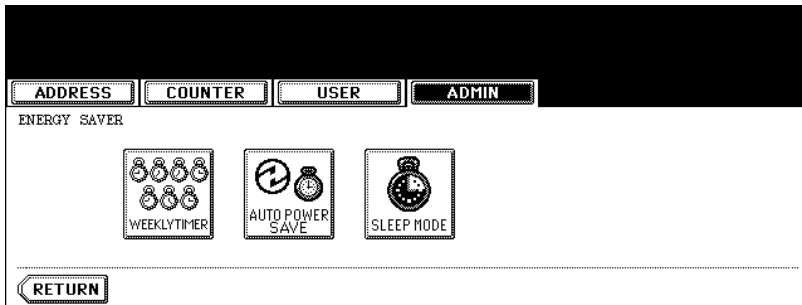

- The SLEEP MODE screen is displayed.

4 Press the desired period of time (in minutes) that this equipment waits before the Automatic Shut Off mode is activated.

ADDRESS COUNTER USER ADMIN

SLEEP MODE ▶Select the amount of minutes to turn the copier off

3	5	10	15	20
25	30	40	50	60
70	80	90	100	110
120	150	180	210	240

CANCEL


- The Sleep mode setting is completed.

4

Setting the Drawer Setup Pop-Up

When this function is enabled, the message to ask users to change the paper size setting every time you open the drawer.

1 Press the [GENERAL] button.

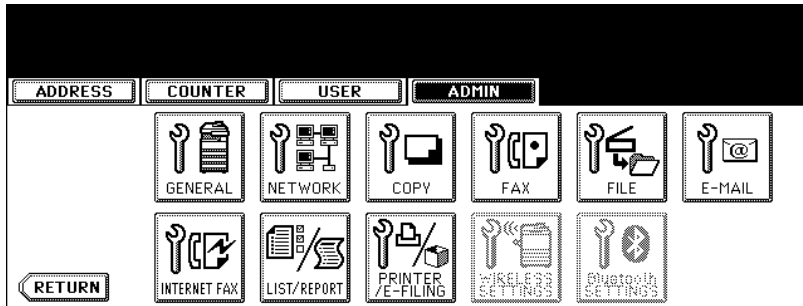


- The GENERAL menu is displayed.

Tip


To display the ADMIN menu, see "1. ENTERING TO ADMIN MENU". P.82

2 Press the [DRAWER SET POP-UP] button.

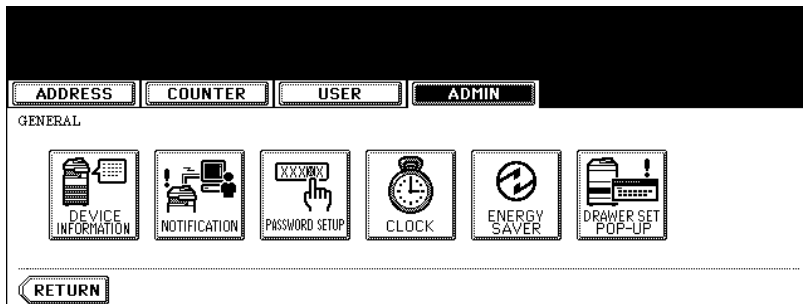

- The DRAWER SET POP-UP screen is displayed.

3 Press the [ENABLE] button to enable the Drawer Set Pop-Up, or press the [DISABLE] button to disable the Drawer Set Pop-Up.

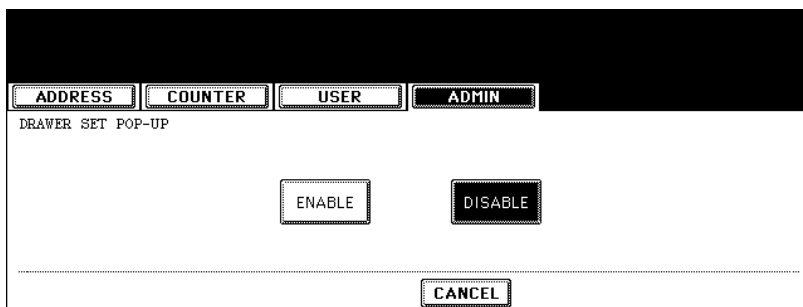

3. SETTING NETWORK FUNCTIONS

Setting the TCP/IP Protocol

You can set the TCP/IP protocol that is commonly used for most of network system. It is recommended to configure the TCP/IP protocol because TopAccess, the device management web-based utility, and e-Filing web-based utility, that allows you to manage files in the e-Filing, will be available with the TCP/IP protocol. Also other network features of this equipment use the TCP/IP protocol.


In the TCP/IP menu, you can enable or disable the TCP/IP protocol, select the addressing mode, assign the IP address, subnet mask, and default gateway (if manually assigned).

How the TCP/IP protocol is configured is depending on the network configuration of your network.

- When you assign the TCP/IP using the Auto-IP addressing or DHCP server:**
If you do not know how the TCP/IP settings should be assigned, you can select Dynamic addressing mode. When the Dynamic addressing mode is selected, this equipment will obtain the IP address, subnet mask, default gateway, primary WINS server address, secondary WINS server address, POP3 server address, and SMTP server address from the DHCP server if the network supports the DHCP. If the network does not support the DHCP, this equipment will assign the appropriate IP address using the Auto-IP addressing.
📖 P.100 "Setting the TCP/IP for Auto-IP and DHCP Server"
- When you assign the TCP/IP using the DHCP server only:**
If your local area network has been configured with the DHCP server and you do not want to enable the Auto-IP addressing, you can select No Auto-IP addressing mode. When the No Auto-IP addressing mode is selected, the IP address, subnet mask, default gateway, primary WINS server address, secondary WINS server address, POP3 server address, and SMTP server address will be automatically obtained from the DHCP server, and the Auto-IP addressing will be disabled. To enable the DHCP addressing only, please configure the TCP/IP settings as described in following procedure.
📖 P.102 "Setting the TCP/IP for DHCP Server Only"
- When you connect to local area network where the static IP addresses are used:**
If your local area network has been configured with the static IP address, you must assign the specific IP address, subnet mask, and default gateway as required.
📖 P.103 "Setting the TCP/IP for Static IP Address"

Setting the TCP/IP for Auto-IP and DHCP Server

1 Press the [NETWORK] button in the ADMIN menu.

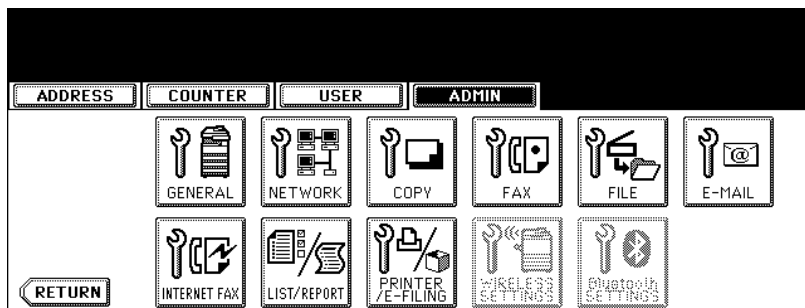


- The NETWORK menu is displayed.

Tip


To display the ADMIN menu, see "1. ENTERING TO ADMIN MENU". 📖 P.82

2 Press the [TCP/IP] button.

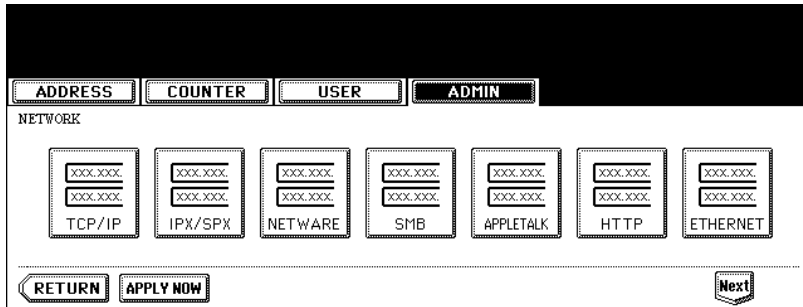

- The TCP/IP screen is displayed.


3 Press the [DYNAMIC] button in the "ADDRESS MODE" option.

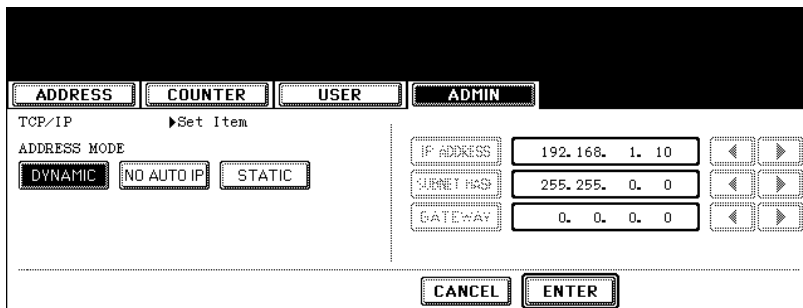

4 Press the [ENTER] button.

- Returns you to the NETWORK menu.


5 Continue to another network setting if required, then press the [APPLY NOW] button.

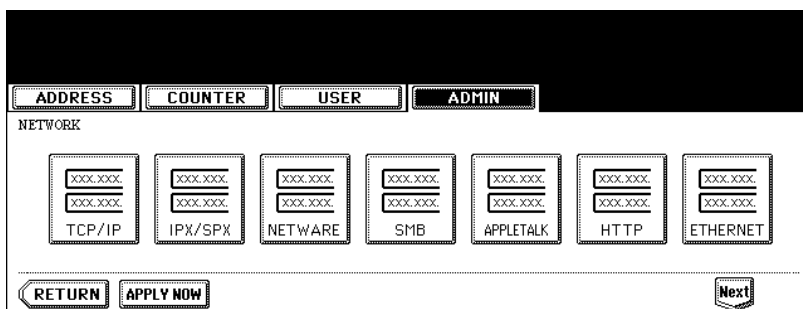

- This equipment starts initializing the network interface card to apply the changes.

Setting the TCP/IP for DHCP Server Only

1 Press the [NETWORK] button in the ADMIN menu.

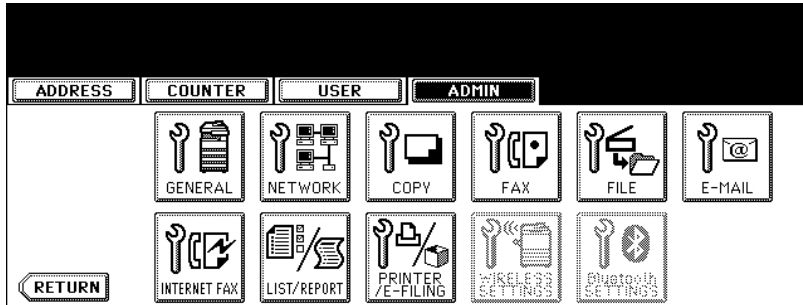


- The NETWORK menu is displayed.

Tip


To display the ADMIN menu, see “1. ENTERING TO ADMIN MENU”. P.82

2 Press the [TCP/IP] button.

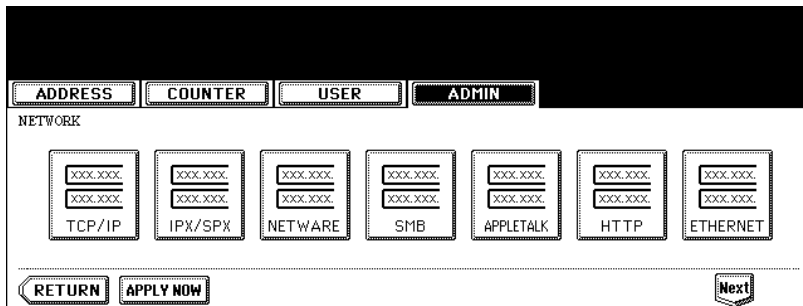

- The TCP/IP screen is displayed.


3 Press the [NO AUTO IP] button in the “ADDRESS MODE” option.

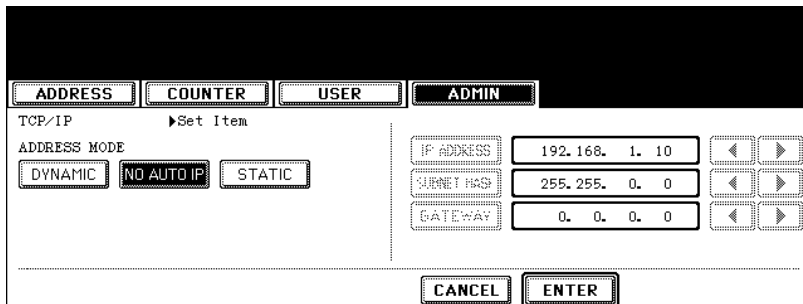

4 Press the [ENTER] button.

- Returns you to the NETWORK menu.

5 Continue to another network setting if required, then press the [APPLY NOW] button.

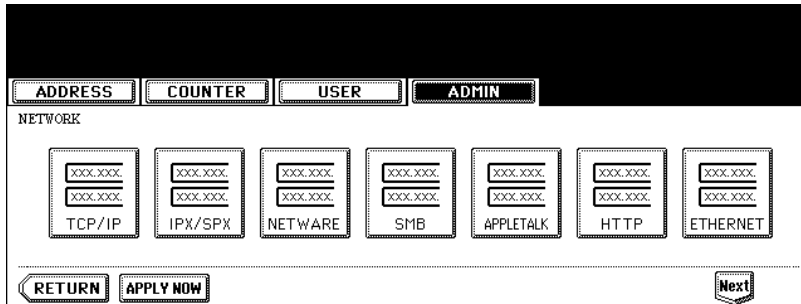


- This equipment starts initializing the network interface card to apply the changes.

4

Setting the TCP/IP for Static IP Address

1 Press the [NETWORK] button in the ADMIN menu.

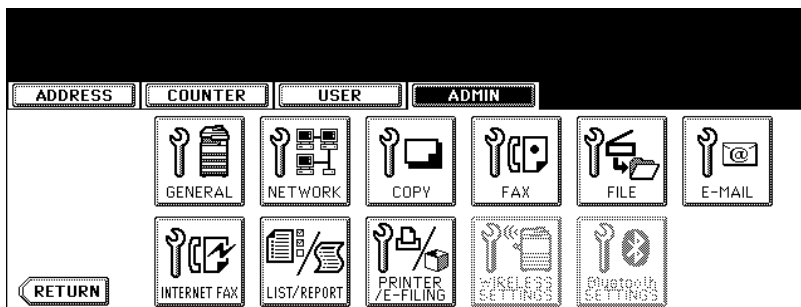


- The NETWORK menu is displayed.

Tip

To display the ADMIN menu, see "1. ENTERING TO ADMIN MENU". P.82

2 Press the [TCP/IP] button.

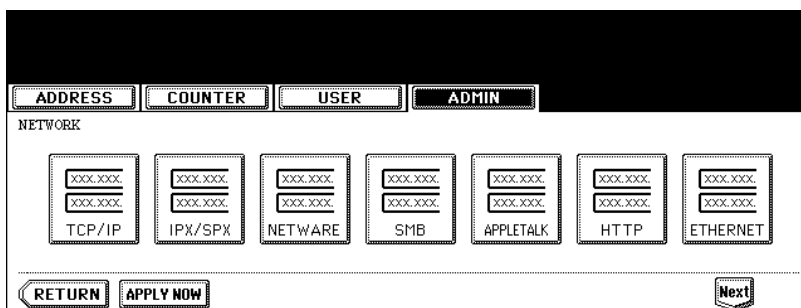

- The TCP/IP screen is displayed.

3 Press the [STATIC] button in the “ADDRESS MODE” option.

The screenshot shows a menu with tabs: ADDRESS, COUNTER, USER, and ADMIN. Under the ADDRESS tab, there is a sub-menu for TCP/IP with a 'Set Item' indicator. The ADDRESS MODE section has three buttons: DYNAMIC, NO AUTO IP, and STATIC. The STATIC button is highlighted. To the right, there are three input fields: IP ADDRESS (192.168.1.10), SUBNET MASK (255.255.0.0), and GATEWAY (0.0.0.0). Each field has left and right arrow buttons. At the bottom, there are CANCEL and ENTER buttons.

4 Press the [IP ADDRESS] button and enter the IP address of this device using the digital keys. Enter also the subnet mask and default gateway as required.

The screenshot shows the same menu as in step 3. The IP ADDRESS button is highlighted. The IP ADDRESS field now contains '10.10.70.105', the SUBNET MASK field contains '255.255.255.0', and the GATEWAY field contains '10.10.70.' followed by a cursor. The CANCEL and ENTER buttons are at the bottom.

5 Press the [ENTER] button.

- Returns you to the NETWORK menu.

6 Continue to another network setting if required, then press the [APPLY NOW] button.


The screenshot shows a menu with tabs: ADDRESS, COUNTER, USER, and ADMIN. Under the ADDRESS tab, there is a sub-menu for NETWORK. There are seven buttons representing different network protocols: TCP/IP, IPX/SPX, NETWARE, SMB, APPLE TALK, HTTP, and ETHERNET. Each button has two placeholder fields labeled 'xxx.xxx'. At the bottom, there are RETURN, APPLY NOW, and Next buttons.

- This equipment starts initializing the network interface card to apply the changes.

Setting the IPX/SPX Protocol

You can set the IPX/SPX protocol on this equipment. The IPX/SPX protocol is usually used to communicate with the NetWare file server through the network.

1 Press the [NETWORK] button in the ADMIN menu.

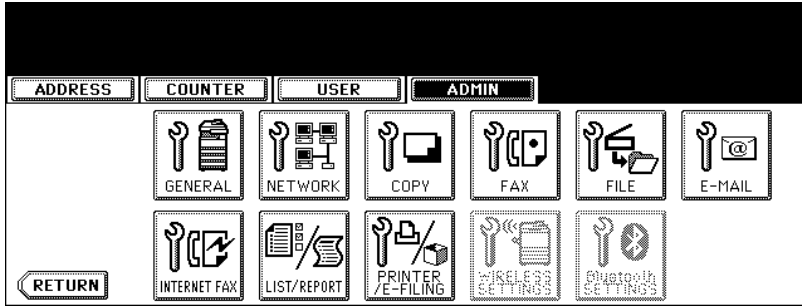


- The NETWORK menu is displayed.

Tip


To display the ADMIN menu, see "1. ENTERING TO ADMIN MENU". P.82

2 Press the [IPX/SPX] button.

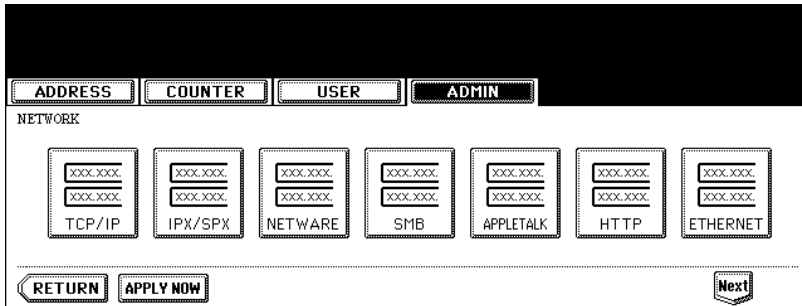

- The IPX/SPX screen is displayed.

3 Specify the following items as required.

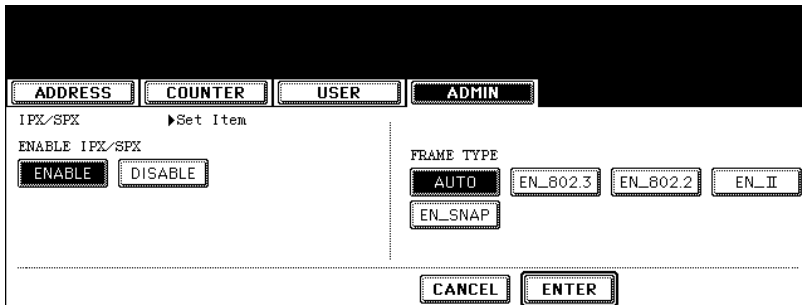

- **ENABLE IPX/SPX** — Press the [ENABLE] button to enable the IPX/SPX protocol, or [DISABLE] button to disable the IPX/SPX protocol.
- **FRAME TYPE** — Press the [AUTO] button to automatically detect the appropriate frame type, or press other specific frame type button. If you do not know the frame type that must be used, select the [AUTO] button.

4 Press the [ENTER] button.

- Returns you to the NETWORK menu.

5 Continue to another network setting if required, then press the [APPLY NOW] button.


The screenshot shows a network configuration interface with a menu bar at the top containing 'ADDRESS', 'COUNTER', 'USER', and 'ADMIN'. Below the menu bar, the word 'NETWORK' is displayed. There are seven protocol selection boxes arranged in a row: TCP/IP, IPX/SPX, NETWARE, SMB, APPLE TALK, HTTP, and ETHERNET. Each box contains two lines of placeholder text 'xxx.xxx'. At the bottom of the screen, there are three buttons: 'RETURN', 'APPLY NOW', and 'Next'.

- This equipment starts initializing the network interface card to apply the changes.

Setting the NetWare Settings

You can set the NetWare network mode and the NetWare configuration to be connected. This must be set when you use the NetWare file server for Novell printing.

1 Press the [NETWORK] button in the ADMIN menu.

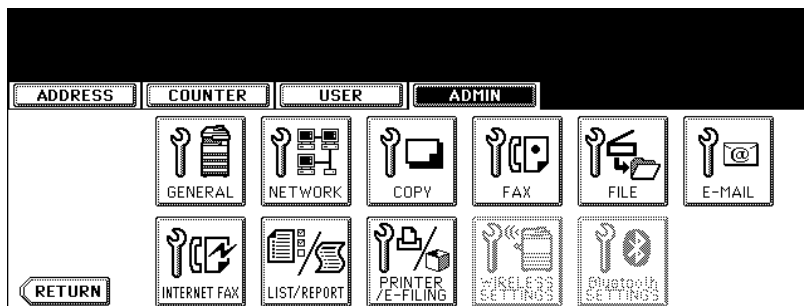


- The NETWORK menu is displayed.

Tip

To display the ADMIN menu, see "1. ENTERING TO ADMIN MENU".  P.82

2 Press the [NETWARE] button.

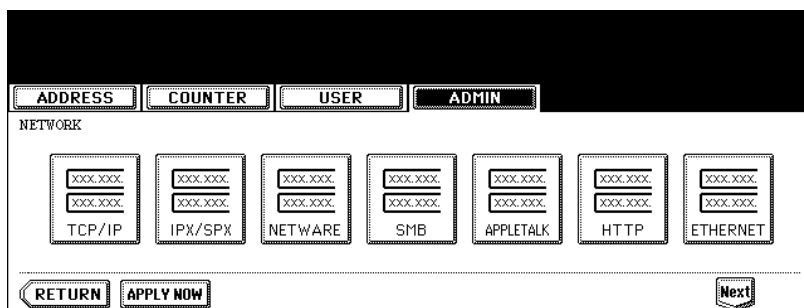

- The NETWARE screen is displayed.

3 Specify following items as required.

The screenshot shows a menu titled 'NETWORK' with a 'Set Item' prompt. At the top, there are four tabs: ADDRESS, COUNTER, USER, and ADMIN. Below the tabs, there are two sections: 'ENABLE BINDERY' and 'ENABLE NDS'. Each section has an 'ENABLE' button and a 'DISABLE' button. To the right, there are three input fields: 'CONTEXT' (containing 'dept1'), 'TREE' (containing 'org'), and 'SEARCH ROOT' (containing 'NWSTV'). At the bottom, there are 'CANCEL' and 'ENTER' buttons.

- **ENABLE BINDERY** — Press the [ENABLE] button to enable communicating with the NetWare file server in bindery mode, or [DISABLE] button to disable the bindery mode.
- **ENABLE NDS** — Press the [ENABLE] button to enable communicating with the NetWare file server in NDS mode, or [DISABLE] button to disable the NDS mode.
- **[CONTEXT]** — Press this to enter the NDS context that the NetWare print server for this equipment is located. This must be entered when you connect the NetWare file server in NDS mode.
- **[TREE]** — Press this to enter the NDS tree. This must be entered when you connect the NetWare file server in NDS mode.
- **[SEARCH ROOT]** — Press this to enter the NetWare file server name. It is recommended to enter this when you connect the NetWare file server in bindery mode.

Tips

- When you press each button, the input screen is displayed. Enter the value using the keyboard and digital keys, and press the [ENTER] button to set the entry.
- You can enable both the bindery and NDS mode at the same time.

4 Press the [ENTER] button.

- Returns you to the NETWORK menu.

5 Continue to another network setting if required, then press the [APPLY NOW] button.

The screenshot shows the 'NETWORK' menu with a 'Set Item' prompt. At the top, there are four tabs: ADDRESS, COUNTER, USER, and ADMIN. Below the tabs, there are seven icons representing different network protocols: TCP/IP, IPX/SPX, NETWARE, SMB, APPLE TALK, HTTP, and ETHERNET. Each icon contains a placeholder 'xxx.xxx' or 'xxx.xxx'. At the bottom, there are 'RETURN' and 'APPLY NOW' buttons, and a 'Next' button with a right-pointing arrow.

- This equipment starts initializing the network interface card to apply the changes.


Setting the SMB Protocol

When you want to enable this equipment visible in the Windows network, you must enable the SMB protocol and enter the NetBIOS name and workgroup to specify the device name of this equipment and workgroup where this equipment will be visible.

Also if your network uses the WINS server to allow the SMB communication across the segments, you must specify the WINS server address, so that this equipment will be visible from the different segment.

This must be enabled for SMB printing, Save as file to the network folder using SMB, and sharing the "FILE_SHARE" folder (that is the local folder of this equipment) in the network.

1 Press the [NETWORK] button in the ADMIN menu.

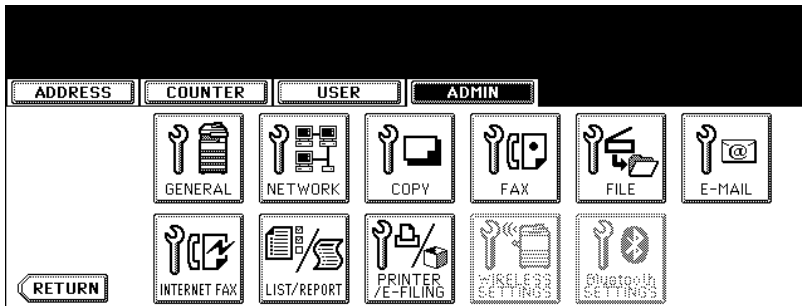


- The NETWORK menu is displayed.

Tip

To display the ADMIN menu, see "1. ENTERING TO ADMIN MENU". P.82

2 Press the [SMB] button.

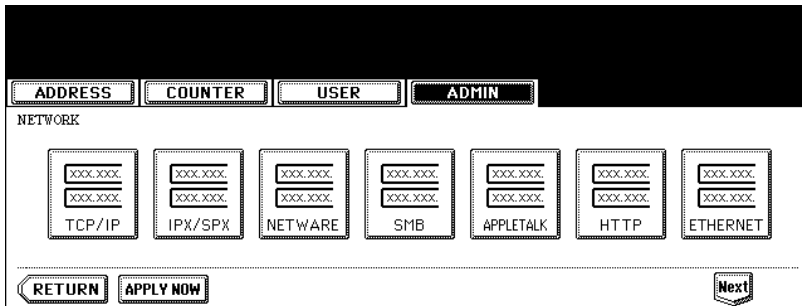

- The SMB screen is displayed.

3 Specify following items as required and press the [ENTER] button.

- SMB PROTOCOL** — Select whether the SMB protocol is enabled or disabled.
 When you want to enable the SMB protocol to enable the Save as file to network folder using SMB and sharing the "FILE_SHARE" folder of this equipment, but not to enable the SMB printing, press the [DISABLE PRINT SHARE] button.
 When you want to enable the SMB protocol to enable the SMB printing, but not to enable the Save as file to network folder using SMB and sharing the "FILE_SHARE" folder of this equipment, press the [DISABLE FILE SHARE] button.
- [NetBIOS NAME]** — Press this button to enter the Windows computer name of this device if this device is connected to the Windows network. This must be specified when you want to enable SMB printing.
- LOGON** — This displays the Windows network logon environment. "workgroup" will be displayed if this equipment logon the workgroup network and "domain" will be displayed if this equipment logon the domain network. This can be specified only from TopAccess. For instructions on how to set the workgroup or domain, please see "Setting up the SMB Session" in "Chapter 7 TopAccess Administrator Mode" of *TopAccess Guide*.
- [WINS PRIMARY]** — Press this button and enter the IP address of the primary WINS server using the digital keys if required.
- [WINS SECONDARY]** — Press this button and enter the IP address of the secondary WINS server using the digital keys if required.


Tip

When you press the [NetBIOS NAME] button, the input screen is displayed. Enter the value using the keyboard and digital keys, and press the [ENTER] button to set the entry.

Note

- If this equipment is configured to logon the domain in the SMB Session of TopAccess administrator mode but "workgroup" is displayed, loggin on the domain network is failed. In that case, confirm that the Windows Server and the SMB Session settings are correctly set.
- When you set "Domain" for the Logon setting in the SMB Session of TopAccess administrator mode, this equipment will logon to the domain network after turning ON the power of equipment or changing the network settings and pressing the [APPLY NOW] button.
- You can enter only alphanumeric characters and "-" (hyphenation) for NetBIOS name. If you use any other characters, a warning message will be displayed.
- Do not enter an IP address that starts with "0" (i.e. "0.10.10.10"), "127" (i.e. "127.10.10.10"), and "224" (i.e. "224.10.10.10"). If you enter such an address, the equipment cannot communicate with the WINS server.
- If you enter "0.0.0.0" for [WINS PRIMARY] and [WINS SECONDARY], this equipment will not use the WINS server.
- When [DYNAMIC] or [NO AUTO IP] is selected for the Address Mode in the TCP/IP setting, this equipment can obtain the IP address for [WINS PRIMARY] and [WINS SECONDARY] from the DHCP server. However, if you enter the IP address for them manually here, this equipment will use the entered IP address instead of the IP address that is obtained from the DHCP server.

4 Continue to another network setting if required, then press the [APPLY NOW] button.

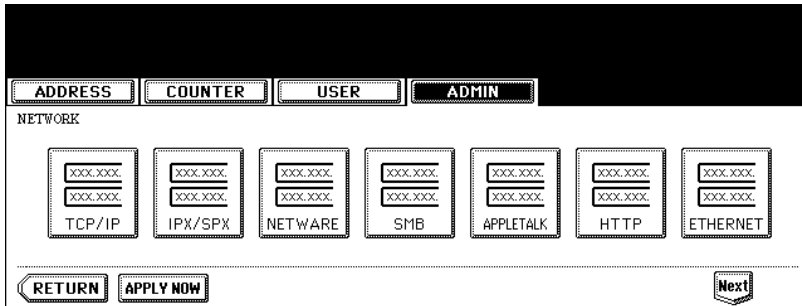


- This equipment starts initializing the network interface card to apply the changes.

Setting the AppleTalk Protocol

The AppleTalk protocol must be enabled and properly configured to enable AppleTalk printing with the Macintosh computer.

1 Press the [NETWORK] button in the ADMIN menu.

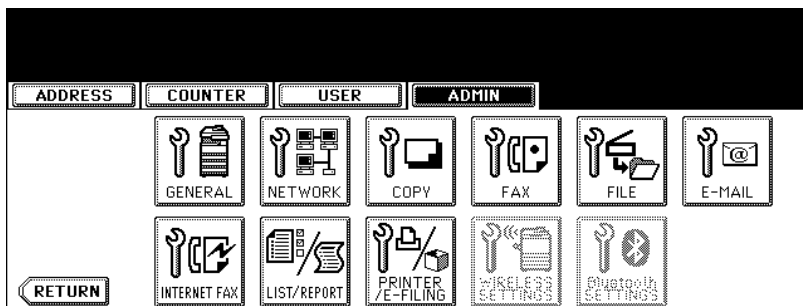


- The NETWORK menu is displayed.

Tip


To display the ADMIN menu, see "1. ENTERING TO ADMIN MENU". P.82

2 Press the [APPLETALK] button.

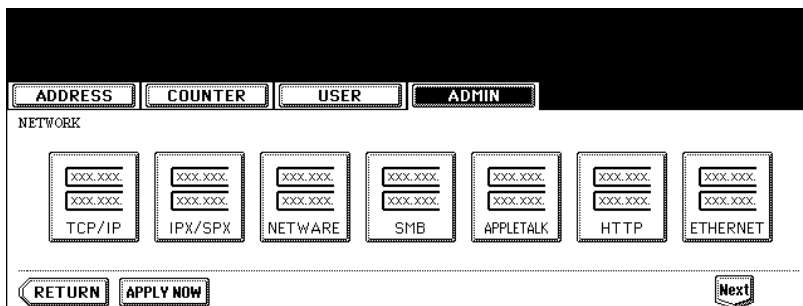

- The APPLETTALK screen is displayed.

3 Specify following items as required.

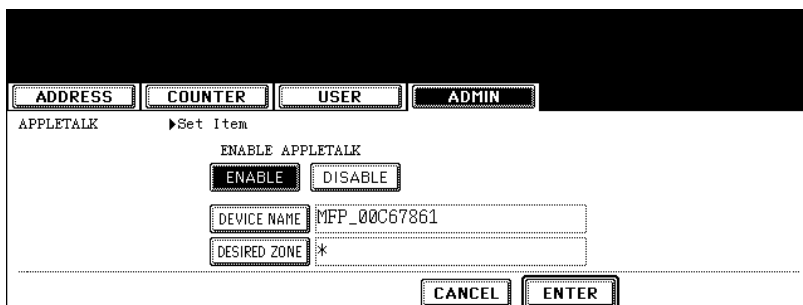

- **ENABLE APPLETTALK** — Press the [ENABLE] button to enable the AppleTalk, or [DISABLE] button to disable the AppleTalk.
- **[DEVICE NAME]** — Press this to enter the AppleTalk name of this equipment.
- **[DESIRED ZONE]** — Press this to enter the AppleTalk zone name this equipment joins. If your AppleTalk network has not been configured with a zone, you do not have to enter the zone name.


Tip

When you press the [APPLETALK NAME] and [DESIRED ZONE] buttons, the input screen is displayed. Enter the value using the keyboard and digital keys, and press the [ENTER] button to set the entry.

4 Press the [ENTER] button.

- Returns you to the NETWORK menu.

5 Continue to another network setting if required, then press the [APPLY NOW] button.

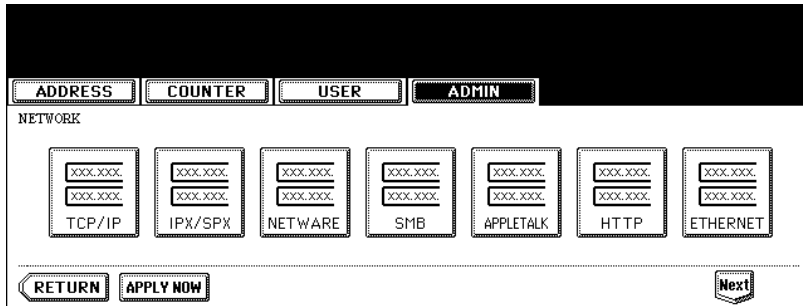


- This equipment starts initializing the network interface card to apply the changes.

Setting the HTTP Network Service

This function allows you to enable or disable the HTTP network server service that provides the web-based utility on this equipment, such as TopAccess and e-Filing web utility. The HTTP network server service also must be enabled for IPP printing.

1 Press the [NETWORK] button in the ADMIN menu.

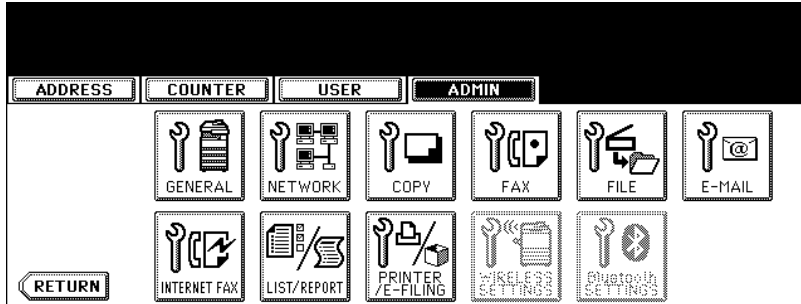


- The NETWORK menu is displayed.

Tip

To display the ADMIN menu, see "1. ENTERING TO ADMIN MENU". P.82

2 Press the [HTTP] button.

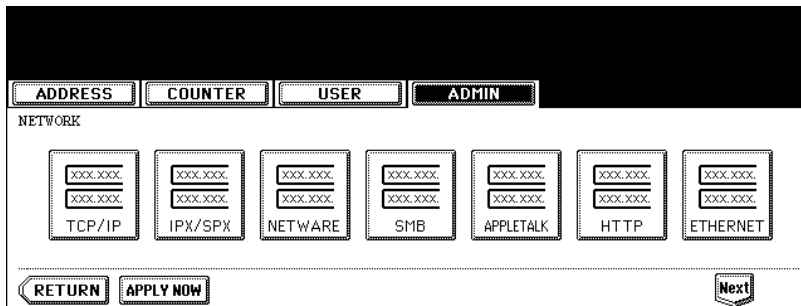

- The HTTP screen is displayed.

3 Specify following items as required.

ADDRESS COUNTER USER ADMIN

HTTP Set Item

ENABLE HTTP SERVER

[ENABLE] [DISABLE]

PRIMARY PORT NUMBER 80

SECONDARY PORT NUMBER 8080

ENABLE SSL

[ENABLE] [DISABLE]

[CANCEL] [ENTER]

- **ENABLE HTTP SERVER** — Press the [ENABLE] button to enable the HTTP network server service, or [DISABLE] button to disable the HTTP network server service. This must be enabled for TopAccess, e-Filing web utility, and IPP printing.
- **[PRIMARY PORT NUMBER]** — Press this to enter the primary port number to be used for the HTTP access from the other client. It is recommended to use the default port number “80” if you are not sure changing this port number.
- **[SECONDARY PORT NUMBER]** — Press this to enter the secondary port number to be used to access the TopAccess and e-Filing web utility. It is recommended to use the default port number “8080” if you are not sure changing this port number.
- **ENABLE SSL** — Press the [ENABLE] button to enable the SSL for accessing the administration pages in TopAccess and e-Filing web utility, or [DISABLE] button to disable the SSL for accessing the administration pages in TopAccess and e-Filing web utility. When this is enabled, the data transferred between the equipment and client computers will be encrypted using a private key when operating TopAccess and e-Filing web utility.

Note

To enable SSL, you must create a self-signed certificate in the equipment using TopAccess. If the selfsigned certificate is not created, the SSL cannot be enabled.

4 Press the [ENTER] button.

- Returns you to the NETWORK menu.

5 Continue to another network setting if required, then press the [APPLY NOW] button.

ADDRESS COUNTER USER ADMIN

NETWORK

TCP/IP IPX/SPX NETWARE SMB APPLE TALK HTTP OTHER


[RETURN] [APPLY NOW]

- This equipment starts initializing the network interface card to apply the changes.

Setting the Ethernet Speed

This function allows you to specify the ethernet speed.

1 Press the [NETWORK] button in the ADMIN menu.

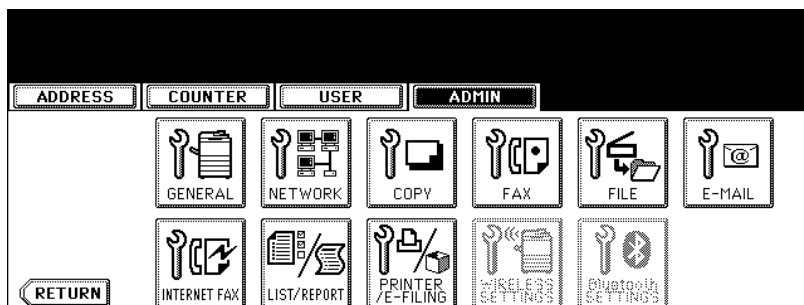


- The NETWORK menu is displayed.

Tip


To display the ADMIN menu, see "1. ENTERING TO ADMIN MENU". P.82

2 Press the [ETHERNET] button.

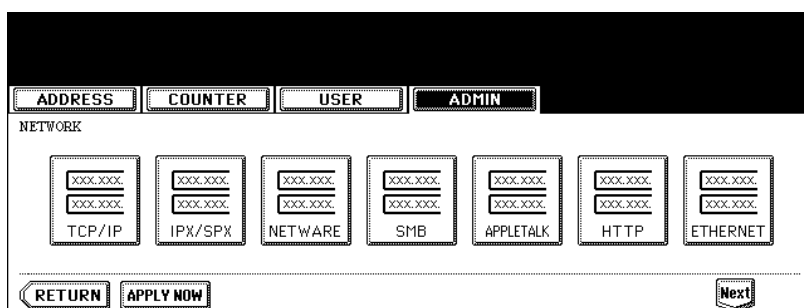

- The ETHERNET screen is displayed.

3 Press the [AUTO] button to automatically detect the appropriate ethernet speed, or press other specific ethernet speed button.

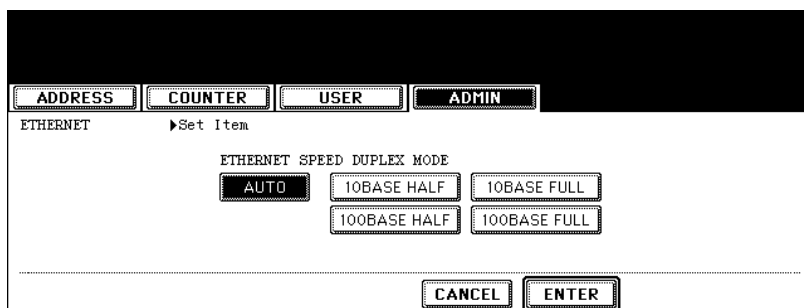

Tips

- When you select a specific ethernet speed, you must select the same ethernet speed as set in the connected network. If you do not know the ethernet speed that must be used, select the [AUTO] button.
- If the network is not stable, power OFF the equipment then ON.

4 Press the [ENTER] button.

- Returns you to the NETWORK menu.

5 Continue to another network setting if required, then press the [APPLY NOW] button.

The screenshot shows a network configuration interface. At the top, there are four menu items: ADDRESS, COUNTER, USER, and ADMIN. Below these is the 'NETWORK' section. It contains seven boxes, each representing a different network protocol: TCP/IP, IPX/SPX, NETWARE, SMB, APPLE TALK, HTTP, and ETHERNET. Each box has two lines of 'xxx.xxx' text above the protocol name. At the bottom of the screen, there are three buttons: RETURN, APPLY NOW, and Next.

- This equipment starts initializing the network interface card to apply the changes.

Setting the LDAP and SNMP Network Service


This function allows this equipment to access the LDAP directory service. This equipment can search for the contacts in the LDAP server to specify the recipients of the Internet Fax, fax transmission, and Scan to E-mail job.

Tips

- If the LDAP network service is enabled, you can register the LDAP directory service, and then this equipment can search for the contacts in the LDAP server. To add the LDAP directory service, you must operate using TopAccess. For more information about registering the directory service, please see the **TopAccess Guide**.
- When the LDAP network service is disabled, it is not possible to obtain the user's e-mail address as "From Address" from the LDAP server during the User Authentication for Scan to Email.

4

1 Press the [NETWORK] button in the ADMIN menu.

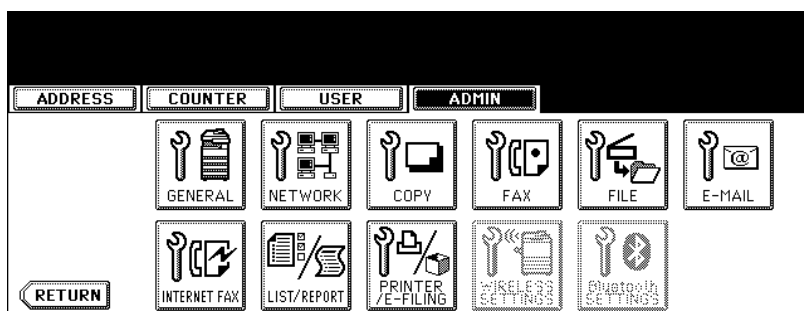


- The NETWORK menu is displayed.


Tip

To display the ADMIN menu, see "1. ENTERING TO ADMIN MENU". P.82

2 Press the [Next] button.

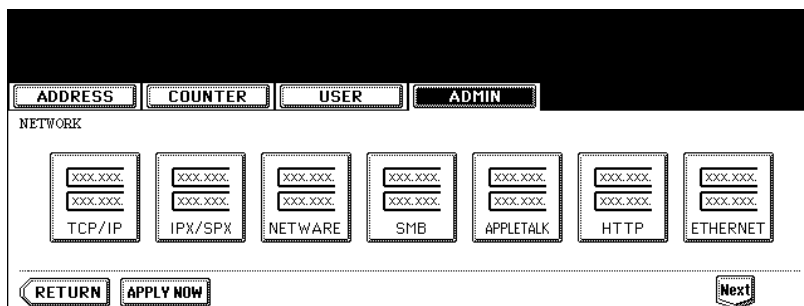


3 Press the [OTHER] button.

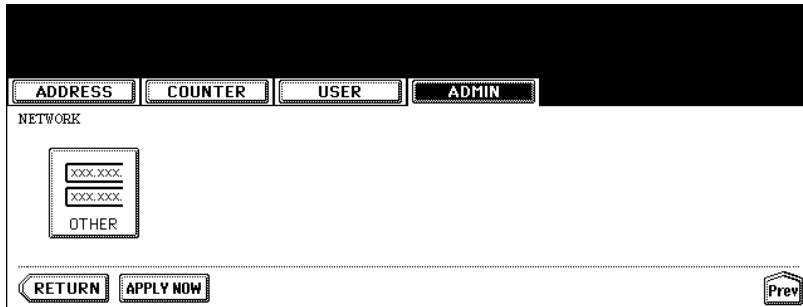

- The OTHER screen is displayed.

4 Press the [ENABLE] button to enable the LDAP network service, or [DISABLE] button to disable it.

4

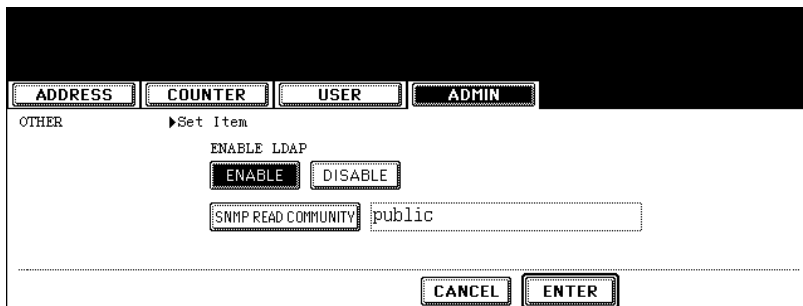


- Optionally you can enter the trap community name for the SNMP Traps by pressing the [SNMP READ COMMUNITY] button. When you press this button, the QWERTY Type Keyboard screen is displayed. Enter the value using the keyboard and digital keys, and press the [ENTER] button to set the entry.

5 Press the [ENTER] button.

- Returns you to the NETWORK menu.

6 Continue to another network setting if required, then press the [APPLY NOW] button.

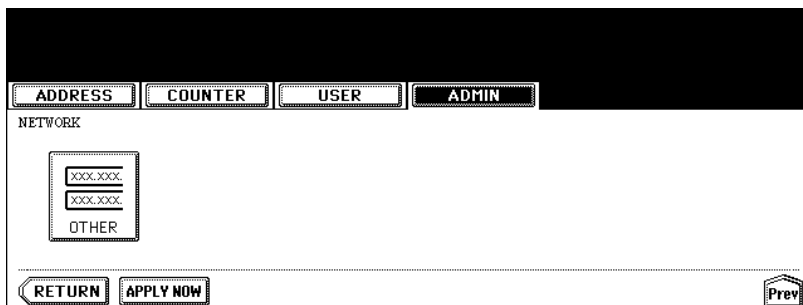


- This equipment starts initializing the network interface card to apply the changes.

4. SETTING COPY FUNCTIONS

You can change the system behaviors for the copy operation, such as maximum number of copies, auto 2-sided mode, and the sort mode priority.

1 Press the [COPY] button in the ADMIN menu.

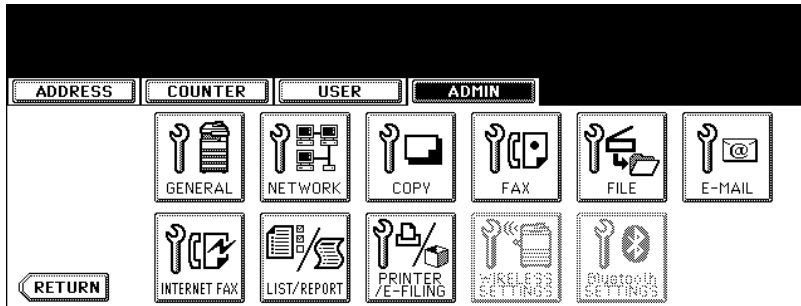


- The COPY screen is displayed.

Tip

To display the ADMIN menu, see "1. ENTERING TO ADMIN MENU". P.82

2 Specify following items as required.

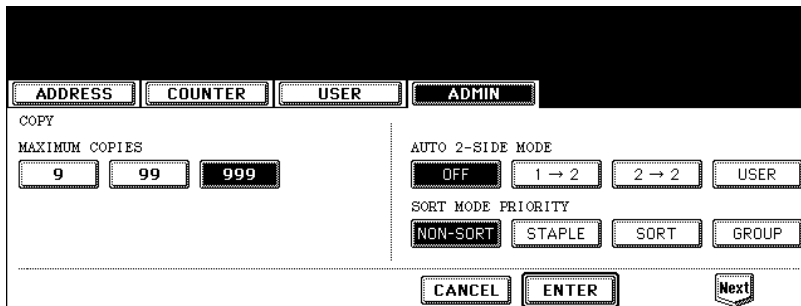

- **MAXIMUM COPIES** — Press the number button that indicates the maximum number of copies to be allowed.
- **AUTO 2-SIDE MODE** — Press the button of the 2-Sided mode that initially applies to copy settings when originals are set in the Automatic Document Feeder. When the [OFF] button is selected, the initial setting of the 2-Sided mode will be [1 -> 1 SIMPLEX] when originals are set in the Automatic Document Feeder. When the [1->2] button is selected, the initial setting of the 2-Sided mode will be [1 -> 2 DUPLEX] when originals are set in the Automatic Document Feeder. When the [2->2] button is selected, the initial setting of the 2-Sided mode will be [2 -> 2 DUPLEX] when originals are set in the Automatic Document Feeder. When the [USER] button is selected, the screen to select the 2-Sided mode will be displayed when originals are set in the Automatic Document Feeder.
- **SORT MODE PRIORITY** — Press the sort mode that applies prior for copy jobs.

3 Press the [Next] button to display the next screen.

4 Specify following items as required.

The screenshot shows a printer's administrative menu with the following elements:

- Navigation tabs: ADDRESS, COUNTER, USER, ADMIN (selected).
- Section: COPY
- Setting: AUTOMATIC CHANGE OF PAPER SOURCE with ON and OFF buttons.
- Setting: PAPER OF DIFFERENT DIRECTION with ON and OFF buttons.
- Setting: SUSPEND PRINTING IF STAPLER EMPTY with ON and OFF buttons.
- Bottom navigation: CANCEL, ENTER, and a Prev button.

- **AUTOMATIC CHANGE OF PAPER SOURCE** — When this is set to [ON], this equipment will print on the different size of paper when the specified paper size is not set. When this is set to [OFF], this equipment will display a message to set the correct paper.
- **PAPER OF DIFFERENT DIRECTION** — When this is set to [ON], this equipment will rotate the image and print on the different direction of paper if the correct direction of paper is not set. When this is set to [OFF], this equipment will display a message to set the correct paper.
- **SUSPEND PRINTING IF STAPLER EMPTY** — When this is set to [ON], this equipment quit the job with stapling when the stapler empty occurs. When this is set to [OFF], this equipment will continue the job without stapling.

5 Press the [ENTER] button.

- Returns you to the ADMIN menu.

5. SETTING FAX FUNCTIONS

Setting the Terminal ID

Note


The Terminal ID settings are available only when the optional Fax unit is installed.

Once programmed, Terminal ID information will be printed on the leading edge of transmitted or received documents if the TTI and RIT are enabled.

Tips

- ID information is sent and printed about 5 mm from the top edge of the original.
- In compliance with FCC regulations, your company's name, facsimile telephone number and date & time are added at the top of all transmitted documents. This feature enables remote parties to easily identify your documents and the time of transmission.

1 Press the [FAX] button in the ADMIN menu.

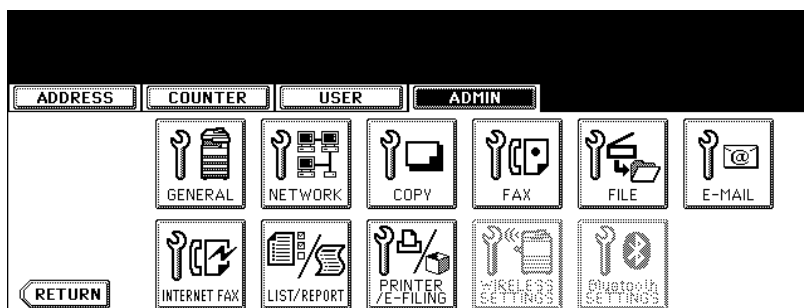


- The FAX menu is displayed.

Tip

To display the ADMIN menu, see "1. ENTERING TO ADMIN MENU". P.82

2 Press the [TERMINAL ID] button.

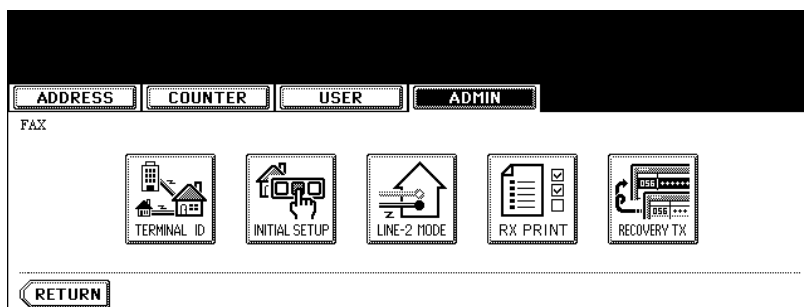

- The TERMINAL ID screen is displayed.

3 Specify following items as required.

ADDRESS COUNTER USER ADMIN

TERMINAL ID TERMINAL ID will be Recorded at TTI Add the International Code

ID NAME

FAX NUMBER

LINE2 NUMBER

CANCEL ENTER

- **[ID NAME]** — Press this to enter the terminal ID of this equipment.
- **[FAX NUMBER]** — Press this to enter the fax number of this equipment.
- **[LINE2 NUMBER]** — Press this to enter the 2 line fax number of this equipment if the Line2 board is installed. This is not displayed when the Line2 board is not installed.
- When you press the **[ID NAME]** button, the input screen is displayed. Enter the name using the keyboard and digital keys, and press the **[ENTER]** button to set the entry.

MFP-00C67861_

! " # \$ % & ' () = ~ | \ { } * < > ? _ - ^ @ + | | ; : / \ Q W E R T Y U I O P A S D F G H J K L Z X C V B N M , . Space Caps Lock

CANCEL ENTER Next

- When you press the **[FAX NUMBER]** or **[LINE2 NUMBER]** button, the message to ask you whether adding the international code is displayed. Press the **[YES]** button if you want to add the international code, or the **[NO]** button if you do not want to add the international code. When you press the **[YES]** button, the input screen that "+" is entered is displayed. When you press the **[NO]** button, the input screen without any entry is displayed.

ADDRESS COUNTER USER ADMIN

Add the International Code

YES NO

CANCEL

Enter the phone number using the digital keys, and press the **[ENTER]** button to set the entry.

+0000000001_

Enter the fax/te1 number

Back Space

← →

CANCEL ENTER

4 Press the [ENTER] button.

ADDRESS COUNTER USER ADMIN

TERMINAL ID ▶TERMINAL ID will be Recorded at TTI Add the International Code

ID NAME MFP-00C67861

FAX NUMBER +0000000001

LINE2 NUMBER 0000000002

CANCEL ENTER

- Returns you to the FAX menu.

Setting the Fax Initial Setup

Note


The [INITIAL SETUP] button in the [ADMIN] menu will be available only when the optional Fax unit is installed.

Set the initial settings for the fax functions such as the volume settings and reception mode.

- Reception mode: AUTO, MANUAL
- Monitor tone volume: Adjustable 0-7 steps (0: tone OFF)
The “monitor tone” is the line monitor tone which is heard when the [MONITOR/PAUSE] button is pressed.
- Completion tone volume: Adjustable 0-7 stages (0: tone OFF)
The “completion tone” is the ringer tone which is heard when original printing has been completed. It can be heard when all originals have been printed out.
- Dial type (Line 1 /Line 2): DP, MF (not available for the European version)
There are two types of telephone lines: Dial pulse lines (DP) and multi frequency lines (MF). Change the telephone line setting to match the type of the line you are using, for example, when you first install the system or when you change the connected telephone line.

4

1 Press the [FAX] button in the ADMIN menu.

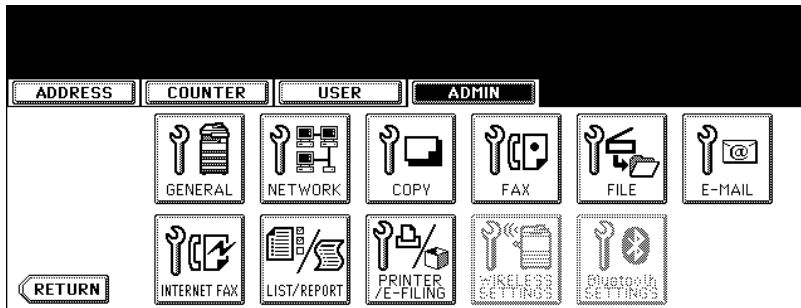


- The FAX menu is displayed.

Tip

To display the ADMIN menu, see “1. ENTERING TO ADMIN MENU”. P.82

2 Press the [INITIAL SETUP] button.

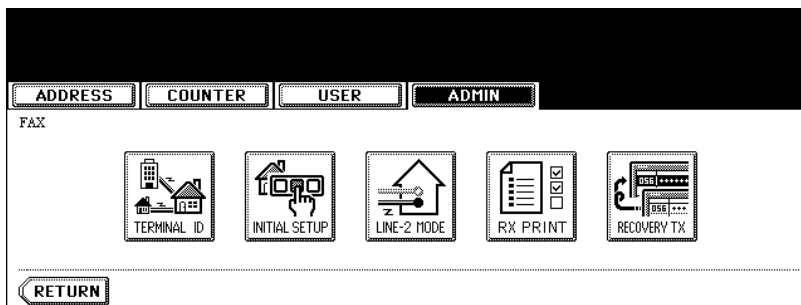

- The INITIAL SETUP screen is displayed.

3 Specify following items as required.

ADDRESS COUNTER USER ADMIN

INITIAL SETUP

RX MODE

AUTO MANUAL

MONITOR VOLUME

0 7

COMPLETION TONE VOLUME

0 7

CANCEL ENTER Next

- **RX MODE** — Press the [AUTO] button to receive faxes automatically, or [MANUAL] button to receive faxes manually. When you select the manual mode, you can receive the faxes by pressing the [START] button when it rings.
- **MONITOR VOLUME** — Press the arrow buttons to change the monitor volume.
- **COMPLETION TONE VOLUME** — Press the arrow buttons to change the complete volume.

Note

When the User Management Setting is enabled, only the [AUTO] button can be selected for the RX MODE option.

4 Press the [Next] button to display the next screen.

5 Specify following items as required.

ADDRESS COUNTER USER ADMIN

INITIAL SETUP

DIAL TYPE

DP MF

DIAL TYPE(LINE2)

DP MF

CANCEL ENTER Prev

- **DIAL TYPE** — Press the [MF] button to select the Multi-frequency mode, or [DP] button to select the Dial Pulse mode for the line 1.
- **DIAL TYPE (LINE2)** — Press the [MF] button to select the Multi-frequency mode, or [DP] button to select the Dial Pulse mode for the line 2. This is available only when the optional 2nd line board is installed.

Note

The "DIAL TYPE" and "DIAL TYPE (LINE2)" is not available for the European version.

6 Press the [ENTER] button.

- Returns you to the FAX menu.

Setting the Line-2 Mode

Note

The Line-2 Mode settings are available only when the optional Fax unit and optional Line-2 board are installed.

Installing the 2nd line board (option) allows transmission during reception, reception during transmission, and simultaneous two communications of transmission/reception.

When the 2nd line is used, the following function setting and registration are required.

- Entering terminal ID P.122
- Dial type setting P.125
- Line-2 setting (following instruction)
- The 1st line takes precedence in the initial setting (not including the case that LINE 2 is selected in the LINE SELECT when you register remote fax numbers into the address). If you want the 2nd line to have priority in the initial setting, ask your service technician.


When the optional 2nd line board is installed, its operation can be selected from the following:

- Transmission/Reception
Both transmission and reception are available all the time.
- Reception only (24 hours)
The 2nd line is always standing by for reception.
- Reception only (timer)
Only reception is available during the specified period of time.
- * Even during reception only, the specified line performs transmission if any line has been specified by the options or address menu.

4

Entering Line-2 Mode Setting

1 Press the [FAX] button in the ADMIN menu.

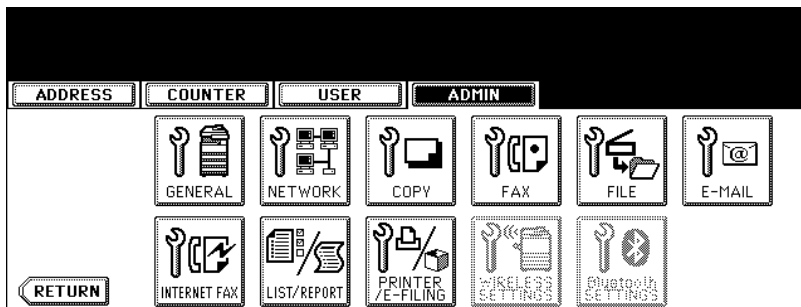


- The FAX menu is displayed.

Tip

To display the ADMIN menu, see "1. ENTERING TO ADMIN MENU". P.82

2 Press the [LINE-2 MODE] button.

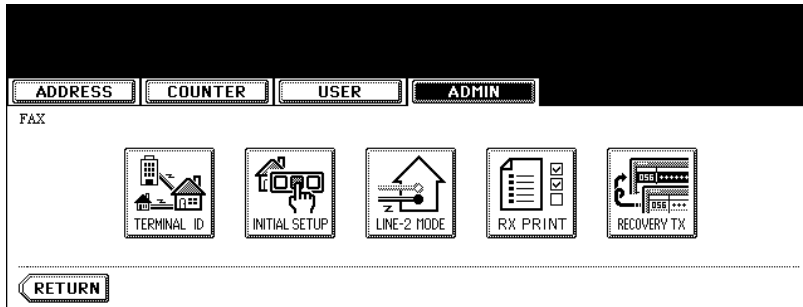


- The LINE-2 MODE screen is displayed.

3 Continue the procedure depending on how you set the Line-2 mode.

- P.128 "Transmission and Reception (TX /RX)"
- P.128 "Reception Only (24HR)"
- P.129 "Reception Only (TIMER)"

Transmission and Reception (TX /RX)


1 Press the [TX/RX] button.

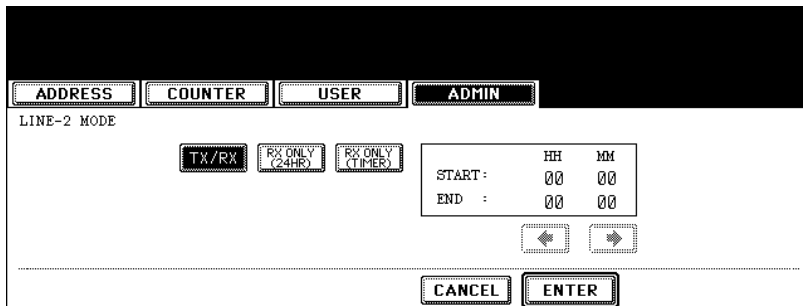

2 Press the [ENTER] button.

Reception Only (24HR)

1 Press the [RX ONLY (24HR)] button.

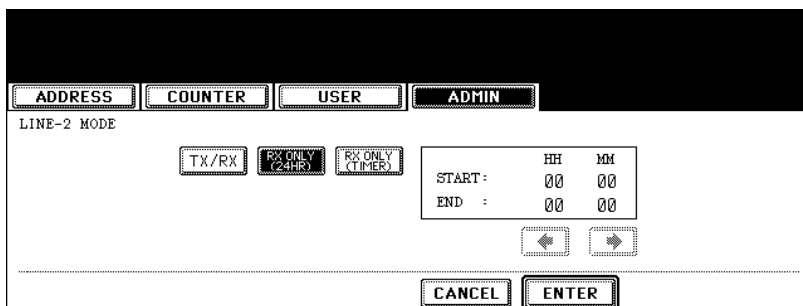

- Making the 2nd line standby for the reception all the time.

2 Press the [ENTER] button.

Reception Only (TIMER)

1 Press the [RX ONLY (TIMER)] button.

The screenshot shows a terminal interface for 'LINE-2 MODE'. At the top, there are four menu options: ADDRESS, COUNTER, USER, and ADMIN. Below these, the text 'LINE-2 MODE' is displayed. Three options are listed: TX/RX, RX ONLY (24HR), and RX ONLY (TIMER). The 'RX ONLY (TIMER)' option is highlighted with a black background. To the right of these options is a time selection box with 'START' and 'END' fields, each with 'HH' and 'MM' sub-fields. The 'START' field shows '00' for both HH and MM, and the 'END' field shows '23' for HH and '00' for MM. Below the time fields are left and right arrow buttons. At the bottom of the screen are 'CANCEL' and 'ENTER' buttons.

- Using the 2nd line for reception only during the specified period.
- Enter the START time and END time using the digital keys.
- Pressing the arrow buttons moves the cursor.
- Time is displayed in the 24-hour system.

2 Press the [ENTER] button.

Setting the RX Printing

Setting Discard and Reduction Printing

Set print settings for received fax and Internet Fax originals that are to be printed. Two print settings are available: discard printing and reduction printing.

Discard Printing: ON, OFF

- ON (default setting):
When originals are up to 10mm larger than the printing area; the part of the originals that exceeds the paper printing area is discarded.
- OFF: The received original is printed on two sheets of paper if its length exceeds the paper printing area.
* For detail of DISCARD setting, contact your service technician.

RX Reduction Printing: ON, OFF

- ON (default setting):
If the received original is longer than the recording paper, it will be vertically reduced to 90% to fit on the recording paper.
 - OFF: The received original is printed on two sheets of paper if its length exceeds the paper printing area.
- * Only drawers can be set for received FAX printing. Please see the *Operator's Manual for Basic Functions*. Be sure to use LD, LG, LT, LT-R, A3, A4, A4-R or B4.

1 Press the [FAX] button in the ADMIN menu.




- The FAX menu is displayed.

Tip


To display the ADMIN menu, see "1. ENTERING TO ADMIN MENU". P.82

2 Press the [RX PRINT] button.

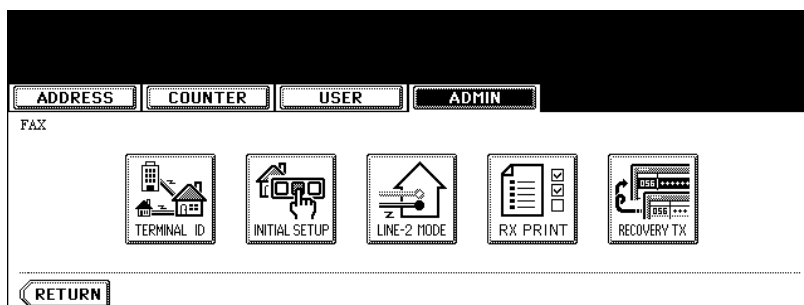

- The RX PRINT screen is displayed.

3 Press the [ON] (or [OFF]) button of the “DISCARD” and/or “REDUCTION”.

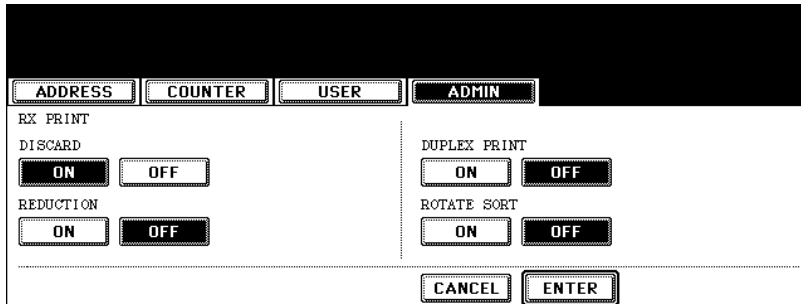

4 Press the [ENTER] button.

- The registered items can be confirmed in the function list. P.149

4

Setting Duplex Printing


Note

The “Duplex Print” function is available only when the optional Fax unit is installed.

This printer setting determines whether or not to print received originals on both sides of sheet.

- * Duplex printing is available only if the received originals are the same size.
- * When the system runs out of paper during duplex printing, the rest of the documents is printed on both sides of another size of paper.

1 Press the [FAX] button in the ADMIN menu.

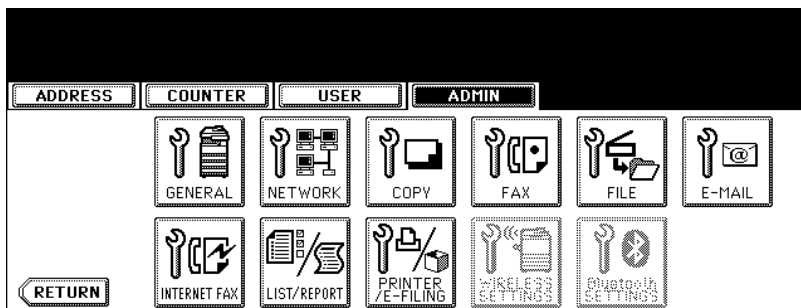


- The FAX menu is displayed.


Tip

To display the ADMIN menu, see “1. ENTERING TO ADMIN MENU”. P.82

2 Press the [RX PRINT] button.

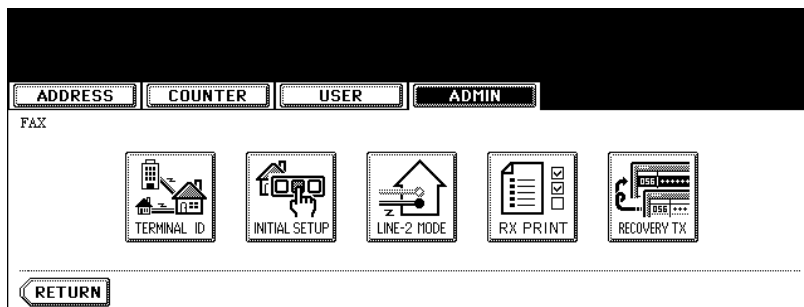

3 Press the [ON] button of the “DUPLEX PRINT”, and then press the [ENTER] button.


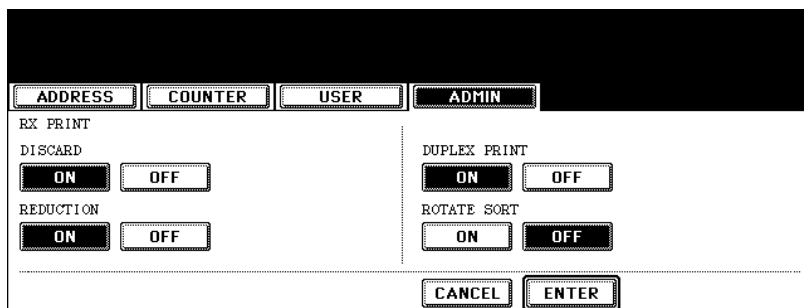


- The registered items can be confirmed in the function list. P.149

Tip

Duplex printing direction differs depending on the received original size.

- Received LD, LG, LT, A3, A4, or B4-sized originals are printed so that they can be bound along the long edge of direction.
- Received ST, A5 or B5-sized originals are printed so that they can be bound along the short edge of direction.

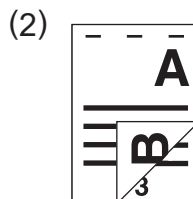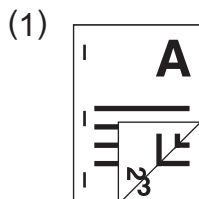

Setting the Rotate Sort


Note

The “Rotate Sort” function is available only when the optional Fax unit is installed.

The printer setting determines whether or not to output each separate job of received originals in the different orientation.

- * Rotate Sort printing is available only for LT/A4-sized paper. Set the LT and LT-R, or A4 and A4-R drawers.
- * When the system runs out of paper during Rotate Sort printing, the rest of the documents is printed on the remaining paper.

1 Press the [FAX] button in the ADMIN menu.

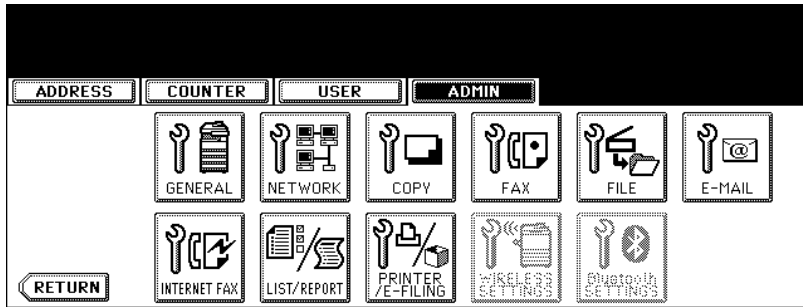


- The FAX menu is displayed.


Tip

To display the ADMIN menu, see “1. ENTERING TO ADMIN MENU”. [P.82](#)

2 Press the [RX PRINT] button.

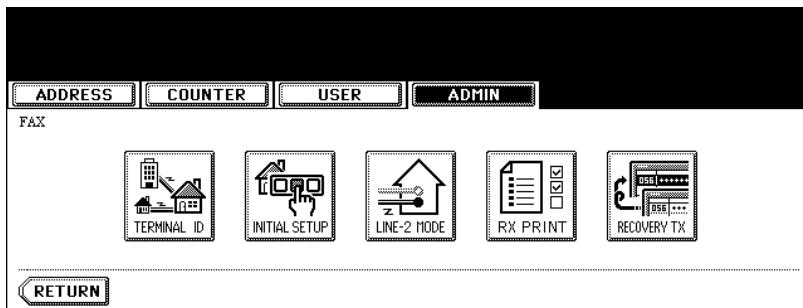

3 Press the [ON] button of the “ROTATE SORT”, and then press the [ENTER] button.

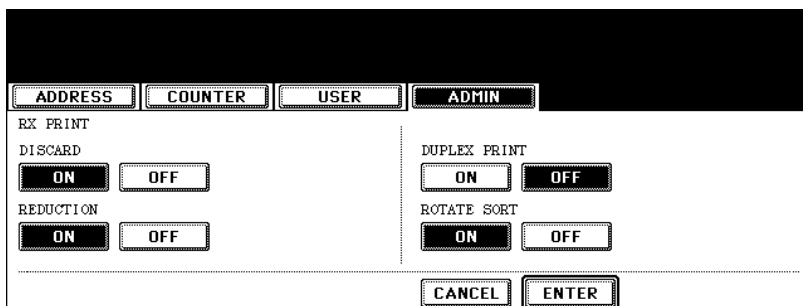

- The registered items can be confirmed in the function list. [P.149](#)

Setting the Recovery Transmission

Note

The Recovery transmission is available only when the optional Fax unit is installed.


This function allows you to specify how long a document will be remained in the memory after failing the redial attempts.

Note

You can retransmit the document held in the memory. For instructions on how to send the recovery transmission, see the *Operator's Manual For Facsimile Function*.

4

1 Press the [FAX] button in the ADMIN menu.

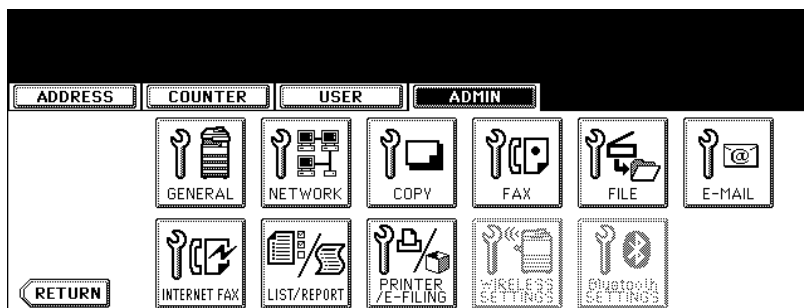


- The FAX menu is displayed.


Tip

To display the ADMIN menu, see "1. ENTERING TO ADMIN MENU". P.82

2 Press the [RECOVERY TX] button.

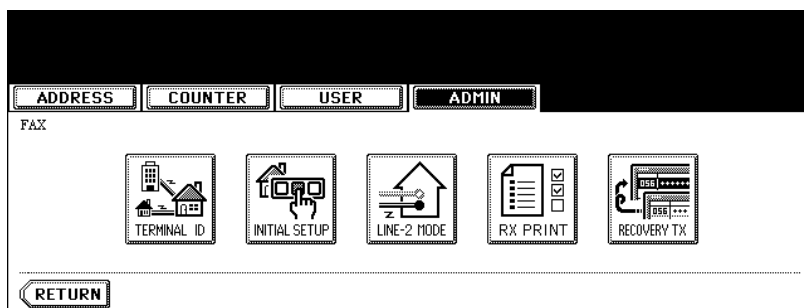

3 Change the document-stored time with the [**< 1H**] or [**24H >**] button, and press the [**ENTER**] button.

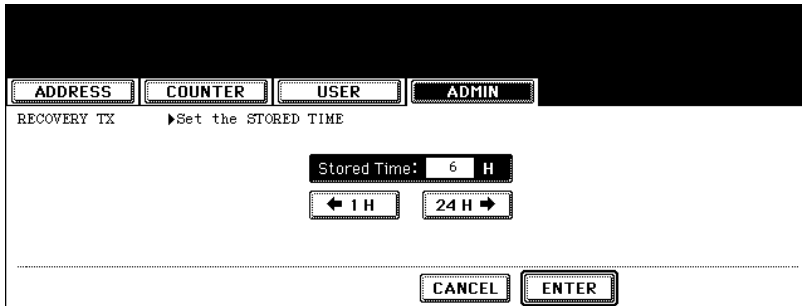

- The document-holding time can be changed by the 1 hour.

Note

When the Recovery transmission is enabled, the [RECOVERY TX] button will be grayed icon. You can disable the Recovery transmission by pressing the [RECOVERY TX] button again, and the button turns to the normal icon.

6. SETTING FILE FUNCTIONS

This function allows you to automatically delete the files stored by the Save as file operations. This function is used to periodically delete stored files in the local storage to maintain the available hard disk space.

Note

The [FILE] button in the [ADMIN] menu will be available only when the Scanner Kit is installed, or when the Printer/Scanner Kit is installed.

1 Press the [FILE] button in the ADMIN menu.




- The FILE menu is displayed.

Tip

To display the ADMIN menu, see "1. ENTERING TO ADMIN MENU".  P.82

2 Press the [ON] button to enable the storage maintenance, or [OFF] button to disable the storage maintenance.

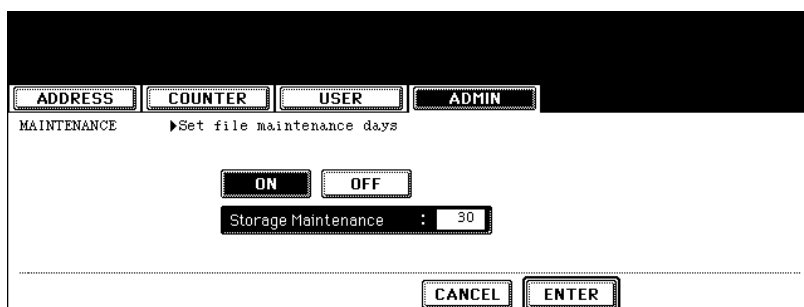

- When you press the [ON] button, the "Storage Maintenance" field will be highlighted. Continue to next step to enter the number of days.
- When you press the [OFF] button, skip to step 4.

3 Press the [Storage Maintenance] button to activate the input field, and enter the number of days the system preserve the files before deleting them automatically using the digital keys.

- You can enter 1 to 99 days.

4 Press the [ENTER] button.

7. SETTING E-MAIL FUNCTIONS


Setting the Scan to E-mail Message Properties

You can configure the message properties of E-mail documents that will be sent by Scan to E-mail operation.

Note

The [E-MAIL] button in the [ADMIN] menu will be available only when the Scanner Kit is installed, or when the Printer/Scanner Kit is installed.

1 Press the [E-MAIL] button.

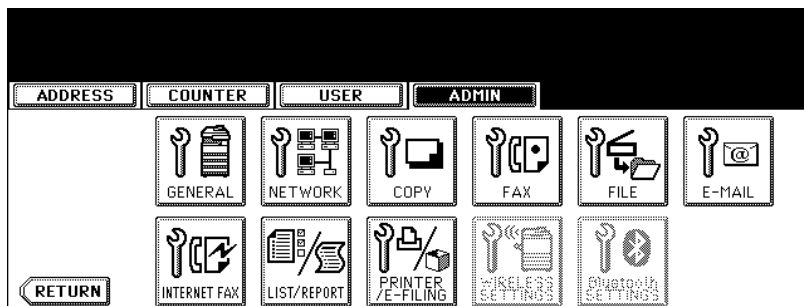


- The E-MAIL screen is displayed.

Tip

To display the ADMIN menu, see "1. ENTERING TO ADMIN MENU". P.82

2 Press each button to enter the E-mail properties.

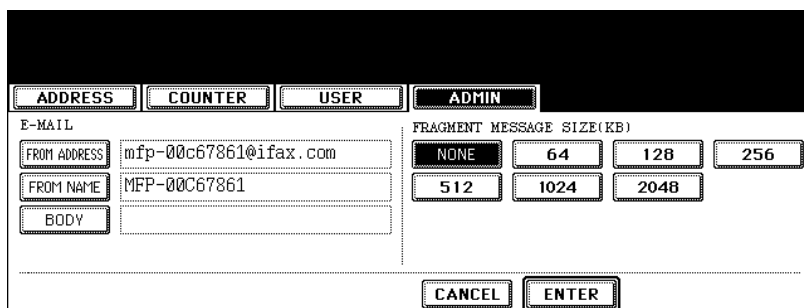

- **[FROM ADDRESS]** — Press this to enter the E-mail address of this equipment.
- **[FROM NAME]** — Press this to enter the identification name of this equipment.
- **[BODY]** — Press this to enter the body message.

Note

You must enter the [FROM ADDRESS] button to enable Scan to E-mail.

Tip

When you press each button, the input screen is displayed. Enter the value using the keyboard and digital keys, and press the [ENTER] button to set the entry.

3 Press the [ENTER] button.


Setting the Scan to E-mail Fragmentation

This function allows you to send the Scan to E-mail job split by the fragment size you specified. This can reduce the transmission errors caused by the network traffic problems.

Note

The [E-MAIL] button in the [ADMIN] menu will be available only when the Scanner Kit is installed, or when the Printer/Scanner Kit is installed.

1 Press the [E-MAIL] button in the ADMIN menu.

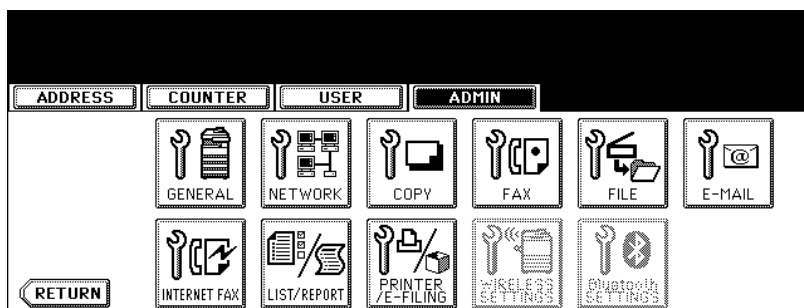


- The E-MAIL screen is displayed.

Tip

To display the ADMIN menu, see "1. ENTERING TO ADMIN MENU". P.82

2 Press desired fragment size button and press the [ENTER] button.

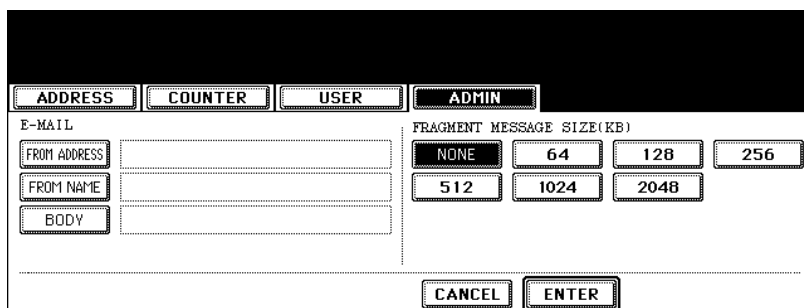

- Press the [NONE] button to disable the fragmentation.

8. SETTING INTERNET FAX FUNCTIONS


Setting the Internet Fax Message Properties

You can configure the message properties of Internet Faxes that will be sent by Internet Fax transmission.

Note

The [INTERNET FAX] button in the [ADMIN] menu will be available only when the Scanner Kit is installed, or when the Printer/Scanner Kit is installed.

1 Press the [INTERNET FAX] button in the ADMIN menu.

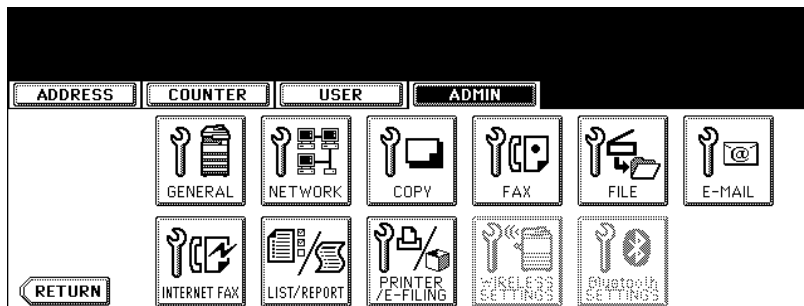


- The INTERNET FAX screen is displayed.

Tip

To display the ADMIN menu, see “1. ENTERING TO ADMIN MENU”. P.82

2 Press each button to enter the Internet Fax properties.

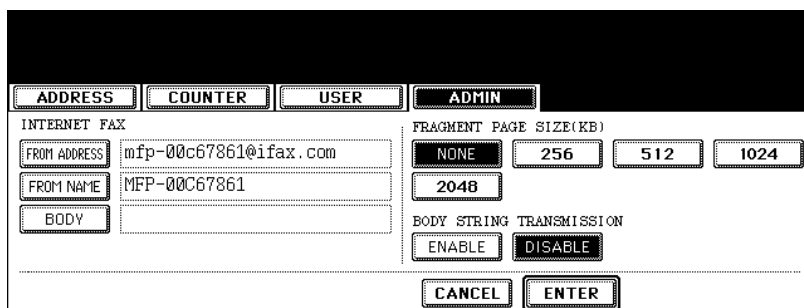

- [FROM ADDRESS] — Press this to enter the E-mail address of this equipment.
- [FROM NAME] — Press this to enter the identification name of this equipment.
- [BODY] — Press this to enter the body message.

Note

You must enter the [FROM ADDRESS] button to enable Internet Fax.

Tip

When you press each button, the input screen is displayed. Enter the value using the keyboard and digital keys, and press the [ENTER] button to set the entry.

3 Press the [ENTER] button.


Setting the Internet Fax Fragmentation

This function allows you to send the Internet Faxes split by the fragment size you specified. This can reduce the transmission errors caused by the network traffic problems.

Note

The [INTERNET FAX] button in the [ADMIN] menu will be available only when the Scanner Kit is installed, or when the Printer/Scanner Kit is installed.

1 Press the [INTERNET FAX] button in the ADMIN menu.

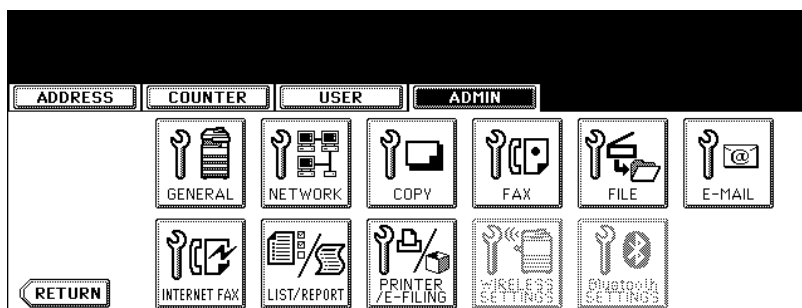


- The INTERNET FAX screen is displayed.

Tip

To display the ADMIN menu, see "1. ENTERING TO ADMIN MENU". P.82

2 Press desired fragment size button and press the [ENTER] button.

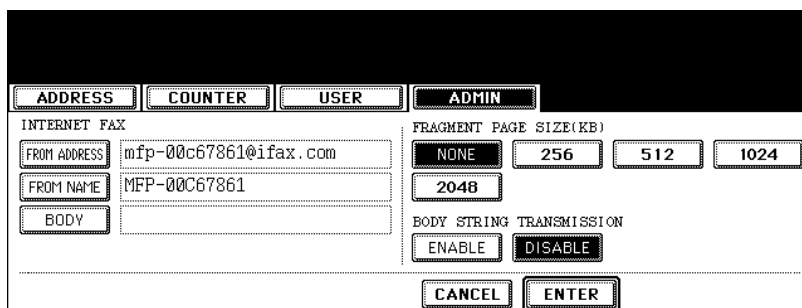

- Press the [NONE] button to disable the fragmentation.


Setting the Internet Fax Body String Transmission

This function allows you to set whether the body string will be transmitted or not.

Note

The [INTERNET FAX] button in the [ADMIN] menu will be available only when the Scanner Kit is installed, or when the Printer/Scanner Kit is installed.

1 Press the [INTERNET FAX] button in the ADMIN menu.

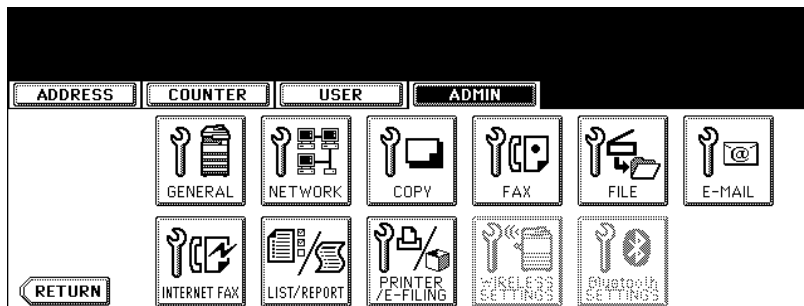


- The INTERNET FAX screen is displayed.

Tip

To display the ADMIN menu, see "1. ENTERING TO ADMIN MENU".  P.82

2 Press the [ENABLE] button to enable the body string transmission, or [DISABLE] button to disable the body string transmission.

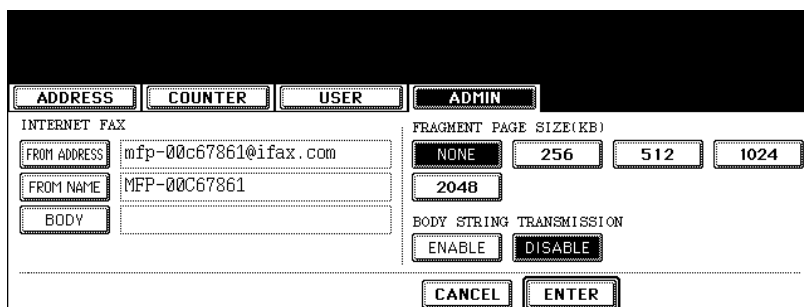A screenshot of the INTERNET FAX settings screen. At the top, there are four tabs: ADDRESS, COUNTER, USER, and ADMIN. The ADMIN tab is selected. The screen is divided into two columns. The left column has three input fields: FROM ADDRESS (mfp-00c67861@ifax.com), FROM NAME (MFP-00C67861), and BODY. The right column has a section for FRAGMENT PAGE SIZE(KB) with buttons for NONE, 256, 512, and 1024, and a 2048 button below it. Below that is a section for BODY STRING TRANSMISSION with ENABLE and DISABLE buttons. At the bottom, there are CANCEL and ENTER buttons.

3 Press the [ENTER] button.

9. SETTING LIST/REPORT

Setting the Transmission / Reception Journal

There are two types of journals available on this equipment. Journals can be printed either automatically or manually.

This function allows you to set the auto-print for the journals, and the number of transactions appears in the journal list.

Note

The Transmission/Reception Journal settings will be available only when the Printer Kit and Scanner Kit is installed, when the Printer/Scanner Kit is installed, or when the optional Fax unit is installed.

1 Press the [LIST/REPORT] button in the ADMIN menu.




- The LIST/REPORT screen is displayed.

Tip


To display the ADMIN menu, see "1. ENTERING TO ADMIN MENU". P.82

2 Press the [REPORT SETTING] button.

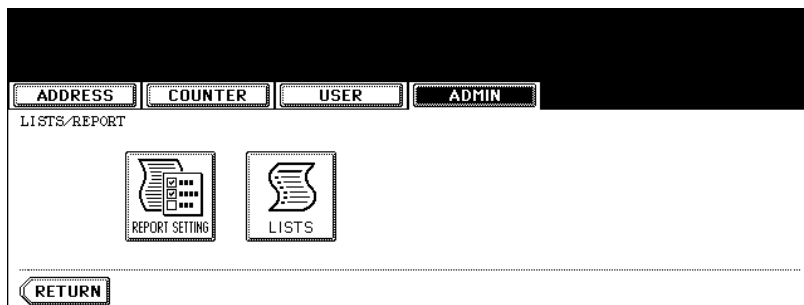


- The REPORT SETTING menu is displayed.

3 Press the [JOURNAL] button.

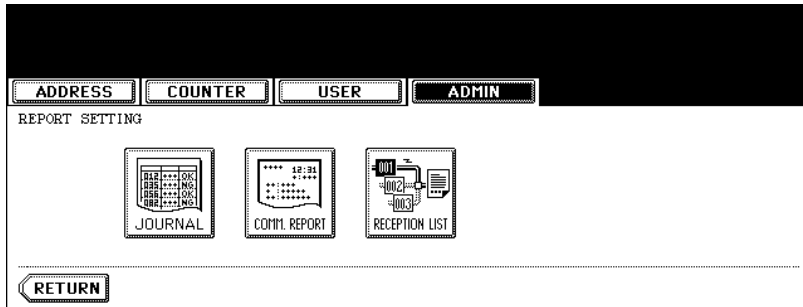

- The JOURNAL screen is displayed.

4 Specify the following items as required.

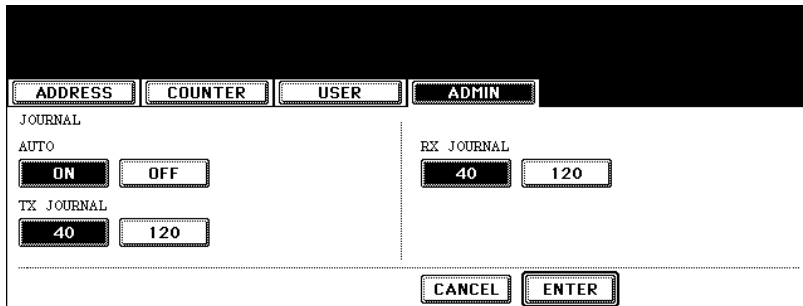

- **AUTO** — Press the [ON] button to enable printing the transmission and reception journals automatically. When you enable this, the transmission and reception journals will be printed when specified numbers of transmissions are completed.
- **TX JOURNAL** — Press the number button to specify the number of transmissions will be printed on a transmission journal.
- **RX JOURNAL** — Press the number button to specify the number of receptions will be printed on a reception journal.

5 Press the [ENTER] button.

Setting the Communication Report


Communication Report allows you to print a report after every transmission. Reports can be printed automatically only.

This function allows you to select the condition to print the communication report for each transmission type separately.

Note

The Communication Report setting will be available only when the Printer Kit and Scanner Kit is installed, when the Printer/Scanner Kit is installed, or when the optional Fax unit is installed.

1 Press the [LIST/REPORT] button in the ADMIN menu.

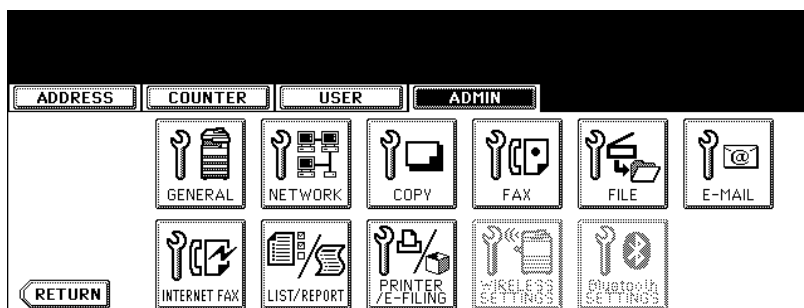


- The LIST/REPORT screen is displayed.

Tip


To display the ADMIN menu, see "1. ENTERING TO ADMIN MENU". P.82

2 Press the [REPORT SETTING] button.

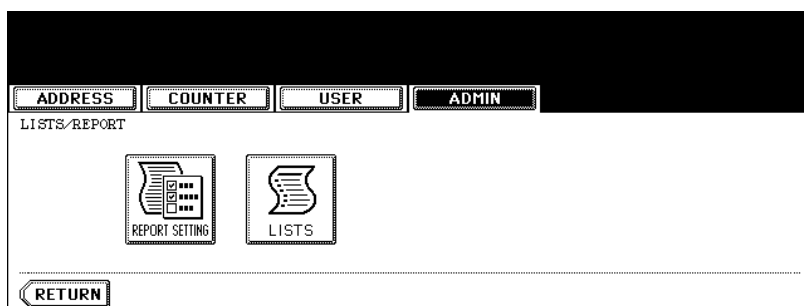


- The REPORT SETTING screen is displayed.

3 Press the [COMM. REPORT] button.

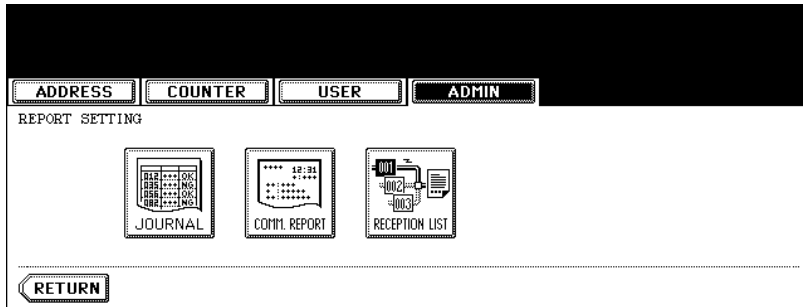

- The COMM. REPORT screen is displayed.

4 Specify the condition for each transmission type.

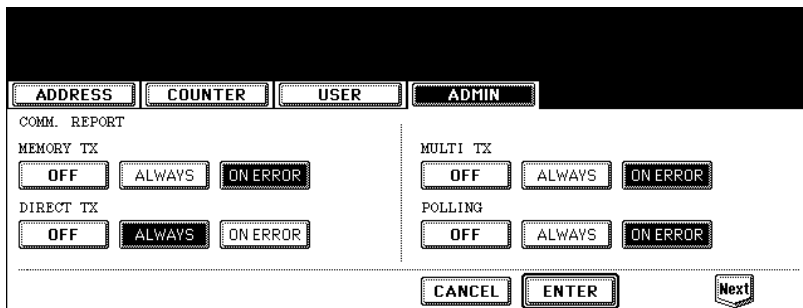


- [OFF] — Press this to disable printing the communication report.
- [ALWAYS] — Press this to print the communication report every transmission.
- [ON ERROR] — Press this to print the communication report only when an error occurs.

Note

“DIRECT TX” and “POLLING” are available only when the optional Fax unit is installed.

5 When you press the [ALWAYS] or [ON ERROR] button for “MEMORY TX” or “MULTI TX”, the “PRINT 1st PAGE IMAGE?” message is displayed. Press the [YES] button to print the communication report with the first page image, or press the [NO] button to print the communication report without the page image.

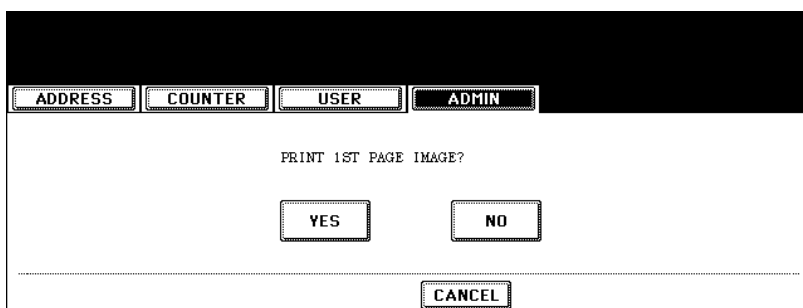

- Returns you to the COMM. REPORT screen.

- 6** Press the [Next] button to display the next screen and specify the condition for each transmission type.

COMM. REPORT

RELAY ORIGINATOR: OFF, ALWAYS, ON ERROR

RELAY DESTINATION: OFF, ALWAYS, ON ERROR

RELAY STATION: OFF, ALWAYS, ON ERROR

CANCEL ENTER Prev

Note

“RELAY ORIGINATOR” is available only when the optional Fax unit is installed.

- 7** When you press the [ALWAYS] or [ON ERROR] button for each transmission type, the “PRINT 1st PAGE IMAGE?” message is displayed. Press the [YES] button to print the communication report with the first page image, or press the [NO] button to print the communication report without the page image.

PRINT 1ST PAGE IMAGE?

YES NO

CANCEL

- Returns you to the COMM. REPORT screen.

- 8** Press the [ENTER] button.

Setting the Reception List

The Reception List allows you to print a reception list after receiving a document to a mailbox on this equipment.


This function allows you to enable or disable printing a reception list for the following mailbox transmissions:

Relay Station — Receiving a relay transmission from an originator as a relay hub.

Local — Reserving a document to a mailbox within this equipment locally.

Remote — Reserving a document to a mailbox within this equipment remotely from another facsimile.

1 Press the [LIST/REPORT] button in the ADMIN menu.

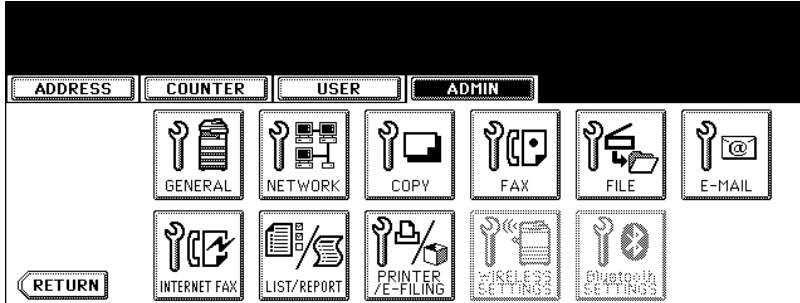


- The LIST/REPORT screen is displayed.

Tip


To display the ADMIN menu, see "1. ENTERING TO ADMIN MENU".  P.82

2 Press the [REPORT SETTING] button.

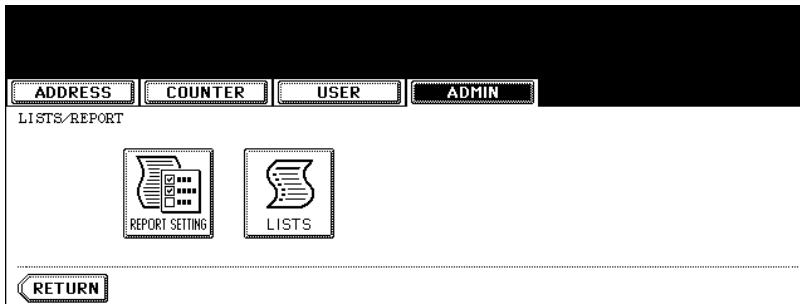

- The REPORT SETTING screen is displayed.

3 Press the [RECEPTION LIST] button.

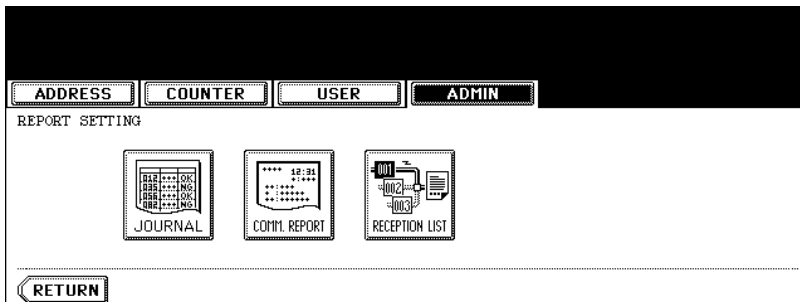

- The RECEPTION LIST screen is displayed.

4 Specify whether the reception list will be printed for each transmission.

The screenshot shows a control panel menu titled "RECEPTION LIST". At the top, there are four tabs: ADDRESS, COUNTER, USER, and ADMIN. The main menu is divided into three sections: "RELAY STATION" with "ON" and "OFF" buttons, "LOCAL" with "ON" and "OFF" buttons, and "REMOTE" with "ON" and "OFF" buttons. At the bottom of the menu are "CANCEL" and "ENTER" buttons.

- **RELAY STATION** — Select the [ON] button to print the reception list when receiving a relay transmission from an originator.
- **LOCAL** — Select the [ON] button to print the reception list when reserving a document to a mailbox within the machine locally.
- **REMOTE** — Select the [ON] button to print the reception list when receiving a document to a mailbox within the machine remotely from another facsimile.

5 Press the [ENTER] button.

4

10. PRINTING LISTS


This function allow you to print the NIC configuration page, function list, PS3 font list, and PCL font list.

* For the examples of each list format are described in Appendix.  P.153

Note

The NIC configuration page, PS3 font list, and PCL font list can be printed only when the Printer Kit, the Printer/Scanner Kit, or optional Fax unit is installed.

1 Press the [LIST/REPORT] button in the ADMIN menu.

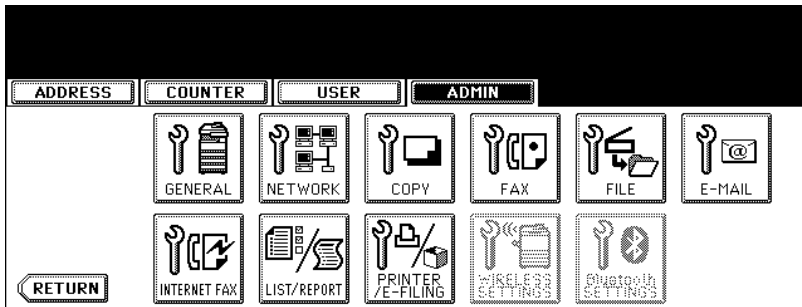


- The LIST screen is displayed.

Tip


To display the ADMIN menu, see "1. ENTERING TO ADMIN MENU".  P.82

2 Press the [LIST] button.

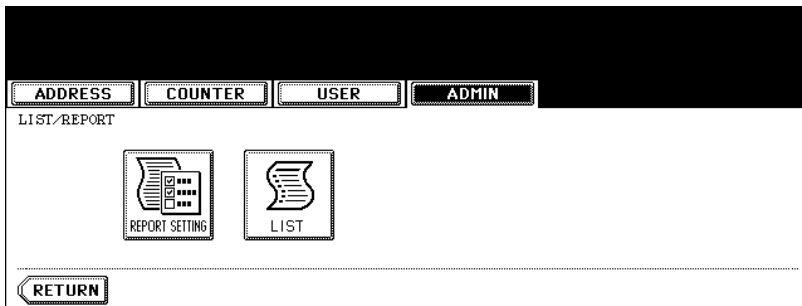

- The LIST screen is displayed.

3 Press the button that you want to print.

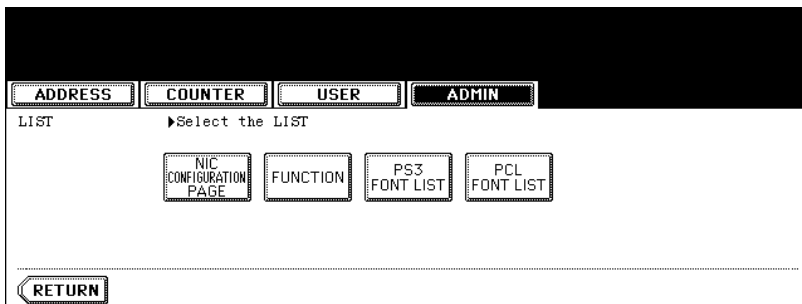


- Selected list is printed.

11. SETTING PRINTER/E-FILING FUNCTIONS

You can configure the printer and e-Filing functions that will apply to the print jobs or e-Filing jobs.

1 Press the [PRINTER/E-FILING] button in the ADMIN menu.

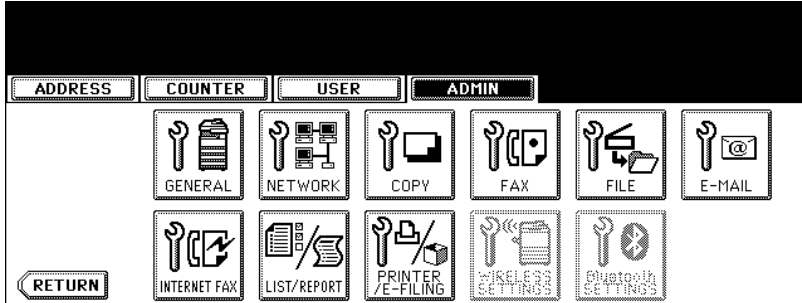


- The PRINTER/E-FILING screen is displayed.

Tip

To display the ADMIN menu, see “1. ENTERING TO ADMIN MENU”. P.82

2 Specify the following items as you require.

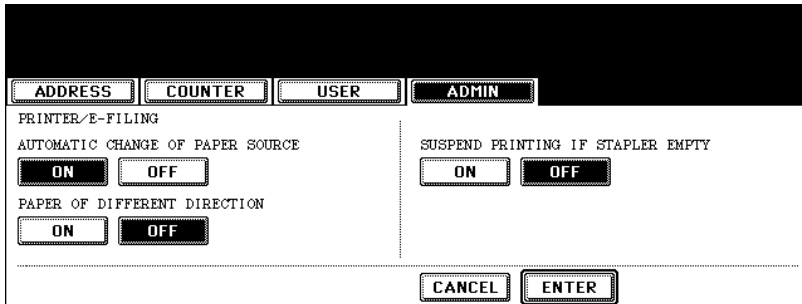

- **AUTOMATIC CHANGE OF PAPER SOURCE** — When the [ON] button is selected, this equipment will feed the same size of paper from the different drawer if the specified drawer becomes empty.
- **PAPER OF DIFFERENT DIRECTION** — When the [ON] button is selected, this equipment will feed the same size of paper that is set in a different direction if the specified drawer becomes empty.
- **SUSPEND PRINTING IF STAPLER EMPTY** — Select the [ON] button to enable suspending printing if stapler empty occurs. When this is enabled, this equipment quit printing that stapling is specified if stapler empty occurs. When this is disabled, this equipment will print a document without stapling even if stapler empty occurs.

3 Press the [ENTER] button.

12. WIRELESS SETTINGS AND Bluetooth SETTINGS

- There is also the [WIRELESS SETTINGS] button in the ADMIN menu. This button will be available only when the optional Wireless LAN Module is installed. For the instructions on how to operate the WIRELESS SETTINGS, please refer to the ***GN-1041 Operator's Manual for Wireless LAN***.
 - There is also the [Bluetooth SETTINGS] button in the ADMIN menu. This button will be available only when the optional Bluetooth Module is installed. For the instructions on how to operate the Bluetooth SETTINGS, please refer to the ***GN-2010 Operator's Manual for Bluetooth***.
-



5. APPENDIX

- 1. LIST PRINT FORMAT 154
 - Total Counter List 154
 - Department Code List 155
 - Address Book List 156
 - Function List (User)..... 158
 - NIC Configuration Page 159
 - Function List (Administrator) 160
 - PS3 Font List..... 175
 - PCL Font List 176

1. LIST PRINT FORMAT

Total Counter List

An output example of the Total Counter List

TOTAL COUNTER LIST					
			TIME	:	10-09-'05 20:47
			S/N	:	0987654321
PRINT COUNTER					
	COPY	FAX	PRINTER	LIST	TOTAL
SMALL	99999	99999	99999	99999	399996
LARGE	99999	99999	99999	99999	399996
TOTAL	199998	199998	199998	199998	799992
SCAN COUNTER					
COPY	99999				
FAX	99999				
NETWORK	99999				
TOTAL	299997				

Department Code List

An output example of the Department Code List

DEPARTMENT CODE LIST		TIME : 10-09-'05 20:47				
DEPT NO.	DEPARTMENT					
D 1	00001					
PRINT COUNTER						
	<u>COPY</u>	<u>FAX</u>	<u>PRINT</u>	<u>LIST</u>	<u>TOTAL</u>	<u>LIMIT</u>
SMALL	99999	99999	99999	99999	399996	
LARGE	99999	99999	99999	99999	399996	
	199998	199998	199998	199998	799992	-
FAX COMMUNICATION			SCAN COUNTER			
	<u>TRANSMIT</u>	<u>RECEPTION</u>		<u>COPY</u>	<u>FAX</u>	<u>NETWORK</u>
SMALL	99999	99999	SMALL	99999	99999	99999
LARGE	99999	99999	LARGE	99999	99999	99999
	199998	199998		199998	199998	199998
DEPT NO.	DEPARTMENT					
D 2	00002					
PRINT COUNTER						
	<u>COPY</u>	<u>FAX</u>	<u>PRINT</u>	<u>LIST</u>	<u>TOTAL</u>	<u>LIMIT</u>
SMALL	99999	99999	99999	99999	399996	
LARGE	99999	99999	99999	99999	399996	
	199998	199998	199998	199998	799992	-
FAX COMMUNICATION			SCAN COUNTER			
	<u>TRANSMIT</u>	<u>RECEPTION</u>		<u>COPY</u>	<u>FAX</u>	<u>NETWORK</u>
SMALL	99999	99999	SMALL	99999	99999	
LARGE	99999	99999	LARGE	99999		
	199998	199998				

Address Book List

An output example of the Address Book List

ADDRESS BOOK INFORMATION

TIME : 10-09-'05 20:47
 FAX NO.1 : 9999999999
 FAX NO.2 : 9999999990
 NAME : MFP_00000236

NO.	NAME	FAX NUMBER/E-MAIL ADDRESS	QUALITY TX	TX TYPE	LINE	ECM	ATT
001	USER01	0000000001 ✉user01@ifax.com	OFF	MEMORY		OFF	0
002	USER01	0000000002 ✉user02@ifax.com	OFF	MEMORY		OFF	0
003	USER01	0000000003 ✉user03@ifax.com	OFF	MEMORY		OFF	0
004	USER01	0000000004 ✉user04@ifax.com	OFF	MEMORY		OFF	0
005	USER01	0000000005 ✉user05@ifax.com	OFF	MEMORY		OFF	0
006	USER01	0000000006 ✉user06@ifax.com	OFF	MEMORY		OFF	0
007	USER01	0000000007 ✉user07@ifax.com	OFF	MEMORY		OFF	0
008	USER01	0000000008 ✉user08@ifax.com	OFF	MEMORY		OFF	0
009	USER01	0000000009 ✉user09@ifax.com	OFF	MEMORY		OFF	0
010	USER01	0000000010 ✉user10@ifax.com	OFF	MEMORY		OFF	0
011	USER01	0000000011 ✉user11@ifax.com	OFF	MEMORY		OFF	0

Group Numbers List

An output example of the Group Numbers List

GROUP NUMBER INFORMATION											
		TIME : 10-09-'05 20:47									
		FAX NO.1 : 99999999999									
		FAX NO.2 : 99999999990									
		NAME : MFP_00000236									
NO.	NAME	ADDRESS BOOK									
001	GROUP01	☐ 001	001	☐ 002	☐ 003	☐ 004	☐ 005	005	☐ 006	006	☐ 007
		007	☐ 008	008	☐ 009	009	☐ 010	010	☐ 011	☐ 012	☐ 013
		☐ 014	014	☐ 015	015	☐ 016	016	☐ 017	017	☐ 018	018
		☐ 019	019	☐ 020	020						
002	GROUP02	005	007	009	☐ 015	☐ 060	☐ 065				
003	GROUP03	☐ 005	005	☐ 006	☐ 006	☐ 007	☐ 009				

Function List (User)

An output example of the Function List (User)

```

FUNCTION LIST
      S/N       : 0987654321      TIME       : 10-09-'05 20:47
      F/W Ver.  : T410SY0U010    FAX NO.1   : 99999999999
      M-ROM Ver.: 410M-003       FAX NO.2   : 99999999990
      S-ROM Ver.: 410S-00        NAME        : MFP_00000183

GENERAL
TOTAL COUNTER      : 9999
DRAWER
  DRAWER 1         : LT
  DRAWER 2         : A3
  DRAWER 3         : A4-R
  DRAWER 4         : B5
AUTO CLEAR        : 45

COPY
EXPOSURE          : AUTO
ORIGINAL MODE     : TEXT/PHOTO
IMAGE DIRECTION   : DISABLE
BYPASS FEED       : PLAIN
2IN1/4IN1        : WRITE LATERALLY
MAGAZINE SORT     : OPEN FROM LEFT
BOOK -> 2         : OPEN FROM LEFT

SCAN
ROTATION          : 0
SINGLE/2-SIDE SCAN : SINGLE
RESOLUTION        : 200dpi
ORIGINAL MODE     : TEXT
EXPOSURE          : AUTO
BACKGROUND ADJUSTMENT : 0

FAX
FAX ROM VERSION   : F562-A05
RESOLUTION        : STANDARD
ORIGINAL MODE     : TEXT
EXPOSURE          : AUTO
TX TYPE           : MEMORY TX
RTI               : OFF
ECM               : ON
INITIAL SETUP
MONITOR VOLUME
COMPLETION

```

Tip

For further information about the items printed on the function list, please refer to the “Function List (Administrator)”. (📖 P.160)

NIC Configuration Page

An output example of the NIC Configuration Page

```
-----  
Unit Serial No      : 00C67861          Version : T000SY00000  
Network Address    : 00:40:af:7e:28:55  
Network Topology   : Ethernet          Connector: RJ45  
Network Mode       : 100 Megabits  
  
Novell Network Information          enabled  
  Print Server Name      : MFP_00C67861  
  Password Defined      : No  
  Search Root           : NWSRV  
  Directory Services Tree : ORG  
  Directory Services Context : dept1.org  
  Scan Rate             : 5  
  Frame Type            : Auto Sense  
  
TCP/IP Network Information          enabled  
  Address Mode          : Static IP  
  IP Address            : 10.10.70.105  
  Subnet Mask           : 255.255.255.0  
  Default Gateway       : 10.10.70.1  
  Primary DNS Server    : 0.0.0.0  
  DNS Name              :  
  Host Name             :  
  Primary WINS Server   : 0.0.0.0  
  NetBios Name          : MFP_00C67861  
  
IPP Network Information              enabled  
  IPP without SSL       : http://169.254.204.215:631/Print  
  IPP with SSL          : https://169.254.204.215:443/Print  
  
AppleTalk Network Information        enabled  
  AppleTalk Printer Name: MFP_00C67861  
  AppleTalk Zone        : *  
  AppleTalk Type        : LaserWriter  
  AppleTalk Frame Type  : 802.2 SNAP On 802.3  
  
-----  
Novell Connection Information  
  File Server Name: NWSRV  
  Queue Name: MFP_QUEUE  
  
AppleTalk Connection Information
```

Function List (Administrator)

An output example of the Function List (Administrator)

```

FUNCTION LIST
      S/N           : 0987654321           TIME           : 10-09-'05 20:47
      F/W Ver.     : T410SYOU010         FAX NO.1        : 99999999999
      M-ROM Ver.   : 410M-003           FAX NO.2        : 99999999990
      S-ROM Ver.   : 410S-00            NAME           : MFP_00000183

GENERAL
TOTAL COUNTER                : 9999
MAIN / PAGE MEMORY SIZE     : 256 MB / 64 MB
DRAWER
  DRAWER 1                   : LT
  DRAWER 2                   : A3
  DRAWER 3                   : A4-R
  DRAWER 4                   : B5
AUTO CLEAR                   : 45
ENERGY SAVER
  WEEKLY TIMER               : ON      OFF
  TIMER SUNDAY               : 00:00  24:00
  TIMER MONDAY               : 00:00  24:00
  TIMER TUESDAY              : 00:00  24:00
  TIMER WEDNESDAY            : 00:00  24:00
  TIMER THURSDAY             : 00:00  24:00
  TIMER FRIDAY               : 00:00  24:00
  TIMER SATURDAY             : 00:00  24:00
  AUTO POWER SAVE           : 15
  SLEEP MODE                 : 60

COPY
EXPOSURE                     : AUTO
ORIGINAL MODE                 : TEXT/PHOTO
IMAGE DIRECTION               : DISABLE
BYPASS FEED                   : PLAIN
2IN1/4IN1                     : WRITE Laterally
MAGAZINE SORT                 : OPEN FROM LEFT
BOOK -> 2                     : OPEN FROM LEFT
MAXIMUM COPIES                : 9999
AUTO 2-SIDED MODE             : OFF
SORT MODE PRIORITY            : NON=Sort
AUTOMATIC CHANGE OF PAPER SIZE : ON
PAPER OF DIFFERENT DIRAECTION
SUSPEND PRINTING

```

The Function List for an administrator shows the setting list for all functions. The following table shows all functions that are printed for an administrator's function list, and the "User" column indicates which functions are printed in a user's function list. This table also describes about each function.

GENERAL

Function	Description	User
TOTAL COUNTER	Shows the total counter.	YES
MAIN / PAGE MEMORY SIZE	Shows the main memory size and page memory size.	NO
DRAWER - DRAWER 1	Shows the paper size of the drawer 1.	YES
DRAWER - DRAWER 2	Shows the paper size of the drawer 2.	YES

GENERAL

Function	Description	User
DRAWER - DRAWER 3* ¹	Shows the paper size of the drawer 3.	YES
DRAWER - DRAWER 4* ²	Shows the paper size of the drawer 4.	YES
DRAWER - LARGE CAPACITY FEEDER* ³	Shows the paper size of the large capacity feeder	YES
AUTO CLEAR	Shows the time (in second) that the Touch Panel Display clears the previous settings that had been set and turns to the initial screen.	YES
ENERGY SAVER - WEEKLY TIMER	Shows the time to enter the energy saver mode (ON time), and the time to exit the energy saver mode (OFF time) for each day (Sunday to Saturday).	NO
ENERGY SAVER - AUTO POWER SAVE	Shows the time to enter the power save mode (in minutes).	NO
ENERGY SAVER - SLEEP MODE	Shows the time to enter the sleep mode (in minutes).	NO

*1. "DRAWER 3" is printed only when the Drawer 3 & 4 is installed.

*2. "DRAWER 4" is printed only when the Drawer 3 & 4 is installed.

*3. "LARGE CAPACITY FEEDER" is printed only when the LCF is installed.

COPY

Function	Description	User
EXPOSURE	Shows the default exposure setting for copy.	YES
ORIGINAL MODE	Shows the default original mode for copy.	YES
IMAGE DIRECTION	Shows whether the image direction is enabled or disabled.	YES
BYPASS FEED	Shows the default paper type of the bypass feed.	YES
2IN1/4IN1	Shows the default 2in1/4in1 mode.	YES
MAGAZINE SORT	Shows the default magazine sort mode.	YES
BOOK -> 2	Shows the default duplex book copy mode.	YES
MAXIMUM COPIES	Shows the maximum copies that are allowed to be set.	NO
AUTO 2-SIDE MODE	Shows the default auto 2-sided mode.	NO
SORT MODE PRIORITY	Shows the default sort mode.	NO

COPY

Function	Description	User
AUTOMATIC CHANGE OF PAPER SOURCE	Shows whether the Automatic Change of Paper Source function is enabled or disabled.	NO
PAPER OF DIFFERENT DIRECTION	Shows whether the Paper of Different Direction function is enabled or disabled.	NO
SUSPEND PRINTING IF STAPLER EMPTY	Shows whether this equipment suspends printing when stapler empty occurs.	NO

SCAN

Function	Description	User
ROTATION	Shows the default rotation mode.	YES
SINGLE/2-SIDED SCAN	Shows the default 2-sided scan mode.	YES
RESOLUTION	Shows the resolution for scans.	YES
ORIGINAL MODE	Shows the default original mode for scans.	YES
EXPOSURE	Shows the default exposure setting for scans.	YES

FAX

Function	Description	User
FAX ROM VERSION	Shows the ROM version of the Fax unit.	YES
RESOLUTION	Shows the default resolution setting for a fax/Internet Fax transmission.	YES
ORIGINAL MODE	Shows the default original mode for a fax/Internet Fax transmission.	YES
EXPOSURE	Shows the default exposure setting for a fax/Internet Fax transmission.	YES
TX TYPE ^{*1}	Shows the default transmission type.	YES
RTI	Shows whether the RTI is enabled or disabled.	YES
ECM ^{*1}	Shows whether the ECM is enabled or disabled.	YES
INITIAL SETUP - MONITOR VOLUME ^{*1}	Shows the monitor volume setting.	NO
INITIAL SETUP - COMPLETION TONE VOLUME ^{*1}	Shows the complete volume setting.	NO
INITIAL SETUP - RX MODE ^{*1}	Shows the default RX mode.	NO

FAX

Function	Description	User
INITIAL SETUP - DIAL TYPE* ¹	Shows the dial type of the line 1.	NO
INITIAL SETUP - DIAL TYPE (LINE2)* ²	Shows the dial type of the line2.	NO
LINE-2 MODE* ²	Shows the line2 mode.	NO
LINE-2 MODE - START* ²	Shows the start time to use the Line2 for receptions only. This applies only when "RX ONLY (TIMER)" is set to the LINE-2 MODE.	NO
LINE-2 MODE - END* ²	Shows the end time to finish using the Line2 for receptions only. This applies only when "RX ONLY (TIMER)" is set to the LINE-2 MODE.	NO
RX PRINT - DISCARD	Shows whether the discard function is enabled or disabled.	NO
RX PRINT - REDUCTION	Shows whether the reduction is enabled or disabled.	NO
RX PRINT - DUPLEX PRINT* ¹	Shows whether the duplex print is enabled or disabled.	NO
RX PRINT - ROTATE SORT* ¹	Shows whether the rotate sort is enabled or disabled.	NO
RECOVERY TX - STORED TIME* ¹	Shows how many hours that a recovery transmission job is to be stored.	NO
FAX RECEIVED FORWARD - AGENT1* ¹	Shows the agent type if the Fax Received Forward is registered.	NO
FAX RECEIVED FORWARD - AGENT2* ¹	Shows the agent type if the Fax Received Forward is registered.	NO

*1. These are printed only when the optional Fax unit is installed.

*2. These are printed only when the optional Fax unit and optional Line2 board are installed.

FILE

Function	Description	User
MAINTENANCE	Shows whether the storage maintenance is enabled or disabled.	NO
STORAGE MAINTENANCE	Shows how many days the data in the local folder is remained. This applies only when the maintenance function is enabled.	NO

E-MAIL

Function	Description	User
FRAGMENT MESSAGE SIZE (KB)	Shows the fragment message size that applies to an E-mail transmission.	NO
FROM ADDRESS	Shows the sender's E-mail address that applies to an E-mail transmission.	NO
FROM NAME	Shows the sender's name that applies to an E-mail transmission.	NO

INTERNET FAX

Function	Description	User
FRAGMENT PAGE SIZE (KB)	Shows the fragment message size that applies to an Internet Fax transmission.	NO
BODY STRING TRANSMISSION	Shows whether the body string transmission is enabled or disabled.	NO
FROM ADDRESS	Shows the sender's E-mail address that applies to an Internet Fax transmission.	NO
FROM NAME	Shows the sender's name that applies to an Internet Fax transmission.	NO
INTERNET FAX RECEIVED FORWARD - AGENT1	Shows the agent type if the Internet Fax Received Forward is registered.	NO
INTERNET FAX RECEIVED FORWARD - AGENT2	Shows the agent type if the Internet Fax Received Forward is registered.	NO

REPORT SETTING

Function	Description	User
JOURNAL - AUTO	Shows whether the auto journal print is enabled or disabled.	NO
JOURNAL - TX JOURNAL	Shows how many transmissions will be printed on a transmission journal.	NO
JOURNAL - RX JOURNAL	Shows how many receptions will be printed on a reception journal.	NO
COMM. REPORT - MEMORY TX	Shows the condition to print a memory transmission report.	NO
COMM. REPORT - DIRECT TX	Shows the condition to print a direct transmission report.	NO
COMM. REPORT - MULTI TX	Shows the condition to print a multi transmission report.	NO
COMM. REPORT - POLLING* ¹	Shows the condition to print a polling report.	NO

REPORT SETTING

Function	Description	User
COMM. REPORT - RELAY ORIGINATOR* ¹	Shows the condition to print a relay originator report.	NO
COMM. REPORT - RELAY STATION	Shows the condition to print a relay station report.	NO
COMM. REPORT - RELAY DESTINATION	Shows the condition to print a relay destination report.	NO
RECEPTION LIST - LOCAL	Shows whether a reception list will be printed or not after reserving a document to a mailbox within the equipment.	NO
RECEPTION LIST - REMOTE	Shows whether a reception list will be printed or not after reserving a document to a mailbox within the equipment remotely from another facsimile.	NO
RECEPTION LIST - RELAY STATION	Shows whether a reception list will be printed or not after receiving a relay transmission from an originator as a relay hub.	NO

*1. These are printed only when the optional Fax unit is installed.

PRINTER/E-FILING

Function	Description	User
AUTOMATIC CHANGE OF PAPER SOURCE	Shows whether the Automatic Change of Paper Source function is enabled or disabled.	NO
PAPER OF DIFFERENT DIRECTION	Shows whether the Paper of Different Direction function is enabled or disabled.	NO
SUSPEND PRINTING IF STAPLER EMPTY	Shows whether this equipment suspends printing when stapler empty occurs.	NO

WIRELESS SETTINGS

Function	Description	User
WIRELESS LAN	Shows whether the Wireless LAN function is enabled or disabled.	NO
NETWORK TYPE	Shows the network type for Wireless LAN.	NO
SSID	Shows the SSID.	NO
SECURITY	Shows the security mode.	NO
802.1x AUTHENTICATION	Shows the protocol for WPA/WPA2/802.1x authentication when WPA/WPA2/802.1x authentication is selected for the security mode.	NO

WIRELESS SETTINGS

Function	Description	User
USER CERTIFICATE	Shows the user certificate name to be used for authentication.	NO
CA CERTIFICATE	Shows the CA certificate name to be used for authentication.	NO
EAP USER NAME	Shows the EAP user name to be used for authentication.	NO
TRANSMIT RATE (Mbps)	Shows the transmission rate.	NO
TRANSMIT POWER	Shows the transmission power.	NO

Note

WIRELESS SETTINGS are printed only when the optional Wireless LAN Module is installed.

BLUETOOTH SETTINGS

Function	Description	User
BLUETOOTH	Shows whether the Bluetooth function is enabled or disabled.	NO
BLUETOOTH NAME	Shows the Bluetooth name of this equipment.	NO
DEVICE ADDRESS	Shows the device address of this equipment.	NO
ALLOW DISCOVERY	Shows whether the Allow Discovery function is enabled or disabled.	NO
SECURITY	Shows whether the security function is enabled or disabled.	NO
REQUIRED PIN	Shows the PIN number.	NO
DATA ENCRYPTION	Shows whether the data encryption is enabled or disabled.	NO

Note

BLUETOOTH SETTINGS are printed only when the optional Bluetooth Module is installed.

NETWORK SETTING - GENERAL PRODUCT

Function	Description	User
GENERAL - ETHER SPEED/DUPLEX MODE	Shows the Ethernet speed setting.	NO

NETWORK SETTING - NETWORK - TCP/IP

Function	Description	User
ADDRESS MODE	Shows the TCP/IP address mode.	NO
IP ADDRESS	Shows the IP address of this equipment.	NO
SUBNET MASK	Shows the subnet mask of this equipment.	NO
DEFAULT GATEWAY	Shows the default gateway address of this equipment.	NO

NETWORK SETTING - NETWORK - IPX/SPX

Function	Description	User
ENABLE IPX/SPX	Shows whether the IPX/SPX protocol is enabled or disabled.	NO
FRAME TYPE	Shows the frame type to be selected.	NO

NETWORK SETTING - NETWORK - APPLE TALK

Function	Description	User
ENABLE APPLE TALK	Shows whether the AppleTalk protocol is enabled or disabled.	NO
DEVICE NAME	Shows the AppleTalk device name.	NO
DESIRED ZONE	Shows the AppleTalk zone.	NO

NETWORK SETTING - SESSION - LDAP SESSION

Function	Description	User
ENABLE LDAP	Shows whether the LDAP is enabled or disabled.	NO
ENABLE SSL	Shows whether the LDAP SSL is enabled or disabled.	NO

NETWORK SETTING - SESSION - DNS SESSION

Function	Description	User
ENABLE DNS	Shows whether the DNS is enabled or disabled.	NO
PRIMARY DNS SERVER ADDRESS	Shows the primary DNS server address if it has been set.	NO
SECONDARY DNS SERVER ADDRESS	Shows the secondary DNS server address if it has been set.	NO

NETWORK SETTING - SESSION - DDNS SESSION

Function	Description	User
ENABLE DDNS	Shows whether the DDNS is enabled or disabled.	NO
HOST NAME	Shows the host name of this equipment.	NO
DOMAIN NAME	Shows the domain name of this equipment.	NO

NETWORK SETTING - SESSION - SMB SESSION

Function	Description	User
SMB SERVER PROTOCOL	Shows whether the SMB protocol is enabled or disabled.	NO
NETBIOS NAME	Shows the NetBIOS name of this equipment.	NO
LOGON	Shows the logon setting.	NO
WORKGROUP	Shows the workgroup of this equipment.	NO
DOMAIN	Shows the domain name of this equipment.	NO
PRIMARY DOMAIN CONTROLLER	Shows the primary domain controller address if it has been set.	NO
BACKUP DOMAIN CONTROLLER	Shows the backup domain controller address if it has been set.	NO
DEVICE NAME	Shows the device name of this equipment for the domain if it has been set.	NO
PRIMARY WINS SERVER	Shows the primary WINS server address if it has been set.	NO
SECONDARY WINS SERVER	Shows the secondary WINS server address if it has been set.	NO
SMB SIGNING OF SMB SERVER	Shows the setting of the SMB Signing of SMB Server.	NO
SMB SIGNING OF SMB CLIENT	Shows the setting of the SMB Signing of SMB Client.	NO

NETWORK SETTING - SESSION - NETWARE SESSION

Function	Description	User
ENABLE BINDERY	Shows whether the bindery mode is enabled or disabled.	NO
ENABLE NDS	Shows whether the NDS mode is enabled or disabled.	NO
CONTEXT	Shows the NDS context.	NO

NETWORK SETTING - SESSION - NETWARE SESSION

Function	Description	User
TREE	Shows the NDS tree.	NO
SEARCH ROOT	Shows the NDS Search Root.	NO

NETWORK SETTING - SESSION - BONJOUR SESSION

Function	Description	User
ENABLE BONJOUR	Shows whether the Bonjour is enabled or disabled.	NO
LINK-LOCAL HOST NAME	Shows the link-local host name of this equipment for Bonjour.	NO
SERVICE NAME	Shows the service name of this equipment for Bonjour.	NO

NETWORK SETTING - NETWORK SERVICE - HTTP NETWORK SERVICE

Function	Description	User
ENABLE HTTP SERVER	Shows whether the HTTP network service is enabled or disabled.	NO
PRIMARY PORT NUMBER	Shows the primary port number for the HTTP network service.	NO
SECONDARY PORT NUMBER	Shows the secondary port number for the HTTP network service.	NO
ENABLE SSL	Shows whether the SSL for the HTTP network service is enabled or disabled.	NO
SSL PORT NUMBER	Shows the SSL port number for the HTTP network service.	NO

NETWORK SETTING - NETWORK SERVICE - SMTP CLIENT NETWORK SERVICE

Function	Description	User
ENABLE SMTP CLIENT	Shows whether the SMTP client is enabled or disabled.	NO
AUTHENTICATION	Shows whether SMTP authentication is enabled or disabled.	NO
POP BEFORE SMTP	Shows whether POP Before SMTP is enabled or disabled.	NO
SMTP SERVER ADDRESS	Shows the IP address of SMTP server that has been assigned.	NO
LOGIN NAME	Shows the login name used for SMTP authentication.	NO

NETWORK SETTING - NETWORK SERVICE - SMTP CLIENT NETWORK SERVICE

Function	Description	User
PORT NUMBER	Shows the port number to be used for sending an E-mail or Internet Fax to the SMTP server.	NO
ENABLE SSL	Shows whether the SSL for the SMTP client is enabled or disabled.	NO

NETWORK SETTING - NETWORK SERVICE - SMTP SERVER NETWORK SERVICE

Function	Description	User
ENABLE SMTP SERVER	Shows whether the SMTP server is enabled or disabled.	NO
PORT NUMBER	Shows the port number to be used for receiving the Internet Fax using the SMTP protocol.	NO
ENABLE OFFRAMP GATEWAY	Shows whether the offramp gateway is enabled or disabled.	NO
ENABLE OFFRAMP SECURITY	Shows whether the offramp security is enabled or disabled.	NO
ENABLE OFFRAMP PRINT	Shows whether the offramp print is enabled or disabled.	NO
E-MAIL ADDRESS	Shows the E-mail address of this equipment if the SMTP server is enabled and it has been set.	NO

NETWORK SETTING - NETWORK SERVICE - POP3 NETWORK SERVICE

Function	Description	User
ENABLE POP3 CLIENT	Shows whether the POP3 client is enabled or disabled.	NO
POP3 SERVER ADDRESS	Shows the IP address of the POP3 server if it has been assigned.	NO
TYPE POP3 LOGIN	Shows the POP3 login type.	NO
ACCOUNT NAME	Shows the POP3 account name if it has been set.	NO
SCAN RATE	Shows the scan rate to check the POP3 server for new message (in minutes).	NO
PORT NUMBER	Shows the port number to be used for accessing the POP3 server.	NO
ENABLE SSL	Shows whether the SSL for the POP3 network service is enabled or disabled.	NO

NETWORK SETTING - NETWORK SERVICE - POP3 NETWORK SERVICE

Function	Description	User
SSL PORT NUMBER	Shows the SSL port number to be used for accessing the POP3 server.	NO

NETWORK SETTING - NETWORK SERVICE - FTP CLIENT NETWORK SERVICE

Function	Description	User
DEFAULT PORT NUMBER	Shows the default port number to be used for saving a document to the network folder using the FTP.	NO

NETWORK SETTING - NETWORK SERVICE - FTP SERVER NETWORK SERVICE

Function	Description	User
ENABLE FTP SERVER	Shows whether the FTP server service is enabled or disabled.	NO
DEFAULT PORT NUMBER	Shows the default port number to be used for receiving data using FTP.	NO
ENABLE SSL	Shows whether the SSL for the FTP server network service is enabled or disabled.	NO
SSL PORT NUMBER	Shows the SSL port number to be used for accessing the equipment using FTP.	NO

NETWORK SETTING - NETWORK SERVICE - SNMP NETWORK SERVICE

Function	Description	User
ENABLE SNMP	Shows whether the SNMP is enabled or disabled.	NO
READ COMMUNITY	Shows the read community name.	NO
ENABLE AUTHENTICATION TRAP	Shows whether the authentication trap is enabled or disabled.	NO
ENABLE ALERTS TRAP	Shows whether the alerts trap is enabled or disabled.	NO
IP TRAP ADDRESS1	Shows the IP address that have been set for IP trap address 1.	NO
IP TRAP COMMUNITY	Shows the IP Trap community name.	NO
IPX TRAP ADDRESS	Shows the IPX trap address.	NO

NETWORK SETTING - NETWORK SERVICE - SNTP NETWORK SERVICE

Function	Description	User
ENABLE SNTP	Shows whether the SNTP is enabled or disabled.	NO

NETWORK SETTING - NETWORK SERVICE - SNTP NETWORK SERVICE

Function	Description	User
PRIMARY SNTP ADDRESS	Shows the primary SNTP server address if it has been set.	NO
SECONDARY SNTP ADDRESS	Shows the secondary SNTP server address if it has been set.	NO
PORT NUMBER	Shows the port number to be used for accessing the SNTP server.	NO
SCAN RATE	Shows the scan rate to check the SNTP server for adjusting the time setting.	NO

NETWORK SETTING - PRINT SERVICE SETTING - RAW TCP PRINT

Function	Description	User
ENABLE RAW TCP	Shows whether Raw TCP printing is enabled or disabled.	NO
PORT NUMBER	Shows the port number to be used for Raw TCP printing.	NO

NETWORK SETTING - PRINT SERVICE SETTING - LPD PRINT

Function	Description	User
ENABLE LPD	Shows whether LPR printing is enabled or disabled.	NO
PORT NUMBER	Shows the port number to be used for LPR printing.	NO
BANNERS	Shows whether the banner will be printed for each LPR print job.	NO

NETWORK SETTING - PRINT SERVICE SETTING - IPP PRINT

Function	Description	User
ENABLE IPP	Shows whether IPP printing is enabled or disabled.	NO
ENABLE PORT80	Shows whether the Port80 is used for IPP printing.	NO
PORT NUMBER	Shows the port number to be used for IPP printing.	NO
URL	Shows the URL for IPP printing.	NO
ADMINISTRATOR'S NAME	Shows the administrator's user name to be allowed to perform the [Cancel All Documents] function.	NO

NETWORK SETTING - PRINT SERVICE SETTING - IPP PRINT

Function	Description	User
AUTHENTICATION	Shows whether the authentication for IPP printing is enabled or disabled.	NO
USER NAME	Shows the user name for authentication.	NO
ENABLE SSL	Shows whether the SSL for IPP printing is enabled or disabled.	NO
SSL PORT NUMBER	Shows the SSL port number to be used for IPP printing.	NO
SSL URL	Shows the SSL URL for IPP printing.	NO

NETWORK SETTING - PRINT SERVICE SETTING - FTP PRINT

Function	Description	User
ENABLE FTP PRINT	Shows whether FTP printing is enabled or disabled.	NO
PRINT USER NAME	Shows the user name for FTP printing.	NO
PRINT PASSWORD	Shows the password for FTP printing.	NO
PORT NUMBER	Shows the port number to be used for FTP printing.	NO

NETWORK SETTING - PRINT SERVICE SETTING - NETWARE PRINT

Function	Description	User
LOGIN NAME	Shows the login name for NetWare file server.	NO
PASSWORD	Shows the password for NetWare file server.	NO
PRINT QUEUE SCAN RATE	Shows how often the equipment scans the queue on NetWare file server (in second).	NO

NETWORK SETTINGS - PRINT AND NOTIFICATION SERVICE - E-MAIL PRINT

Function	Description	User
ENABLE PRINT HEADER	Shows whether the header will be printed or not for E-mail printing.	NO
ENABLE PRINT MESSAGE BODY	Shows whether the message body will be printed or not for E-mail printing.	NO
MAXIMUM E-MAIL BODY PRINT	Shows the maximum number of pages to print the body strings of the received Email print job.	NO
ENABLE PRINT E-MAIL ERROR	Shows whether an E-mail error report will be printed or not.	NO

NETWORK SETTINGS - PRINT AND NOTIFICATION SERVICE - E-MAIL PRINT

Function	Description	User
ENABLE E-MAIL ERROR FORWARD	Shows whether an E-mail error message will be sent or not.	NO
E-MAIL ERROR TRANSFER ADDRESS	Shows the E-mail address where an E-mail error message will be sent, if it has been set.	NO
ENABLE PARTIAL E-MAIL	Shows whether the equipment allows printing an E-mail job that partially received.	NO
PARTIAL WAIT TIME	Shows how long the equipment will wait for receiving data of a partial E-mail job before printing (in second).	NO
MDN REPLY	Shows whether MDN Reply is enabled or disabled.	NO

PCL Font List

An output example of the PCL Font List

TOSHIBA

e-STUDIO 282 Series Internal PCL Font List

Page:1

0	Courier	The quick brown fox jumps over the lazy dog
1	CG-Times	The quick brown fox jumps over the lazy dog
2	CG-Times Bold	The quick brown fox jumps over the lazy dog
3	CG-Times Italic	<i>The quick brown fox jumps over the lazy dog</i>
4	CG-Times Bold Italic	<i>The quick brown fox jumps over the lazy dog</i>
5	CG Omega	The quick brown fox jumps over the lazy dog
6	CG Omega Bold	The quick brown fox jumps over the lazy dog
7	CG Omega Italic	<i>The quick brown fox jumps over the lazy dog</i>
8	CG Omega Bold Italic	<i>The quick brown fox jumps over the lazy dog</i>
9	Coronet	<i>The quick brown fox jumps over the lazy dog</i>
10	Clarendon Condensed	The quick brown fox jumps over the lazy dog
11	Univers Medium	The quick brown fox jumps over the lazy dog
12	Univers Bold	The quick brown fox jumps over the lazy dog
13	Univers Italic	<i>The quick brown fox jumps over the lazy dog</i>
14	Univers Bold Italic	<i>The quick brown fox jumps over the lazy dog</i>
15	Univers Medium Condensed	The quick brown fox jumps over the lazy dog
16	Univers Condensed Bold	The quick brown fox jumps over the lazy dog
17	Univers Medium Condensed Italic	<i>The quick brown fox jumps over the lazy dog</i>
18	Univers Condensed Bold Italic	<i>The quick brown fox jumps over the lazy dog</i>
19	Antique Olive	The quick brown fox jumps over the lazy dog
20	Antique Olive Bold	The quick brown fox jumps over the lazy dog
21	Antique Olive Italic	<i>The quick brown fox jumps over the lazy dog</i>
22	Garamond Antiqua	The quick brown fox jumps over the lazy dog
23	Garamond Halbfett	The quick brown fox jumps over the lazy dog
24	Garamond Kursiv	<i>The quick brown fox jumps over the lazy dog</i>
25	Garamond Kursiv Halbfett	<i>The quick brown fox jumps over the lazy dog</i>
26	Marigold	<i>The quick brown fox jumps over the lazy dog</i>
27	Albertus Medium	The quick brown fox jumps over the lazy dog
28	Albertus Extra Bold	The quick brown fox jumps over the lazy dog
29	Arial	The quick brown fox jumps over the lazy dog
30	Arial Bold	The quick brown fox jumps over the lazy dog
31	Arial Italic	<i>The quick brown fox jumps over the lazy dog</i>
32	Arial Bold Italic	<i>The quick brown fox jumps over the lazy dog</i>
33	Times New Roman	The quick brown fox jumps over the lazy dog
34	Times New Roman Bold	The quick brown fox jumps over the lazy dog
35	Times New Roman Italic	<i>The quick brown fox jumps over the lazy dog</i>
36	Times New Roman Bold Italic	<i>The quick brown fox jumps over the lazy dog</i>
37	Helvetica	The quick brown fox jumps over the lazy dog
38	Helvetica-Bold	The quick brown fox jumps over the lazy dog
39	Helvetica-Oblique	<i>The quick brown fox jumps over the lazy dog</i>
40	Helvetica-BoldOblique	<i>The quick brown fox jumps over the lazy dog</i>
41	Helvetica-Narrow	The quick brown fox jumps over the lazy dog
42	Helvetica-Narrow-Bold	The quick brown fox jumps over the lazy dog
43	Helvetica-Narrow-Oblique	<i>The quick brown fox jumps over the lazy dog</i>
44	Helvetica-Narrow-BoldOblique	<i>The quick brown fox jumps over the lazy dog</i>
45	Palatino-Roman	The quick brown fox jumps over the lazy dog
46	Palatino-Bold	The quick brown fox jumps over the lazy dog
47	Palatino-Italic	<i>The quick brown fox jumps over the lazy dog</i>
48	Palatino-BoldItalic	<i>The quick brown fox jumps over the lazy dog</i>

INDEX

Numerics	
2ND TEL	8
A	
ADDRESS BOOK	74
ADDRESS BOOK EDIT	10
Address Book List	74, 156
ADDRESS BOOK REGISTRATION	7
ADDRESS MENU	5
ADDRESS MODE	101, 102, 104
ADMIN	82
COPY	120
E-MAIL	137
FAX	122
FILE	136
GENERAL	84
INTERNET FAX	139
LIST/REPORT	142
NETWORK	100
ADMIN. MESSAGE	84
Administrator Password	88
Advice	3
ALL LIMIT	62
APPLETALK	112
AppleTalk Protocol	112
AUTO 2-SIDE MODE	120
AUTO CLEAR	64
Auto Clear Mode	64
AUTO POWER SAVE	95
Auto Power Save Mode	95
Auto-IP	100
AUTOMATIC CHANGE OF PAPER SOURCE	121, 150
B	
BODY	137, 139
Body String Transmission	141
BYPASS FEED	68
C	
CHANGE LANGUAGE	65
CHECK OF GROUP MEMBER	20, 23
CHECKING E-MAIL	77
CLOCK	90
COMM. REPORT	145
Communication Report	144
COMPLETION TONE VOLUME	126
CONTACT INFORMATION	84
Contacts	
Deleting	12
Editing	10
Registering	7
Searching	14
CONTEXT	108
CORP.	8
COUNTER MENU	35
D	
Date and Time	90
DATE FORMAT	91
DATE/TIME	90
Daylight Saving System	91
DELETE ALL	50
DEMO PAGE PRINT	149
Department Code	
Deleting	50, 58
Editing	54
Enabling	48
Printing	47
Registering	51
Resetting All Counters	49
Resetting Counter	60
Department Code List	155
DEPARTMENT COUNTER	39
DEPARTMENT MANAGEMENT	45, 48
DEPARTMENT REGISTRATION	51, 54, 58
DEPT.	8
DESIRED ZONE	112
DEVICE INFORMATION	84
DEVICE NAME	112
DHCP Server	100
DIAL TYPE	126
DIAL TYPE (LINE2)	126
DIRECT TX	145
DISABLE FILE SHARE	110
DISABLE PRINT SHARE	110
DISCARD	131
Discard Printing	130
Display Language	65
DRAWER	78
DRAWER SET POP-UP	99
DUPLEX PRINT	132
Duplex Printing	131
DYNAMIC	101
E	
ECM	9, 71
E-MAIL	8
ENABLE APPLETALK	112
ENABLE BINDERY	108
ENABLE HTTP SERVER	115
ENABLE IPX/SPX	105
ENABLE NDS	108
ENABLE SSL	115
ENERGY SAVER	92, 95, 97
ETHERNET	116
EXPOSURE	70, 73
EXPOSURE MODE	68
F	
FAX COMMUNICATION	44
Fax Initial Setup	125
FAX NO.	8

FAX NUMBER	123
FIRST NAME	8
FRAGMENT MESSAGE SIZE	138
FRAGMENT PAGE SIZE	140
Fragmentation	138, 140
FRAME TYPE	105
FROM ADDRESS	137, 139
FROM NAME	137, 139
FUNCTION	76, 149
Function List (Administrator)	160
Function List (User)	76, 158
G	
GATEWAY	104
Group	
Creating	19
Deleting	28
Editing	22
Searching	30
GROUP NAME	19, 23, 32
GROUP NO. EDIT	22
GROUP NO. REGISTRATION	19
GROUP NUMBERS	75
Group Numbers List	75, 157
H	
HTTP	114
HTTP Network Service	114
I	
ID NAME	123
ID SORT	74
IMAGE DIRECTION	68
INITIAL SETUP	125
IP ADDRESS	104
IPX/SPX	105
IPX/SPX Protocol	105
J	
JOURNAL	143
K	
KEYWORD	8
KNOWN ID	14, 25, 30
L	
LAST NAME	8
LDAP Network Service	118
LDAP PROTOCOL	119
LINE SELECT	9
LINE-2 MODE	128
Line-2 Mode	127
LINE2 NUMBER	123
LIST	149
LOCAL	148
LOCATION	84
LOGON	110
M	
MAXIMUM COPIES	120
MEMORY TX	145
Message Properties	137, 139
MONITOR VOLUME	126
MULTI TX	145
N	
NAME SORT	74
NetBIOS NAME	110
NETWARE	107
NetWare Settings	107
NIC CONFIGURATION PAGE	149
NIC Configuration Page	159
NO AUTO IP	102
NOTIFICATION	86
O	
ORIGINAL MODE	68, 70, 72
OTHER	119
Output Limitations	62
P	
PAPER OF DIFFERENT DIRECTION ...	121, 150
PASSWORD SETUP	88
PCL FONT LIST	149
PCL Font List	176
POLLING	145
PREFACE	3
PRIMARY PORT NUMBER	115
PRINT COUNTER	36, 40
PRINT OUT DEPARTMENT CODES	47
PRINT OUT TOTAL COUNTER	38
PRINTER/E-FILING	150
PS3 FONT LIST	149
PS3 Font List	175
PWD	9
Q	
QUALITY TX	9
R	
Reception Journal	142
RECEPTION LIST	147
Reception List	147
Recovery Transmission	134
RECOVERY TX	134
REDUCTION	131
Reduction Printing	130
RELAY DESTINATION	146
RELAY ORIGINATOR	146
RELAY STATION	146, 148
REMOTE	148
REPORT SETTING	142, 144, 147
RESET ALL COUNTERS	49
RESET COUNTERS	60
RESOLUTION	70, 72
REVERSED DISPLAY	66

Reversed Display Mode	66
ROTATE SORT	133
Rotate Sort	132
ROTATION	72
RTI	71
RX JOURNAL	143
RX MODE	126
RX ONLY (24HR)	128
RX ONLY (TIMER)	129
RX PRINT	130, 132, 133
RX Printing	130

S

SCAN COUNTER	37, 42
Scan to E-mail	137
SEARCH ADDRESS	15, 26
SEARCH GROUP	31
SEARCH ROOT	108
SECONDARY PORT NUMBER	115
SEP	9
SERVICE PHONE NUMBER	84
SID	9
SINGLE/2-SIDE SCAN	72
SLEEP MODE	97
Sleep Mode	97
SMB	109
SMB PROTOCOL	110
SNMP READ COMMUNITY	119
SORT MODE PRIORITY	120
STATIC	104
Static IP Address	103
Storage Maintenance	136
SUB	9
SUBNET MASK	104
SUSPEND PRINTING IF STAPLER EMPTY	121, 150

T

TCP/IP	101, 102, 103
TCP/IP Protocol	100
TERMINAL ID	122
Terminal ID	122
Tip	3
TOTAL COUNTER	36
Total Counter List	154
Transmission Journal	142
TREE	108
TTI	71
TX JOURNAL	143
TX TYPE	9, 70
TX/RX	128

U

USER	
COPY	68
FAX	70
GENERAL	64
LIST	74
SCAN	72

W

WEEKLY TIMER	93
WINS PRIMARY	110
WINS SECONDARY	110

Version 1.0

TOSHIBA

**TOSHIBA TEC GERMANY
IMAGING SYSTEMS GMBH**

CARL-SCHURZ-STRASSE 7 · D-41460 NEUSS
TEL. +49(0)2131-12450, FAX +49(0)2131-1245402
WWW.TOSHIBA-EUROPE.COM/TEC

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>