

Welcome to your fax machine

- | | | |
|-----------------------------------|---|-------------------------------|
| A Cover | F Control panel lock | L Document tray wire |
| B Control panel | G Interface for Computer printer cable | M Document tray |
| C Document exit | H Document guides | N Telephone connection |
| D Exit tray wire | I Recording paper exit tray | |
| E Recording paper cassette | K Tray wire | |

- | | | |
|---|---|---|
| 1 LCD Display
Displays indications about the operating modes of your fax machine. Your control monitor for all function settings. | 9 Copy
Makes a copy of your original. | 17 RCV KEY
Switches between automatic and manual reception. |
| 2 Fault LED
Lights up if a malfunction occurs or to indicate paper out or toner out. | 10 Option
When document has been inserted into machine, press to select special settings for document transmission. | 18 Resolution Key
Changes the scan resolution of the loaded originals. |
| 3 Busy LED
Flashes or lights up when the fax machine connects to the line or is just transmitting or receiving. | 11 Start
Indicates the sending and receiving options, confirms entries. | 19 Input
Activates selected menu items and terminates data input. |
| 4 Job Status
Queries the status of the entered jobs. | 12 Stop
Clears error messages and terminates input. | 20 Direct transmit
Press this key to send the document directly from the document feeder (avoiding the stack memory). |
| 5 Menu keys
Use these keys to start the menu or select a particular menu item. | 13 Redial/pause
Activates the previously dialled number and inserts a dialling pause. | 21 Contrast
For adjusting the scanning of dark or light documents. |
| 6 Cancel key
Deletes jobs in the memory or deletes the last entry during programming. | 14 Handset
Used for on-hook dialling. | 22 TX report
The settings for printing out the TX report can be adjusted individually. |
| 7 Group
Use this key for group selection. | 15 Dial Keypad
Used for entering telephone numbers. | 23 ON LINE
Lights up to indicate data being transmitted from the PC. |
| 8 One Touch Dialing keys
Sends documents at the push of a button. | 16 ABB. DIAL /ALPHABET
Press this key in order to select a stored alphabet dial number or a name. | |

Contents

Preparation

Unpacking	4
Remove transport fittings:	5
Insert process unit	5
To make a good impression: a new toner cartridge	6
Insert recording paper	7
Make connections:	8
Install recording paper tray	8
Insert memory card	9
Safety instructions	9

Installation

The menu system	10
Set language	11
Enter terminal ID	12
Enter the user name	13
Setting dialling method	14
Connection to PABX, obtaining a public line	15
Connection to PABX, further settings	17
Set date and time	18

Reception of documents

Manual reception	19
Automatic reception	19
Set standby mode	19
Telephone/fax switch	20
Fax/TAD switch	20
Setting the TAD time	21
Set remote reception (manual reception)	22
Reception reduction	23
Local copy	24
Set call counter	25
Memory reception	25
Cancel reception	26

Transmit documents

Document format	27
Stack mode	28

Direct transmission	29
Automatic fax messages	30
Transmission with alphabet dialling	31
Transmission with one-touch dialling	31
Transmission with telephone (manual transmission)	32
Long Dialling	32
Transmission with directory function	33
Monitoring	34
Set resolution	35
Redial	35
Delayed transmission	36
Single multi-address transmission	37
Stored broadcast	38
Polling	39
Reserve polling	40
Reduce transmission speed	41
Stop transmission	42

Store numbers

Alphabet dial memory	43
One-touch dial keys	45
Group keys	45

Report prints

Activate printing report	48
Transmission report	48
Transmission and reception journal	49
The multitransmission report	50
Number list	50
Group list	50
Jobs in progress	50
The function list	51

Advanced settings

Functions	52
Connection to PABX	56
Receive footer on/off	56
Change speaker volume	57
Adjust ringing tone/key beeps	58
Set transmission report output	59

Temporarily activate TX report	60
Remote maintenance (COMLINE)	60
Power saver	61
Switch off error correction	62

Possible problems

Error codes in journal	63
Error messages in the Display	64
Transmission problems	65
Receiving problems	66
How to clear a paper jam	67
How to clear a recording paper jam... ..	67

Handling faxes on your PC

System requirements	68
Features	68
Connection to the PC	68
Scanning documents into the PC	69
Sending fax messages from the PC	69
Sending faxes to the PC	70

Your fax machine used as a PC Printer

Introduction	71
Connection to the PC	71
Install printer driver	72
Settings of the printer driver	74
Printout	76
Delete printer driver	77

UK Connection information

EPA ENERGY STAR	78
Reset	78

Index

Index	79
-------------	----

Preparation

 
Unpacking

When unpacking your machine, please check that all parts shown here are present and in perfect condition.

1. Fax machine




8. Cleaner



2. Power cable




9. Local language label

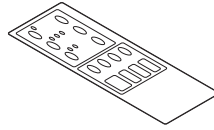


3. Telephone cable
(not supplied in all countries)




10. One-touch dialling index

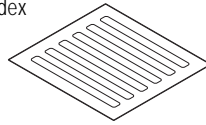

 
4. Instruction manual-
fax machine
PC printer manual




11. Document exit tray
(with wire)

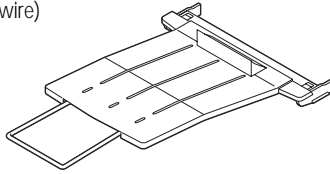


5. Process unit and toner
cartridge

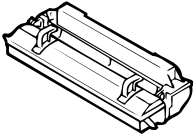


12. Recording paper exit
tray (with wire)

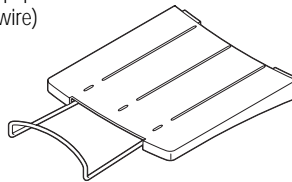

 
6. Fixer cleaner



7. Program disk with
Windows™ printer
driver

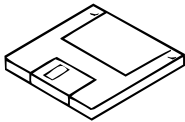

 13. Wire for document tray



The correct location
for your fax machine is:

- near a 230 V AC socket*,
- near a telephone connection, ideally with a single line reserved for your fax machine.

* No other equipment with high power consumption (such as a photocopier) or equipment which generates electrical noise (such as a radio, computer, radio transmitting and receiving equipment) should be connected to this mains supply.

AC power

You will find the mains connection on the back of the machine.

Please protect your machine from:



vibration



 
direct
sunlight



dust



humidity




heat

If anything is missing, or damaged,
please contact your dealer immediately.

Preparation

Remove transport fittings:


Transport fitting

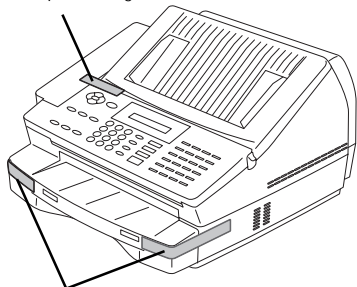

Transport fittings


Before you start to use your fax machine, please remove all transport fittings as illustrated.

Transport fittings

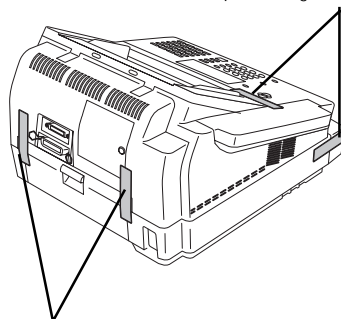

Transport fittings

Insert process unit:



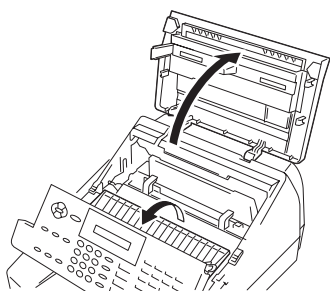


In order to transport or move the machine the toner pack and the process unit has to be removed.

When installing the machine for the first time and later when CHANGE PROC. UNIT is displayed, insert the new process unit as described below.



Open the control panel and housing cover as illustrated.

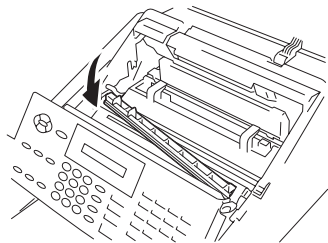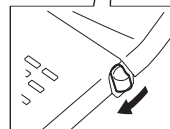
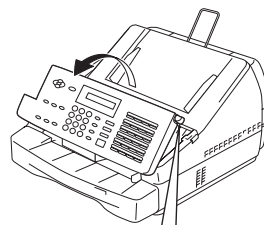


1. The fixer cleaner

This is inserted when installing your machine for the first time and each time the process unit is replaced:

Open the control panel cover to the front. Slide the cleaner underneath to the right, lift and remove.

Insert the new cleaner first on the right, then press down firmly on the left.

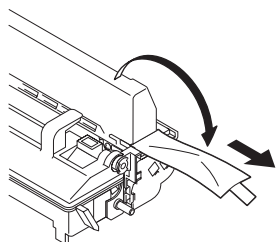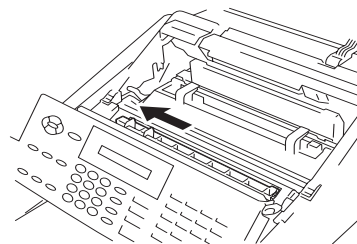


2. Prepare the process unit

Place a sheet of paper on an even surface and lay the process unit on this. Remove the seal. When holding the protective foil, be sure to avoid contact with any toner.



The print volume achieved with the first filling of the toner cartridge is less than that achieved with subsequent fillings.

Preparation


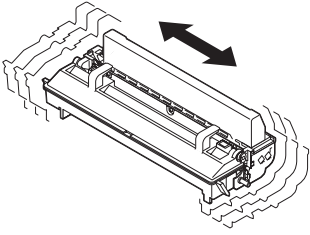


Shake the process unit

several times side to side to ensure even spread of toner...

... insert the process unit

First slide the green lock lever on the inside left of the machine to the back. The process unit is then inserted with its pins into the lateral guides and placed exactly in position by applying slight pressure downwards. Now pull the lock lever forward again.

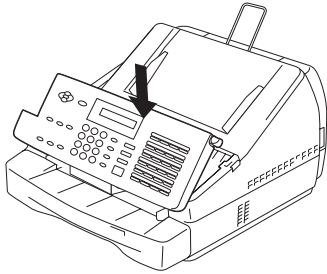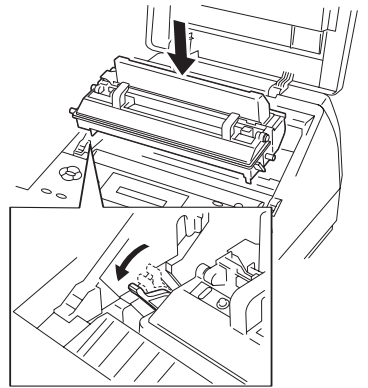

Then close the top cover and the control panel cover again. Now (re)connect your fax machine to the socket.



A damaged drum will affect the copy quality. Therefore: Never touch the drum surface or expose the drum to sunlight.

To make a good impression: a new toner cartridge



After printing many pages, TONER NEAR EMPTY and later TONER EMPTY appear on the display. This means you must insert a new toner cartridge in your fax machine:

Open the top cover.

Don't forget: First remove the mains plug from the socket.



To replace toner:

Slide the green lock lever on the left side of the machine to the back and remove the process unit.

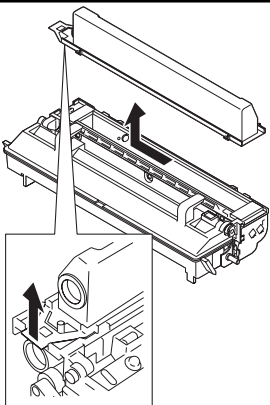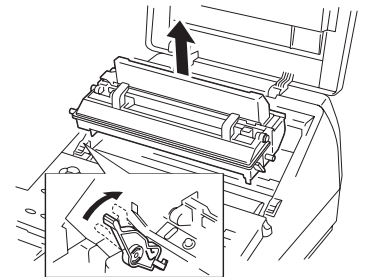


Place the process unit on a piece of paper on an even surface. Lightly tap on the toner cartridge to prevent any toner residue falling into the process unit. Pull the tape on the toner cartridge upwards before you slide it out of its holder.

First shake the new cartridge...

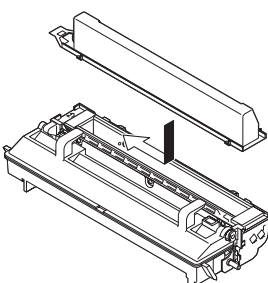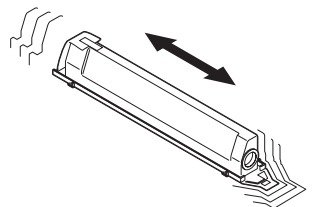

... then place on top of the process unit and slide it until it locks into place.

Preparation

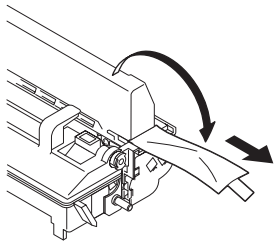

Now: remove the seal.



When holding the protective foil, be sure to avoid contact with any toner residue.
Now shake the process unit several times horizontally before you..

... install the process unit again.

Insert the pins into the lateral guides and then, by applying slight pressure, lower the unit into the correct position.

Now pull the lock lever forward again.

Never allow hair or dust to get into the process unit as this will block the proper supply of toner.

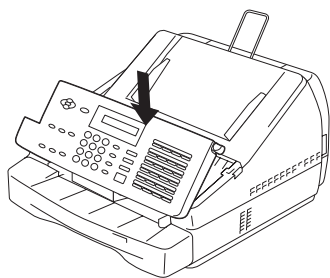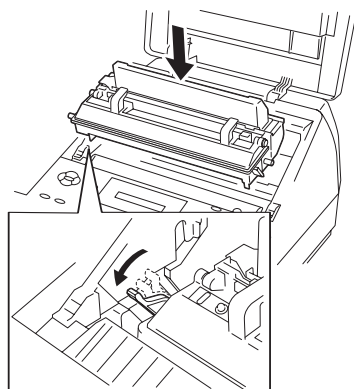

Then close the top cover and the control panel cover.

You can now connect your fax machine to the mains again.

From time to time:


clean the housing




Never using abrasive materials to clean your fax machine - the could cause damage.

Insert recording paper

Remove the paper cassette

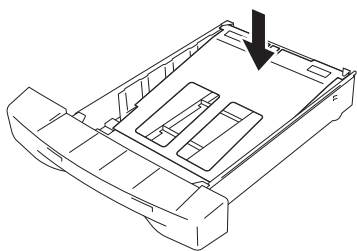

Press down the cassette plate until it locks into place.

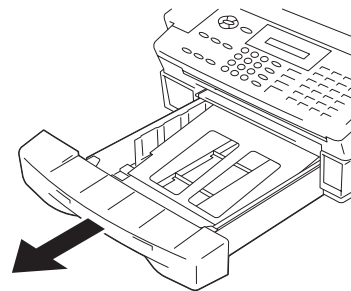


Insert a stack of A4 paper

Prepare the recording paper by flexing and fanning out the stack to separate the sheets.

Place the paper so that it lies straight in the cassette with the side to be printed face-down and don't forget:




The paper cassette holds a maximum 250 sheets (80 g/m²).

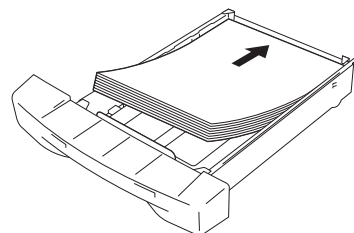

Then: Slide the cassette into the slot until you hear it lock into place.



Do not use damp, wrinkled or torn paper.

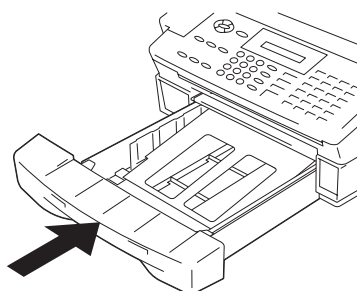

Preparation


Install recording paper tray

Recording Paper Exit Tray:



Insert the Recording Paper Exit Tray Wire into the holes on the Recording Paper Exit Tray, then pull down.



The following steps may be performed more easily with the Recording Paper Cassette removed from the facsimile machine.

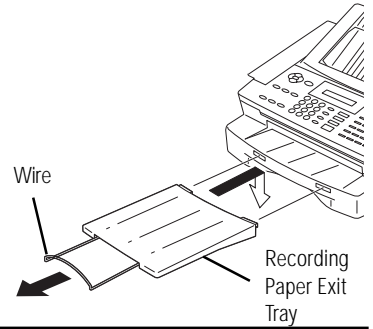

Install the Recording Paper Exit Tray underneath the Recording Paper Cassette.

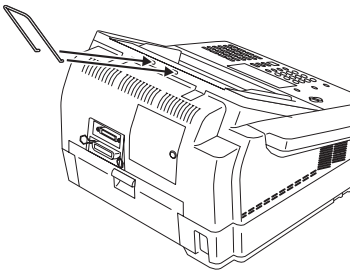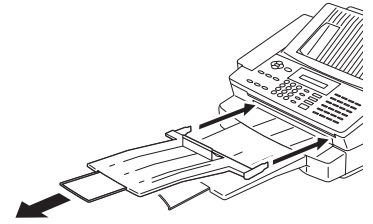

Document Exit Tray:


Insert the Document Exit Tray into the Recording Paper Exit opening.

Flip out the folded Tray Wire as shown.

Make connections:

Telephone connection

Connect your fax machine (LINE) to the telephone socket.

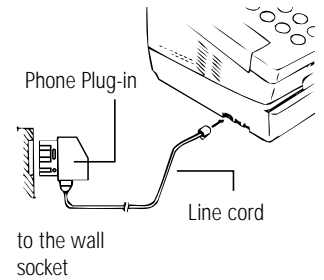


Connecting the AC power

The power connector is located on the rear right of the machine.



Connect the machine to the mains only after you have installed the process unit and the fixer cleaner.

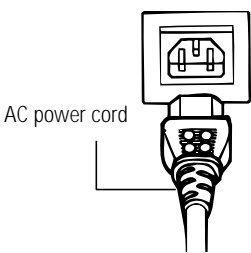

Preparation

Insert memory card

1. Pull the plug out of the mains socket.
2. Remove the cover for the memory module (on the rear of the FAX machine) by loosening the retaining screw.
3. Press the retaining lug into the hole on the motherboard.
4. Position the memory expansion on the connector of the motherboard and press carefully until it snaps into place.
5. Close the cover of the memory module and tighten the retainer screw again.

Safety instructions



When your fax machine is open, always keep the following in mind:

- Do not touch any parts inside the fax machine other than those described here. The fixer cover can be very hot - even after the machine has been switched off.
- You should install the process unit as quickly as possible as exposure to strong light can damage the drum and reduce the life of the process unit.
- Never throw old toner cartridges into an open fire and ensure proper disposal of packing from exchanged parts as organic waste.
- Wash hands in cold water and clean thoroughly with soap.
- Wash eyes with plenty of water.
- If you have inhaled toner, breathe deeply in the open air.
- If toner gets in your mouth, wash it out with plenty of water.
- In an emergency, call a doctor.

In case you come into contact with toner:

Installation

The menu system

You fax machine has a wide range of settings. The various settings are presented to the operator via a menu system in the display.

A special group of keys is used for activating the menu and also for navigating within the various menu levels:



The ▲ - key activates the menu and moves up through the menu

The ▼ - key moves down through the menu

The ► - key selects the corresponding submenu level.

The ◀ - key selects the higher menu level.


As soon as a menu item is displayed, use the ENTER key to select the corresponding function.

Use the following example to get to know the menu system: The machine prints out the **menu list** with the complete menu structure of your fax machine.

*) Instead of using the ENTER key, you can alternatively also use the START key



The fax machine automatically switches over to the standby mode if the pause between entries is longer than one minute. In this case, entered data are NOT stored.

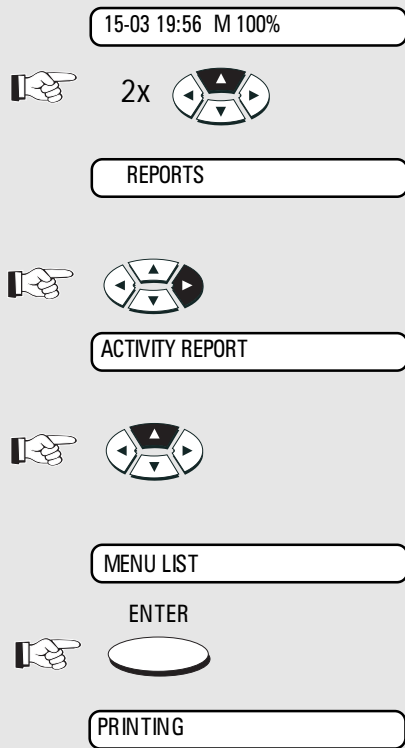

Standby mode

Page through the menu...

...until you reach this menu item

Select submenu

Page through the menu...

...until you reach this menu item

Confirm with ENTER *)

Menu list is printed out

Installation

Set language

Your fax machine is set to English. Please carry out the following menu steps if you wish to use another language for the menu and the list prints.

	Standby mode
	Start the menu
	Select submenu (2x)
	Make your selection
	Enter function number
	Confirm with ENTER
	Set language
	Page through the menu...
	...until you reach this menu item
	Confirm with ENTER
	Press STOP, return to standby mode


Installation

Enter terminal ID

The terminal ID which is part of the transmitting header contains the number under which your fax machine can be reached. The number should be entered in the international format:

Example:

+ 44 1932 12345678

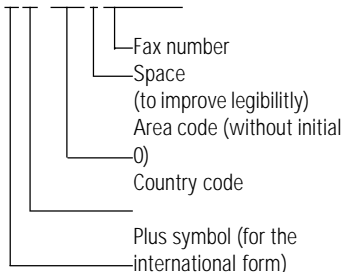

To enter the characters:

Character	Key to be pressed
+	*-key
Hyphen	► - key

Enter the actual figures via the dial keypad (as usual).



If you have entered a wrong number, you can delete this number by means of the **CANCEL** key.



In Germany, the terminal ID entry is mandatory!

Standby mode

Start the menu

Select submenu

Page through the menu...

...until you reach this menu item

Confirm with ENTER

Make your selection

Enter the terminal ID
(see Infotext)

Terminal ID is complete

Confirm with ENTER

Press STOP, return to standby mode

Installation


Enter the user name

The transmission header not only contains the terminal ID but also the user name. This can contain up to 20 characters. Each digit features several characters which can be activated by repeatedly pressing the corresponding key. If you have found a character of your choice, press the „►“ key to get to the next position. Use the „◀“ key to get back one letter and make any corrections. Use the „0“ key to select special characters. If you enter too many characters, press the CANCEL key to delete the unwanted characters.

When the name is complete, press the

ENTER-key.

Example: TOSHIBA

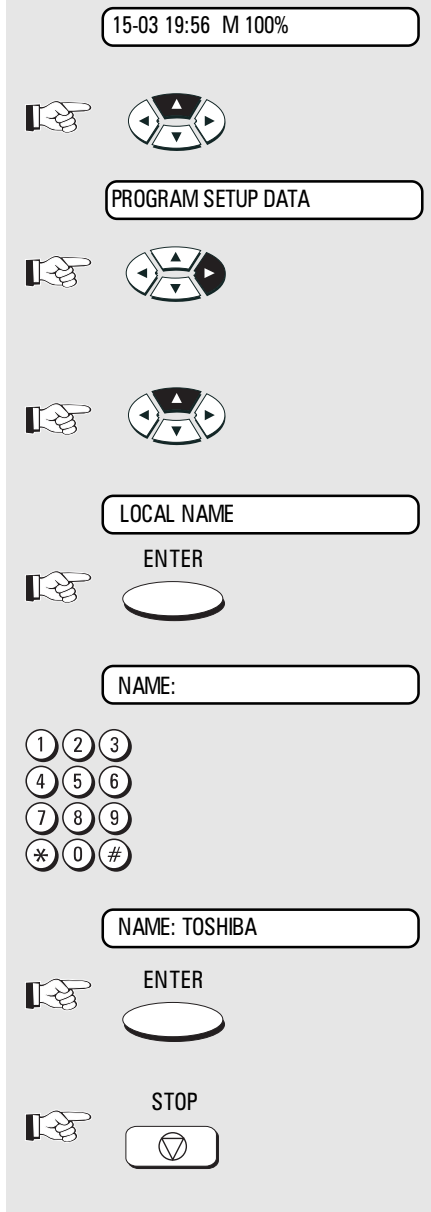

Standby mode

Start the menu

Select submenu

Page through the menu...

...until you reach this menu item

Confirm with ENTER

Make your selection

Enter the name

Example: TOSHIBA

1 x 8 = T # 3 x 4 = I #

3 x 6 = O # 2 x 2 = B #

4 x 7 = S # 1 x 2 = A

2 x 4 = H #

Name is complete

Confirm with ENTER

Press STOP, return to standby mode


Installation

Setting dialling method*

There are two dialling methods. The pulse-dialling method is normally used in the public switched telephone network. If your fax machine is connected to a PABX*, the DTMF dialling method may also be used. As the public network is modernised, this dialling method may also be used in the public network. If you are in any doubt, first try the pulse-dialling method (basic setting).

If the dialling procedure fails, try DTMP dialling. How ever DTMF is the most efficient.

*) This function may not be available in machines in certain countries.

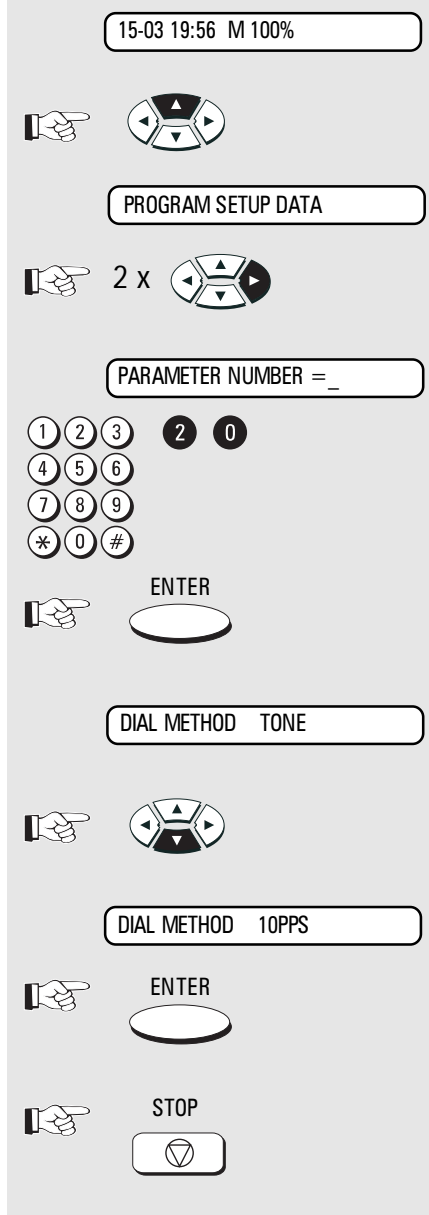

Standby mode

Start the menu

Select submenu (2x)

Make your selection

Enter function number

Confirm with ENTER

Set dial method
Example: Tone

Page through the menu...

...until you reach the desired menu item
Example: 10PPS

Confirm with ENTER

Press STOP, return to standby mode


Installation


Connection to PABX, obtaining a public line

The TF 610 can be connected not only to the public switched telephone network (public line) but also to a PABX. In this case, additional parameters have to be entered.

With PABXs, the public line is obtained in various ways:

- **Number** Dial one digit (or several digits) in order to obtain the public line
- **Earth key** Earth potential is connected to the voice wire(s) in order to obtain the public line
- **Flash key** With this method of obtaining the public line, the connection circuit is interrupted briefly.


 When the method of obtaining a public line has been entered, you must always press the key "*" before the actual number when you dial your fax partner. This is also applicable for saving the fax numbers (see page 43).

 If you have problems if your machine is connected to an extension, please read the "Comments concerning connection to PABXs" under "Further settings" (page 56).

	15-03 19:56 M 100%	Standby mode
	PROGRAM SETUP DATA	Start the menu
	PARAMETER NUMBER = _	Select submenu (2x)
	ENTER	Make your selection
	ACCESS OFF	Enter function number
	Confirm with ENTER
	ENTER	Set public line
	STOP	Page through the menu... Public line Flash: Flash function Public line Earth key: Earth key function Public line Digit: Code (see next page)
		...until you reach the desired menu item
		Confirm with ENTER
		Press STOP, return to standby mode

Installation

Only with CODE setting

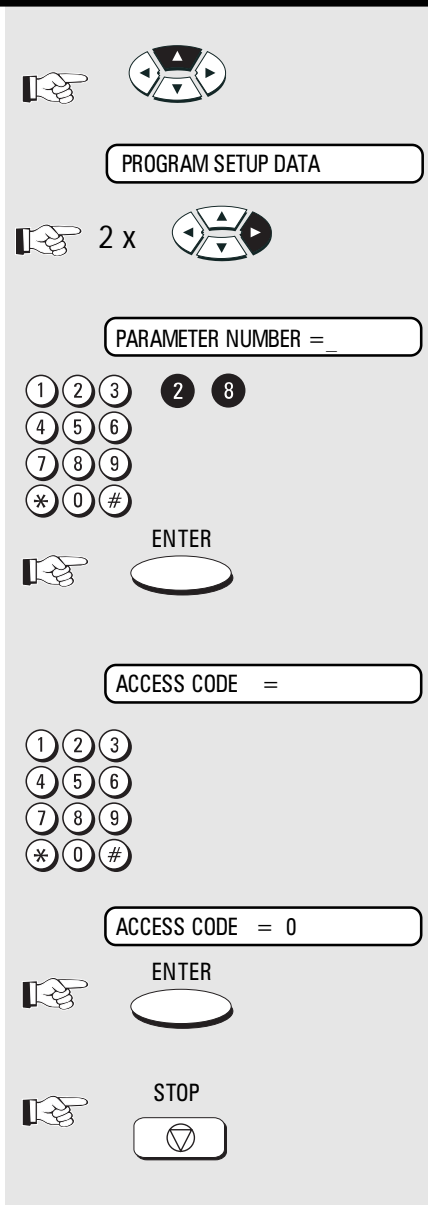

Start the menu

Select submenu (2x)

Make your selection

Enter function number

Confirm with ENTER

Make your selection **CODE**

Enter the code(s)
(Example: 0)

...until you reach the desired menu item

Confirm with ENTER

Press STOP, return to standby mode

Installation

Connection to PABX, further settings

If you wish to connect your fax machine to a PABX, further settings are necessary. The following menu procedure sets default values for connecting a fax machine to PABXs. If the machine does not operate perfectly, please refer to [page 56](#) for explanations concerning connection to PABXs.

The diagram illustrates the menu navigation process for PABX connection. It starts with a hand icon pointing to a four-way directional pad. Below it, a rectangular display shows "PROGRAM SETUP DATA". A hand icon points to the directional pad again, with "2 x" next to it, indicating two presses. The display then shows "PARAMETER NUMBER = _". Below this is a numeric keypad with buttons 1-9, *, 0, and #. A hand icon points to the "2" button, and the display shows "2". Another hand icon points to the "5" button, and the display shows "5". A hand icon points to an "ENTER" button, and the display shows "LINE = PUBLIC LINE". A hand icon points to the directional pad, and the display shows "LINE = PBX". A hand icon points to the "ENTER" button. Finally, a hand icon points to a "STOP" button with a stop symbol, and the display shows a stop symbol.

Start the menu

Select submenu (2x)

Make your selection

Enter function number

Confirm with ENTER

Current setting



The fax machine waits for the dial tone sent by the exchange before dialling starts.

Page through the menu...

...until you reach the desired menu item



The setting INIT WAIT X SEC involves a pause of X seconds before dialling starts. The fax does **not** check the presence of a dial tone.

Confirm with ENTER

Press STOP, return to standby mode

Installation

Set date and time

Enter the current date and time at this point so that all details relating to date and time is correct. The internal clock of your fax machine then runs automatically - even in the event of a power failure.

15-03 19:56 M 100%

PROGRAM SETUP DATA

4 x

DATE & TIME

ENTER

DD-MM-YY HH:MM

1 2 3
4 5 6
7 8 9
* 0 #

15.03.98 19:56

ENTER

STOP

Standby mode

Start the menu

Select submenu

Page through the menu...

...until you reach this menu item

Confirm with ENTER

Make your selection **date & time**

Enter date and time

Example: March 15th, 19.56 hours

Confirm with ENTER

Press STOP, return to standby mode

Reception of documents

Set standby mode

If your fax machine is connected to the PSTN or the PABX, there are four different ways of receiving documents.

The standby mode is indicated with the AUTO LED. Press the AUTO key to change between two different reception modes (these are indicated by the AUTO LED):

AUTO lamp on:


The following reception modes can be alternatively set by individual setting of **function 38** (see page 52 et seq.):

- Fax reception mode
- Telephone/fax mode
- Fax/TAD mode

AUTO lamp off:
Manual reception

Manual reception

If the line is used primarily for telephone traffic

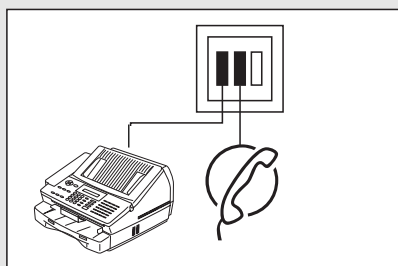

The call must be accepted manually; the fax machine is not activated when the line rings. If you wish to transmit a document, you must press the START key of the fax machine.



Ensure that any fax calls can indeed be accepted; it is always necessary to press the START key.

Press the AUTO key.


 LED "AUTO" off

Automatic reception

Key functions:

- **Function 37**
Number of rings before the fax machine picks up the call (1-10)
- **Function 38**
Setting of automatic reception

If the line is reserved exclusively for fax operation.

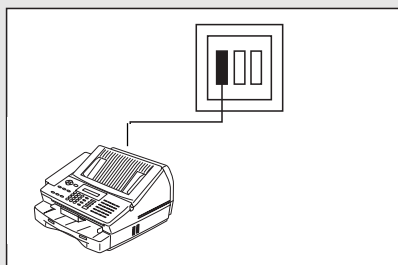


The fax machine switches over to reception as soon as the line rings (see page 25).



The fax machine is always activated, even if the call is initiated by a voice partner.

Press the AUTO key.

 LED "AUTO" is lit

Reception of documents


Telephone/fax switch

Key functions:

- **Function 38**
Setting of telephone/fax switch
- **Function 37**
Number of rings until the fax machine picks up the call (1-10)
- **Function 36**
Number of rings (synthetic ringing tone) from the loudspeaker (1-10)

Press the AUTO key.

If the line is used for telephone and also for operation and if you are usually present in the same room.

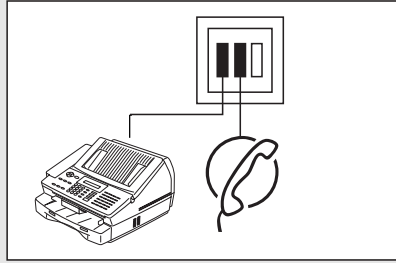

LED "AUTO" is lit

Incoming calls are automatically distinguished between fax- and voice calls:

If the call is a voice call the fax rings via the loudspeaker to notify the user. At this time the caller will hear a Ring which indicates that the partner is being called.

In this case take up the handset and press STOP on the fax machine.

If the call is from another fax machine the document will be received automatically without ringing.



Ensure that there is always someone present in this mode to accept the call. As soon as ringing tone is generated, the connection is established and the caller incurs charges.

 

Fax/TAD switch

Key functions:

- **Function 38**
Set the fax/TAD switch
- **Function 44**
Specify the time in which the fax machine identifies a partner fax (TAD timer / 1-99 sec.)

Press the AUTO key

If the line is operated with a TAD or radio telephone and if you wish to collect the call from other rooms.

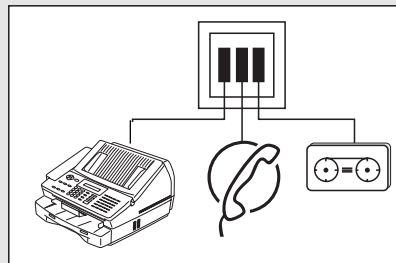

LED "AUTO" is lit

This mode enables you to receive incoming fax messages and also to answer telephone calls. There are two situations:

You are present:

Switch off the call answering equipment and collect the call at any point. If the caller is a fax machine, your fax machine will take over the call and print out the fax message.

You are absent:

Switch on the call answering equipment. The call answering equipment records all telephone calls. Your fax machine automatically receives any incoming fax messages.



You must always ensure that the TAD is connected in this reception mode. Otherwise, fax messages cannot be received when the line is called.

Reception of documents

Setting the TAD time

If you wish to use your fax machine in the fax/TAD mode, you also have to set the TAD time.

This is the "listening-time" during which the fax machine responds to a partner fax.

TAD time = length of recorded message + 10 seconds.

15-03 19:56 M 100%

Standby mode

Start the menu

PROGRAM SETUP DATA

Select submenu (2x)

PARAMETER NUMBER = _

Make your selection

Enter function number

ENTER

Confirm with ENTER

FAX/TAD TIMER = 35

Set TAD time

Enter the new time

ENTER

Confirm with ENTER

STOP

Press STOP, return to standby mode

Reception of documents

Set remote reception (manual reception)

If you have connected a (cordless) telephone to your fax line (as described on [page 19](#)), you may occasionally collect a call (in the manual reception mode) which was meant for your fax machine. This can for instance be heard in the form of periodic whistle. Enter a two-digit code in your telephone (only DTMF) to activate your fax machine (virtually by remote control).

This function can be activated or deactivated:

15-03 19:56 M 100%

PROGRAM SETUP DATA

2 x

PARAMETER NUMBER =_

1 2 3 4 1

4 5 6

7 8 9

* 0 #

ENTER

RMT ACTIVATION OFF

RMT ACTIVATION ON

ENTER

PARAMETER NUMBER =_

1 2 3 4 2

4 5 6

7 8 9

* 0 #

ENTER

ACTIVATION CODE =**

1 2 3

4 5 6

7 8 9

* 0 #

ENTER

STOP

Standby mode

Start the menu

Select submenu (2x)

Make your selection

Enter function number

Confirm with ENTER

Set remote reception

Page through the menu...

...until you reach the desired menu item

Confirm with ENTER

Make your selection

Enter function number

Confirm with ENTER

Preset key code

Enter the 2-digit key code
(Delete the preset code with the CANCEL key)

Confirm with ENTER

Press STOP, return to standby mode

Reception of documents

Reception reduction

Your fax machine uses A4 paper. For technical reasons the entire length of this page cannot be used. So the fax machine reduces the length of the incoming document. This means that the received image may be slightly compressed. In general, this effect is not problematical. However, if the sizes of the documents must be absolutely identical, it is necessary to deactivate the **reception reduction** facility. In this case, that part of the copy which no longer fits on the page is printed out on a second page.

Original (A4)



Reception reduction:

ON



15-03 19:56 M 100%

Start the menu

Select submenu (2x)

PARAMETER NUMBER = _

Make your selection

Enter function number

CONFIRM WITH ENTER

RX REDUCTION AUTO

Current setting

Change setting

RX REDUCTION OFF

CONFIRM WITH ENTER

STOP


Press STOP, return to standby mode

Reception of documents

Local copy

You can use your fax machine to make one or more copies (up to 99).

*) The copy is reduced to 96% due to technical considerations.

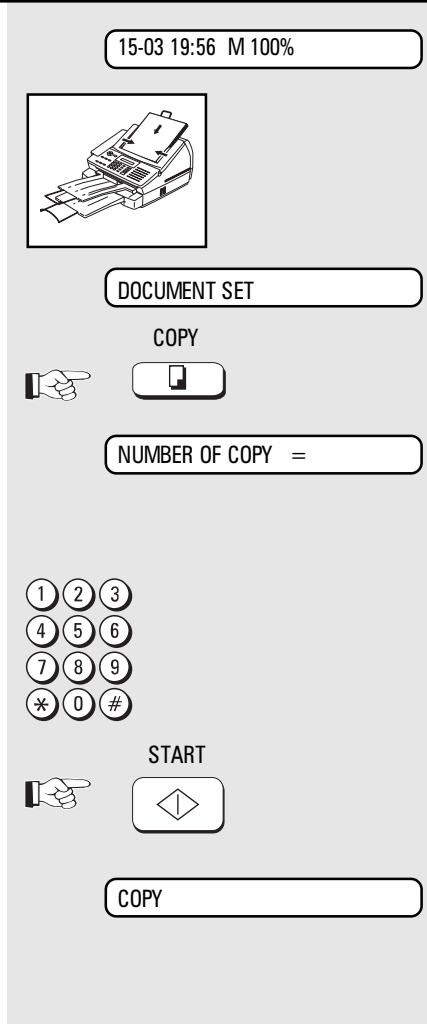

Standby mode

Load original

Remember:
Printed side face down

Document ready

PRESS COPY KEY

Make your selection
(if only one copy is to be made, please
now press the START key)

Enter number of copies

Confirm with START

Copies are printed *)
The FINE resolution is used for the copy. If
you wish to copy a photograph or a
colour document, please select the
PHOTO resolution (see page 35).

Reception of documents

Set call counter

If your fax machine is set to automatic reception (FAX, TEL/FAX, [see page 20](#)), it will switch on as soon as it is called. Under these circumstances, it is thus not possible for the call to be intercepted by the telephone.

However, it is possible for your fax machine to be set in such a way that - in the event of a telephone call - it is activated after a specific delay. The call counter is used for this purpose. You can use this facility to set the number of incoming calls (max. 10) before the fax machine connects to the line.

	<p>15-03 19:56 M 100%</p>	<p>Standby mode</p>
	<p>PROGRAM SETUP DATA</p>	<p>Start the menu</p>
	<p>2 x</p>	<p>Select submenu(2x)</p>
	<p>PARAMETER NUMBER = _</p>	<p>Make your selection</p>
	<p>3 7</p>	<p>Enter function number</p>
	<p>ENTER</p>	<p>Confirm with ENTER</p>
	<p>AUTO DELAY 01</p>	<p>Set number of rings</p>
	<p>/</p>	<p>Page through the menu...</p>
	<p>AUTO DELAY XX</p>	<p>...until you reach the desired value</p>
	<p>ENTER</p>	<p>Confirm with ENTER</p>
	<p>STOP</p>	<p>Press STOP, return to standby mode</p>

Memory reception

Under certain circumstances, the machine cannot print out any further incoming copies:

- If there is no recording paper
- If there is a paper jam

In order to prevent problems with reception, the remaining pages are buffered in the memory of your fax machine. Once the problem has been solved, the document is printed out automatically.




Do not switch off the power supply as otherwise the contents of the memory will be lost.

	<p>ADD PAPER M 86%</p>	<p>No paper, memory full</p>
	<p>ERROR flashes</p>	<p>Paper out</p>
	<p></p>	<p>Incoming copy is printed out</p>

Reception of documents

Cancel reception

It is not immediately evident whether your fax machine is transmitting or receiving a document, as the BUSY lamp does not provide specific information in this respect. Press the CANCEL key to display the job currently being processed by the fax machine.

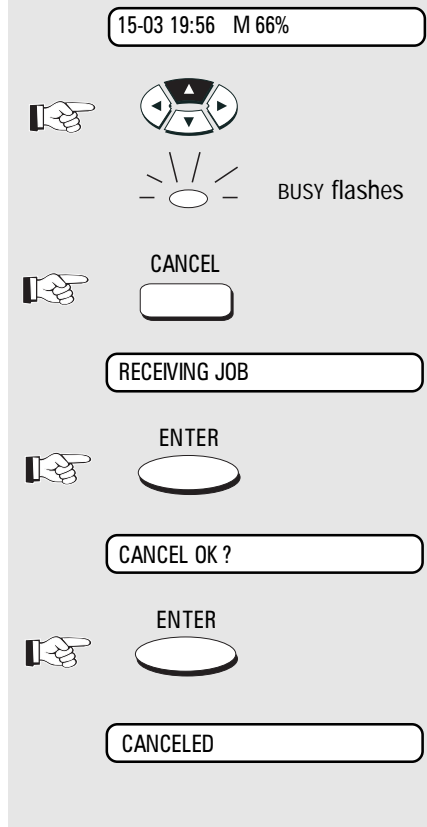

Standby mode

The fax machine is in the transmission or reception mode

Press CANCEL

Display message indicates current reception

Confirm with ENTER

Are you sure?

Confirm with ENTER

Current reception is cancelled

Transmit documents

Document format

The following table gives you an idea of which documents your fax machine can handle.

Please note:

- Documents longer than 381 mm can only be loaded manually.
- If you load several sheets at one time, they should all be of the same size and paper quality.

	Single sheet	2 or more sheets
Document size (max)	216 mm (W) x 1000 mm (L)	216 mm (W) x 381 mm (L)
Document size (min)	148 mm (W) x 105 mm (L)	
Effective scanning width	210 mm	
How many sheets can be loaded at one time?		stacks up to 20 sheet A4
Thickness of paper	0,05 ~ 0,15 mm	0,06 ~ 0,1 mm
Quality of paper	Uncoated on both sides	

Problem documents ...



May not feed. This applies to

- torn, wrinkled or damp pages
- folded pages or pages with holes
- transparent pages or pages with a smooth, shiny finish
- textile or metallic documents

There are two ways of avoiding this problem:
... **by photocopying or using a carrier sheet.**




Your TOSHIBA dealer can supply you with the necessary carrier sheets.

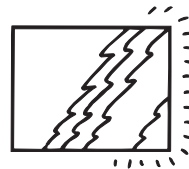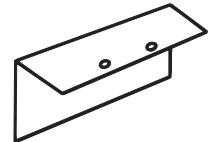

Use of carrier sheets:

Place your document face-up on the carrier sheet under the transparent cover. Carrier sheets can be used like normal documents except for one restriction: only one carrier sheet can be fed at one time.

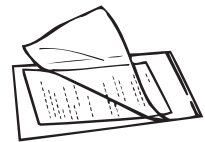


How to load documents correctly

Remove any paper-clips, staples and similar objects before transmitting the document. Now place your documents on the document tray - up to 20 at one time - as shown.




All documents must be located with the printed side face down!

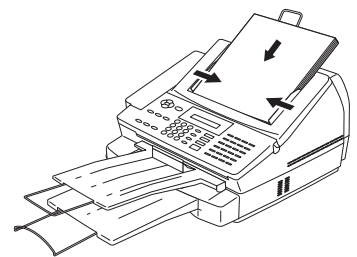

Transmit documents

Stack mode

A frequently encountered problem with fax machines is that the document tray is blocked while a document is being transmitted; no other documents can be transmitted while the fax machine is transmitting or receiving documents. This is different with your fax machine: All documents are read into the memory and are then transmitted from this memory. Incoming documents are also read into the memory before they are printed out. The advantage of this method is that the document tray is virtually always free and that documents can be transmitted almost irrespective of the transmission or receiving status of the fax machine. Each procedure is known as a job. A job may consist of one or more documents which you can transmit to your partners. A job can also be a multi-address transmission or a delayed transmission. Your fax machine is able to manage 15 such jobs. Each of these jobs is placed on a stack, from where they are processed in sequence. Your fax machine accepts jobs even while it is transmitting or receiving documents; this means that the document tray is always ready. With every procedure, the fax machine assigns a reference number to the job; this number is available via the job list (see Page 50). This number can also be used for deleting a specific job.

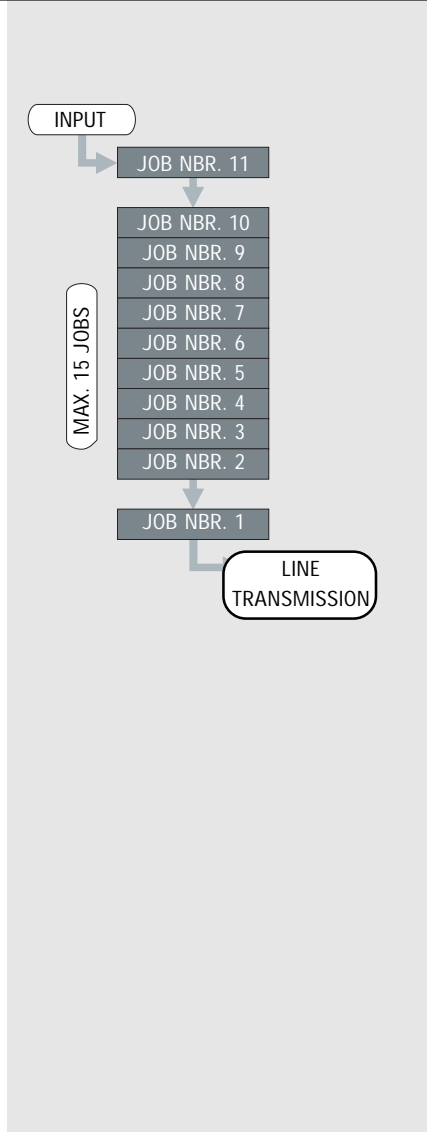


Transmit documents

Direct transmission

In the normal transmission mode your fax machine reads all documents into the memory before they are transmitted. If the documents are too large for the memory or if you have too many documents, you can also send directly from the document tray without reading the documents into the memory.



If you find that the memory is frequently too small, ask your dealer for a memory expansion!

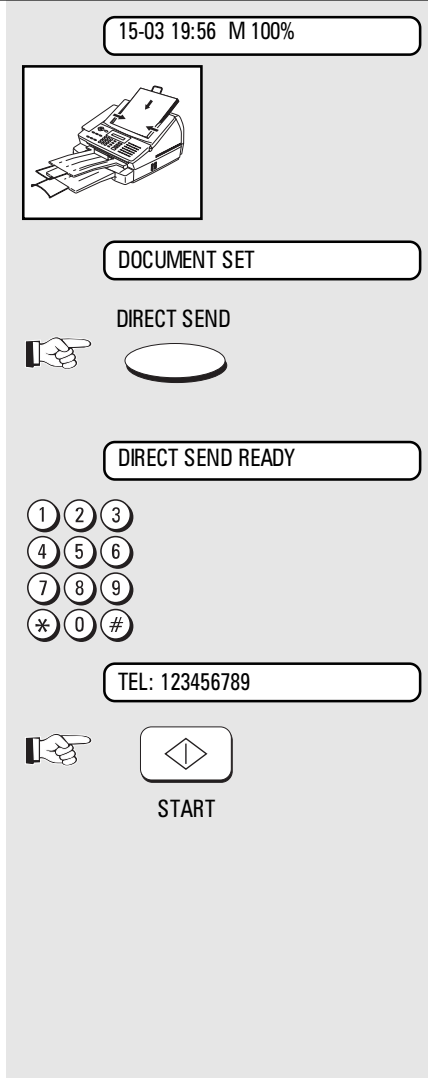

Load original
Remember:
Printed side face down

Document ready

Press DIRECT SEND

Enter fax number
or enter alphabet dialling or one-touch
dialling

Confirm with START

Document is transmitted

Transmit documents

Automatic fax messages

To send fax messages in the traditional manner: Insert document(s), enter the fax number and the connection is automatically established.


Your benefit: Your documents will leave the fax immediately. (Refer to [page 28](#)) If you decide to use the listening-in version (see [page 34](#)), you can also acoustically monitor the call establishment process. This is useful whenever you have problems with establishing a connection. The reason is frequently a wrong number, or a fax machine which is not ready to receive.



With the listening-in alternative, the document is **not** read into the memory; it is retained on the tray until the receiving fax machine has been contacted.



Residual memory depends on the size of the stack!

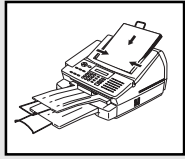



15-03 19:56 M 100%

DOCUMENT SET

1 2 3
4 5 6
7 8 9
* 0 #

TEL: 123456789


START



DOC.READING M98%

JOB ACCEPTED NO.007

15-03 19:56 M 98%



— LINE flashes

15-03 19:56 M 100%

Load original

Remember:
Printed side face down

Document ready

If you have inadvertently taken the wrong document, press the STOP key before removing the document from the document feed.

Enter fax number

The entered fax number is displayed. Use the CANCEL keys to make any corrections, or press the STOP key to delete the complete number. Press the STOP key again if you wish the machine to eject the document(s) without being processed.

Confirm with START

While the document is being read: current memory capacity is displayed.

When the document is read into the machine, the job number is briefly displayed.

Dialling the fax partner



The flashing LINE lamp always indicates when your fax machine is transmitting or receiving a document.

After transmission:

Change to standby display: the job is deleted from the stack memory (can be identified by means of the changed memory display).


Transmit documents

Transmission with alphabet dialling

Alphabet dialling enables you to enter a double-digit "address" instead of the (frequently-long) fax number of your partner. The real fax number is permanently stored under this "address". The alphabet dialling facility enables you to save time with frequently used fax numbers.



Please refer to [page 43](#) for details of how to save alphabet dialling numbers.

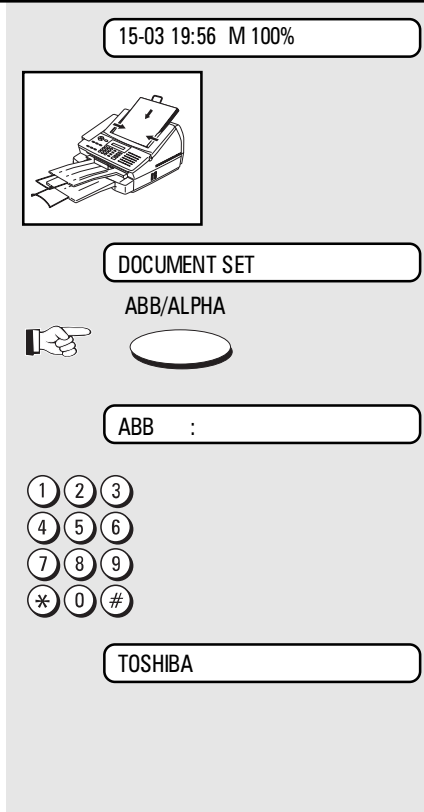

Load original
Remember:
Printed side face down

Document ready

Activate the alphabet dial facility

Make your selection: alphabet dial number

Enter the alphabet dial number

The name is displayed


The connection is established (for procedure, see [page 30](#), Automatic fax transmission).

Transmission with one-touch dialling

One-touch dialling provides you with a very easy method of dialling the number of your partner. You can assign any fax numbers to 18 keys. You need to press a key only once in order to reach your partner.



Please refer to [page 45](#) for details of how to store one-touch dialling numbers.

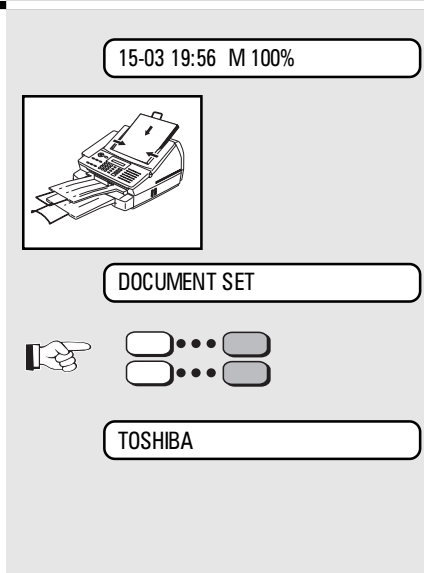

Load original
Remember:
Printed side face down

Document ready

Press a one-touch dial key


The name is displayed

The connection is established (for procedure, see [page 30](#), Automatic fax transmission).

Transmit documents

Transmission with telephone (manual transmission)

The call in this case is established with a telephone which is additionally connected to the wall socket. You can thus speak to the other party before you send the fax message.

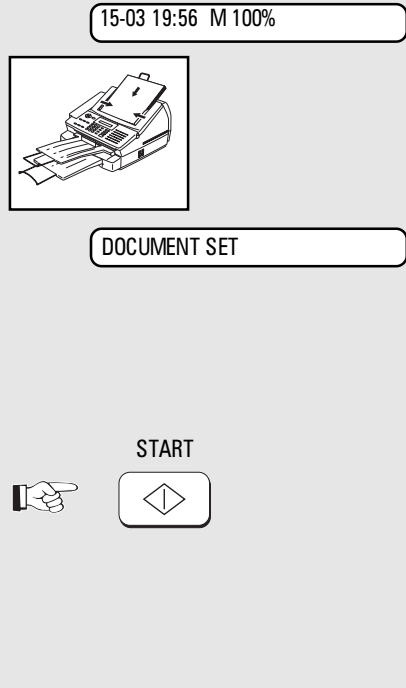

Load original

Remember:
Printed side face down

Document ready

Dialling with telephone

If you have agreed the transmission with your fax partner, or if you hear the fax tone at the other end:

Confirm with START

Transmission commences
(You can replace the handset, as the fax machine has now assumed control).

Long dialling

With the long dialling facility, a fax number which is stored under a speed dialling key is combined with an additional fax number. The additional fax number can be a further speed dialling number, an alphabet dialling number or a user-defined number.


For instance, access numbers to private telephone companies can be easily combined with other stored fax numbers at the push of a button.

Criteria for long dialling:

- The first fax number is stored on a speed dialling key (see page 31)
- The first fax number is terminated with PAUSE (see page 2)
- Further numbers may be speed dialling numbers, alphabet dialling numbers or user-defined numbers



The long dialling facility is also compatible with the listening-in function (see page 34). In this way, you can listen to any messages, etc. between the numbers.

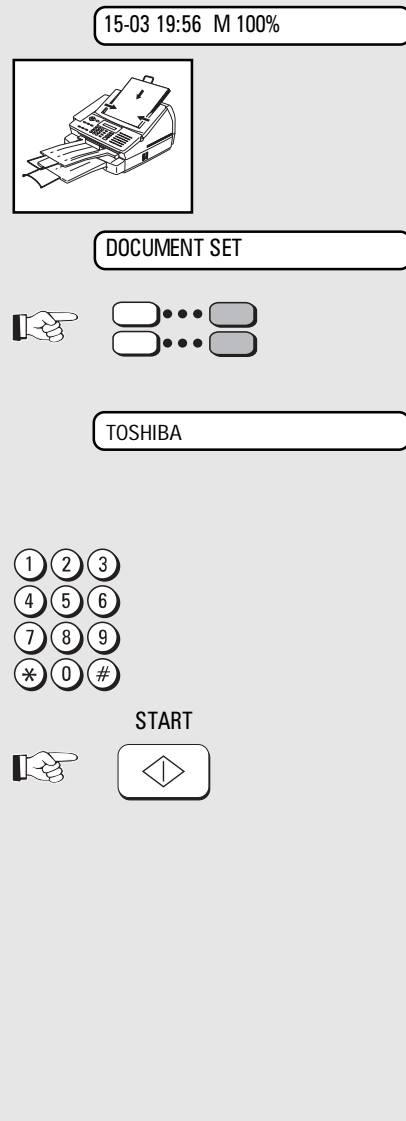

Load original

Remember:
Printed side face down

Document ready

Press the one-touch dialling key *)

The name which is stored under the one-touch dialling key is briefly displayed, or the stored fax number is displayed.

Enter additional number

- Speed dialling key
- Alphabet dialling number
- User-defined number

Press the START key


*) Example of a long dialling number:
* 01234- (the number is terminated with PAUSE)

Transmit documents



Transmission with directory function

This type of dialling is similar to searching in a telephone directory. Enter the initial letter of your partner to search for the corresponding fax number in the alphabet dialling memory. This type of dialling is particularly useful if you know the name of a specific partner

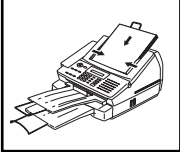
15-03 19:56 M 100%




DOCUMENT SET

 2 x 

SELECT NAME





ALBRECHT



BAUER

BLUME

*) NO ENTRY

Load original

Remember:
Printed side face down

Document ready

Activate directory function

You can now enter the initial letter of your fax partner.
(see letter input, [page 13](#) *).
(Example: „B“)

Key „2“

The first name of the corresponding letter (here "A") is displayed.

Key „2“

Press the key "2" to display the next letter (here "B") which is stored under this key.

Use the keys ▲ and ▼ to select the desired fax partner with identical starting letters.

Confirm with START

The connection is established (for procedure, see [page 30](#), Automatic fax transmission).

*) This display appears if no name is stored under the selected letter.


Transmit documents

Monitoring

In case of transmission problems, this function is very helpful. Check dialling by this method allows you to detect wrong numbers and busy parties also.



With the listening-in alternative, the document is **not** read into the memory; it is retained on the tray until the receiving fax machine has been contacted.

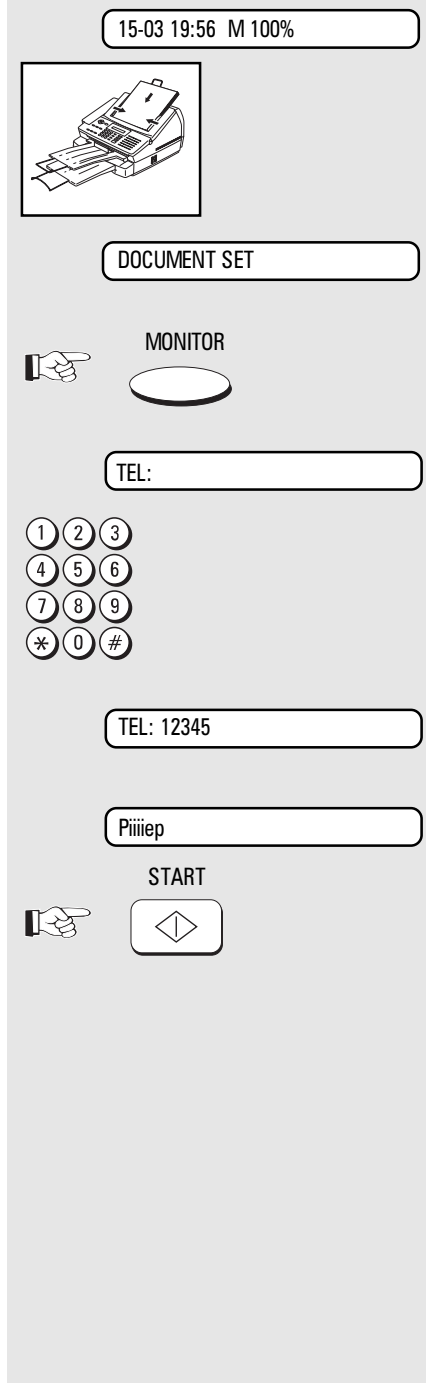

Load original

Remember:
Printed side face down

Document ready

Activates monitoring

Make your selection

Your entry

(or alphabet dial number, or one-touch dial number)

Dialling starts

If another fax machine can be heard (beep)

Confirm with START



The connection is established (for procedure, [see page 30](#), Automatic fax transmission).



If no connection is established, press the STOP key to disconnect the fax machine from the line.

Transmit documents

Set resolution

In its basic setting, your fax machine uses high resolution for transmitting or copying your documents. You can however also adjust the resolution to suit the particular documents. Use the following as a rough guide:

- STD (basic setting) For hand-written or typewritten documents
- FINE For documents with small type such as newspapers and diagrams
- SF For documents with very small and detailed diagrams
- GREY 64 grey stages for photographs or colour documents



Higher resolution has an impact on transmission time!



To change the resolution, press the MODE key several times. The LEDs above this key indicate the set mode:

LED lit	mode set
FINE	fine resolution
S-FINE	superfine resolution
GREY STAGE	grey-stage mode
all off	standard resolution

Redial

If it was not possible for your fax message to be sent, this may be due to various reasons (please read [page 65](#)). One reason may be that the other fax machine is busy. In this case, it would make sense to call your partner again at a later time. This is done automatically by your fax; it attempts to send the fax message again approx. every three minutes. The quantity of last number redial attempts and the relevant intervals between attempts can be set in the user functions ([see page 52](#)).




If you have established a connection via the MONITOR key, you can redial a number using the REDIAL/PAUSE key.

Transmit documents

Delayed transmission

You are able to define a certain time at which the documents will be transmitted; this enables you to overcome the problems involved with different time zones or will enable you to transmit documents at off-peak rates

The benefit of reading into the memory is, that your ADF can be used for the next transmission.

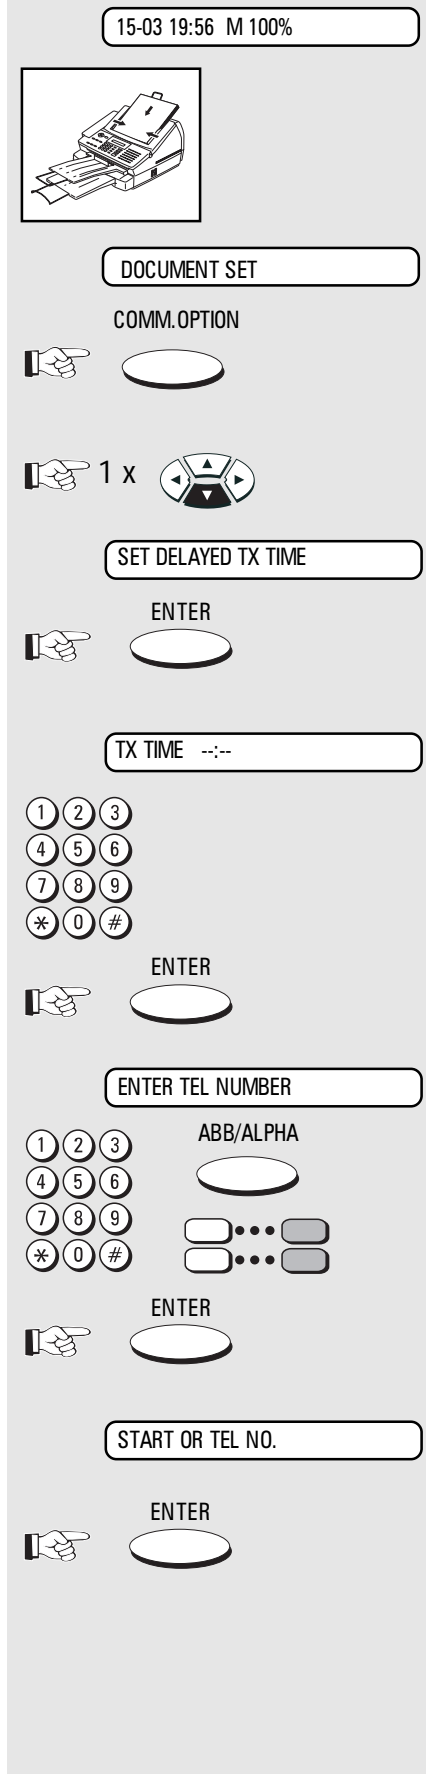

Load original

Remember:
Printed side face down

Document ready

Activate send options

Page through the menu...

...until you reach this menu item

Confirm with ENTER

Make your selection for start time

Enter start time

Confirm with ENTER

Make your selection for fax number

Enter the fax number directly, or via alphabet dialling or via one-touch dialling

Confirm with ENTER

Make your selection for further fax numbers (max. 20 numbers)
-or-

Confirm with ENTER

The documents are read into the memory and sent to the various users.




Max. 5 jobs can be programmed with a delay.


Transmit documents

Single multi-address transmission

If you wish to send one document to several partners without spending a lot of time, this function can be used to create a group on one single occasion. The group is deleted after the procedure has been completed. Up to 20 users can be grouped together from one-touch dialling numbers, alphabet dialling numbers or standard numbers.

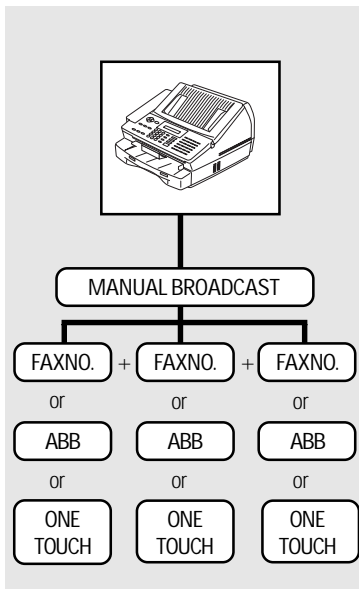


15-03 19:56 M 100%

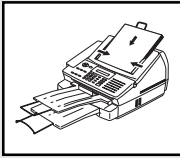


DOCUMENT SET

COMM.OPTION



MANUAL BROADCAST


ENTER



ENTER TEL NUMBER

1 2 3
4 5 6
7 8 9
* 0 #


ABB/ALPHA



ENTER

START OR TEL NO.

ENTER



Load original
Remember:
Printed side face down

Document ready

Activate send options

Confirm with ENTER

Make your selection

Enter the fax number directly, or via alphabet dialling, or via one-touch dialling

Confirm with ENTER

Make your selection for further fax numbers (max. 20 numbers)

-or-


Confirm with ENTER

The documents are read into the memory and transmitted to the individual users.


Transmit documents

Stored broadcast

If you have a fixed group of fax partners to whom you frequently have to send broadcast fax messages, the stored broadcast facility is just what you need. You can compose 6 groups of your choice. These groups are then available at the push of a button (use the dark grey one-touch dialling keys).

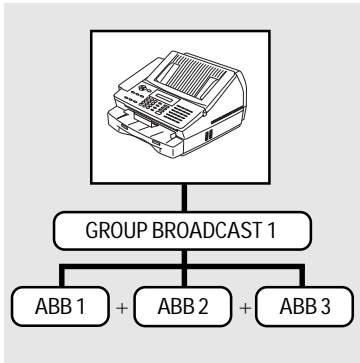

Please refer to [page 45](#) for details of how to program permanent groups.

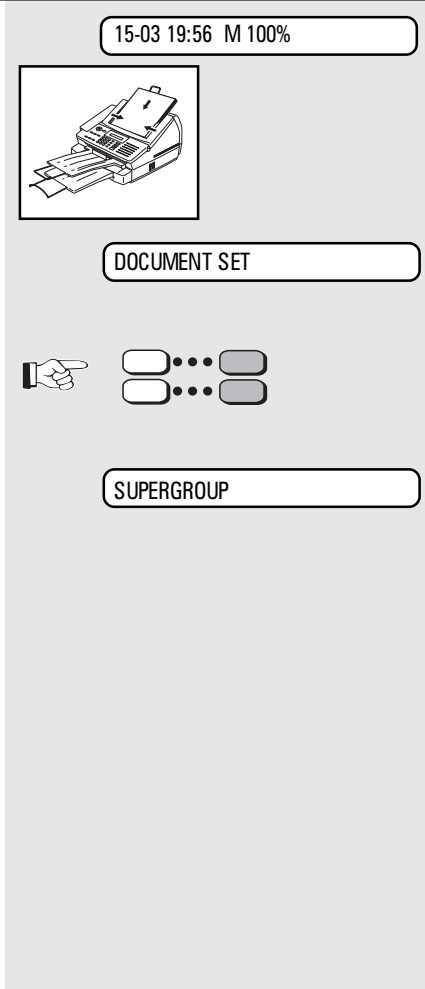

Load original

Remember:
Printed side face down

Document ready

Press the dark group dialling key


The group name is displayed briefly

The connection is established (for procedure, see [page 30](#), Automatic fax transmission).

Transmit documents

Polling

A type of self-service facility enables you to fetch documents from another partner if your partner has prepared this function. "Fax on demand", i.e. obtaining information from mailboxes such as weather reports, traffic reports or stock market reports, is also possible with this function.

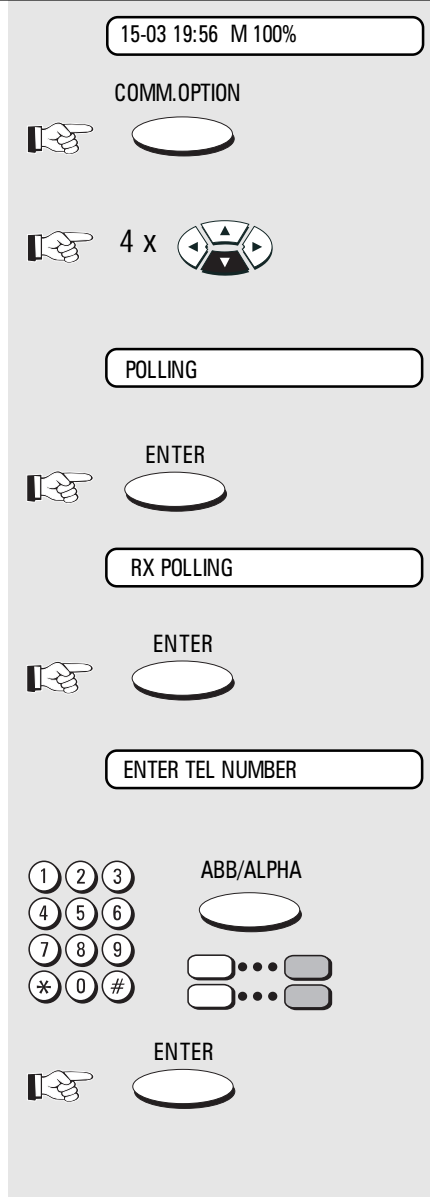

Standby mode

Activate send options

Page through the menu...

...until you reach this menu item

Confirm with ENTER

Confirm with ENTER

Make your selection for fax number (from which a document is to be polled)

Enter the fax number via the keyboard, or via alphabet dialling, or one-touch dialling

Confirm with ENTER

The document is polled

Transmit documents

Reserve polling

Other fax partners can poll information from your fax machine if you set up this facility with this function.


Your document which you reserve for polling is read into the memory of the machine so set the document tray is not blocked.

This reserve polling facility is unprotected. This means that any fax machine with a polling facility will be able to poll the document.

When the document has been polled, it is deleted from the memory.



Only one document can be reserved for polling

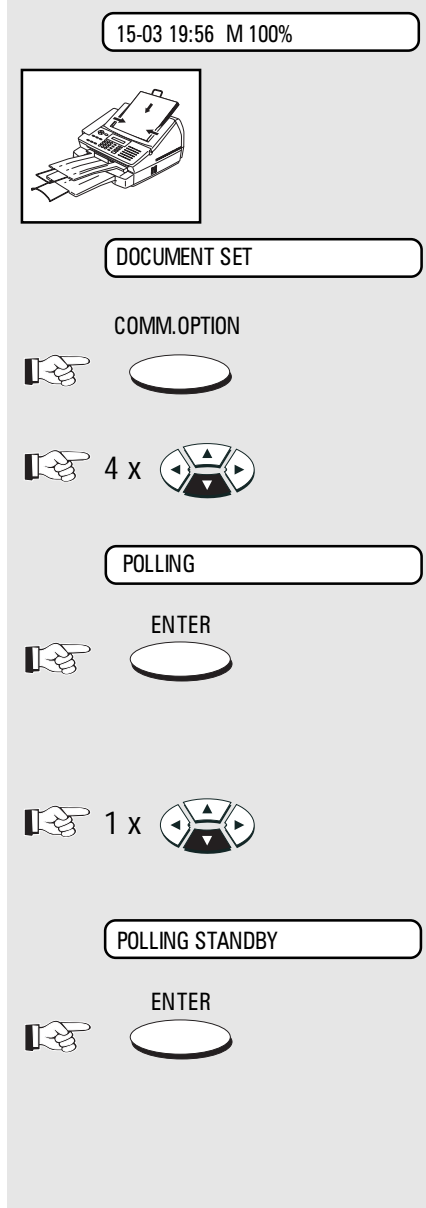

Standby mode

Load original

Remember:
Printed side face down

Document ready

Activate send options

Page through the menu...

...until you reach this menu item

Confirm with ENTER

Page through the menu...

...until you reach this menu item

Confirm with ENTER


The document is read into the memory and is available for the next polling procedure

Transmit documents

Reduce transmission speed


Poor quality telephone lines or bad connections can cause problems. Sending and receiving problems are most common when sending documents to long distance or overseas. You can set your unit's transmission speed to 4800BPS for safer data transfer. This setting is automatically canceled after the sending session.

15-03 19:56 M 100%

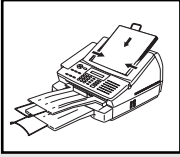

DOCUMENT SET

COMM.OPTION


5 x 

TX SPEED

ENTER

TX SPEED 9600

ENTER



TX SPEED 4800

ENTER

DOC. READY 4800

1 2 3
4 5 6
7 8 9
* 0 #

ABB/ALPHA

ENTER

Load original
Remember:
Printed side face down

Document ready

Activate send options

Page through the menu...

...until you reach this menu item

Confirm with ENTER

Speed reduced by one stage (9600 bit/sec.)

Confirm with ENTER
-or-

Select the next stage

Speed reduced by one stage (4800 bit/sec.)

Confirm with ENTER

Preset transmission speed for the following TX job

Enter the fax number
via the keyboard, or via alphabet dialling
or one-touch dialling

Confirm with ENTER



The connection is established (for procedure, see page 30, Automatic fax transmission).

Transmit documents

Stop transmission

You may inadvertently dial the wrong partner or you may enter a wrong number. You then have to interrupt this procedure. It is possible for this procedure to be situated between other jobs. As a result of stack mode, it is possible for the current transmission not to be directly related to the actions of the operator. These procedures are deleted by „paging“ through the job stack; search for the appropriate job and delete the specific job.

As the display indicates only the job numbers and the time, it is advisable for the job list to be printed out (see page 50) in order to obtain a more precise allocation.

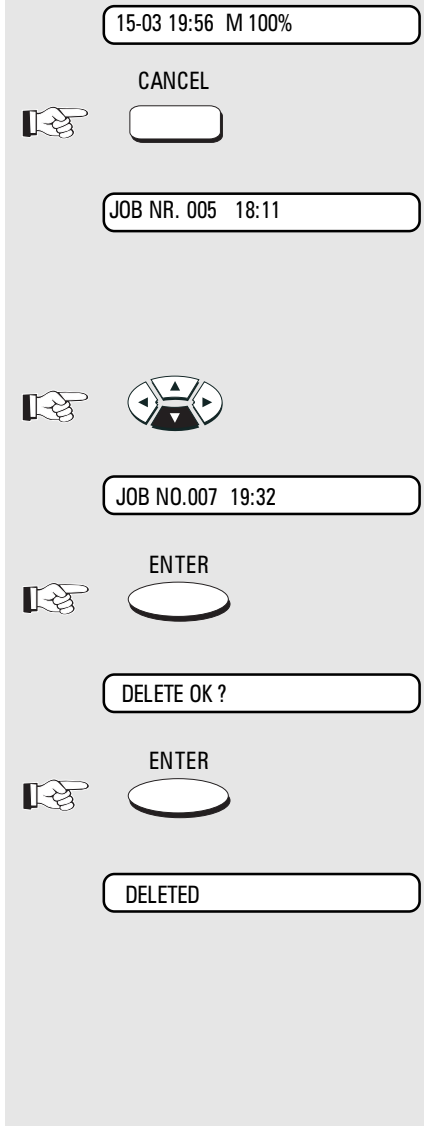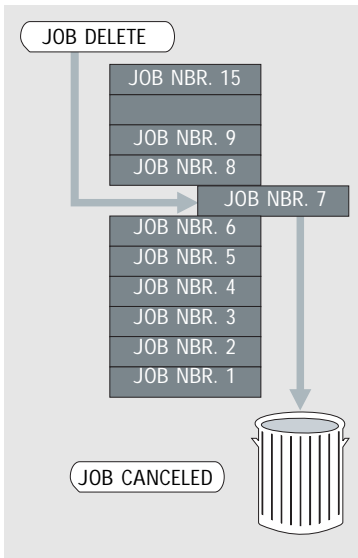

Standby mode

Activate CANCEL

The first job is displayed



The time indicated after the job number is the time at which the job was entered.

Page through the various jobs

...until you reach the desired job

Confirm with ENTER

Are you sure?

Confirm with ENTER

The job is cancelled

Store numbers

Alphabet dial memory

The alphabet dial facility enables you to enter a short "address" instead of the (frequently long) fax number of your partner.

The real fax number is stored under this „address“. With frequently used fax numbers, the alphabet dial facility enables you to save time.

120 alphabet dial memories are available and the name as well as the number of your partner can be stored in this memory. You can use up to 15 characters of your choice in this memory.

ABB NO. 120	09154/87823 BROWN
ABB NO. 119	024/8768 EVENS
•	
•	
•	
ABB NO. 003	054/938734 IRVING
ABB NO. 002	04544/6723 MARKS
ABB NO. 001	054/376014 MILES

Use the numeric keys for entering the alpha-numeric characters. Each digit features several characters which can be activated by repeatedly pressing the corresponding key. If you have found a character of your choice, press the ► key to go to the next position. Use the ◀ key to go back one letter and make any corrections. Use the CANCEL key to delete the left-hand character.



! Please note that you must press the *,* button before the actual fax number if your fax machine is connected to a PABX.

15-03 19:56 M 100%

3x

ENTER DIAL NUMBER

ENTER ABB DIAL

ENTER

ENTER:1 DELETE:2

ENTER Go to A DELETE Go to B

Standby mode

Page through the menu...

...until you reach this menu item

Select submenu

Confirm with ENTER

Decision:
Enter: Go to A
Delete: Go to B

A ENTER

ENTER ABB NUMBER =

ENTER ABB NUMBER =1

ENTER

TEL: _

TEL: 123456789

ENTER

NAME: _

Select a menu item

Make your selection for alphabet dial number

Enter alphabet dial number
Example: 1

Confirm with ENTER


Make your selection for fax number *)

Enter fax number

Confirm with ENTER

Make your selection for the name
(press START to skip)

Store numbers

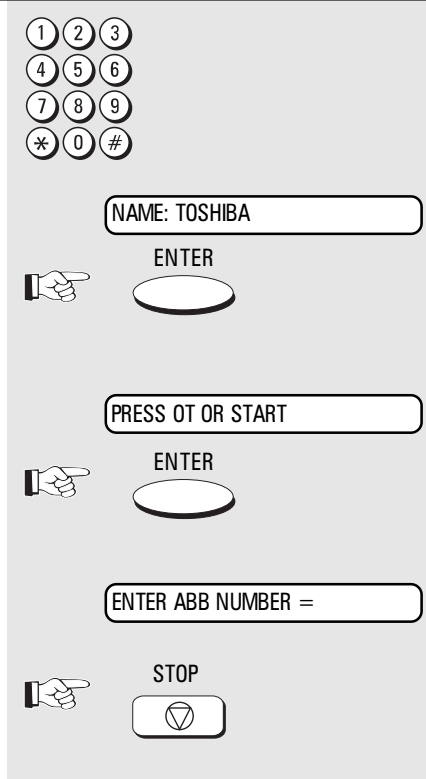

Enter the name
(Example TOSHIBA)
T = 1 x 8 # I = 3 x 4 #
O = 3 x 6 # B = 2 x 2 #
S = 4 x 7 # A = 1 x 2 #
H = 2 x 4 #

Confirm with ENTER

Input option: one-touch dial key (see page 45)


-or-

Confirm with ENTER

Make your selection for the next alphabet dial number

-or-

Press STOP, return to standby mode

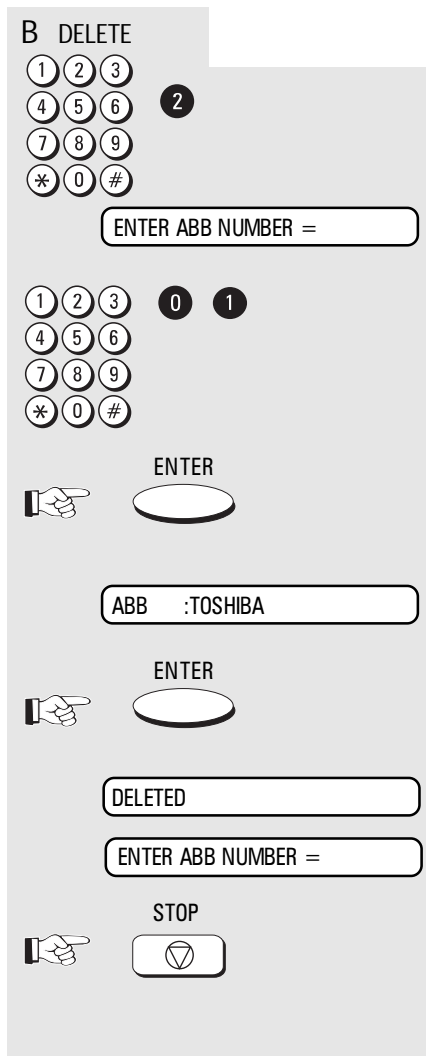

Select a menu item

Make your selection for the alphabet dial number to be deleted

Enter alphabet dial number
Example: 01

Confirm with ENTER

The name stored under alphabet dial is displayed.

Confirm with ENTER

Alphabet dial deleted

Make your selection for further alphabet dial numbers to be deleted

Press STOP, return to standby mode


Store numbers

One-touch dial keys

The one-touch dial facility is a very easy method of dialling your partner. You can store fax numbers on 16 keys. You need only press one key in order to dial your partner.

It is essential that the number has already been stored under an alphabet dial number previously.

ABB NO. 120	ONE TOUCH NBR. 16
ABB NO. 119	ONE TOUCH NBR. 15
•	
•	
•	
ABB NO. 003	ONE TOUCH NBR. 2
ABB NO. 002	
ABB NO. 001	ONE TOUCH NBR. 1

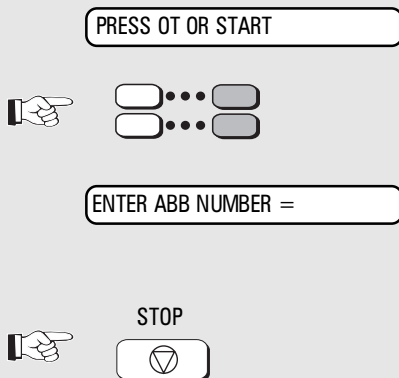

The procedure is the same as that described on page 43 (alphabet dialling). If alphabet dial numbers have already been entered, simply press the START key until you arrive at this point in the menu:

Input option: one-touch dial key



Press one-touch dial key

Make your selection for the next alphabet dial number
-or-

Press STOP, return to standby mode

Group keys

If you have a fixed number of partners to whom you frequently send broadcast transmissions, the stored broadcast facility is just what you need. There are 6 methods of creating groups of your choice. You can also assign four of these groups to four special keys so that a broadcast transmission can be initiated at the push of a button. If a permanent group is to be defined, all users of a group must be already be in the alphabet dial directory.

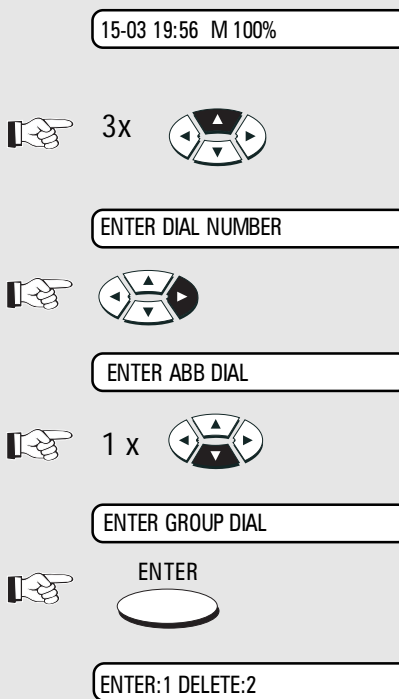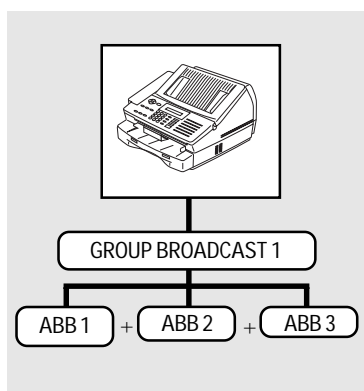

Standby mode

Page through the menu...

...until you reach this menu item

Select submenu

Page through the menu...

...until you reach this menu item

Confirm with ENTER

Decision:
Enter: Go to A
Erasing the whole group: Go to B
Erasing single numbers from the group: Go to C

ENTER	ERASING THE WHOLE GROUP	ERASING SINGLE NUMBERS FROM THE GROUP
Go to A	Go to B	Go to C

Store numbers

A ENTER



Select a menu item

SELECT GROUP BUTTON

Make your selection for the group button



Press the desired group button

ABB :

Make your selection for the alphabet dial number to be assigned to the group



Enter the alphabet dial numbers



Confirm with ENTER

NAME: TOSHIBA

The corresponding name is displayed



Confirm with ENTER

ABB :

Make further selection of alphabet dial number to be assigned to the group

-or-



Confirm with ENTER

NAME:

Make your selection group name



Enter the group name
(Example of entry: [see page 13](#))



Confirm with ENTER



Press STOP, return to standby mode

Store numbers

B ERASING THE WHOLE GROUP



 
SELECT GROUP BUTTON



TOSHIBA



DELETE OK ?



Select a menu item

Make your selection for the group button to be deleted

Press the desired group button

The corresponding name is displayed

Confirm with ENTER

Are you sure?

Confirm with ENTER

Press STOP, return to standby mode

C ERASING SINGLE NUMBERS FROM THE GROUP



SELECT GROUP BUTTON



TOSHIBA



12345678 ect.



DELETE OK ?



ENTER:1 DELETE:2



Select a menu item

Make your selection for the group button to be deleted

Press the desired group button

The corresponding name is displayed

Select the appropriate numbers

Confirm with ENTER

Are you sure?

Confirm with ENTER

Further changes
- or -


Press STOP, return to standby mode

Report prints

Activate printing report

Not all reports are printed out automatically; they have to be requested specially. These lists can provide information concerning the current state of the fax machine. The following reports can be printed:

- Transmission report
- Multitransmission report
- Transmission and reception journal
- ABB Number list
- Group list
- Function list
- List of jobs in memory

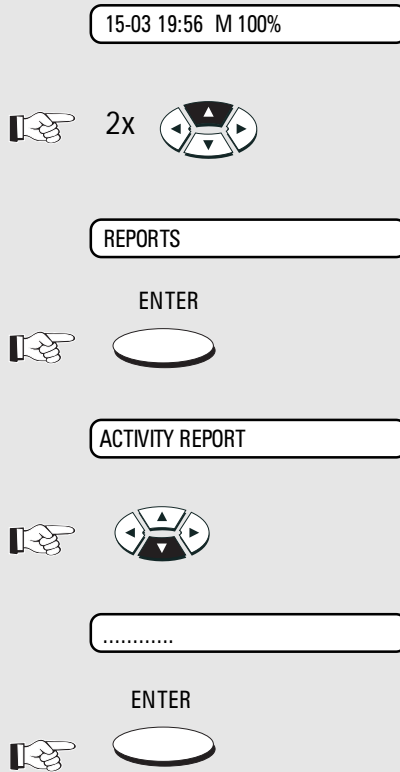

The lists are retrieved as follows:

Standby mode

Page through the menu...

...until you reach the desired menu item

Confirm with ENTER

The first menu item is displayed

Page through the menu...

...until you reach the desired menu item

Confirm with ENTER

The list is printed out

Transmission report

This report can be printed after every transmission or in the event of a defective transmission. It provides information about the most important transmission data. Please refer to [page 59/60](#) for switching ON/OFF.

*** SUCCESSFUL TX REPORT ***		
01-04-98	01:19	ID:+44193212345678
		TEG FT TF610
JOB NBR.	-----	001
START TIME	-----	01:19
ID No.	-----	111
RESOLUTION	-----	STANDARD
TOTAL PAGE	-----	00
MACHINE ENGAGED	-----	00' 28
INFORMATION	-----	OK

Report prints

Transmission and reception journal

Your fax machine will record messages which you transmit or receive in the form of transmission and reception journals. These lists are printed out automatically after every 20 transmissions or receptions or at your request.

The journal also informs you of the number of copies printed per process unit (drum counter) or all copies (total printed pages).

*** ACTIVITY REPORT ***							
01-04-98		15:02		ID: +44 1932 12345678			
				FAX/TELECOM MKTG			
				DRUM COUNTER		=	000002
				SCAN PAGE		=	000245
No.	DATE	START	IDENTIFICATION	PAGE	TIME	INFO	JOB No. :
①	②	③	④	⑤	⑥	⑦	⑧
TRANSMISSION							
01	11-08	08:00		00	00'00	008	001
02	11-10	09:17	12345678	00	00'35	STOP	002
03	11-00	09:24	987654321	01	00'30	OK	ECM 004
RECEPTION							
04	11-08	14:17	+04965321	01	00'36	OK	ECM
05	21-08	06:00		00	00'45	011	
06	15-10	14:30	5432101	04	01'58	OK	ECM

①	NO.	Lists the communications in the order they occurred.										
②	DATE	Date of transmission										
③	START	Start of transmission										
④	IDENTIFICATION	Number pf faxpartner										
⑤	PAGE	Gives the number of pages per transmission or reception.										
⑥	TIME	Time of transmission										
⑦	INFO	Result of transmission (see 58, 59) <table border="1" data-bbox="729 1332 1144 1720"> <tbody> <tr> <td>OK</td> <td>Group without any errors</td> </tr> <tr> <td>OK_ECM</td> <td>ECM</td> </tr> <tr> <td>STOP</td> <td>the operator has stopped the transmission</td> </tr> <tr> <td>001-360</td> <td>description of the transmission error (see page 59)</td> </tr> <tr> <td>OK-PC OK PEC</td> <td>transmission as PC Fax</td> </tr> </tbody> </table>	OK	Group without any errors	OK_ECM	ECM	STOP	the operator has stopped the transmission	001-360	description of the transmission error (see page 59)	OK-PC OK PEC	transmission as PC Fax
OK	Group without any errors											
OK_ECM	ECM											
STOP	the operator has stopped the transmission											
001-360	description of the transmission error (see page 59)											
OK-PC OK PEC	transmission as PC Fax											
⑧	JOB NO.	Current job number										

Report prints

The multitransmission report

After a broadcast transmission (group dialling), the machine prints out a list of fax partners who have been reached or who have not been reached by group dialling. This list is always printed out when group dialling has been completed.

```
*** BROADCAST REPORT***  
01-04-98 09:15 ID: +44 1932 12345678 NAME: TOSHIBA  
TF610  
JOB No. 050  
NO. TELEPHONE NUMBER ENTRY INFO.  
01 11 NG  
02 12 NG  
03 13 OK  
04 14 OK
```

Number list

This list contains all numbers and corresponding names in the alphabet dial memory. The list also sets out the assignment of the various one-touch dial keys.

```
*** ABBREVIATED DIAL LIST ***  
01-04-98 09:15 ID: +44 1932 12345678 NAME: TOSHIBA  
No. OT No. NAME TELEPHONE NUMBER  
01 OT01 ALBRECHT 01010101  
02 OT02 BAUER 02020203  
03 OT03 BLUME 03030303  
04 OT04 MEIER 04040404  
05  
06
```

Group list

This is a list of the alphabet dial numbers allocated to the particular groups.

```
*** GROUP LIST ***  
01-04-98 09:15 ID: +44 1932 12345678 NAME: TOSHIBA  
GROUP1 NAME: SUPER  
No. ENTRY NAME TELEPHONE NUMBER  
01 ABB01 ALBRECHT 0123456  
02 ABB02 BAUER 6543210  
03 ABB03 BLUME 987654321  
GROUP2 NAME:  
No. ENTRY NAME TELEPHONE NUMBER  
01  
02
```

Jobs in progress

This list indicates which jobs are still stored by the fax machine or which jobs still have to be progressed. This information may be useful if you have stored any urgent jobs or if you wish to delete a particular job.

```
*** PENDING JOBS LIST ***  
01-04-98 09:15 ID: +44 1932 12345678 NAME: TOSHIBA  
JOB No. CONTENTS TIMER ACCEPT REMOTE TELEPHONE NUMBER /NAME  
003 TRANSMISSION 16:14 OT02 BAUER  
004 BROADCAST 16:15 GROUP1 SUPER  
007 POLLING STANBY 16:21
```

Report prints

The function list

This list provides information concerning all settings of the fax machine. They correspond with the settings which you have made (For explanations, see page 53).

The following operating data were also displayed:

DRUM COUNTER:

Number of pages printed per process unit

TOTAL PRINT COUNTER:

Total number of pages printed by the fax machine

TOTAL TX PAGES:

Total number of pages transmitted

TOTAL RX PAGES:

Total number of pages sent

TOTAL COPY PAGES:

Total number of copied pages

OPTION MEMORY:

Memory expansion available?

123...ABC...:

Operating software version

Keep this list for any service work which may be necessary.

*** OPTIONS REPORT ***			
01-04-98 09:15		ID: +44 1932 12345678	NAME: TOSHIBA
TF610			
USER OPTIONS			
No.	CONTENTS	No.	CONTENTS
01	ECM FUNCTION	ON	51 NOT USED
02	CONFIRMATION	OFF	52 NOT USED
03	FIRST PAGE IMAGE	OFF	53 NOT USED
04	HEADER PRINT	INSIDE	54 NOT USED
05	RECEIVE FOOTER	ON	55 PAPER SIZE A4
06	TX SPEED	14400	56 DEFAULT RES. STD
07	RCV SPEED	14400	57 COPY REDUCT. 96%
08	NOT USED		58 POWER SAVE ON
09	NOT USED		59 DOC. LENGTH 1 M
10	NOT USED		60 NOT USED
11	NOT USED		61 CALENDAR DD-MM-YY
12	NOT USED		62 LANGUAGE ENGLISH
13	RDC ACCEPTANCE	ON	63 SCAN CNT. DEF NORMAL
14	NOT USED		64 NOT USED
15	NOT USED		65 RX REDUCTION AUTO
16	NOT USED		66 NOT USED
17	NOT USED		67 NOT USED
18	NOT USED		68 NOT USED
19	NOT USED		69 NOT USED
20	DIAL METHOD *	TONE	70 NOT USED
21	REDIAL TIMES	5	
22	REDIAL INTERVAL	2 MIN	
23	DUAL INTERVAL	5 MIN	
24	BUSY TONE	ON	
25	INITIAL WAIT		
26	PAUSE WAIT	3 SEK	
27	ACCESS DIGIT		
28	ACCESS CODE	=0	
29	NOT USED		
30	NOT USED		
31	NOT USED		
32	NOT USED		
33	NOT USED		
34	NOT USED		
35	NOT USED		
36	PSEUDO RING TIMES	04	
37	AUTO DELAY	01	
38	RCV MODE= FAX/TAD		
39	TEL DELAY	06	
40	NOT USED		
41	RMT ACTIVATION	OFF	
42	ACTIVATION CODE	= **	
43	DEACTIVATION CODE	= ##	
44	FAX/TAD TIMER	=35	
45	SILENT DETECTION		
46	PC TRANSFER DEF.	OFF	
47	CNG DETECTON	ON	
48	NOT USED		
49	NOT USED		
50	NOT USED		
		DRUM COUNTER	= 00000
		TOTAL PRINT COUNTER	= 00000
		TOTAL TX PAGES	= 00000
		TOTAL RX PAGES	= 00000
		TOTAL COPY PAGES	= 00000
		OPTION MEMORY	= NO
0200KFNMOESBja DE			

Advanced settings

Functions

This functions are used to setup how your fax machine operates. The actual settings can be viewed by printing a function list (see page 51).

The following scheme shows you how to change each setting:

Standby mode

Start the menu

Select submenu (2x)

Make your selection for function number

Enter function number

Confirm with ENTER

Function is displayed

Change the function value, depending on the particular type, by paging or by entering data via the numeric keypad

Confirm with ENTER

Enter further data

-or-

Press STOP, return to standby mode

Advanced settings

The following functions (Parameter) are available:

Function no.	Function	Description
01	ECM	Error correction (ECM) is as follows: ON: Activated OFF: Deactivated
02	CONFIRMATION	Transmission report is produced: ON: After every transmission CONFIRMATION OFF: Only after transmission errors.
03	FIRST PAGE IMAGE	A part of the document (to recognize it) can be printed on the report. REPORT VISUAL ON: print REPORT VISUAL OFF: print not
04	HEADER PRINT	Select, if the TX header will be transmitted to te other party. ON: Is transmitted OFF: Is not transmitted
05	RECEIVE FOOTER	Select, if the actual date and time will be printed on the footer line of received documents. ON: Is printed OFF: Is not printed
06	TX SPEED	Preset transmission speeds, transmission BPS = BIT / Sec. 9600 BPS, 7200 BPS, 4800 BPS, 2400 BPS
07	RCV SPEED	Preset transmission speed, reception BPS = BIT / Sec. 9600 BPS, 4800 BPS
13	RDC ACCEPTANCE	Actual COMLINE status ON COMLINE enabled OFF COMLINE disabled ONE only one COMLINE session
20 1	DIAL METHOD TONE	Dialling method: DTMF PULSE DIALLING
21	REDIAL TIMES	Number of redial attempts if transmission is not successful 02 2 twice ~ 10 10 times
22	REDIAL INT.	Period between redial attempts if transmission is not successful 30 SEC 30 seconds ~ 1 MIN 2 MIN 3 MIN 10 MIN 20 MIN 20 minutes
23	DUAL INTERVAL	Period between redial attempts if line is busy 1 MIN 1 minute ~ 10 MIN 10 minutes

*) This function may not be available in machines in certain countries.

Advanced settings

Function no:	Function	Description
24	BUSY TONE	The successful detection depend on the PBAX. ON: active OFF: not active
25	PUBLIC LINE	Type of connection PUBLIC LINE: Before dialling a tone check is made, PABX tones are not accepted PABX: Dialling after a delay of 3 sec., no tone check before begin of dialling INIT WAIT 4 SEC: Dialling after a delay of 4 sec., no tone check before begin of dialling ~ INIT WAIT 6.0 SEC: Dialling after a delay of 6 sec., no tone check before begin of dialling
26	PAUSE WAIT TONE	Procedure after obtaining public line/pause wait PAUSE WAIT TONE: Further dialling only after line access dial tone, PABX tones are not accepted PAUSE WAIT 3.0 SEC: Dialling after a delay of 3 sec., no tone check, after obtaining public line/pause wait ~ PAUSE WAIT 6.0 SEC: Dialling after a delay of 6 sec., no tone check, after obtaining public line/pause wait
27	ACCESS	Procedure for obtaining public line (*-key) NO PUBLIC LINE PUBLIC LINE FLASH:Flash-Function PUBLIC LINE EARTH KEY: Earth key Function PUBLIC LINE DIGIT: Public line obtained via code
28	ACCESS CODE	Enter a (max.) 4-digit code for obtaining public line. (only useful by ACCESS DIGIT)
36	CALLING TIMES	Number of synthetic ring signals set in the TEL/FAX mode 1 SYNTH. RING TEL/FAX 1 ring ~ 10 SYNTH. RINGS TEL/FAX 10 rings
37	AUTO DELAY	Number of rings before the fax machine connects to the line in the automatic receive mode (AUTO lamp is lit) 1st RING ~ 10th RING
38	RCV MODE=	Reception type in automatic mode (AUTO LED is lit) TEL/FAX TEL/FAX mode FAX/TAD FAX/TAD mode
39	TEL DELAY	Not relevant for European models

Advanced settings

Function no:	Function	Description
41	RMT ACTIVATION	Activate the fax machine with a DTMF remote control code ON Enabled OFF Disabled
42	ACTIVATIONCODE=	Enter the sequence of characters to be used as the remote control code
43	DEACTIVATION CODE	Enter the sequence of characters to be used to disconnect the fax machine from the line.
44	FAX/TAD TIMER=	Period during which the fax machine can detect another fax machine (in FAX/TAD mode)
45	SILENT DETECTION=	Minimum length of pause in speech before fax machine switches into the FAX mode (with FAX/TAD mode)
46	PC TRANSFER	Fax dates are transferred to the connected PC ON OFF
47	CNG DETECTION	To realize another fax in the FAX/TAD-Mode. ON OFF
55	PAPER SIZE	Paper sizes for PC printer operation: A4 DIN A4 size LETTER Letter size LEGAL Legal size
56	DEFAULT RES	Preset resolution STD Standard resolution FINE Fine resolution
57	COPY REDUC.	Reduction for copy OFF 100% 96% 92% 90% 86% 83% 72%
58	POWER SAVE	Power saver (heater turns off) ON / active OFF / not active
59	DOC. LENGTH	Max. length of documents 1m / 1meter 10m / 10meter
61	CALENDAR	Format of date in display and in the lists (example: March 15th, 1998) YY-MM-DD 99-03-18 DD-MM-YY 15-03-98 MM-DD-YY 03-15-98
62	LANGUAGE	To select a language for display and lists.
63	SCAN CONTRAST	Default contrast setting for a scanning document BRIGHTER Low coverage on document NORMAL Normal coverage on document DARKER High coverage on document
65	RX REDUCTION	Reduction of received documents OFF: no reduction AUTO: dynamic reduction

Advanced settings


Connection to PABX

If the TF 610 is connected to a PABX, the functions have to be modified. The standard setting for this case is described starting on [page 14](#). If any problems or malfunctions occur, please consider the following items; you may have to discuss these items with the operator of the PABX:

- Does the PABX have public line capability?
 - Does the PABX have DDI capability?
 - Have you entered the "*" key before the actual fax number?
 - How is the public line obtained (earth key, flash, number)?
 - What dialling method is used (pulse-dialling, DTMF dialling)?
 - Is function 25 set to EXTENSION?
 - Is function 26 set to TONE CHECK PAUSE BUTTON*?
 - Is the correct dialling method set in function 20?
 - Has the correct method of obtaining a public line been set in function 27?
 - Have the correct codes for obtaining a public line been set in function 28 (if the public line is obtained via a code)?
 - Is line access made with "*" -key?
- *) Alternatively, you can set function 26 to 4 seconds.

Receive footer on/off

As proof of the date on which the document is received, your fax machine can print the local date and time as an additional line on the received document. If this facility has been activated, the receive footer is printed at the bottom of the received document.

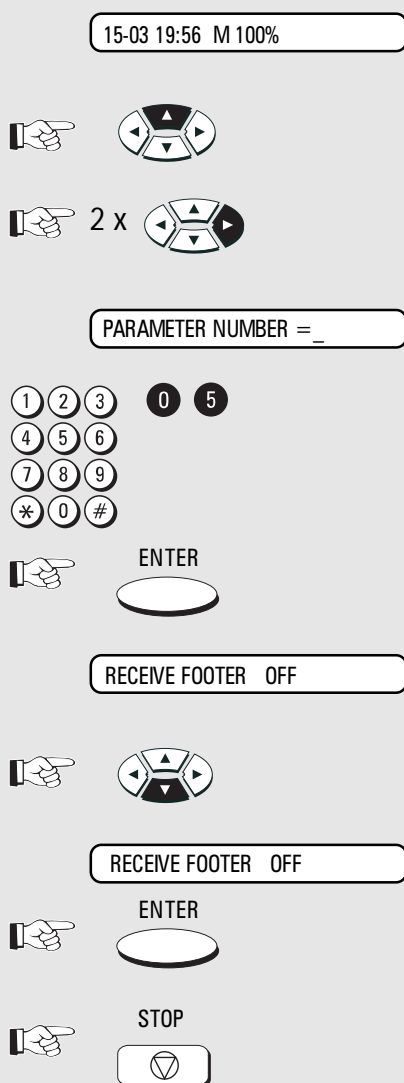

Standby mode

Start the menu

Select submenu (2x)

Make your selection for the function number

Enter function number

Confirm with ENTER

Current setting

Change setting

Confirm with ENTER

Press STOP, return to standby mode

Advanced settings

Change speaker volume

If you listen into a fax transmission process, the call establishment procedure is relayed via the built-in speaker. This means that you can also listen to the actual call establishment process. The volume can be adjusted as follows:

15-03 19:56 M 100%

SELECT OPTIONS

2 x

SPEAKER VOLUME

ENTER

SPEAKER VOL. >>>

ENTER

Standby mode

Start the menu

Select submenu

Page through the menu...

...until you reach the desired menu item

Confirm with ENTER

Current volume is displayed and indicated acoustically

Change the volume

Confirm with ENTER

Advanced settings

Adjust ringing tone/key beeps

The volume of the ringing signal (synthetic ringing) in the TEL/FAX mode can be adjusted as follows. This setting also affects the key beep. No beeps are generated if the volume is set to minimum.

15-03 19:56 M 100%

SELECT OPTIONS

RINGER VOLUME

ENTER

RINGER VOL. >>>

Standby mode

Start the menu

Select submenu

Page through the menu...

...until you reach the desired menu item

Confirm with ENTER

The current volume is displayed and indicated acoustically

Adjust the volume

Confirm with ENTER

Advanced settings

Set transmission report output

This report can be printed after every transmission or only for errored transmissions. It provides information concerning the most important transmission data. It is also possible to print part of the first document of the job in the transmission report.

15-03 19:56 M 100%

2 x

PARAMETER NUMBER = _

1 2 3 0 2
4 5 6
7 8 9
* 0 #

ENTER

CONFIRMATION ERROR

ENTER

PARAMETER NUMBER = _

1 2 3 0 3
4 5 6
7 8 9
* 0 #

ENTER

FIRST PAGE IMAGE OFF

FIRST PAGE IMAGE ON

ENTER

STOP

Standby mode

Start the menu

Select submenu (2x)

Make your selection for the function number

Enter function number

Confirm with ENTER

Current status

Change the status as follows

- ON Transmission reported printed after every transmission
- OFF Transmission report printed only for errored transmissions

Confirm with ENTER

Make your selection for the function number

Enter function number

Confirm with ENTER

Current setting

Change setting


Confirm with ENTER

Press STOP, return to standby mode

Advanced settings

Temporarily activate TX report

If output of the TX report is restricted with **function 02** (see page 59), a general printout of the TX report can be requested for a set transmission job.

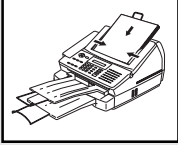

DOCUMENT SET

TX REPORT

TX REPORT ON

ENTER TEL NUMBER

1 2 3
4 5 6
7 8 9
* 0 #

TEL: 12345

START

Load original
Remember:
Printed side face down

Document ready

Press TX report key

Preparation of TX report printout

Enter fax number
or enter alphabet dial or one-touch dial number

Confirm with START

Document is transmitted, and TX report is then printed out

Remote maintenance (COMLINE)

Your fax machine permits remote diagnosis. This means that the internal settings can be read and changed via a telephone line. In order to ensure that data protection is assured, COMLINE is possible only after you enable your machine for this facility.

15-03 19:56 M 100%

PARAMETER NUMBER = _

1 2 3 1 3
4 5 6
7 8 9
* 0 #

ENTER

RDC ACCEPTANCE OFF

RDC ACCEPTANCE ONE

ENTER

STOP

Standby mode

Start the menu

Select submenu (2x)

Make your selection for the function number

Enter function number

Confirm with ENTER

Current setting

Change setting

Confirm with ENTER

Press STOP, return to standby mode

Advanced settings

Power saver

The printing unit of your fax machine requires a heat source of approx. 170° Celsius to be able to print spontaneously. This heat source is heated at certain intervals in order to maintain the temperature at the required level. This consumes electricity, and the fan also has to run constantly. If you wish to save power or prevent the fan noise, you can switch off the constant heating facility. The heating would then only be activated when a fax is received. The delay involved before the fax document is printed out is approx. 1 minute.

The diagram illustrates the process of changing the Power Save setting. It starts with a status bar showing '15-03 19:56 M 100%'. A hand icon points to a four-way directional pad. Below this, another hand icon points to the same pad, followed by '2 x' and the pad, indicating a double press. A numeric keypad is shown with the number '5' highlighted. A hand icon points to an 'ENTER' button. The status bar now shows 'POWER SAVE ON'. A hand icon points to the directional pad. The status bar now shows 'POWER SAVE OFF'. A hand icon points to an 'ENTER' button. Finally, a hand icon points to a 'STOP' button with a triangle icon.

15-03 19:56 M 100%

Standby mode

Start the menu

Select submenu (2x)

PARAMETER NUMBER = _

Make your selection for the function number

Enter function number

ENTER

Confirm with ENTER

POWER SAVE ON

Current setting

Change setting

POWER SAVE OFF

ENTER

Confirm with ENTER


STOP

Press STOP, return to standby mode

Advanced settings

Switch off error correction

Your fax machine is equipped with an error correction facility (ECM). If your fax partner also has an error correction facility, this permits error-free fax transmission. One effect linked with ECM is that the transmission time increases if there are any problems on the line. This may involve very high costs with overseas calls. For this reason, the error correction facility can be temporarily disabled.

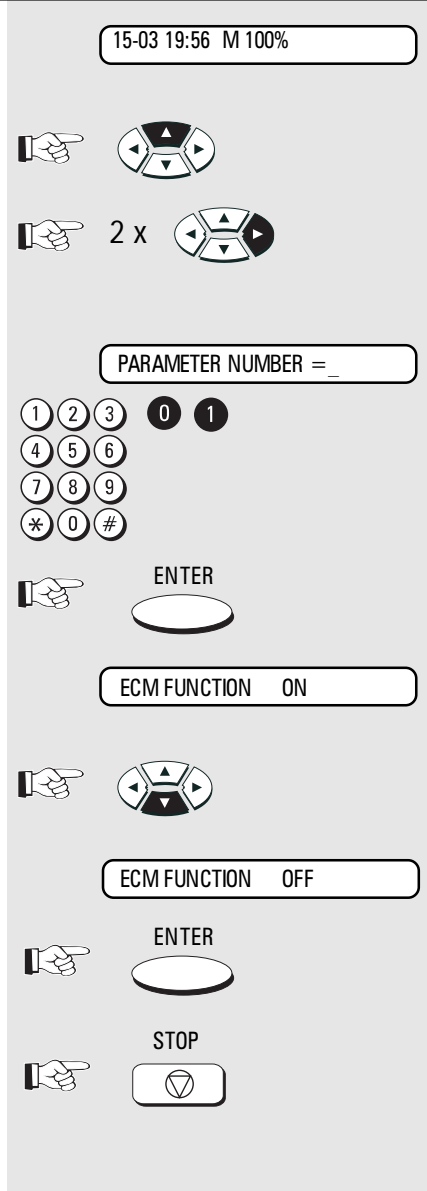

Standby mode

Start the menu

Select submenu (2x)

Make your selection for the function number

Enter function number

Confirm with ENTER

Current setting

Change setting

Confirm with ENTER

Press STOP, return to standby mode

Possible problems

Error codes in journal

The display message transmission error is explained by the indicated error code. The same code is shown also in the journal and transmission report.



Press STOP to clear error messages.

Code Number	Cause	How to correct
STOP	The transmission is interrupted by the stop button.	Try again
OK	The document has been transmitted without any errors.	This is how it should be
001	Top cover or rear cover open	Close all parts
002	Paper jam or document too long. Is the memory full? Ask your dealer for a memory extension.	Remove the document. See also page 67 Send the document from the document feed
003	Recording paper jam or recording paper cassette is empty	Remove jammed paper or load new paper without switching off the machine, see page 67
005-007	Line error	Repeat transmission, try switching over to 4800 BPS.
008	Line error	No telephone line was detected.
009-011	Line error	Repeat transmission, try switching over to 4800 BPS.
014	Printing error	Check toner, process unit and paper transport
020	Errors on the line mean that parts of the document are difficult to read; however, the document is transmitted completely.	No special measures necessary. If this frequently occurs with one particular fax partner, switch over to 4800 BPS.
100-103	Line error	Repeat transmission, try switching over to 4800 BPS.
104-106	Unsuccessful polling	An incorrect password has been used, or no document was loaded for polling
111	Mailbox transmission	An attempt has been made to transmit a document to a box or relay. Check whether a TF 861/831/631 is installed at the far end.
112-126	Line error	Repeat transmission, try switching over to 4800 BPS.
141	Line error	No telephone line was detected.
142-157	Line error	Repeat transmission, try switching over to 4800 BPS.
252-355	A remote control error occurs	Consult your dealer

Possible problems

Error messages in the Display

Your fax machine reports an operating error or fails to perform the required function. Before you make an unnecessary call on your service technician, take your time and see if you can help yourself. This checklist will help you recognise and eliminate errors.

Display	Cause	Corrective action
DOCUMENT JAM	Documents are jammed in the document tray.	Press STOP key and remove the paper
ADD PAPER	The recording paper cassette is empty.	Load a new recording paper in the cassette (see page 7). Do not switch the machine off! or any data in the memory are lost.
PAPER JAM	The recording paper is jammed.	Remove the jammed paper (see instructions on page 67).
CLOSE TOP COVER	The top cover is open.	Close the top cover. Have you inserted the process unit correctly?
NO PROCESS UNIT M100%	The process unit is not installed.	Install the process unit correctly. Pull the lock lever forward.
PROCESS UNIT NEAR END	The process unit is running out.	Order a new process unit from your TOSHIBA dealer.
CHANGE PROCESS UNIT	The process unit is empty.	Replace the process unit.
TONER NEAR EMPTY	The toner is running out.	Order a new toner cartridge. Install a new toner cartridge. About 100 sheets can be printed after this is displayed. See page 6.
TONER EMPTY	There is not enough toner for printing.	Install a new toner cartridge. See page 6.
MEMORY FULL	The memory is full.	Contact your dealer, as a memory expansion unit is available. Use the document tray to transmit documents.
CHECK CARTRIDGE M100%	There is no ink cartridge, or the ink cartridge has not been inserted correctly.	Insert the cartridge correctly. See page 5.
NO DOCUMENT	No document present	The action requires a document
PC COMM. ERROR M100%	Communication to the PC has failed	Try to remedy by pressing the STOP button
SYSTEM ERROR XXX	The fax machine has malfunctioned	Contact your TOSHIBA dealer
COMM. FX XXX	The fax machine has malfunctioned	Attempt to clarify the problem using the following pages.

Possible problems

Transmission problems

Problem	possible causes and solutions
Your document is not automatically pulled into the feeder.	<p>Your fax machine reports an operating error or fails to perform the required function. Before you make an unnecessary call on your service technician, take your time and see if you can help yourself. This checklist will help you recognise and eliminate errors.</p>	
	<p>Your machine displays an error.</p> <p>The display is blank.</p> <p>Document size or thickness of paper are not acceptable.</p> <p>The operator control panel is not firmly locked.</p>	<p>If the display gives an error message, clear the fault and delete the display with STOP.</p> <p>Check there is power on the machine. The machine must be switched on (see page 8).</p> <p>Use acceptable documents only (see page 27).</p> <p>Close the cover. It should be firmly locked in place on both sides.</p>
The line LED does not flash when you press the START button	You replaced the receiver before pressing START.	Try again. Replace the receiver only when you have pressed START.
The document is damaged during sending or copying.	<p>Document format or paper thickness not as specified.</p> <p>The document guides are not properly adjusted to the paper size.</p>	<p>Use acceptable documents only (see page 27).</p> <p>Adjust the document guides accordingly.</p>
Your fax machine performed transmission correctly but the message was not received by the receiver.	The other machine is out of paper.	Ask the receiver to put paper in his machine.
The receiver received a blank sheet instead of the document sent.	You loaded your document in the machine with the image face-up.	Send your document again: the image must be face-down on your document feeder.
The receiver reports: The document transmitted is difficult to read.	<p>Your machine's document reader is dirty or damaged.</p> <p>RESOLUTION and CONTRAST are not set correctly.</p> <p>The telephone connection is poor.</p>	<p>Make a copy of your document on your fax machine (see page 24). If your copy is also difficult to read, clean the document reader.</p> <p>Make a copy on your fax machine (see page 24) and adjust the settings to your document. You can also improve document quality: By making the print on the photocopy darker, enlarging or reducing. (see page 35). Then send again.</p> <p>Redial. You may get a better connection.</p>
Abbreviated or one-touch dialling do not work.	Abbreviated or one-touch dialling number is not correctly stored.	Check and correct stored numbers (see page 43).
No dial tone is heard when handset is off-hook.	<p>The telephone is not correctly connected.</p> <p>The fax machine is not correctly connected.</p>	<p>Check that your telephone is connected correctly to the socket (see page 8).</p> <p>Plug the connecting cable of your fax machine into the socket (see page 8).</p>
Your call does not arrive although you have dialled the correct number.	<p>Your fax machine has been set to the wrong dialling mode.</p> <p>If you are connected to a PABX: You have set the wrong line type.</p> <p>Your fax machine is not connected to the PSTN.</p>	<p>Switch to the correct dialling procedure: DTMF or pulse-dialling (see page 14).</p> <p>Set the line types to EXTENSION (see page 15).</p> <p>Plug the connecting cable of your fax machine into the socket (see page 8).</p>

Possible problems


Receiving problems

Problem	possible causes and solutions
<p>You press START to receive a document. But you receive nothing.</p>	<p>Your fax machine reports an operating error or fails to perform the required function. Before you make an unnecessary call on your service</p> <p>Your have an error displayed.</p> <p>The fax machine is not correctly connected.</p> <p>The display is blank.</p> <p>There is still a document in the feeder.</p> <p>Your fax machine is set in manual receiving mode and you replaced the handset before pressing START.</p> <p>The operator control panel is not closed.</p>	<p>technician, take your time and see if you can help yourself. This checklist will help you recognise and eliminate errors.</p> <p>If the display shows an error message, eliminate the fault and delete the display with STOP.</p> <p>Check the wiring. See page 8.</p> <p>Check there is power to the machine. The machine must be switched on (see page 8).</p> <p>Press STOP and remove the document.</p> <p>When receiving the next fax, be sure to replace the handset only after you have pressed START.</p> <p>Close the cover. Both sides of the cover must be firmly locked in place.</p>
<p>Your recording paper is not fed out.</p>	<p>The recording paper in your machine is jammed.</p>	<p>Remove the jammed paper (see page 67).</p>
<p>The document received is difficult to read.</p>	<p>Document quality is poor.</p> <p>The telephone connection is poor.</p>	<p>Ask the sender to reset the resolution and contrast or improve the quality of the document e.g. by making the print on the photocopy darker, enlarging or reducing. Then have it send again.</p> <p>Ask the sender to transmitt the document again (see Page 7).</p>
<p>You receive a completely blank document.</p>	<p>The sender made a mistake when loading the document.</p>	<p>Check whether the sender loaded in the correct manner.</p>
<p>The document received is partially printed.</p>	<p>The operator control panel of your fax machine is not closed properly on both sides.</p>	<p>Close the cover. Both sides of the cover must be firmly locked in place.</p>

Possible problems

How to clear a paper jam...

When documents are fed in and recording paper fed out, this can lead to minor problems from time to time which, however, you can easily put right yourself. Just one point to remember: your fax machine should not be switched off as this would delete all the stored fax messages.*


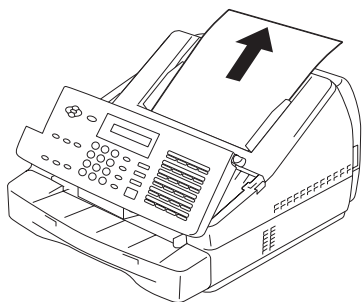


* If you switched off your fax machine by mistake and thus deleted any fax message stored in the memory, ask for a reception report to be printed out. This gives the sender and you can ask him to send the message again.

How to clear a document jam
Press the release button
top open the control panel cover.



Keep the power ON!

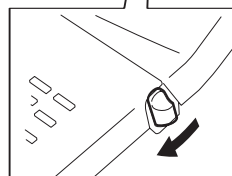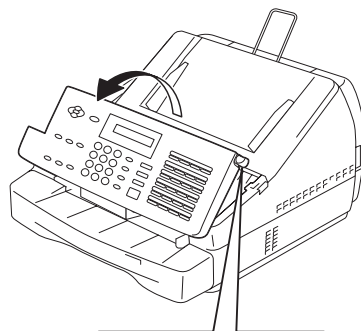

The jammed document
can be carefully removed.




Do not try to send the jammed document again. Use a carrier sheet or make a photocopy and transmit this instead.


Close the control panel.

Take care that the cover locks firmly into place.

Now by pressing STOP delete the error message.

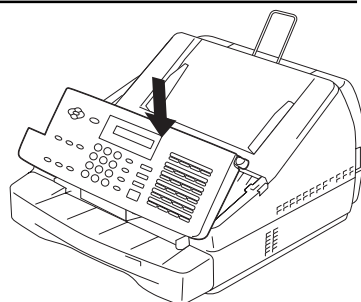


How to clear a recording paper jam

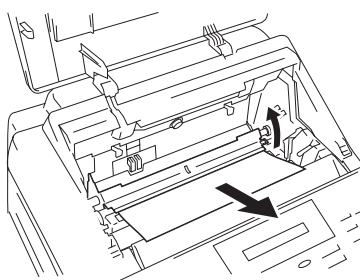

After opening

the rear cover of the housing or the top cover, you will see whether paper has jammed here. Carefully remove any jammed paper without applying force. Don't forget to firmly close the back cover again!

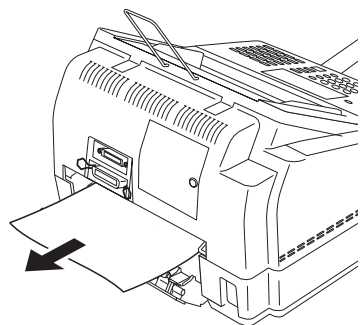



If paper has jammed under the process unit, lift the paper guide upwards and remove the process unit. You can then easily free any jammed paper without applying force.

Has the recording paper jammed around the fixer unit?

Then - if necessary - press the release lever of the fixer unit downwards and at the same time carefully pull out the jammed paper.



Caution: HOT!

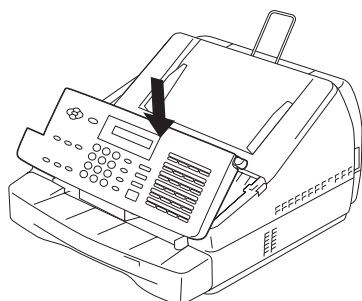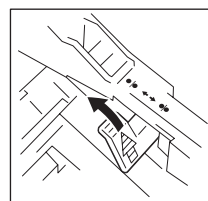


When closing the machine,

ensure that all covers firmly lock into place.



Do not touch any parts inside the machine other than those described here. The header cover may be very hot - even when the machine is switched off. Never open the recording paper cassette when paper is jammed.

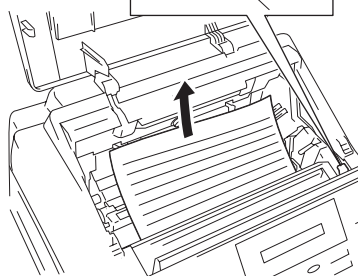

Handling faxes on your PC

System requirements

You can also use the features of your fax machine your PC. The fax functions can also be used in addition to the printer function. The following minimum requirements are essential in this respect:

- IBM compatible PC with i80486 processor or higher
- 8 MB RAM or higher
- Serial (V.24) interface for connection to the TF 610
- Microsoft Windows 3.11 / 95 operating system
- Fax software **TOSHIBA SmartLink**

Features

The following features are available in conjunction with the software **TOSHIBA SmartLink**:




The PC fax interface complies with the **fax class1** standard

Mode	Description
PC scanner	Scans documents into the PC via the document feeder of the fax machine.
PC fax, transmission	Files created under Windows can be transmitted directly via the fax machine (i.e. without being printed out)
PC fax, reception	Incoming faxes are transferred to the PC as an image file via the fax machine without being printed out. If the PC is not switched on, the pages are automatically printed out.
OCR	Received faxes or scanned texts are converted into readable ASCII text with the OCR module.


Connection to the PC

1. Switch off the PC and the TF 610.
2. Connect the 25-pin sub-D connector to the corresponding socket on the fax machine, and secure the connection with the connector screws.

 
Pin assignment of serial cable



Sub-D 9 pin socket (female)

 

Sub-D 25 pin socket (male)

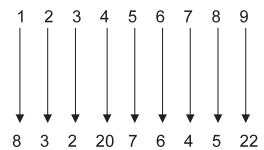

3. Connect the cable to the serial interface of your PC.



PC-Fax
Connect the TF 610 before the installation.

Handling faxes on your PC

Scanning documents into the PC

You can transfer your documents to your PC via the sheet feed of your TF 610. The document is then available as an image file in your PC, and can be processed as required.

*) This display indicates whether your PC is actually ready to receive.

The following conditions must be fulfilled:

- Ensure that the cable has been connected correctly
- The PC must be switched on
- The fax program must be loaded and active
- The fax program must be set to automatic reception


Otherwise, the TF 610 will display the following after a certain amount of time:

PC COMM. ERROR #001

In this case, clear the error message by pressing the STOP button, and remedy the problem



Documents scanned in this way are stored in the form of image files in your PC. An OCR program must process this file if it is to be integrated within a word processing program. This process is essential if the file is to be used as a text file.

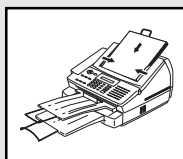

DOCUMENT SET

COMM.OPTION



TRAY SEND



1x



PC SCANNER



ENTER



PC READY ?



ENTER



DOC.READING M98%

TRANSMITTING TO PC

15-03 19:56 M 100%

Insert document with text side down

Document is ready

Press TX OPTIONS key

Page through the menu...

...until you reach the desired menu item

Confirm with ENTER

PC ready? *)

Confirm with ENTER

Return to the standby mode

Sending fax messages from the PC

If you have for instance created text or graphics via a word processing program, you do not need to print out the text or graphics in order to send a fax document. PC-fax Software transfers your document via the cable from your PC to the fax machine together with the fax number which you have specified when you were processing the document. Following internal transmission, the job is then handled as a normal job in your fax machine.

RECEIVING FROM PC

JOB ACCEPTED NO.007

15-03 19:56 S 89%

PC is transmitting the fax data to the fax machine

PC transfer complete: the job is stored as a new job in the stack

Return to the standby mode

Depending on the contents of the stack, the job is soon sent by the fax machine.

Handling faxes on your PC

Sending faxes to the PC

If you have connected a PC to your fax machine, you can send documents directly to your PC.

The following requirements are essential for this process:

- Function number 46 (receive to PC) is set to ON (for setting, [see page 55](#)).
- The fax software is loaded and activated.
- The connection to the PC has been established.

The following error message is displayed if your fax machine cannot reach the PC:

PC COMM. ERROR #001

In this case, the incoming fax document is printed out on the fax machine. The error message does not affect the ability of the fax machine to receive further documents.



A fax document received in this way is stored in the form of an image file in the PC. An OCR program must process a file before any received text can be integrated in a word processing program. This is essential if this file is to be used as a text file.

Your fax machine used as a PC printer

Introduction

Your fax machine can be used as a PC printer under Microsoft Windows 3.11 / 95 / N. For this purpose, you have to install a printer driver on the supplied disk. The printout speed very much depends on the performance of the connected PC. If software is to be updated from Win 3.11 to Win 95, we recommend that you uninstall the TOSHIBA printer driver before the update (see page 27).




The printer driver can be reinstalled when the software has been successfully updated to a higher Windows version.

Connection to the PC

You need a bidirectional parallel printer cable (IEEE 1284-1994 standard) for the connection to the PC.

1. Switch off the PC and the fax machine
2. Connect the PC and the fax machine with the printer cable
3. Switch the fax machine on, and then switch the PC on
4. Start Windows

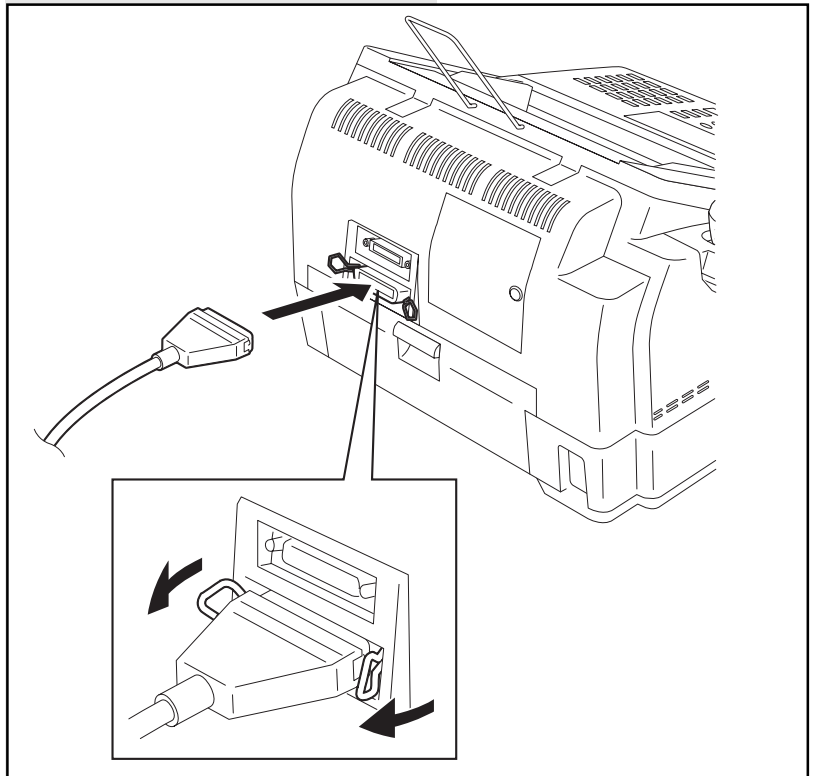

Your fax machine used as a PC printer


Install printer driver

The illustrated examples refer to the Windows 95 interface.


- Insert the installation disk in the drive of your PC
- Click on "Start"
- Select "Run" in the menu




- Click on the "Browse" button

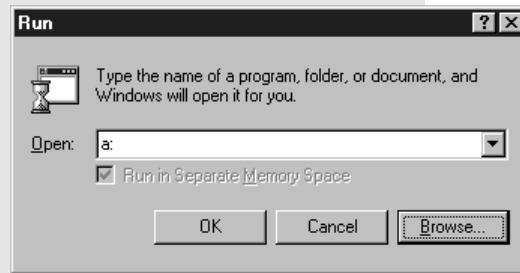

- Select the drive containing the installation disk
- Open the directory with the language of your choice

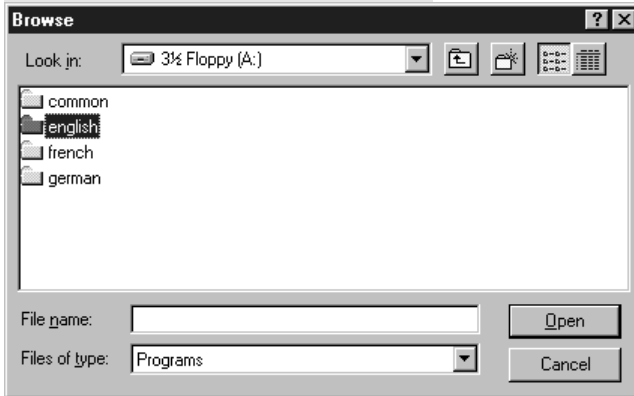

- Double click on the "Setup" entry

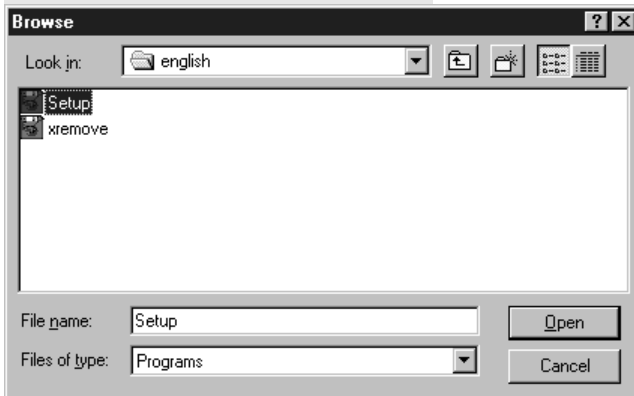

- Click on OK to start the installation




Your fax machine used as a PC printer

- Click on "Next"




- Select the printer port (LPT) where the fax machine is connected. LPT1 is the default setting.

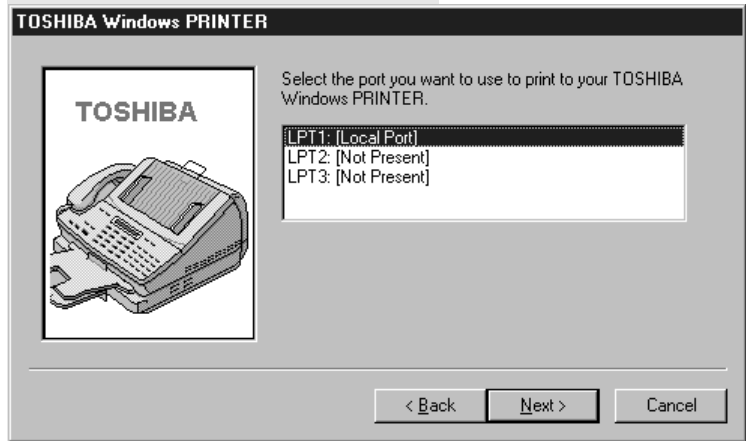

- If you wish, you can change the proposed printer name.
- If the fax machine is to be defined as the standard printer in Windows, click on "Yes"



- Click on "Finish"
- A new program group is created
- Remove the installation disk from the drive.

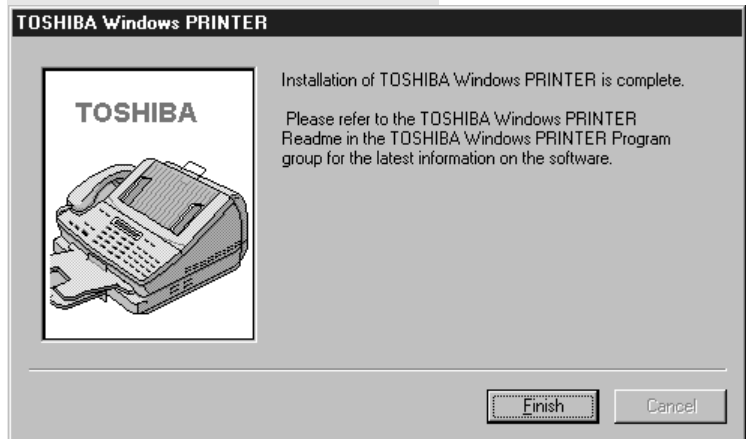

Your fax machine used as a PC printer

Settings of the printer driver

The printer driver has a wide range of settings for providing the best results in various print applications.

The following examples illustrate some of the most important settings.

Access the settings of the printer driver:




- Click on "Start"
- Select the menu item "Settings"
- Select the submenu item "Printers"

- Double click on the THOSHIBA printer driver.

- Click on the "Printer" menu
 - Select the menu item "Properties"
- The system opens the "Properties" window of the printer driver.

The "Properties" window consists of registers which can be selected with a mouse click. The printer functions are controlled by the registers "General" and "Details", which are automatically created during installation and contain technical program parameters, and also by the registers "Paper", "Graphic" and "Device Options".

These three registers are available in any Windows application; simply select the corresponding printer device in the program's own "File" menu.

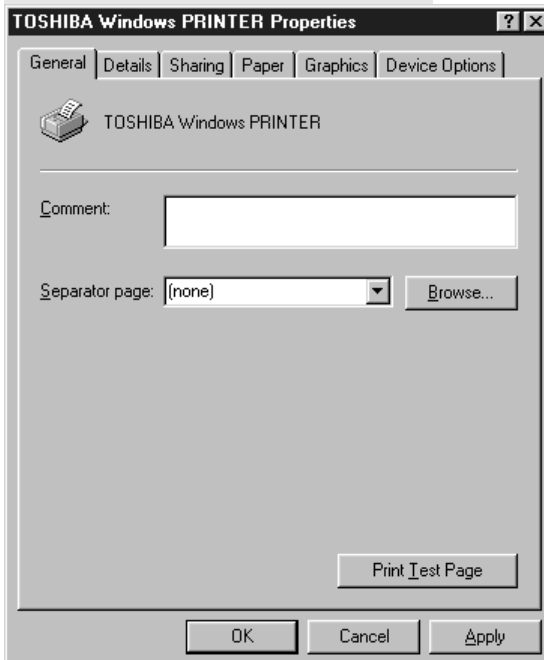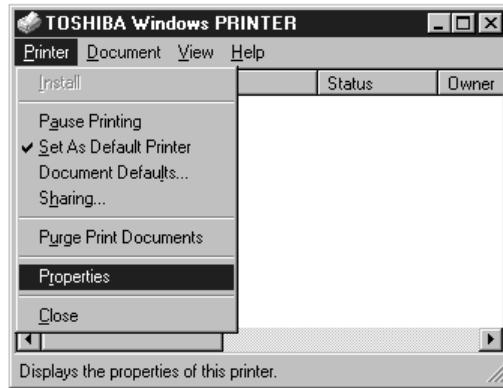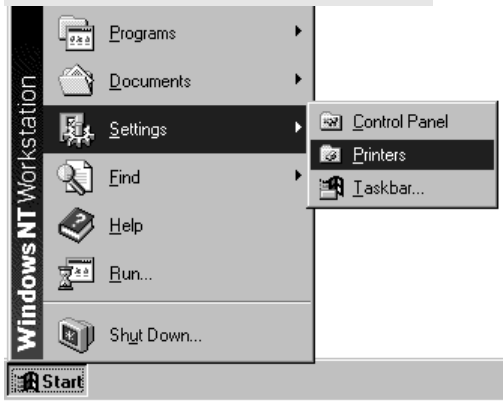

Your fax machine used as a PC printer

Contents of the "Paper" register:

Paper Size:

Size of the print paper

Orientation:

Landscape or portrait output

Paper Source:


Choice of paper cassette (permanent setting in TF610)

Copies:

Number of copies to be printed per page

More Options, Output Bin:

Facility for defining the printout sequence

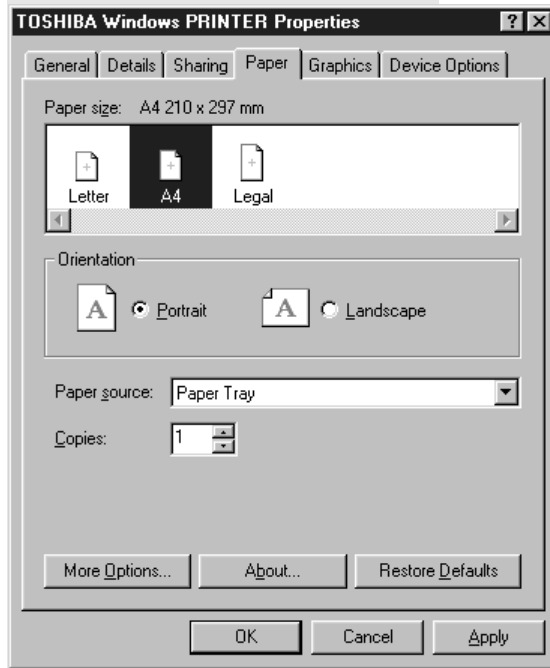

Contents of the "Graphics" register:

Resolution:

Choice of resolution (permanent setting in TF610)

Dithering:

Type of grey scale reproduction

None:

No grey scale reproduction

Coarse:

Coarse rastering

Fine:

Fine rastering

Line Art:

Grey reproduction with special patterns

Error Diffusion:


Airbrush effect, best grey reproduction



Processing speed varies with the choice of grey scale reproduction.

Intensity:

Use this slide bar to regulate the intensity of the printer (click on and drag the slide bar). Only meaningful for reproducing grey scales.

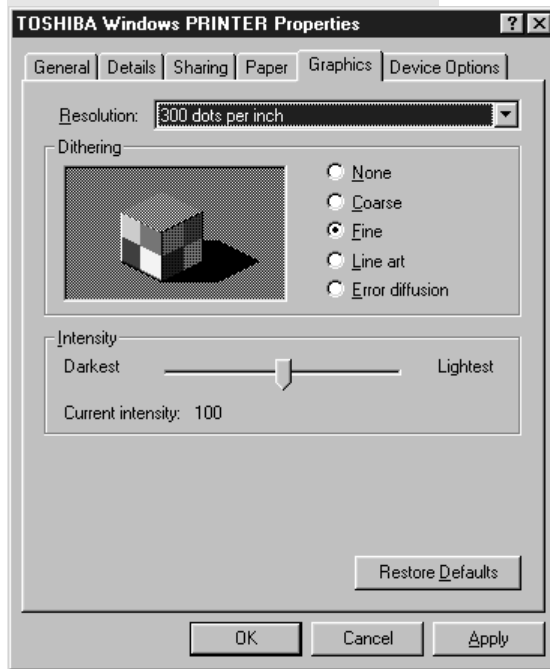


Your fax machine used as a PC printer

Contents of the "Device Options" register:

Print Quality:

Quality of printout (permanent setting in TF610)

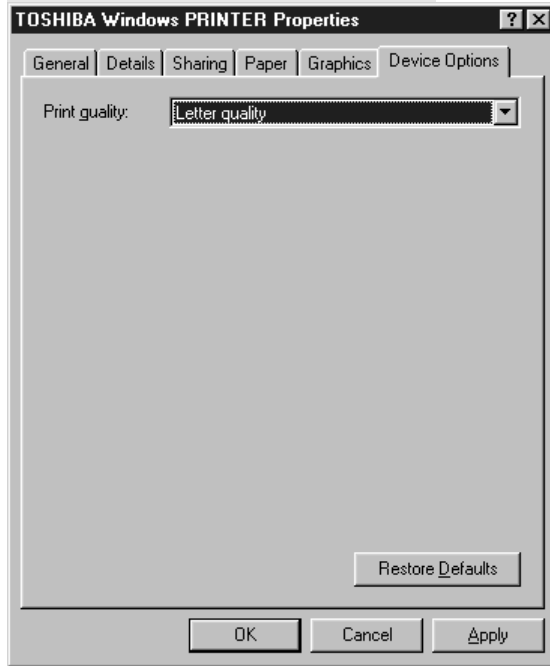


Printout

Documents are generally printed out with the "Print" command in the particular application.

As soon as the print job has been sent to the printer driver, the status window of the printer driver is displayed (depending on the particular setting, you have to click on the small rectangular symbol in the status line).

This window provides detailed information concerning the current print status. You are also notified of the current operating statuses of the printer: the current situation is indicated by graphical elements.

Use the "Pause", "Resume" and "Cancel" keys to monitor the print job at any time.

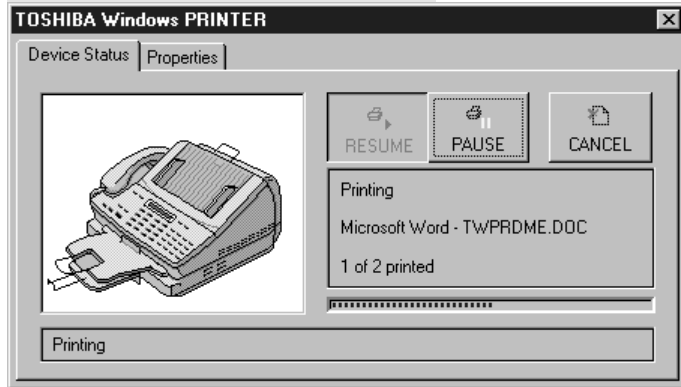

Your fax machine used as a PC printer



Delete printer driver

In order to delete the printer driver from the operating system, please proceed as follows (example from Windows 95):

- Click on the entry "TOSHIBA Windows Printer" in the task line.
- Double click on the "Uninstall" icon. You are subsequently informed of the deinstallation procedure. The printer driver is deleted when the system is next started.




If there is no entry in the task line, select the "Uninstall" icon via your program library

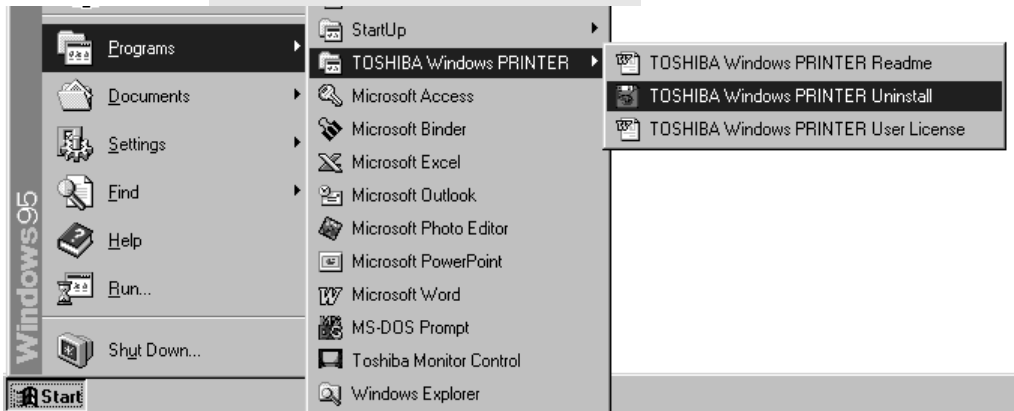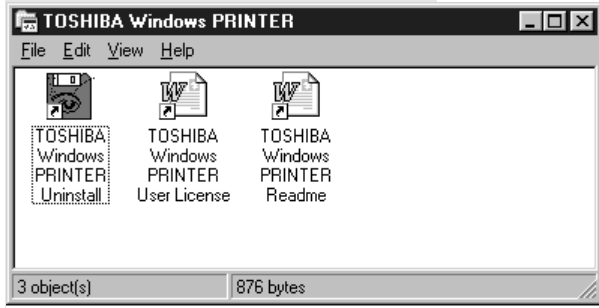

UK Connection information

Reset

You can restore the original factory settings or reset your fax machine if you are unable to eliminate the error code by taking the action suggested on [pages 63-66](#).

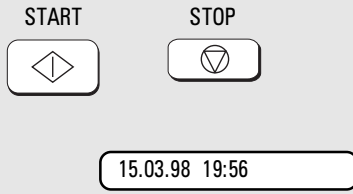

Switch off your fax machine.


Keep START and STOP pressed down while switching your machine back on.

As soon as a message is displayed, release.

After reset, repeat the installation procedure ([see page 10](#)).



The abbreviated numbers, date and time will NOT be erased.

We declare, that TOSHIBA is using  mark in compliance with EN 50 082-1, EN 55 022/B and EN 60 950

This TOSHIBA Facsimile Transceiver is intended for connection to public telecommunication services as follows:

By using the cable described as TEL LINE CABLE in the packaging list of the instruction manual. This cable plugs into the socket on the left hand side of the TF 610 which is marked LINE and the other end into the standard PSTN analogue socket found in the UK.

This terminal equipment complies with the following requirements:

- Group 3 fax modem
- Automatic call initiation
- Storage of telephone numbers for retrieval by a predetermined code
- Automatic dialling
- Automatic repeat attempts
- Call progress monitor
- Series connection facility
- LD or MF dialling
- Operation with or without dial tone being present.

Any other usage will invalidate the approval of the apparatus if as a result, it then ceases to conform to the standards against which approval was granted.

EPA ENERGY STAR



Addendum to the TF610 Operator's Manual

The United States Environmental Protection Agency (EPA) has introduced a voluntary program, the ENERGY STAR Program, to encourage the widespread and voluntary use of energy-efficient technologies that enhance the workplace, improve product performance, prevent pollution, and reduce your energy costs. As an ENERGY STAR Partner, Toshiba Europa (I.G.) GmbH has determined that this facsimile model meets the ENERGY STAR guidelines for energy efficiency. ENERGY STAR guidelines require that all ENERGY STAR facsimiles maintain very low power consumption during idle state or have a „Power Saver“ feature that will automatically stand-down to an idle state after a period of inactivity.

For more information on the ENERGY STAR Program, please contact:

ENERGY STAR Printers/Fax Machines
US EPA (62021)
Washington, DC 20460

ENERGY STAR is an U.S. registered mark.

 78 UK Connection information

TOSHIBA TF 610

Index

Alphabet dial memory	43	Journal	49	Receive footer	56
Alphabet dialling	31	Key beeps	58	Reception problems	66
Broadcast report	50	Key beeps, volume	58	Reception reduction	23
Broadcast, single	37	Language	11	Reception, automatic	19
Broadcast, stored	38	Last number redial	35	Reception, manual	19
Call counter	25	List, functions	51	Recording paper exit tray, install	8
Cleaner	5	List, groups	50	Recording paper, insert	7
Code	16	List, numbers	50	Reports, broadcast	50
Comline	60	List, reservation	50	Reservation list	50
Copy	24	List, dialling	32	Reservation, polling	40
Date	18	Memory card	9	Reset	78
Dialling method	14	Memory expansion	51	Resolution	35
Document jam	67	Memory reception	25	Ring, volume	58
Documents	27	Memory	29	Ringer	58
Drum counter	51	Menu	10	Scanning	69
Earth key	15	Number list	50	Screening volume	57
ECM	62	Obtain outside line	15	Screening	34, 57
Error codes	63	One-touch dialling keys	45	SmartLink	68
Error correction	62	One-touch dialling	31	Stack memory	28
Error messages	64	PABX	15	Switch, TAD	20
Establish connections	8	PABXs	56	Switch, telephone	20
Fax class1	68	Paper jam	67	TAD time	21
Flash key	15	PC	68	Telephone companies	32
Function list	51	Polling	39	Telephone directory	33
Functions	52	Power saver	61	Telephone	32
Group dialling	37, 38	Printer driver	72	Time	18
Group keys	45	Printer	71	Toner cartridge	6
Group list	50	Problems, receiving	66	Toner change	6
ID	12	Problems, transmission	65	Transmission problems	65
		Process unit	5	Transmission speed	41
		Provider	32	Transmission, delayed	36
				Transmission, stop	42
				Transport	5
				Transport fittings	5
				TX report	48, 59, 60
				User name	13

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>