



Uniden®

FP205

**LCD Display
Caller ID
Speaker Phone**

OWNER'S MANUAL

CONTENTS

Introduction	1
Features	1
Included in your package	1
Location and Controls	2
Setup.....	2
Connecting Handset Cord and Desktop Bracket.....	3
Connecting Line Cords and AC Adaptors	3
Setting Time and Date	3
Optional Backup Battery Installation	3
Set Time and Date	4
Digit Insert 0 Caller ID.....	4
Telephone Key and Switch Functions	5
Display Messages	6
Caller ID	7
Caller ID Operation	7
Speed Dial Numbers	8
Storing One-Touch Speed Dial Numbers	8
Storing name and Number	8
Phonebook	8
Dialling One-Touch Numbers.....	8
To Review Phonebook	8
To Edit a Phonebook Entry	8
To Delete a Phonebook Entry	8
Troubleshooting	9
Warranty	10

INTRODUCTION

Features

Caller Display
Up to 99 Caller ID memory
Call Back Function
NEW CALL light
Speaker Phone
Last number redial
Last 10 numbers call back
FLASH button
REDIAL/PAUSE button
Message waiting function
8 one-touch memories
Up to 70 Phonebook memories
Clock

Included in your package

1 - Handset with curly cord and phone base
1 - Telephone line cord
1 - Owner's manual
1 - AC Adaptor
1 - Desktop Mount Bracket

Optional extras

4 - AAA size 1.5V batteries

TIP

To get the most from your phone, please read the Owner's Manual thoroughly.

 
LOCATION OF CONTROLS

TIP


The earcap of this telephone may attract and retain small metallic objects.

TIP

This unit is not waterproof. Do not expose this product to rain, water, moisture or any other liquid.

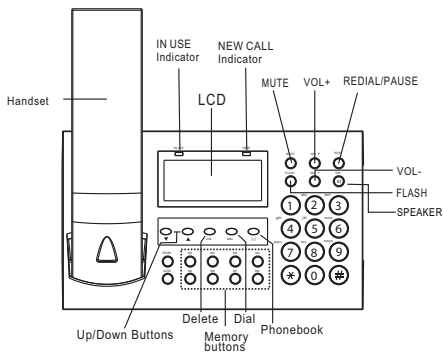

SETUP

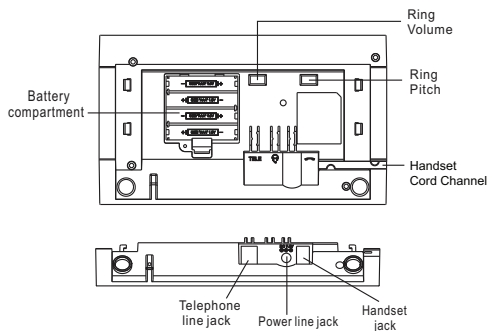 



Connecting Handset Cord and Desktop Bracket

1. Plug the handset cord into the handset jack located at the rear of the phone.
2. Route the handset cord through the handset cord channel.
3. Locate the Desktop Bracket over the positioning posts at the rear of the phone and slot in place. The handset cord channel will be secured by the Desktop Bracket.

Connecting Line Cords and AC Adaptor

1. Plug one end of the supplied telephone cord into the telephone line jack located at the rear of the phone.
2. Plug the other end into the telephone line wall jack.
3. Plug the AC Adaptor lead into the power line jack at the rear of the phone.
4. Plug AC Adaptor into a standard wall outlet and switch it on.

Optional Backup Battery Installation

Batteries may be used instead of the supplied AC Adaptor.

 
1. Remove the battery compartment cover.
2. Fit 4 x AAA alkaline batteries.
3. Replace the cover.

Based on ½ hour use per day, good alkaline batteries should last 2-3 months.



If using the AC Adaptor, Batteries are not required for normal operation.

Always ensure telephone cord is disconnected before opening the battery compartment door and installing batteries.

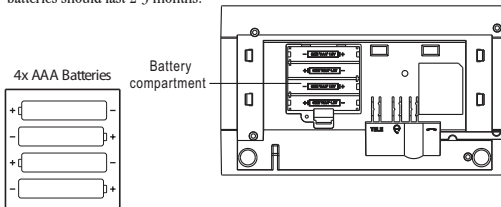



Telecom New Zealand Customers: this code is already set to "ON".

Australian Customers: This code is already set to "OFF".

Setting Time and Date

If you subscribe to a Caller ID Service, your time and date will automatically be set for you when you receive your first call to this unit.

1. Press and hold **(FLASH)**, display shows SET TIME.
2. Use **(V)** and **(A)** to select the correct number, press **(DIAL)** to confirm and move to the next digit, HH:MM DD/MM.
3. Press **(DEL)** to exit.

Digit Insert 0 Caller ID

To correctly display and dial Call ID numbers, you may need to insert a digit at the beginning of your telephone number. (eg: in New Zealand, Telecom requires a '0' to be inserted.)

New Zealand:

If you subscribe to Telecom New Zealand, this code has already been set for you to 'ON'. If you subscribe to another telephone company, please set the insert 0 to "ON".

If this phone is used with a business PABX - consult the PABX manufacturer for the correct setting.

Australia:

For private household telephone lines, set insert 0 to **OFF**.

If this phone is used with a business PABX - consult the PABX manufacturer for the correct setting.

While the handset is on the base:

1. Press **(DEL)** button twice quickly. **INSERT 0 OFF** or **INSERT 0 ON** will be displayed.
2. Use **(V)** and **(A)** to choose on or off.
3. Press **(DIAL)** to store.

TELEPHONE KEY and SWITCH FUNCTIONS

Ring Volume (Hi/Lo/Off)

Set the ring volume switch to the desired level (Hi, Lo or Off). The maximum level is Hi. The switch is located at the back of the unit.



Ring Pitch (Hi/Lo)

Set the ring pitch switch to the desired level (Hi or Lo). The switch is located at the back of the unit.

Regular dialling

Lift the handset and listen for dial tone. Then enter the telephone number you wish to call. The dialled number will appear on the display screen whenever you make a call.






Redial function

To redial the previous number you called. Lift the handset or press  and then press .



Last 10 number redial

1. With the handset on the cradle press .
2. Press  or  to review the last 10 numbers dialled.
3. Pick up the handset or press  to dial the selected number.



Pause function

To insert a temporary pause. Press the /pause button during a dialling sequence. For example, in some cases when dialling an international number you need to place a pause between the clusters of numbers to allow the telephone company, relaying the call, time to process it. The number 011-886-22-795-1234 would need to be dialled 011 /pause 886, /pause 22, /pause 795, /pause 1234.


 
 
Mute button

For privacy when you are required to consult with a person standing next to you and do not wish the party on the line to hear your conversation, press . MUTE will be displayed. Press  again to resume the conversation.

Handset Volume

During the conversation press  or  to set the desired handset volume between volume 1 (min) and volume 4 (max).



Flash button - Call Waiting

If the Call Waiting tone sounds while you are on a call -
New Zealand: Press the  button to switch between callers.
Australia: Press  then  to switch between callers.

Speaker Button

To switch your call to speaker phone, press  and hang up the handset. To switch back, simply pick up the handset and speak. You can make, receive and dial in the speaker mode.

Speaker Volume

During the conversation press  or  to set the desired speaker volume between volume 1 (min) and volume 4 (max).

TIP

For 'Call Waiting' to operate you must subscribe to this service through your local telephone company. If you do not have this service, then pressing the flash button during a call may disconnect the caller.

DISPLAY MESSAGES

TIP

For LCD messages to operate, you must first subscribe to the Caller ID service through your local telephone company.

 
Message Waiting - MSG

If you have arranged a voice mail service with your telephone company, the LCD screen will display MESSAGE WAITING for a few seconds after a call is received. The screen will then display MSG in the upper left corner until you retrieve the message from the voice mail service. MESSAGE WAITING will be saved as a Caller ID record. The MSG function may not be available in all areas.



Total & New Calls

This displays the total calls received and which of those are new calls.



No Calls

When all calls have been deleted the screen will display NO CALL.



 
Private

If a caller has exercised the option which prevents the caller's name and number from being sent, the screen will display PRIVATE.






Repeat Calls

If the same call is received again on the same day, REPEAT will be displayed in the top right of the LCD screen.



End of List

 This is displayed when you use the review  or  and have reached the top end of the call history list. If there are no calls in the list the LCD screen displays NO CALL.




Out of Area

This will be displayed when the caller's telephone company does not provide Caller ID services or does not provide name and number services via the long distance network.



Battery Low Indicator

 If you are using batteries, this icon is displayed when the batteries require replacing.



TIP


The LCD display will not operate if the AC Adaptor is not connected or if the batteries are flat or not installed.

TIP

For Caller ID features to operate you must first subscribe to this service through your local telephone company.

CALLER ID

 A Caller ID record consists of the following information:

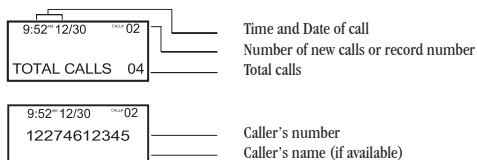

CALLER ID OPERATION

New Call Indicator

The red indicator light of your phone will flash when you have New Calls. It will continue to flash until you have reviewed the calls displayed on the LCD screen.

Review Call Records

Use the **review** (▲) or (▼) buttons to scroll through the caller list. At the end of the call record list, **END OF LIST** will be displayed.

Call Records

Your phone stores up to 99 Call records. When the list is full a new incoming call will automatically delete the oldest call record.

Call Back feature

You can automatically dial the number of a person who has recently called.

1. Select the caller that you wish to call back by pressing the **review** (▲) or (▼) button.
2. Pick up the handset of press (◀) and the number will be dialed.

Del button - for deleting Caller ID records

Individual Delete

1. With the handset in its cradle, press (▲) or (▼) buttons or select the number you wish to delete.
2. Now press the (DEL) button. The LCD screen will show **DEL?**
3. To confirm the number chosen is to be deleted, press (DEL) again. The number will be deleted.

Delete All

1. With the handset in its cradle, press (▲) or (▼) buttons or select the number you wish to delete.
2. Press and hold (DEL) and **ALL DEL?** will be displayed.
3. Press (DEL) to delete all records.

TIP

A Speed Dial label has been provided to record Speed Dial names. You may wish to stick it on the inside of the handset.

SPEED DIAL NUMBERS

Three speed dial numbers can be programmed into the memory of your telephone (**MT** - **MB**). Each memory location can store a maximum of 16 digits.

Storing One-Touch Speed Dial Numbers

1. Press **(STORE)**. The LCD shows -->
2. Enter phone number using the keypad (up to 16 digits).
3. Press **(STORE)**. The LCD shows -->?.
4. Press the speed dial location you wish to store the number to **(MT)** - **(MB)**.
5. The LCD shows SAVE OK.

Dialing One-Touch Numbers

To dial a stored memory number:

1. Pick up the handset or press **(CALL)**.
2. Press the desired speed dial button, **(MT)** - **(MB)**.

PHONEBOOK

Storing Name and Number

1. Press and hold **(BOOK)** until a new entry appears with the cursor at the second line.
2. Enter the number using the keypad (up to 20 digits). Press **(REDIAL)** to insert a pause P. Use **(DEL)** to delete previous digit. Press **(BOOK)** to confirm number.
3. Enter the name using the keypad. Press **(DIAL)** to move the cursor to the right. Use **(DEL)** to delete previous digit. Press **(BOOK)** to confirm name. Number and Name are stored and cursor appears at new entry.

To Review Phonebook

Press **(BOOK)**. Use **(DOWN)** or **(UP)** to review. You can quickly review an entry by pressing the first letter of the name, the LCD will display the matching name(s).

To Edit a Phonebook Entry

Review an entry as per instructions above. Press and hold **(BOOK)** until the first character of the name flashes. Edit the name or press **(DEL)** to move cursor to edit the number.

To Delete a Phonebook Entry

During review process select the entry you wish to delete. Press **(DEL)** once, the LCD shows DEL?. Press **(DEL)** again to delete the entry.

TROUBLESHOOTING

Blank or faint screen

Check the line cord, AC Adaptor or replace batteries.

Batteries not lasting

Review **new calls** immediately to prevent the **new call** light flashing for extended periods.

Based on ½ hour use per day, good alkaline batteries should last 2-3 months.

Caller ID will not work properly

Your phone stores up to 99 Call records. When the list is full a new incoming call will automatically delete the oldest call record.



Phone will not ring

You may have too many communication devices connected to a single line.

A communication device can be a phone, a modem or fax machine. Disconnect some devices.

Check that Ring Volume switch at rear of phone is not set to OFF.

How can the listening volume be increased?

Adjust the handset or speaker volume by pressing  or  during a conversation.

No dial tone

Verify that you are using the correct line cord and that it is plugged in correctly.

Caller ID

Please check with your service provider that your subscription to this service is active. If the screen is blank check the AC adaptor or replace batteries.

Please refer to our website for further information and frequently asked questions.

New Zealand - www.uniden.co.nz

Australia - www.uniden.com.au

WARRANTY

WARRANTY

One Year Limited Warranty UNIDEN FP205 CORDED PHONE

Important: Evidence of original purchase is required for warranty service.

Warrantor: Uniden Australia Pty Limited A.B.N. 58 001 865 498

Uniden New Zealand Limited

Warranty is only valid in the original country of purchase.

ELEMENT OF WARRANTY:

Uniden warrants to the original retail owner for the duration of this warranty, its FP205 corded phone (herein after referred to as the Product), to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

WARRANTY DURATION:

This warranty to the original retail owner only, shall terminate and be of no further effect 1 year (12 months) after the date of original retail sale. This warranty will be deemed invalid if the Product is:

- (A) Damaged or not maintained as reasonable and necessary,
- (B) Modified, altered or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden,
- (C) Improperly installed,
- (D) Repaired by someone other than an authorized Uniden Repair Agent for a defect or malfunction covered by this warranty,
- (E) Used in conjunction with any equipment or parts or as part of a system not manufactured by Uniden, or
- (F) Where the Serial Number label of the product has been removed or damaged beyond recognition.

Warranty only valid in the country of original retail/sale.

PARTS COVERED:

This warranty covers for one (1) year, the Product and included accessories.

STATEMENT OF REMEDY:

In the event that the Product does not conform to this warranty at any time while this warranty is in effect, the warrantor at its discretion, will repair the defect or replace the Product and return it to you without charge for parts or service. This warranty does not provide for reimbursement or payment of incidental or consequential damages. This EXPRESS WARRANTY is in addition to and does not in any way affect your rights under the TRADE PRACTICES ACT 1974 (Cth) (Australia) or the CONSUMER GUARANTEES ACT (New Zealand).

PROCEDURE FOR OBTAINING PERFORMANCE OR WARRANTY:

In the event that the Product does not conform to this warranty, the Product should be shipped or delivered, freight pre-paid, with evidence of original purchase (e.g. a copy of the sales docket), to the warrantor at:

UNIDEN AUSTRALIA
SERVICE DIVISION
345 Princes Highway,
Rockdale NSW 2216
Fax (02) 9599 3278
www.uniden.com.au

UNIDEN NEW ZEALAND LIMITED
SERVICE DIVISION
150 Harris Road,
East Tamaki, Auckland
Fax (09) 274 4253
www.uniden.co.nz

Customers in other States should ship or deliver the Product freight pre-paid to their nearest Uniden Authorized Repair Centre (Contact Uniden for the nearest Warranty Agent to you).



Uniden®

© 2007

Uniden Australia Pty Limited

Uniden New Zealand Limited



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>