

# Uniden®

**DCX 770**

**Expansion Handset**

**OWNER'S**

**MANUAL**

**OWNER'S MANUAL**

# Welcome

Congratulations on your purchase of the Uniden DCX770 handset and charger. This expansion handset is for use with the DMX7 series (e.g., DMX776, DMX778, etc.). Each main base model in this series can support up to four handsets. You can place a fully-featured cordless handset anywhere as long as there is AC power to connect the handset charging cradle.

## IMPORTANT

The DCX770 expansion handset will not operate unless it has been registered to your main base. This manual describes how to set up and connect your new handset; for instructions on operating your new handset, refer to the owner's manual supplied with your main base.

To purchase expansion handsets (DCX770), visit our web site at [www.uniden.com](http://www.uniden.com).

## Backward / Forward Compatibility

Your phone may be compatible with other Uniden 2.4 GHz Digital Expandable Systems. Please visit our website at [www.uniden.com](http://www.uniden.com).

## Checking the Package Contents

Make sure you have received the following items in the package. If any of these items are missing or damaged, contact the Uniden Parts Department.

- Cordless Handset
- Charging Cradle
- Battery Pack (BT-0001) (pre-installed)  
(Capacity: 650 mAh, 3.7V)
- AC Adapter (AD-0005)  
(INPUT: 120V AC 60Hz) (OUTPUT: 9V DC 210 mA)
- Audio Recording Cable
- Holster
- This Owner's Manual
- Other Printed Material

Uniden Parts Department at (800) 554-3988

 
Hours: M-F 8:00 a.m. to 5:00 p.m. CST.

or visit our website at

[www.uniden.com](http://www.uniden.com)

## Step 1: Connect the Charger

- 1 Connect the AC adapter to the **DC IN 9V** jack and to a standard 120V AC wall outlet.
- 2 Set the charger on a desk or tabletop, and place the handset in the charger with the keypad facing forward.
- 3 Make sure the **charge** LED illuminates. If the LED does not illuminate, check to see that the AC adapter is plugged in and that the handset makes good contact with the charger charging contacts.

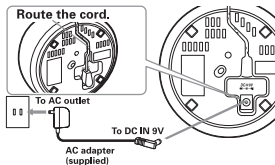

- **Use only the supplied AD-0005 AC adapter. Do not use any other AC adapter.**
  - Place the charger close to the AC outlet so that you can unplug the AC adapter easily.
- 4 Place the handset in the charging cradle with the keypad facing forward. Charge the handset for 15-20 hours before using. Recharge your handset on a regular basis by returning the handset to the charger after each phone call.

## Step 2: Register the Handset

### YOU NEED TO REGISTER THE DCX770 TO A MAIN BASE BEFORE USE!

- 1 Be sure the handset battery is fully charged.
- 2 With the main base in standby mode (i.e., not being used), place the handset in the main base to begin registration.

#### For compatible models in the DCT6 and DCT7 series:

- 1) Disconnect the AC adapter.
- 2) While holding the following key, connect the AC Adapter:

DCT646 & DCT746 models - *find handset*

DCT6465 & DCT6485 models - *intercom*

DCT648 models - *intercom/find handset*

DCT748 models - *find/skip*

Keep pressing the key until the **CHARGE** LED starts to blink.

- 3) On the handset, press and hold # until you hear beep.

#### For compatible models in the DCT7488 series:

- 1) Press the **MENU** soft key in the standby mode.
- 2) Select **H5 Registration**, and press the **OK** soft key.
- 3) On the handset, press and hold # until you hear beep.

- 3 While the handset is registering, Handset Registering will appear in the handset LCD. When Registration Complete is displayed, the handset has been registered to the base. If Registration Failed appears, please try these steps again.

## De-register the handset

- 1) Press and hold *end* and # for more than 5 seconds.
- 2) Select the handset ID to be de-registered from the list. The phone will ask you to confirm the deregistration. Select **Yes**.



To de-register expansion handsets DCX640 or DCX700, refer to their owner's manual or download from Uniden's website at [www.uniden.com](http://www.uniden.com).

# Using Your Expansion Handset

 
Now that your new handset is registered, it can perform all the same functions as the handsets originally included with your phone. With your new handset, you can

- Transfer calls or intercom between handsets
- Use two handsets as 2-way radios in DirectLink mode
- Use two handsets as a baby/room monitor
- Hold 3 or 4 way conference calls (depends on the model)
- Access the integrated answering device or voice mail using Handset
- Send Text Messages between Handsets (DMX7 Series Only)
- Record Distinctive Ringer Tones
- Customize Handset with Animations and Wall Paper Displays
- Customize Reminder Displays using Calendar

See the owner's manual that came with your main base for complete instructions on operating your new expanded digital phone (You can download owner's manual from our website at [www.uniden.com](http://www.uniden.com)).


## Using the joystick

The joystick makes it easy to use your phone. The four most commonly used functions are accessible just by moving the joystick:

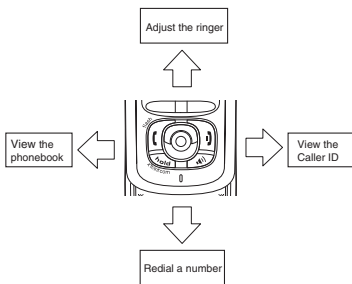


You will also use the joystick to make menu selections. Highlight the option you want by moving the joystick up, down, right, or left. This will move the cursor; the option currently highlighted appears in reversed out text:

 - 1) Press the center of the joystick.
- 2) Select the MENU soft Keys.

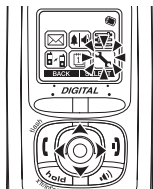

To exit the **MENU** and return to standby, press the **end** key.

 Select the highlighted option by pressing the center of the joystick. (You can also press the **OK** soft key.) Anytime the display prompts you to press OK or Enter, you can press the center of the joystick.

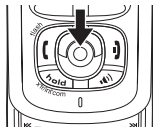

You can go back to the previous menu at any time by pressing the **BACK** soft key.

## Using your handset with compatible DCT6 and DCT7 series phones




- To get more information on DCX770 handset features, download DMX7 series owner's manual from our web site at [www.uniden.com](http://www.uniden.com).
- Not all features are available when this handset is used with the DCT6 or DCT7 series main base. If you want to use all of this handset's features, use it with a DMX7 series base.

The DCX770 has many new features. You can record a ringer from any audio source, select animation on the display, and set alarms to remind you of important events.

### Record Ringer Tones

1) Connect the audio recording cable to the handset and sound source (e.g. stereo or cd player). Insert one end of the audio recording cable into the handset's headset jack and the other end into the sound source.

You can also simply use the handset's microphone by holding the handset close to the sound source.

2) Select menu option .

3) Go to Record Ringer.

4) To start recording, press the **RECORD** soft key. The message counter displays 60 and then begins to count down.


5) When you are finished recording, press the **STOP** soft key. The phone will play the recorded ringer.

6) To store the ringer, press the Joystick or the **SAVE** soft key.


7) Enter the title of this ringer. If you don't enter a title, the phone will store it as "Recorded ring."

8) Press **OK** soft key.


### Set Animation Displays

- 1) Select menu option .
- 2) Scroll to **Animations** and select.
- 3) To preview Animations press the **VIEW** soft key.
- 4) Press the **OK** soft key.


### Set Wallpaper Displays

- 1) Select menu option .
- 2) Scroll to **Themes** and select.
- 3) To preview wallpaper press the **VIEW** soft key.
- 4) Press the **SELECT** soft key.


### Set Keypad Lock

- 1) Select menu option .
- 2) Scroll to **Keypad Lock** and select.
- 3) Select **Lock**, and press the **OK**.  
You'll hear a confirmation tone, and your keypad is locked.  
Unlock your keypad by going to **Keypad Lock** and selecting **Unlock**.  
To unlock the keypad temporarily, press any key on the upper part of the handset, and press **tone/\*** in 20 seconds.


### Set Backlight Display Color

- 1) Select menu option .
- 2) Scroll to **Backlight Color** and select.
- 3) Press the **OK** soft key.

### Scheduling Reminders

- 1) Select menu option .
- 2) Press the **SKDL** soft key, then press the **OPTION** soft key.
- 3) Scroll to **New Entry** and select.
- 4) Use the cursor to select the date and time of the reminder.
- 5) Press the center of the joystick.
- 6) To set reminder tone, go to the second line and select.
- 7) To enter a name or reminder text, go to the third line and enter.  
You can enter up to 32 characters.
- 8) Press the center of the joystick when you're finished.
- 9) Press the **DONE** soft key.

### Editing/Deleting Reminders

- 1) Select menu option .
- 2) Press the **SKDL** soft key and select the reminder.
- 3) Edit the date, time, reminder tone, and text the same way you entered them for a new entry.  
To delete reminder, select the reminder and press the **OPTION** soft key, and select **Delete entry**. To delete all reminders, select **Delete All**. Press the **OK** soft key.

## Creating and Editing Phonebook Entries

To go to the phonebook, press the joystick to the left and press the **OPTION** soft key.


Select **New Entry**. Enter the name, number, unique ring, unique display, phonebook group, and speed dial as you want. Press the center of the joystick to enter each entry and confirm the selection. When you're finished, press the **DONE** soft key to save this phonebook entry.

# Battery Information

## Low battery alert

When the batteries are very low and need to be charged, the phone is programmed to eliminate functions in order to save power.

The batteries need to be charged when:

- The empty battery icon  appears.
- **Low Battery** appears in the display.

If the phone is in standby mode, none of the keys will operate. If you are on a call, complete your conversation as quickly as possible, and return the handset to the charging cradle.

## Cleaning the battery charging contacts

To maintain a good charge, it is important to clean the charging contacts on the handset once a month.

Using water only, dampen a cloth to clean the charging contacts. Then make sure to go back over the charging contacts with a dry cloth before returning the handset to the charger to charge.



 
**Caution:** Do not use paint thinner, benzene, alcohol, or other chemical products. Doing so may discolor the surface of the telephone and damage the finish.



# Installing a Replacement Battery

Follow the steps if you need to replace a battery.

- 1** Press down on the handset battery case cover (use the finger indention for a better grip) and slide the cover downward to remove.
- 2** Remove the existing battery and unplug the connector from the jack.
- 3** Plug the battery pack connector (red, black, and white wires) into the jack inside the battery compartment. (The connector notches fit into the grooves of the jack only one-way.) Match the wire colors to the polarity label in the battery compartment, and push the connector in until you hear a click.
- 4** Make sure you have a good connection by slightly pulling on the battery wires. If the connection is secure, the battery jack will remain in place.
- 5** Place the battery case cover back on the handset by sliding it upwards until it clicks into place.

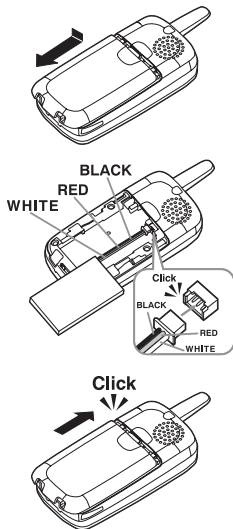

- **Use only the Uniden battery (BT-0001) supplied with your phone.** Replacement batteries are available through the Uniden Parts Department. (See page 2.)
- Don't place the charger in direct sunlight or subject it to high temperatures. The battery may not charge properly.

Rechargeable Lithium Ion Batteries  
Must Be Recycled or Disposed of Properly



# I.C. Notice

## TERMINAL EQUIPMENT

**NOTICE:** This equipment meets the applicable Industry Canada Terminal Equipment Technical Specifications. This is confirmed by the registration number. The abbreviation, IC, before the registration number signifies that registration was performed based on a Declaration of Conformity indicating that Industry Canada technical specifications were met. It does not imply that Industry Canada approved the equipment.

**NOTICE:** The Ringer Equivalence Number (REN) for this terminal equipment is marked on the equipment itself. The REN assigned to each terminal equipment provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed five.

## RADIO EQUIPMENT

The term "IC:" before the radio certification number only signifies that Industry Canada technical specifications were met.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. "Privacy of communications may not be ensured when using this telephone."



As an Energy Star<sup>®</sup> Partner, Uniden has determined that this product or product models meets the Energy Star<sup>®</sup> guidelines for energy efficiency. Energy Star<sup>®</sup> is a U.S. registered mark.

### THE FCC WANTS YOU TO KNOW

Changes or modifications to this product not expressly approved by Uniden, or operation of this product in any way other than as detailed by the owner's manual, could void your authority to operate this product.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Privacy of communications, may not be ensured when using this phone.

To insure the safety of users, the FCC has established criteria for the amount of radio frequency energy various products may produce depending on their intended usage. This product has been tested and found to comply with the FCC's exposure criteria. For body worn operation, the FCC RF exposure guidelines were also met when used with the Uniden accessories supplied or designed for this product. Use of other accessories may not ensure compliance with FCC RF exposure guidelines and should be avoided.

Uniden works to reduce lead content in our PVC coated cords in our products and accessories.

#### **Warning!**

The cords on this product and/or accessories contain lead, a chemical known to the State of California to cause birth defects or other reproductive harm. ***Wash hands after handling.***

## One Year Limited Warranty

**Important:** Evidence of original purchase is required for warranty service.

**WARRANTOR:** UNIDEN AMERICA CORPORATION ("Uniden")

**ELEMENTS OF WARRANTY:** Uniden warrants, for one year, to the original retail owner, this Uniden Product to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

**WARRANTY DURATION:** This warranty to the original user shall terminate and be of no further effect 12 months after the date of original retail sale. The warranty is invalid if the Product is (A) damaged or not maintained as reasonable or necessary, (B) modified, altered, or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, (C) improperly installed, (D) serviced or repaired by someone other than an authorized Uniden service center for a defect or malfunction covered by this warranty, (E) used in any conjunction with equipment or parts or as part of any system not manufactured by Uniden, or (F) installed or programmed by anyone other than as detailed by the owner's manual for this product.

**STATEMENT OF REMEDY:** In the event that the product does not conform to this warranty at any time while this warranty is in effect, warrantor will either repair or replace the defective unit and return it to you without charge for parts, service, or any other cost (except shipping and handling) incurred by warrantor or its representatives in connection with the performance of this warranty. Warrantor may replace the unit with a new or refurbished unit. THE LIMITED WARRANTY SET FORTH ABOVE IS THE SOLE AND ENTIRE WARRANTY PERTAINING TO THE PRODUCT AND IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES OF ANY NATURE WHATSOEVER, WHETHER EXPRESSED, IMPLIED OR ARISING BY OPERATION OF LAW, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow this exclusion or limitation of incidental or consequential damages so the above limitation or exclusion may not apply to you.

**LEGAL REMEDIES:** This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This warranty is void outside the United States of America and Canada.

**PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY:** If, after following the instructions in the owner's manual you are certain that the Product is defective, pack the Product carefully (preferably in its original packaging). Disconnect the battery from the Product and separately secure the battery in its own separate packaging within the shipping carton. The Product should include all parts and accessories originally packaged with the Product. Include evidence of original purchase and a note describing the defect that has caused you to return it. The Product should be shipped freight prepaid, by traceable means, to warrantor at:

### Uniden America Corporation

Parts and Service Division

4700 Amon Carter Blvd.

Fort Worth, TX 76155

(800) 297-1023, 7:00 a.m. to 7:00 p.m. Monday through Friday; 9:00 a.m. through 5:00 p.m., Saturday, Sunday and Holidays (except Thanksgiving and Christmas); all Central Time

# Uniden®

May be covered under one or more of the following U.S. patents:

4,523,058	4,595,795	4,797,916	5,381,460	5,426,690	5,434,905	5,491,745
5,493,605	5,533,010	5,574,727	5,581,598	5,650,790	5,660,269	5,661,780
5,663,981	5,671,248	5,696,471	5,717,312	5,732,355	5,754,407	5,758,289
5,768,345	5,787,356	5,794,152	5,801,466	5,825,161	5,864,619	5,893,034
5,912,968	5,915,227	5,929,598	5,930,720	5,960,358	5,987,330	6,044,281
6,070,082	6,125,277	6,253,088	6,314,278	6,418,209	6,618,015	6,671,315
6,714,630						

FOR  
ACCESSORIES,  
GO ONLINE @  
WWW.UNIDEN.COM

**REGISTER ONLINE TODAY!**

**THANK YOU FOR BUYING A UNIDEN PRODUCT.**

A World Without Wires

**Uniden®**

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>