

## EXPLANATION OF GRAPHIC SYMBOLS:



The lightning flash with the arrowhead within a triangle is intended to alert the user that parts inside the product are capable of producing an electric shock.

 


The exclamation point within a triangle is intended to alert the user that important operating and servicing instructions are being provided.

**WARNING:** TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

 


## *REMIRS* REMOTE CONTROL IR DISTRIBUTION BOX

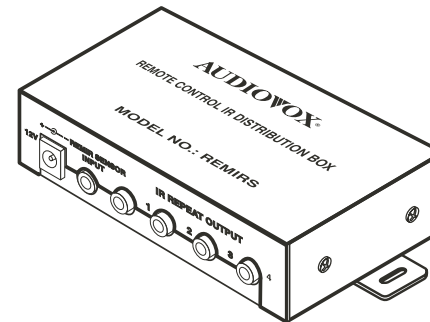

## OPERATING INSTRUCTION

FRONT VIEW

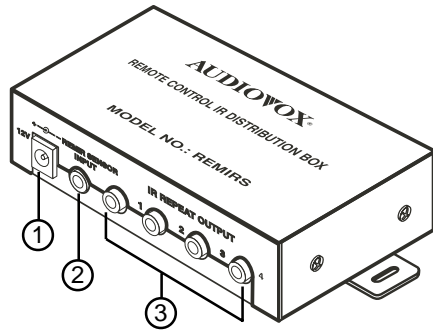 


ITEM	FUNCTION
1	DC INPUT
2	REMIR SENSOR INPUT
3	REPEAT INFRARED SIGNAL OUTPUT

**Operation Instruction**

1. Plug the DC Power cord into the REMIRS DC input jack (1).
2. Connect the DC power cord's other end to DC 12V and ground.  
(Black for “-” and Red for “+”).
3. Insert the REMIR Sensor cable to the REMIR Sensor input jack (2).

4. Insert the IR Repeater cables into the **IR REPEATER OUTPUT** jack. Connect the other end of the cables to the desired sources (VCP, DVD, etc.)

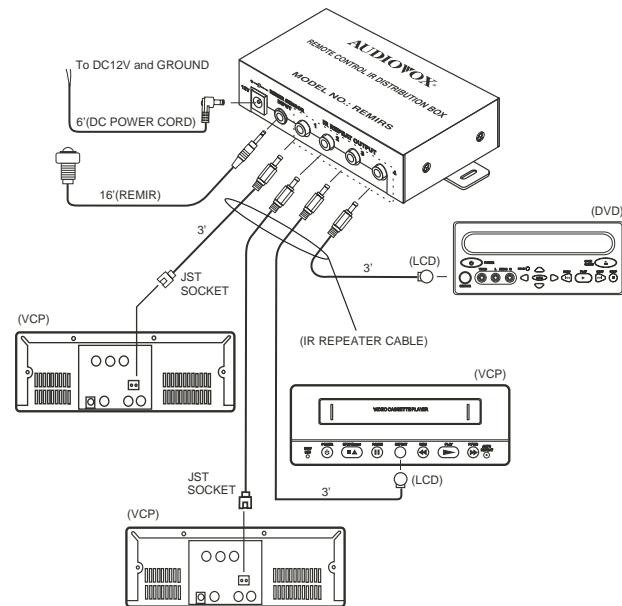

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>