 




**AUDIOVOX®**  
ELECTRONICS CORP.

## 12" LCD TV/Monitor and DVD Player D1210

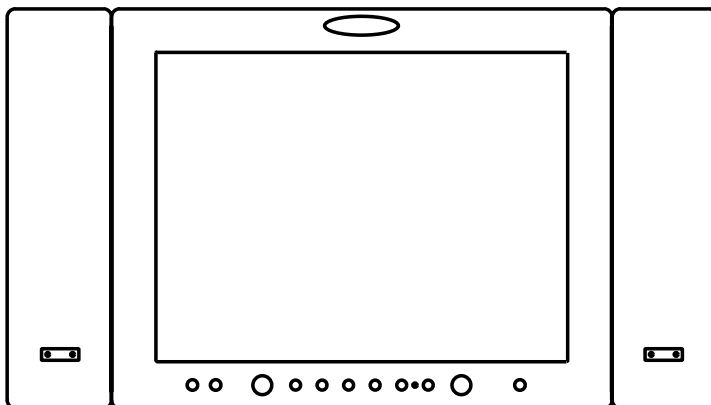

### Owner's Manual



For Customer Service  
Visit Our Website At  
**[www.audiovox.com](http://www.audiovox.com)**  
Product Information, Photos,  
FAQ's Owner's Manuals

## TABLE OF CONTENTS

A.	Introduction .....	3
B.	Cautions and Warnings .....	3
C.	Contents .....	10
D.	Indoor Installation .....	10
E.	Car Installation .....	11
F.	Controls/Indicators/Connectors .....	12
G.	Remote Controls .....	13
H.	DVD Player .....	14
I.	System Operation .....	25
J.	Watching TV .....	25
K.	Playing a Video Game .....	26
L.	Use Headphones .....	26
M.	Support Home TV .....	27
N.	Support External Speaker .....	27
O.	Specifications .....	27

## A. Introduction

Congratulation for selecting this multi-media system, which features a 12” LCD TV/Monitor and DVD/MP3/CD Player. It utilizes the latest state of the art electronics and is designed for use in home, offices, hotels and vehicles. The unit is compact so that you can take it with you anywhere and is designed for easy installation. Please read all the instructions in this manual to assure proper installation and best equipment performance.

## B. Cautions and Warnings

 
1. **Read Instructions** — All the safety and operating instructions should be read before the product is operated.
2. **Retain Instructions** – The safety and operating instructions should be retained for future reference.
3. **Heed Warnings** – All Warnings on the product and in the operation instructions should be adhered to.
4. **Follow Instructions** – All Operating and user instructions should be followed.
5. **Cleaning** – Unplug this product from the wall outlet before cleaning. DO NOT use liquid cleaners or aerosol cleaners. Use damp cloth for cleaning.
6. **Attachments** – DO NOT use attachments not recommended by the product manufacturer they may cause hazards.
7. **Mounting** – DO NOT place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer or sold with the product. Any mounting of this product should follow the manufacture’s instructions, and should use a mounting accessory recommended by the manufacturer.
8. **Heat** – The Product should be situated away from any source, such as radiators, heat registers, stoves or other products (including amplifiers) that produce heat.

9. **Water** – DO NOT use this product near water. For example, avoid placing it near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, etc...
10. **Cabinet Slots** – NEVER push objects or any kind into the unit through the cabinet slots as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. NEVER spill liquid of any kind on the product.
11. **Ventilation** – DO NOT block any ventilation openings. Install in accordance with manufacturer's instructions. Slots and openings in the cabinet and the back and bottom are provided for ventilation, and to ensure reliable operation of the product and to protect it from overheating. These openings must NOT be blocked or covered. There should be at least 10cm of space from these openings. The openings should never be blocked by placing the unit on a bed, rug or other similar surface. This product should NOT be placed in a built-in installation such as a bookcase unless proper ventilation is provided.
12. **Grounding or Polarization** – This product may be equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. DO NOT defeat the safety purpose of the polarized plug.
13. **Power – Cord Protection** – Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Pay particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.

14. **Power Sources** – This product should be operated only from the type of power source indicated on the rear panel. If you are not sure of the type of power supply to your home consult your product dealer or local power company.
15. **Lightning** – For added protection for this product during a lightning storm, or when it is left unattended and unused for a long period of time, unplug it from the outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.
16. **Power Lines** – An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
17. **Overload** – DO NOT overload wall outlets, extension cords or integral convenience receptacles as this can result in a risk of fire or electric shock.
18. **Damages Requiring Service** – Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions.
  - a. When the power-supply cord or plug is damaged.
  - b. If liquid has been spilled, or objects have fallen into the product.
  - c. If the product has been exposed to rain or water.
  - d. If the product does not operate normally after following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
  - e. If the product has been dropped or damaged in any way.
  - f. When the product exhibits a distinct change in performance – this indicates a need for service.

19. **Replacement parts** – When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. **UNAUTHORIZED** substitution may result in fire, electric shock or other hazards.
20. **Safety Check** – Upon completion of any service or repair to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
21. **CAUTION** – There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type.
22. **Important Information Regarding Use of Video Games, Computer, Captions or other Fixed Image Displays.**  
The extended use of a fixed image program material can cause permanent “Shadow Image” on the LCD Panel. The Background image is viewable on normal programs in the form of a stationary fixed image. This type of irreversible LCD panel deterioration can be limited by observing the following steps:
  - a. Reduce the brightness/contrast setting to a minimum viewing level.
  - b. **DO NOT** display the fixed image for extended periods of time.
  - c. Turn the power off when not in actual use.
23. **Recycling** – This product utilizes tin-lead solder, and has a fluorescent lamp containing a small amount of mercury. Disposal of these materials may be regulated in your community due to environmental considerations. For disposal or recycling information please contact your local authorities, or the Electronics Industries Alliance: <http://www.eiae.org/>

## 24. Safety Caution

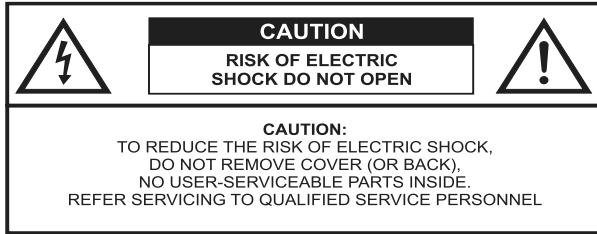

The Lightning flash with the arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated “DANGEROUS VOLTAGE” within the product’s enclosure that may be of sufficient magnitude to constitute a risk or electric shock to persons.



The Exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing instructions in the literature accompanying the product).

## 25. Federal Communication Commission Information (FCC)

This Equipment has been tested and found to comply with the limits for a TV Broadcast Receiver, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. If this equipment does cause or receive interference, which can be determined by turning equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

1. Reorient or relocate the TV antenna
2. Increase the separation between TV and other equipment.
3. Connect TV into separate outlet from equipment.
4. Consult the dealer or an experienced radio/TV technician for help

**FCC Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment

## 26. **INSTALLATION**

- a. **Receiver Location** – Locate for comfortable viewing. Avoid placing where sunlight or other bright light will fall on the screen. Use of some types of florescent lighting can reduce remote control transmitter range. Adequate ventilation is essential to prevent internal component failure. Keep away from areas of excessive heat. To ensure optimum picture quality do not position magnetic equipment nearby.
- b. **Cable Equipment** – The Video/Audio connection between components can be made with shielded video and audio cable. For best performance, antenna cables should utilize 75 Ohm coaxial shielded wire. Cables are available from your dealer or electronic supply store. Before you purchase any cables, be sure you know what type of output and input connectors your various components require. Also determine the length of cable you'll need.
- c. **Optimum Quality picture** – Turn off florescent lamps near the LCD and place in a location not exposed to outdoor light.



27. **DVD CAUTION:** This unit employs a laser system. To ensure the proper use of the unit, read this manual carefully and keep it for future reference. To prevent direct exposure to the laser radiation, do not open the cabinet. Invisible laser radiation could be present when the cabinet is opened or the interlocks are defeated. DO NOT stare into the laser beams. Use of any controls, adjustments, or procedures other than those specified herein may result in hazardous radiation exposure!



**Region Management Information** – This Player is designed to respond to the Region Management Information recorded on DVDs, The region number of this player is “1”. If the region number described on the DVD does not correspond to the region number of this player, this player cannot play this disc.




## C. Contents

1. TV /DVD Combination Unit with Speakers
2. Coaxial Connector
3. Remote Control
4. AC to DC Adapter
5. Cig. Lighter Adapter
6. Wireless IR Headphones(2 pcs)
7. 3.5mm-RCA AV Cable
8. Storage Bag and Mounting Bag w/Mounting Straps
9. Owner's Manual

## D. Indoor Installation (Refer to Figure 1)


Swing up the rear metal stand and place the unit on a table or other level surface. Plug one end of the AC to DC adapter into the DC 12V input on the right side of the main unit, then plug the other end into the 110V AC power receptacle.

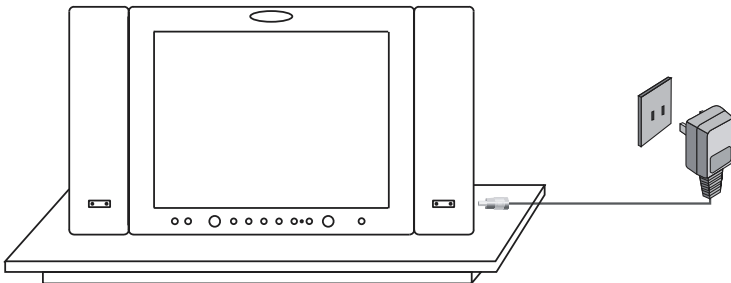 

**Figure 1**

## E. Car Installation

### Between two seats (Refer to Figure 2)

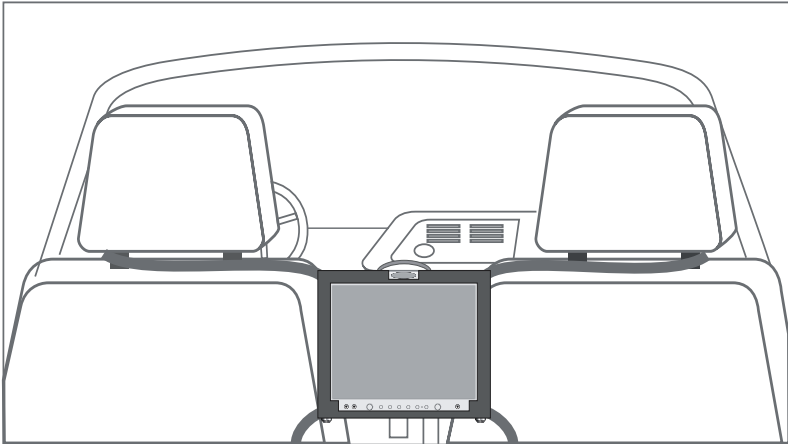 


**Figure 2**

1. Take one of the supplied straps from the storage bag and connect the latch to the top metal ring on the mounting bag. Wrap the strap around the base of one the headrests. Attach the “S” hook to the same top metal ring. Repeat this process for the other side (Passenger Seat).
2. Take another strap and connect the latch to the lower metal ring on the back of the bag. Attach the “S” hook to the same ring after looping the strap around the rail located beneath the seat track. Avoid moving parts of the seat mechanism. Repeat this process for the other side. In some vehicles, it may be necessary to attach the “S” connector to the rail directly, as it may not be long enough to reach back to the ring.
3. Adjust all the straps tightly so that the bag is secure.
4. Plug one end of the cigarette lighter adapter into the DC 12V input; then plug the other end into the cigarette lighter socket.

## F. Controls/Indicators/Connectors (Refer to Figure 3)


- |                        |                            |
|------------------------|----------------------------|
| 1. DVD Previous        | 13. Volume Down            |
| 2. DVD Play            | 14. Volume Up              |
| 3. DVD Next            | 15. TV Channel Down        |
| 4. DVD Eject           | 16. TV Auto Program        |
| 5. DVD Stop            | 17. TV Channel Up          |
| 6. IR Headphone Sensor | 18. Surround Sound 3D      |
| 7. TV Antenna Input    | 19. Headphone Input #2     |
| 8. Headphone Input #1  | 20. DC 12V Input           |
| 9. AV Input            | 21. DVD Video Output       |
| 10. Power On/Off       | 22. DVD Left Audio Output  |
| 11. DVD/TV/AV Switch   | 23. DVD Right Audio Output |
| 12. Picture Select     | 24. External Speaker Input |

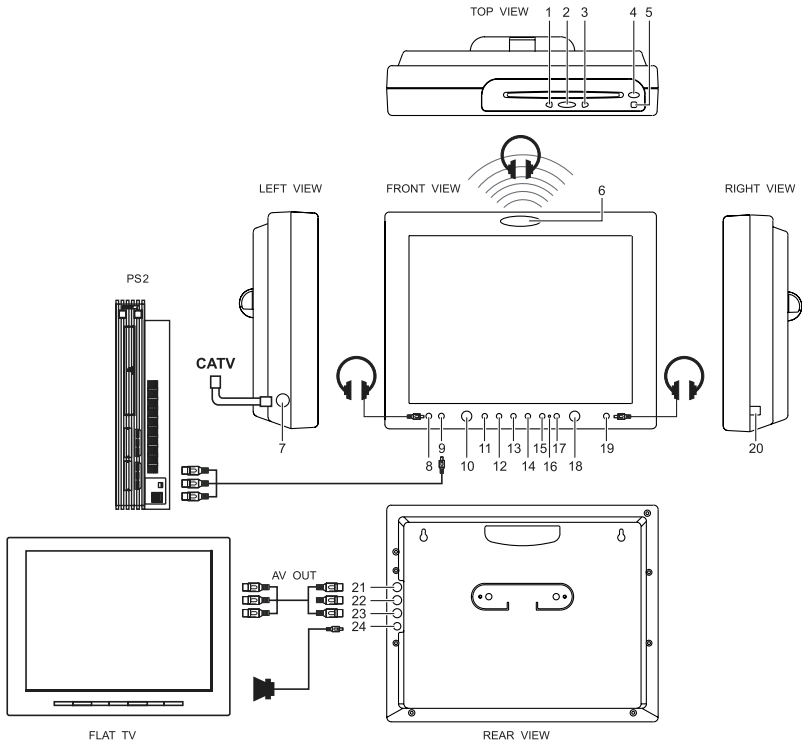 

**Figure 3**

## G. Remote Controls (Refer to Figure 4)

1. TV/DVD/AUX Select
2. DVD Number Control Select
3. Numbers 0-9
4. TV/CATV Select
5. Mute
6. Picture Select
7. Volume Up/Down (+/-)
8. DVD Eject Button
9. Up/Down-Left/Right/Enter
10. DVD Menu
11. DVD Display
12. DVD Stop
13. DVD Reverse
14. DVD Forward
15. DVD Audio Select
16. DVD Subtitle Select
17. Power On/Off
18. TV Number Control Select
19. TV Channel Auto Memory
20. TV Channel Skip Search
21. TV Channel Erase Write
22. Channel Up/Down (+/-)
23. DVD Power On/Off
24. DVD Setup
25. DVD Play
26. DVD Pause
27. DVD Next
28. DVD Previous
29. DVD Repeat
30. DVD Slow Play

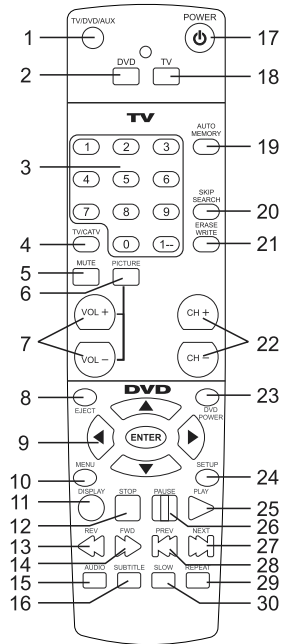 

**Figure 4**

## H. DVD Player

### 1. Basic Operation

POWER	Turn the unit ON or OFF
EJECT	Eject and withdraw the disc
PLAY	Resume play mode
PAUSE	Go into the standby mode
STOP	(1 time) Stops at the present playing point / (2 times) Stops playing
NEXT	Go to the next chapter, track or scene during playback
PREVIOUS	Go back to the preceding chapter, track or scene during playback
FORWARD SCAN	Scan forward at 2, 4, 6, or 8 times normal speed
REVERSE SCAN	Scan backward at 2, 4, 6, or 8 times normal speed
SLOW	Play at 1/2, 1/4, or 1/8 times speed
UP/DOWN/LEFT/RIGHT	For Navigating the Setup Menu
ENTER	Execute item or setting
NUMBERS	For entering a password
MENU	Display the root menu of the DISC
SUBTITLE	Select the subtitle language and turn it on/off
AUDIO	Select the audio language
DISPLAY	Display information about the DISC
SETUP	Display the setup menu

 
## 2. Menu

A DVD is divided into sections called title and chapter. When you play a DVD, a root menu of the disc will appear on the screen of your TV or Monitor. The contents of the menu vary from disc to disc. Press MENU during playing to display the menu, and press ENTER or PLAY to start playing. Some DVDs allow you to select disc playback options using the DVD menu.


## 3. Display (The contents vary from disc to disc.)

### 1) Playing time and remaining time


- a. During playback press DISPLAY to display the current title number (1), the total number of titles (2), the current chapter number (3), the total number of chapters (4), and the playing time for the title (5). The heading will disappear automatically in about 3 seconds.

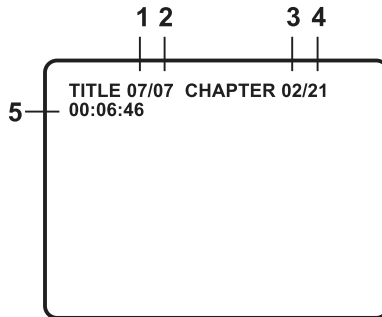

 
- b. Press DISPLAY again to display the remaining time for the title. The heading will disappear automatically in about 3 seconds.

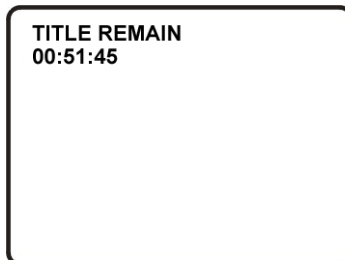

 c. Press DISPLAY the 3rd time to display the elapsed time for the chapter. The heading will disappear automatically in about 3 seconds.

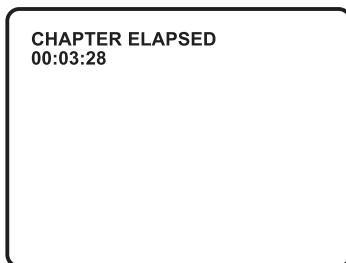

 d. Press DISPLAY the 4th time to display the remaining time for the chapter. The heading will disappear automatically in about 3 seconds.

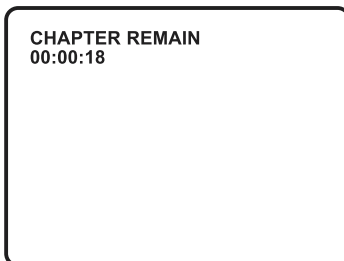


Press DISPLAY the 5th time to exit.

## 2) Subtitle

 
During play press SUBTITLE to select the subtitle language you desire, with the current subtitle language number (1) and the total number of subtitle languages (2) displayed. If there are multiple languages press SUBTITLE again to select another subtitle language. To turn subtitles off, press the subtitle button until SUBTITLE OFF is displayed. The subtitle display will disappear automatically if the SUBTITLE button isn't pressed again for 3 seconds.



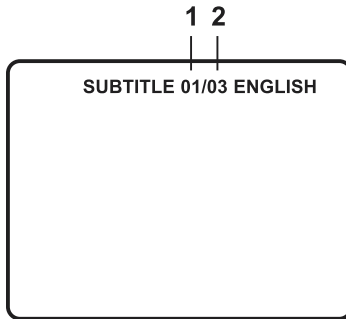


### 3) Audio

 During playback, press AUDIO to select the audio language you desire, with the current audio channel number (1) and the total number of audio channels (2) displayed. Press AUDIO again to select another audio language. The audio display will disappear automatically if the AUDIO button isn't pressed again for 3 seconds.

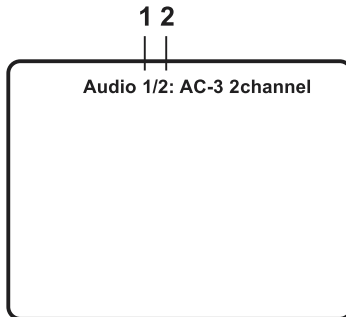


### 4) Repeat

 
a. During playback, press REPEAT to repeatedly play the current chapter.

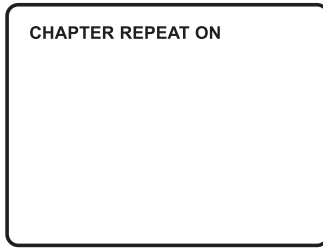

 - b. During playback, press REPEAT again to repeatedly play the current title.

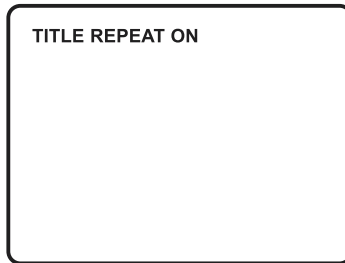


 - c. During playback, press REPEAT a 3rd time to cancel the repeated playing and resume normal playback. The repeat display will disappear automatically if the REPEAT button isn't pressed again for 3 seconds.

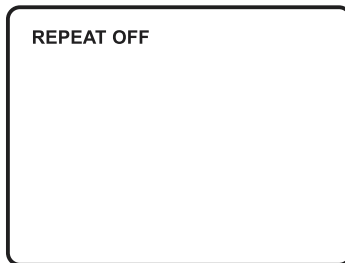


#### **4. Setup**

 
Press SETUP to display the main page of the setup menu on the screen. Press SETUP again to exit the SETUP menu and the unit will resume playback or stop mode.

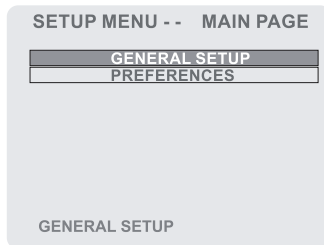

 - 1) Select GENERAL SETUP using UP/DOWN and then press ENTER to enter the general page.

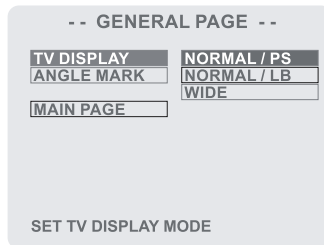


- a. Select TV DISPLAY using UP/DOWN, and then press RIGHT to enter the submenu. Select the TV display mode on the screen using UP/DOWN, and press ENTER to confirm the setting. Press LEFT to return.
  - \* NORMAL/PS: When the player is connected to a normal TV, and a wide picture is shown on the full screen, with a portion that may be cut off automatically.
  - \* NORMAL/LB: When the player is connected to a normal TV, and a wide picture is shown on the screen, with black strip at both top and bottom of the screen.
  - \* WIDE: When the player is connected to a wide screen TV, a wide picture is shown on the full screen.
- b. Select ANGLE MARK using UP/DOWN, and then press RIGHT to enter the submenu. Choose to show an angle mark on the screen using UP/DOWN and then press ENTER to confirm the setting. Press LEFT to return.

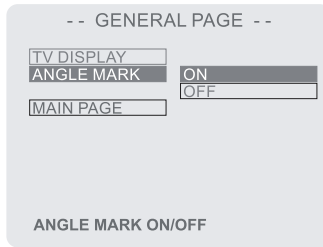 


- \* ON: The screen will show an angle mark. (If angle option is available)
- \* OFF: the screen won't show an angle mark.

 c. Select MAIN PAGE using UP/DOWN and then press ENTER to return to the main page.

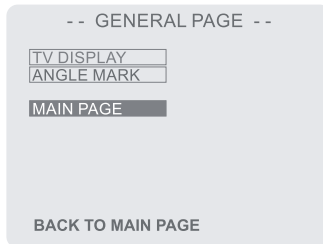


 2) When there's no disc inside the player, select PREFERENCES using UP/DOWN and then press ENTER to enter the preferences page.

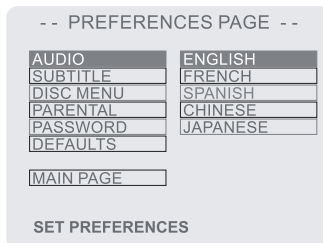


a. Select AUDIO using UP/DOWN, and then press RIGHT to enter the submenu. Select the audio language you desire using UP/DOWN and then press ENTER to confirm the setting. Press LEFT to return.

 - b. Select SUBTITLE using UP/DOWN, and then press RIGHT to enter the submenu. Select the subtitle language or SUBTITLE OFF you desire using UP/DOWN and then press ENTER to confirm the setting. Press LEFT to return.

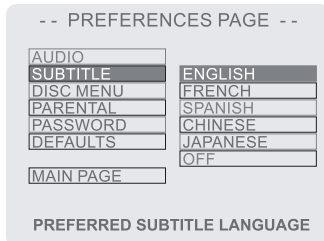


 - c. Select DISC MENU using UP/DOWN and then press RIGHT to enter the submenu. Select the disc menu language you desire using UP/DOWN and then press ENTER to confirm the setting. Press LEFT to return.

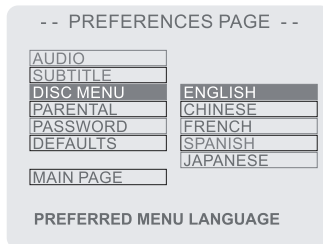


**Note:** Language selection is only available for discs recorded in the languages listed in the submenus above. If not, the player will play and display on the screen the original recorded language contained in the disc.

 - d. Select PARENTAL using UP/DOWN and then press RIGHT to enter the submenu.

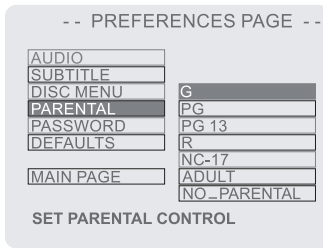


 Select the parental level you desired using UP/DOWN for discs with lock-out function or multiple rating levels. It's listed from the lowest level (1 Child) to the highest level (8 Adult). Press ENTER to enter the password verify page.

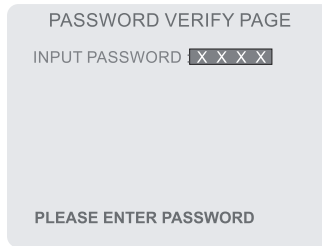


Input the password in 4 digits, and then press ENTER to confirm the parental level setting. For 1st time users, the default password is 3308.

 
**Note:** After inserting the disc in the player, if the parental setting of the player prohibits playing the disc, the following menu will appear in the screen:

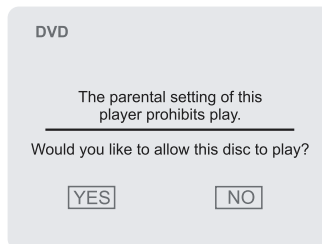

 Select YES using LEFT/RIGHT and press ENTER. Then input your password in 4 digits or the default password 3308; this player will start playing the disc.

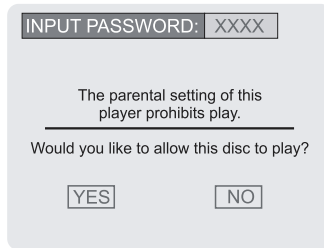

 - e. Select PASSWORD using UP/DOWN and then press RIGHT to enter the submenu.

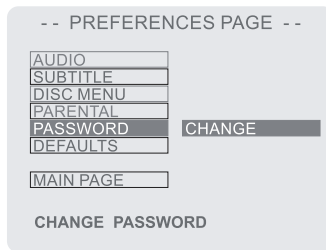


Press ENTER to enter the password change page. Input the old password or the default password, the new password, and the confirmed new password. Press ENTER to confirm the change.




**Note:** The default password is 3308 and this password is always effective whether you've changed it to another new one or not, in case that you forget the new password. To avoid others using it to set the parental level and change the password, you may note this default password by other means and delete it from this manual. Some discs can be limited depending on the age of users while some discs can not.

 - f. Select **DEFAULTS** using **UP/DOWN** and then press **RIGHT** to enter the submenu. Press **ENTER** to make the setting return to the factory-set mode.

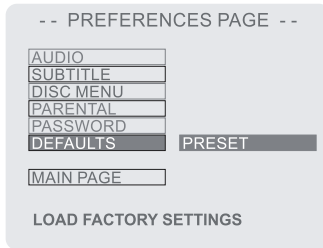

 - g. Select **MAIN PAGE** using **UP/DOWN** and then press **ENTER** to return to the main page. Press **SETUP** to exit the **MAIN PAGE**.

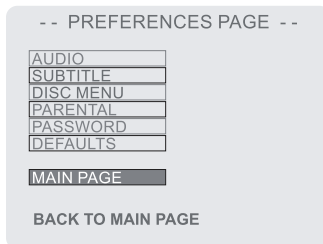



## **I. System Operation**

1. Press **POWER** to switch the unit on or off. The switch indicator will light red and the unit will go to the mode last used and stored in memory.
2. Press **DVD/TV/AV** to select your desired mode. When switching the mode, the DVD player can memorize the present playing point.
3. Press **VOLUME UP/DOWN** to raise or lower the sound level. Also used to make picture adjustments in the picture select mode.
4. Each time **PICTure** is pressed, the on screen picture adjustment display cycles through “adjustment bars for **VOLUME**, **CONTRAST**, **BRIGHTNESS**, **COLOR** and **TINT**. Then use **VOLUME UP/DOWN** to raise or lower the level. This display will automatically turn off if no adjustments are made within about 6 seconds, or if any other button is pressed.
5. Press **MUTE** to cut off all sound; pressing this button again restores sound to the previously set level. **MUTE** may also be released by pressing the **VOLUME UP/DOWN**.
6. Press **SRS 3D** to activate surround sound with the indicator on.

## **J. Watching TV**

1. Plug the coaxial cable of an external flat antenna into the base on the rear top of the unit. In addition to normal broadcast reception of VHF and UHF channels, connect the attached coaxial connector to the antenna terminal on the lower left side of the unit, and connect the cable to the coaxial connector for CH1~CH125 reception.
2. With power applied to the system and the TV mode selected, press **TV/CATV** on the remote control to select the regular 69-channel Broadcast TV and the 125-Channel Cable TV (Standard Cable, HRC Cable, and IRC Cable) with on-screen display.

3. Press AUTO MEMORY; all channels in TV or CATV mode are searched and tuned and the channels with signals detected are automatically stored.
4. SKIP/SEARCH selects between SKIP and SEARCH mode. In SKIP mode, the TV only stops on channels that are programmed into memory when the CHANNEL UP/DOWN buttons are used. When SKIP mode is off, the TV will stop on all active channels.
5. To erase a TV channel, press ERASE/WRITE until MANUAL MEMORY has “erase” displayed on the screen. To store a TV channel, press this button until MANUAL MEMORY has “add” displayed on the screen. The stored channel numbers are displayed in green on the screen while the non-stored channel numbers are in red.

## **K. Playing a Video Game**

Plug the AV output from your game system into the AV IN jack on the front of the unit. You can use the attached AV cable to convert the 3.5mm AV jack on the unit to RCA type AV jacks, and match the color-coded jacks to the appropriate plugs: Yellow (VIDEO) to Yellow, white (AUDIO L) to White, and Red (AUDIO R) to Red. Select the AV mode and adjust the volume/picture control to individual preference.

## **L. Use Headphones**

1. Wireless IR Hi-Fi headphones may be used with the system. Simply place batteries in the wireless headphones and power them up. Make sure there is a clear line of site to the IR Headphone Sensor.
2. Optional wired Hi-Fi headphones may be used with the system. Simply plug in the headphone to either headphone jack on the front of the unit. When using the right headphone jack both internal speakers will be turned off.

## **M**

### M. Support Home TV

Match the color-coded plugs to the appropriate DVD outputs in the rear of the unit: Yellow (VIDEO) to Yellow, White (AUDIO L) to White, and Red (AUDIO R) to Red.

### N. Support External Speaker

Connect the EXT. SPEAKER output to an external speaker.

### O. Specifications

Disc Format	DVD/CD/MP3
Color System	NTSC
Screen type	LCD
Screen size	12 inches
Remote Control	Infrared rays
Antenna	Ext antenna
Channels	2-6 (VHF low), 7-13 (VHF high), 14-69 (UHF), 1-125 (CATV)
Audio output	3 W
Frequency response SP	DVD (PCM 96 kHz/24 bits ): 20 Hz to 44 kHz DVD (PCM 48 kHz): 20 Hz to 22 kHz CD: 20 Hz to 20 kHz
Power Supply	DC 12 V
Power Consumption	60 W
Operating Humidity	10 ~ 75%
Operating Temperature	41 ~ 104 degrees Fahrenheit
Storage temperature	4 ~ 140 degrees Fahrenheit
Dimensions (W x H x D)	242 x 400 x 580 millimeters 9.5 x 15.7 x 22.8 Inches
Weight	28.5 pounds (12.94 kilograms)



## 12 MONTH LIMITED WARRANTY

*Applies to Audiovox Mobile Video Products*

AUDIOVOX ELECTRONICS CORP. (the Company) warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced with reconditioned product (at the Company's option) without charge for parts and repair labor.

To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address shown below.

This Warranty does not extend to the elimination of externally generated static or noise, to correction of antenna problems, to costs incurred for installation, removal or reinstallation of the product, or to damage to tapes, discs, speakers, accessories, or vehicle electrical systems.

This Warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

**U.S.A. :** AEC 150 MARCUS BLVD., HAUPPAUGE, NEW YORK 11788 • 1-800-645-4994

**CANADA :** CALL 1-800-645-4994 FOR LOCATION OF WARRANTY STATION SERVING YOUR AREA

128-5495C

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>