




# Operating Instructions

**Model No.: FPE1080**

**8" LCD TV/DVD Player**

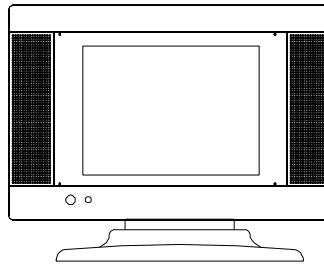

**For assistance, please call: 1-800-645-4994**

**Or Visit us at <http://www.audiovox.com>**



**128-7656**



*Thank you. . .*

*. . . for choosing this tablet DVD player. For your own safety and in order to learn all about the functions available, please read this manual and keep it for future reference.*

**Note:**

*An LCD panel and/or video monitor may be installed in a motor vehicle and visible to the driver if the LCD panel or video monitor is used for vehicle information, system control, rear or side observation or navigation. If the LCD panel or video monitor is used for television reception, video or DVD play, the LCD panel or video monitor must be installed so that these features will only function when the vehicle is in “park” or when the vehicle’s parking brake is applied.*



 
*An LCD panel or video monitor used for television reception, video or DVD play that operates when the vehicle is in gear or when the parking brake is not applied must be installed to the rear of the driver’s seat where it will not be visible, directly or indirectly, to the operator of the motor vehicle.*



**Note:**


*This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.*





## **Table of Contents**
 
|  |    |
|--|----|
| A. Cautions and Warnings.....                                  | 04 |
| B. About This Manual.....                                      | 06 |
| C. Desktop Base Installation.....                              | 08 |
| D. Mount the unit on the wall.....                             | 09 |
| E. Prior to Operation.....                                     | 10 |
| F. Remote Control.....   | 12 |
| G. DVD Player.....   | 13 |
| H. Power Supplies .....  | 14 |
| I. Connections.....  | 15 |
| J. Receiving TV Programs.....                                  | 16 |
| K. Reading SD (Secure Digital) and MMC (Multimedia) Card ..... | 16 |
| L. Playing DVDs .....  | 17 |
| M. Playing CDs .....   | 21 |
| N. Playing MP3 Disc.....                                       | 21 |
| O. Setup.....  | 23 |
| P. Specifications.....   | 27 |
| Warranty.....  | 30 |



## A. Cautions and Warnings

All operation and maintenance instructions must be followed and warnings adhered to.

- Do not expose the unit to excessive moisture.
- Do not place objects filled with liquids, such as vases, on the unit.
- Do not use the unit where there are temperature extremes (below 41 °F, 5°C or exceeding 95°F, 35°C).
- Adjust the volume to prevent damage to speakers.
- Sudden changes in the ambient temperature may cause condensation to form on the optical lens inside the unit. If this happens, remove the disc, and allow about 2 hours to pass and then proceed with normal operation.
- To ensure proper ventilation and proper operation, never cover or block the slots and openings with a cloth or other material.
- Keep the unit away from strong magnets, heating sources, sunlight, and excessive dust.
- Never allow objects of any kind or liquids to be pushed/spilled into the unit openings as they may come into contact with dangerous voltages.
- Unplug the unit from the wall outlet before cleaning. Do not use liquid or aerosol cleaners.
- Do not use accessories not recommended in this manual as they may be hazardous.
- Power cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Pay particular attention to plugs and the point from which the cord exits the unit.
- Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage points or other hazards. Refer all servicing to qualified service personnel.



- When replacement parts are required, be sure the service technician has used replacement parts that are specified. Unauthorised substitutions may result in fire, electric shock or other hazards.
- Upon completion of any service or repairs to the unit, ask the service technician to perform operational checks to determine that the product is operating correctly.

### Handling the LCD panel

Do not press hard or jolt the LCD panel. It may cause the LCD panel glass to break and injury may occur.

If the LCD panel is broken, **do not** touch liquid in the panel.

If the liquid in the LCD panel is ingested, immediately gargle and consult with your doctor. Also, if the liquid gets in your eyes or touches your skin, consult with your doctor after rising for at least 15 minutes or longer with clean water.


### Contents

1. 1 x 8" LCD Monitor & DVD Player
2. 1 x RCA AV Cable
3. 1 x AC To DC Adapter
4. 1 x Vehicle DC Power Adapter
5. 1 x Remote Control
6. 1 x Base



## B. About This Manual

The operations described mainly refers to the use of the remote control. Buttons with same or similar marking on the main unit have the same function as those on the remote control.

If the symbol  occurs on the screen during operation, the function requested is not supported by the media type inserted in the DVD player. The unit will play the following:

|           |                                     |         |                                     |
|-----------|-------------------------------------|---------|-------------------------------------|
| DVD-Video | <input checked="" type="checkbox"/> | DVD+RW  | <input type="checkbox"/>            |
| CD-R      | <input checked="" type="checkbox"/> | DVD+R   | <input type="checkbox"/>            |
| CD-RW     | <input checked="" type="checkbox"/> | DVD-ROM | <input type="checkbox"/>            |
| CD Audio  | <input checked="" type="checkbox"/> | MP3     | <input checked="" type="checkbox"/> |
| Photo CD  | <input checked="" type="checkbox"/> | DVD-RAM | <input type="checkbox"/>            |
| DVD-RW    | <input checked="" type="checkbox"/> | CD-G    | <input type="checkbox"/>            |
| DVD-R     | <input checked="" type="checkbox"/> | HDCD    | <input checked="" type="checkbox"/> |

= YES  = NO

*Note: Usually the unit plays CD-R, CD-RW and MP3 discs. But due to the variety of disc types, recording computers, operating systems and software for burning we cannot guarantee that every CD-R, CD-RW or DVD is playable within this unit.*

### Please be aware of the following:

- This instruction manual explains the basic instruction of this unit.
- Some DVD discs have different functions that may not be explained in this instruction manual. You may need extra instructions. In this case, please follow the instructions displayed on the screen or jacket or case of the disc.
- The disc information takes priority in various settings.



- In this manual, the language in the on-screen display is English. If you change the language, please follow the selected language in the on-screen display.
- The screen shown as an example in this manual may be different from the actual screen.
- On-screen displays subject to change without notice.


 

 

Note: The types of functions and operations that can be used for a particular disc vary depending on the features of that disc. In some cases, these functions and operations may differ from the descriptions given in this Owner's Manual. In this event, follow the instructions given on the screen and on the sleeve of the disc.

### Region Management Information

This DVD player is designed and manufactured to respond to the region management information that is recorded on a DVD disc. If the region number described on the DVD disc does not correspond to the Region number of this DVD player, this DVD player cannot play this disc. The region number for this DVD player is '1'.




Please note that the program of a DVD may be divided into several 'titles' (e.g. main movie, bonus material, interviews etc.). Each of these titles can be divided into 'chapters'. The program of audio CD's is divided into "tracks".

-  Multiple languages
-  Multi-aspect
-  Multi-language subtitles
-  Multi-angle
-  Closed caption



## C. Desktop Base Installation

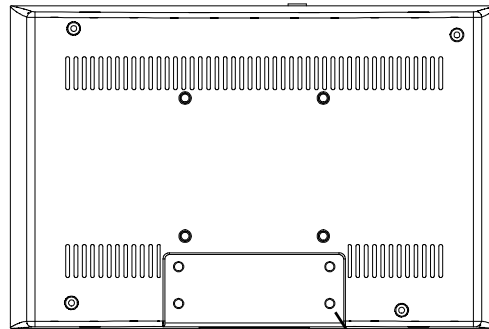

Screw Hole

### Unit Base


1. Place the tablet DVD player base on flat surface.
2. Align the thumb screw with the hole on the back of the DVD player.
3. Thread the thumb screw into the hole on the back of the DVD player and turn the thumb screw counter-clockwise to tighten the base to the DVD player.
4. While holding the DVD player and the base, adjust the unit's swivel angle for a comfortable viewing position.

 




## D. Mount the unit on the wall

The unit can be easily be mounted on the wall. You will need an optional VESA75 Wall Mount Bracket. The VESA75 Wall Mount Bracket can be purchased at most local electronic retailers. The wall bracket plate which attaches to the wall has four screw holes. The rear of the unit contains four screw holes (Refer to Figure 1).The VESA75 Wall Mount Bracket is attached to the back of the unit with four screws (M4x6 or M4x8). Follow the instructions supplied with the VESA75 Wall Mount Bracket to complete the installation.

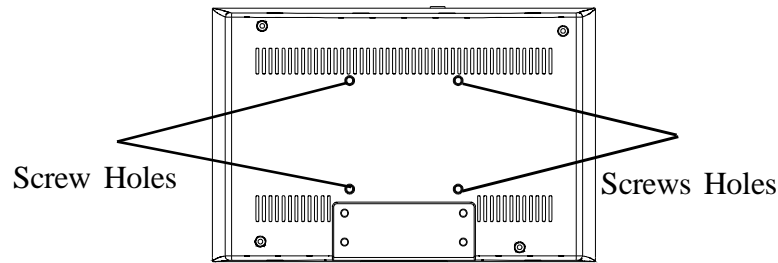



## E. Prior to Operation

### Place in Position

- For setting up the unit please choose a location with sufficient air circulation to prevent overheating.
- The product must be positioned horizontally only. Do not place heavy objects on its housing.
- To protect the laser unit avoid dusty surroundings. If necessary, please use a cleaning disc carefully following its operating instructions.

### Moisture Condensation

In some cases water may condense on the laser lens causing a malfunction:

- The unit was suddenly brought from a cold to a warm surrounding.  
=> Please take out the disc and wait for about an hour, until the unit has warmed up.
- The unit was operated in a very humid surrounding.  
=> Please choose a location with lower humidity.

### Handling Disc's

- In order to keep the disc clean, never touch the shiny surface.
- Never place a sticker or adhesive label on the disc.



- Don't expose discs to direct sunlight or other heat sources.
- Please store the discs only in their sleeves.



### Cleaning a Disc

To clean a disc use a soft cloth without any cleaning agents.


Only wipe from the center hole towards  
the outer edge, *never* in toward the center.



### Using the Remote Control Handset

1. The remote control uses a pre-installed Li-ion type battery. To prevent the battery from discharging, we've inserted an insulating strip. Please pull it out prior to first use.

If the remote control should begin to operate unreliably replace the battery with a new battery of the same type. To replace the battery open the battery compartment. Push the retention clip in the direction of arrow and pull out the battery mounting.

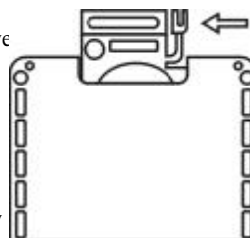


2. Before you remove the battery, remember the battery position. The '+' marking must face upwards, otherwise the remote control will not work and may be damaged. Replace the cover.




3. Please point the remote control towards the main unit when operating the buttons.

The remote control works best with a distance less than 16 feet (5m) and in an angle of up to 45° center of the front of the unit. Obstacles between the remote control and infrared sensor will adversely affect operation of the remote control.

 - **Batteries should disposed in an environmentally correct manner. . Never throw batteries into fire.**
- If the remote control is not to be used for an extended period of time, please remove the battery from the compartment to prevent damage by battery leakage.
- When replacing the battery, please observe the polarity. The '+' must face upwards.




## F. The Remote Control

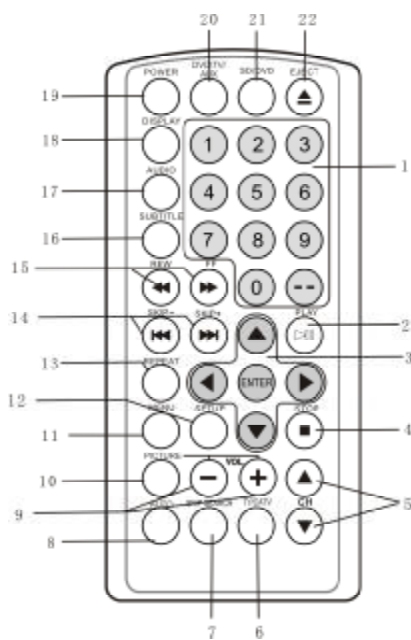


- |                 |   |
|-----------------|---|
| 1. 0-9          | Numeric Buttons   |
| 2. PLAY/ PAUSE  | Starts play or pauses the playback  |
| 3. ◀▶▲▼ENTER    | Navigation keys to operate the menu. ENTER confirms the selection                                 |
| 4. STOP         | Stops DVD playback  |
| 5. CH+/-        | Selects next or previous channel while in TV mode   |
| 6. TV/CATV      | Selects the TV receiving mode (TV, IRC, HRC, STD)   |
| 7. SKIP SEARCH  | Skips channels that the user wishes not to view.  |
| 8. AUTO         | Automatically searches for TV channels  |
| 9. +/-          | Used with "PICTURE" function to increase or decrease the item you select or the volume up or down |
| 10. PICTURE     | Selects the picture adjust setting  |
| 11. MENU        | Brings up the DVD player's menu   |
| 12. SETUP       | Accesses the menus for basic setup  |
| 13. REPEAT      | Activates repeat mode   |
| 14. ◀◀▶▶SKIP+/- | Skips to previous/next chapter (DVD) or audio track (CD)  |
| 15. ◀◀▶▶REW, FF | Speeds up playback backwards or forwards by 2x, 4x, 8x, up to 20 times normal speed(DVD)          |
| 16. SUBTITLE    | Toggles the subtitle languages available  |
| 17. AUDIO       | Toggles DVD audio languages   |
| 18. DISPLAY     | Provides the elapsed playing time, subtitle, audio  |
| 19. POWER       | Turns the unit on or off  |
| 20. DVD/TV/AUX  | Selects signal from DVD/SD, TV and auxiliary equipment  |
| 21. SD/DVD      | Selects signal from DVD or SD card  |
| 22. EJECT       | Ejects the disk.  |



## G. DVD Player

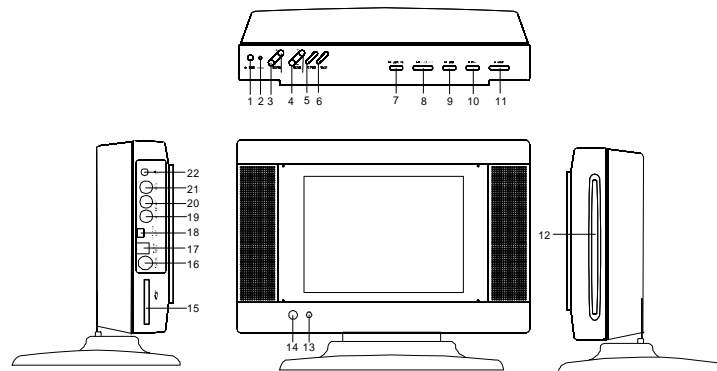

- |                       |                             |
|-----------------------|-----------------------------|
| 1. Power Button       | 12. Disk Slot               |
| 2. Program Button     | 13. Power Indicated LED     |
| 3. Channel +/- Button | 14. IR Remote Sensor        |
| 4. Volume +/- Button  | 15. SD Slot                 |
| 5. Picture Button     | 16. Cable Antenna Connector |
| 6. TV/AV/DVD Button   | 17. DC 12V Input Jack       |
| 7. Previous Button    | 18. AV In/Out Switch        |
| 8. Play/Pause Button  | 19. Audio Right Jack        |
| 9. Next Button        | 20. Audio Left Jack         |
| 10. Stop Button       | 21. Video Jack              |
| 11. Eject Button      | 22. Headphone Jack          |

 


## H. Power Supplies

### a. Using AC adaptor

Connect the supplied AC adaptor.

INPUT: AC 100 ~ 240V, 50/60Hz, 0.4A

OUTPUT: DC 12V, 1.7A

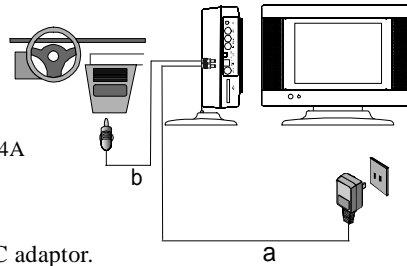

- Use this unit only the **supplied** AC adaptor. Use with other AC adaptors may damage the unit.
- Do not touch the AC adaptor with wet hands. Doing so is dangerous, as this could result in an electric shock.
- Do not use with a voltage other than the voltage displayed. Improper voltage could cause fire, electrical shock, or damage.

### b. Using cigarette lighter adaptor

Connect the supplied DC power adaptor to vehicle power outlet.

#### Vehicle DC Power Adapter

INPUT: DC 12-14V

 
OUTPUT: DC 12-14V

#### Caution on the cigarette lighter adaptor:

- Use only the supplied DC power adaptor. Using other DC power adaptors could damage the unit.
- After use, disconnect the cigarette lighter adaptor plugs from both this unit and the vehicle power socket.
- The DC power adaptor may cause interference with reception from the car radio or another radio inside the vehicle. If this is the case, disconnect the DC power adaptor from the vehicle power socket, or use the radio located at a further distance from the vehicle power socket.

#### Traffic safety:

- Do not use while operating a motorized vehicle. It may create a traffic hazard and is illegal in many areas.





*After connecting the unit to power*, press “POWER” button, and the logo picture will appear on the screen and the LED power indicator located on lower left front of the unit will be light.

## I. Connections


Although this unit has its own screen, you can connect it to an external television set as well.

### 1. Playing a Video Game

- 1) Slide the AV in/out switch to the “In” position.
- 2) Plug the AV output from your game system into the Audio L+ R and video input jack on the left side of the unit with corresponding color: (Audio Left= White, Audio Right= Red, Video=yellow).
- 3) Press “DVD/TV/AUX” until the word “AUX” appears on the top right; Adjust the volume control and the brightness control on the top of the unit to your individual preference.

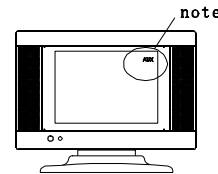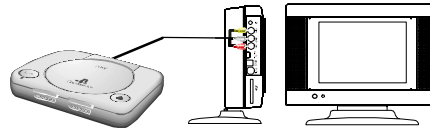


### 2. Connecting to a TV or another monitor

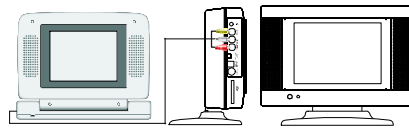

You can also connect the DVD player to a TV or monitor to enjoy high quality stereo.

 
- Insert each cable firmly into its designated jack.
- If your antenna uses 300-ohm twin lead cables, do not coil the cables. Also, keep the twin lead cables away from audio/video cables.



- 1) Connect the supplied AV (RCA) cables into the Audio L+ R and video jack on the left side of the unit following the corresponding colors: (AudioLeft= White, Audio Right= Red, Video=yellow).
- 2) Connect the supplied AV cables on the other end to your TV. Match the cable by color code.

## J. Receiving TV Programs

1. Press “DVD/TV/AUX” until the word “TV” appears on the top right.
2. Press “AUTO”, the unit will search TV channels automatically.
3. After the channels are searched, you can use CH+/- to choose the channel you like.

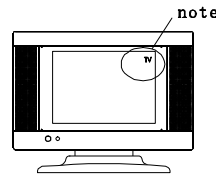

Note:


- a. The picture and audio are not visible when searching channels.
- b. If you don't like a channel, press “SKIP SEARCH”. The channel will not appear when you press “CH+/-”.

## K. Reading SD (Secure Digital) and MMC (Multimedia) Card

You can enjoy high-quality pictures , music and cinema stored in an SD card.

Note:

The maximum card size is 512 MB. A card size 1GB or greater may result in abnormal operation.

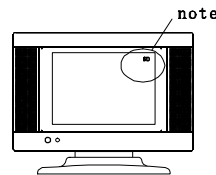

1. Press “DVD/TV/AUX” until the word “DVD” appears on the top right.
2. Insert the SD card (with the label side faced to you) into the SD slot on the left side of the unit and the unit will read it automatically.
3. Press “SD/DVD” until the word “SD” appears on the screen display;
4. Press the ◀ and ▶ button to switch between Music and Photos.
5. To pull out the SD card, press the card once till it flips out a little.







## L. Playing DVDs

### DVD Playback

1. Press “DVD/TV/AUX” until the word “DVD” appears on the top right of the screen.;


2. Insert the disk in the right side of the unit with label facing to you. Then the disk will be pulled into the unit and play will begin automatically.

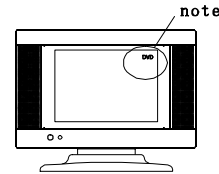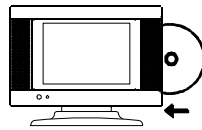


DVD discs will usually show a menu to choose from. Use the navigation buttons ◀▶▲▼ on the remote control.

Highlight the desired menu item and press the **ENTER** button to activate it. This starts the playback of the selected item.

To stop playback press the **STOP** button once. The screen shows “▶■”. The player will recall the location where playback was stopped. Press the **PLAY** button to resume playback there. But if you press the **STOP** button again the unit will stop and not recall the last position of playback. The “resume play” is not supported by all discs.

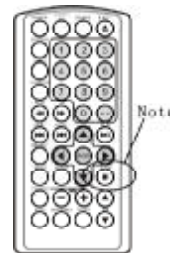

If this symbol appears on the screen during operation, the function requested is not supported by the media type inserted.

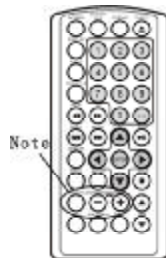

Volume: The Volume +/- is on the top of the unit. Press to adjust the volume.

Picture: the button is on the top of the unit. Press it to choose the item about picture you want to change. Then press Volume +/- to adjust it.




**Display**

- a. During playback press the 'DISPLAY' button to display the current Title Number (1), the total Number of Titles (2), the current Chapter Number (3), the total Number of Chapters (4), and the Playing elapsed Time for the title (5).




**Title, Chapter Number, and Time Screen Display**

Press "DISPLAY" a second time, the heading content will be changed to the on shown below. The current number of audio language(1), the total number of audio languages(2), the current language(3), current language mode(4), current number of subtitle language(5), the total number of subtitle languages(6), current subtitle language(7), Angle mode(8).

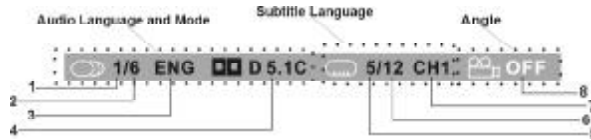

 - b. Press 'DISPLAY' constantly to choose the options below in sequence. (DVD)




Chapter Elapsed: The elapsed time of the chapter


Chapter Remain: The remaining time of the chapter

Title Elapsed: The elapsed time of the title

Title Remain: The remaining time of the title

 Display Off: The DVD's time Information will not be displayed.

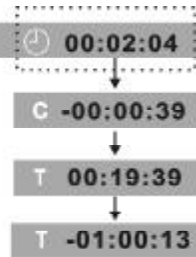



### DVD Camera Angles

During playback of a disc, press 'ANGLE' to display the available angles for discs containing multi-angles\*. Press 'ANGLE' to select another angle, then press again to exit and return to the normal viewing angle. The angle display will disappear automatically if the 'ANGLE' button is not pressed again within 3 seconds.


\*NOTE: Not all discs contain this feature.



### Skip & Search

Press ◀◀, ▶▶ to playback the beginning of the previous or next chapter (DVD) or audio track (CD).

To pause the DVD, press the ▶◥ button. To protect the screen, a screen saver (a flying DVD symbol) appears after several minutes that picture is paused. Press this button again to resume normal playback.

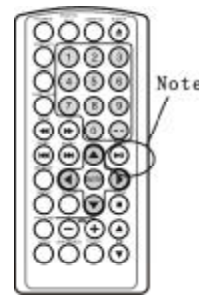

### Still Picture

◀◀▶▶ These buttons activate a backward and forward search mode. Depending on how often you press the button, playback speed increases to 2x, 4x, 8x or 20 times and the audio is muted. Press the PLAY button to resume playback at normal speed with audio.(DVD)

### Playback Speeds [FF ▶▶] [REW ◀◀]

Press the REW or FF (◀◀▶▶) buttons repeatedly to select the fast forward or reverse play speeds during playback.



### Repeat Modes

a. During playback press 'REPEAT' constantly to see the repeat mode shown below.

Chapter: Repeat the current chapter

**REP CHAPTER**

Title: Repeat the current title

**REP TITLE**

All: Repeat all chapters and titles

**REP ALL**

Off: Resume normal playback

**REP OFF**



### Change Soundtrack Language



During DVD playback press the **AUDIO** button to select a different audio language (if the DVD disc contains several audio languages).

### Change Subtitle Language

During DVD playback press the **SUBTITLE** button to select the language for subtitles (if the DVD contains subtitle languages) or to deactivate that function.

### DVD Menu

Pressing the **MENU** button of the remote control accesses the content menu of the DVD (if available). This may include various titles, bonus material and specials. When playing other media, press the **ENTER** button, to access the content menu





(if available). Press MENU again to resume playback in the same scene, where you first pressed MENU.

#### Connecting Headphones

You can connect one set of headphones with a 3.5 mm jack to the earphone socket on the left side of unit. Plug the jack into the socket which will then disconnect the built in speakers.

#### CAUTION:

When using headphones be **careful with your hearing**. Adjust the volume to comfortable levels before using the headphones. Using headphones with excessive volume may cause damage to your hearing.

## M. Playing CDs

**1. DISPLAY**(Refer to the **Display** description on page 12)

#### 2. USING THE REPEAT FEATURE

The default mode for the Repeat feature is OFF. Pressing REPEAT consecutively changes the repeat options:

- *REP ONE*- repeats the track that is playing.
- *REP ALL*- repeats the disc that is playing.
- *REP OFF*

As you toggle through the options, the repeat option changes. The selected repeat option loops repeatedly until you turn it off.

## N. Playing MP3 Discs

MP3 is a format for storing digital audio. An audio CD-quality song is compressed into the MP3 format with very little loss of audio quality while taking up much less disc space. CD-R /RW discs that have been encoded in MP3 format are compatible with this system.

When an MP3 disc is placed into the unit, the menu screen appears automatically.

You can use the menu screen to select your desired folders and songs or the system plays the songs in the order they were burned onto the disc.



1. Press the ▲ or ▼ button to choose a folder from the folder list on the left side of the screen.
2. Press ENTER to select the highlighted folder. The songs available under the folder will be listed.
3. Use ▲ or ▼ button to choose a song from the list. Press ENTER to select and begin playback of the highlighted song.
4. Use the ►► (NEXT) button to move to the next song. Press the ◀◀ (PREVIOUS) button to move to the beginning of the previous song.




#### USING THE REPEAT FEATURE

The default mode for the Repeat feature is OFF. Pressing REPEAT consecutively changes the repeat options:

- REP One (repeat playback of a song)
- REP DIR (repeat playback of a specific folder)
- REP ALL (repeat playback of the whole disc)
- REP OFF (normal playback)

As you toggle through the options, the repeat mode changes. The selected repeat mode loops repeatedly until you turn it off.

#### NOTICE

- “” icon in front of a file name indicates that this is a folder, not an MP3 file.
- “MP3” icon in front of a file name indicates that this is an MP3 file.



## O. Setup

### *System Setup Page*

- 1) With no disc inside the player, press 'SETUP' to display the Main screen of the Setup Menu on the screen and "SYSTEM SETUP" appears. At the same time, " " is highlighted. Press 'SETUP' again to exit the Setup Menu .
  - 2) Press the ▼ button, "Screen Saver" is highlighted.
  - 3) Press the ▲ or ▼ button to select the other menus in system setup page.
  - 4) Press ► to enter the sub menu.
  - 5) Press the ▲ or ▼ button to select the sub menu and press the ENTER to confirm your selection.
  - 6) Repeat steps 3-5 for other menus.
- Note: Press ◀ to return the previous menu.

### **SCREEN SAVER**

\*On: Enables screen saver

\*Off: Disables screen saver (off)

\***Note:** The DVD player will enter the Screen Saver mode after approximately five minutes if the same image remains on the screen.

### **ANGLEMARK**

\* On: The screen will show the angle mark icon.

(\*If an angle option is available).

\* Off: The screen will not display the Angle Mark

**Note:** Not all discs contain above features. The above features are disc dependent.



### TV DISPLAY

#### 4:3 PS (Panscan):

Select when a conventional TV set is connected. When the wide screen disc is played, it displays pictures cropped to fill your TV screen. The left and right edges are cut off.



#### 4:3 LB (Letterbox):

Select when a conventional TV set is connected. When the wide screen disc is played, the black bands appear at the top and bottom of screen.



#### 16:9 (WIDE):

Select when a wide screen TV set is connected. Played in "FULL" size. (Setting the wide screen TV to "FULL" mode is also necessary.)



### LAST MEMORY

\*On: The unit will return to the last position on the disc.

\*Off: The unit will not return to the last position on the disc.

**Note:** The Last position memory function effect when switching AV In/Out or OPEN operation.

#### \*EXIT SETUP: To exit the SETUP PAGE.

\* Press ▲ to return the Setup main menu.

#### *Language Setup*

1) In Setup menu, Press the ◀ or ▶ button to select "LANGUAGE

SETUP" and  is highlighted.

2) Press the ▼ button, "OSD Language" is highlighted.

3) Press the ▲ or ▼ button to select the other menus in the language setup page.

4) Press ▶ to enter the sub menu.





5) Press the ▲ or ▼ button to select the sub menu and press the ENTER to confirm your selection.

6) Repeat steps 3-5 for other menus.


**Note:** Press ◀ to return the previous menu.

**You can choose Japanese ,English, French ,Spanish, German as audio, subtitle and menu language.**

**\*EXIT SETUP: To exit the SETUP PAGE.**

\* Press ▲ to return the Setup main menu.

#### *Video Setup*

1) In Setup menu, Press the ◀ or ▶ button to select “VIDEO SETUP” and  is highlighted.

2) Press the ▼ button, “Brightness” is highlighted.

3) Press the ▲ or ▼ button to select the other menus in the video setup page.

4) Press ▶ to enter the sub menu.

5) Press the ▲ or ▼ button to adjust the quantity and press the ENTER to confirm your selection.

6) Repeat steps 3-5 for other menus.

**Note:** Press ◀ to return the previous menu.

a) **Brightness**

b) **Contrast**


c) **Hue**

d) **Saturation**

**\*EXIT SETUP: To exit the SETUP PAGE.**

\* Press ▲ to return the Setup main menu.

#### *Password Setup Page*

1) In Setup menu, Press the ◀ or ▶ button to select “PASSWORD SETUP” and  is highlighted.

2) Press the ▼ button, “PASSWORD” is highlighted.

3) Press ▶ to enter the sub menu. Input 3308 and press ENTER to open the lock.

4) Press ▼ button to choose “RATING” and press ▶ to enter the submenu.



5) Select the parental level you desire using ▲ or ▼ button for discs with lock-out function or multiple rating levels. These are listed from the lowest level (1 KID SAFE) to the highest level (8 ADULT). Press ENTER to confirm your selection.


**Note:** The level of 8 Adult is the factory default.

6) Enter the “PASSWORD” and input the password you desired. Next time, you could use this new password to open the lock.(Note: 3308 is always effective.)

**\*EXIT SETUP: To exit the SETUP PAGE.**

\* Press ▲ to return the Setup main menu.

#### ***Default Setup***

 
1) In Setup menu, Press the ◀ or ▶ button to select “DEFAULT SETUP” and  is highlighted.

2) Press the ▼ button, “DEFAULT” is highlighted.

3) Press ▶ to enter the “RESET” and press ENTER to return the factory’s original set.

**Note:** The parental setting is not affected by the default reset.





**P. Specifications:**

Model Number: FPE1080

**Ver: 00**

**Features**

UPC number: 0-44476-03140-3

**Display Features**

|                  |                      |
|------------------|----------------------|
| Display type     | TFT-LCD              |
| Screen Size      | 8" (diagonal)        |
| Aspect Ratio     | 4:3                  |
| Panel Resolution | 640x480              |
| Brightness       | 380Cd/m <sup>2</sup> |
| Contrast ratio   | 250:1                |
| Viewing Angle    | L/R:65, D:55, U:65   |
| Backlight life   | 10,000 Hrs           |

**TV Reception**

|                        |              |
|------------------------|--------------|
| TV System              | NTSC M       |
| Channel CATV - UHF/VHF | 181 channels |
| Antenna Impedance      | 75ohm        |
| Connector type         | F            |

**Audio**

|                          |             |
|--------------------------|-------------|
| Maximum Audio Output     | 1.5watt x 2 |
| Total number of speakers | 2           |

**Video Connections**

|                        |                             |
|------------------------|-----------------------------|
| NTSC Analog TV Tuner   | 1                           |
| Composite Video Input  | 1 (Input/Output switchable) |
| Composite Video Output | 1 (Input/Output switchable) |

**Video Standards Supported**

|                       |      |
|-----------------------|------|
| Composite Video input | NTSC |
| RF                    | NTSC |

**Audio Connections**

|                                    |              |
|------------------------------------|--------------|
| RCA Input(Red, White)              | 1            |
| Headphone:(Variable/Fixed) (3.5mm) | 1 (Variable) |



### **Playback Media Compatibility**

|            |                 |
|------------|-----------------|
| Audio CD   | YES             |
| CD-R       | YES             |
| CD-RW      | YES             |
| DVD-R      | YES             |
| DVD-RW     | YES             |
| DVD-Video  | YES             |
| Picture CD | YES             |
| VCD        | NO              |
| SVCD       | NO              |
| SD/MMC     | YES (512mb max) |

### **Playable Format (Codec)**

|         |                         |
|---------|-------------------------|
| MP3     | (@ 32 - 320Kbps, 44kHz) |
| CD-DA   | YES                     |
| VCD 1.1 | NO                      |
| VCD 2.0 | NO                      |

### **Features**

Built-in DVD Player  
Removable Tilt/Swivel stand  
12VDC input for Car use  
User friendly remote and On Screen Display (OSD)  
Built-in Secure Digital (SD) and Multi-Media Card (MMC)  
MP3 playback on Disc and SD/MMC  
Photo Show on Disc and SD/MMC

### **Accessories in the box**

8" LCD/DVD unit  
1xRCAAV Cable  
1xAC/DC Adapter  
1x12V Car Adapter  
1x Remote Control  
Owners manual





### **Power Requirements**

|                      |                     |
|----------------------|---------------------|
| Power Source         | 100-240 VAC 50/60Hz |
| Unit input power     | 12VDC 1.7A          |
| Power ON consumption | 13W                 |

### **Dimension (WxHxD)**

|                |                        |
|----------------|------------------------|
| Unit W/stand   | 10.75 x 8.5 x 4.6 (in) |
| Unit W/O stand | 10.75 x 7 x 3 (in)     |

### **Weight (N.W.)**

|                |           |
|----------------|-----------|
| Unit W/stand   | 3.88(lb)  |
| Unit W/O Stand | 3.31 (lb) |

### **Warranty**

|               |        |
|---------------|--------|
| Parts & Labor | 90 day |
|---------------|--------|

### **Environment**

|                       |           |
|-----------------------|-----------|
| Operating Temperature | 41 - 95°F |
| Operating Humidity    | 30% - 80% |

\*Designs and specifications are subject to change without notice.





**AUDIOVOX®**  
ELECTRONICS CORP.

## 90 DAY LIMITED WARRANTY

Applies to Audiovox Video Products

AUDIOVOX ELECTRONICS CORP. (the Company) warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within ninety (90) days from the date of original purchase, such defect(s) will be repaired or replaced with reconditioned product (at the Company's option) without charge for parts and repair labor. A game controller, if supplied, is similarly warranted for ninety (90) days.

To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address shown below.

This Warranty does not extend to the elimination of externally generated static or noise, to correction of antenna problems, to costs incurred for installation, removal or reinstallation of the product, or to damage to digital memory cards, discs, speakers, accessories, or electrical systems.

This Warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label (s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

U.S.A. : AUDIOVOX ELECTRONICS CORPORATION, 150 MARCUS BLVD., HAUPPAUGE, NEW YORK 11788 | 1-800-645-4994

CANADA : CALL 1-800-645-4994 FOR LOCATION OF WARRANTY STATION SERVING YOUR AREA

© 2005 Audiovox Electronics Corporation

128-5556E

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>