

Uniden® | A World Without Wires®

UNIDEN
CORDLESS
PHONES



TCX905

OWNER'S MANUAL

Welcome

Congratulations on your purchase of the Uniden TCX905 accessory handset and charger. You can place this fully featured cordless handset anywhere your home has AC power.

Note: Illustrations in this manual are used for explanation purposes. Some illustrations may differ from the actual unit.

Accessibility

Uniden provides a customer service hotline for accessibility questions. If you have a disability and need customer service assistance or if you have any questions about how Uniden's products can accommodate persons with disabilities, please call the accessibility voice/TTY line: 1-800-874-9314.

A representative is available to talk to you M-F, 8:00 am to 5:00 pm, CST. After hours, you can leave us a message, and we will call you back. Information is also available on our website, www.uniden.com, under the "Accessibility" link.

Important!

The TCX905 accessory handset will not operate until it is registered to a Uniden main base. This manual describes how to set up your new handset; for more detailed instructions on operating your new handset, please refer to the manual supplied with your base.

Terminology Used in this Manual

Base	The main part of the phone that connects to your phone line and lets you make and receive calls.
Charger	A cradle that charges an accessory handset. It connects to power but not to a phone line.
Accessory Handset	A handset that works with an expandable phone base. Accessory handsets must be registered to a base.
Standby	The handset is not in use. If it is off the cradle, no line has been activated. No dial tone is present.
Station	Any handset or the base.
Talk	A telephone line has been activated on the handset or the base, enabling a dial tone.

Uniden® is a registered trademark of Uniden America Corporation.

Compatible Bases

Your phone is compatible with the following Uniden 5.8 GHz Digital Expandable Systems: the TRU9 series (TRU9460, TRU9465, TRU9466, TRU9480, TRU9485, TRU9488, TRU9496), the TRU8 series (TRU8860, TRU8865, TRU8866, TRU8880, TRU8885, TRU8888), the CLX series (CLX465, CLX485), the Elite series (ELT560, ELBT585, ELBT595), and the UIP18 series (UIP1868P and UIP1869V).

Please visit our website at www.uniden.com for the most up-to-date list of compatible bases.

Note: Two-line operation is supported only when the handset is registered to a two-line base.

Installing the Accessory Handset

Checking the Package Contents

 
Make sure your package contains the following items. If any items are missing or damaged, contact our Customer Service Hotline. See back cover page for contact information.

- Cordless Handset
- Charging Cradle
- AC Adapter, model # AD-0005
Input: 120V AC 60 Hz
Output: 9V DC 210 mA
- Rechargeable NiMH Battery Pack, model # BT-446
Capacity: 800 mAh, 3.6V
- Beltclip
- Printed Material

Installing the Battery

Follow the steps below to install the rechargeable battery pack.

1. Using the finger indentation, press in on the battery case cover and slide it down to remove it.
2. Plug the battery connector into the battery compartment jack. Be sure to match the red and black wires to the label near the jack.
3. Gently pull on the battery wires. If the battery connector comes loose, try connecting it again.
4. Replace the battery case cover and slide it up until it clicks into place.

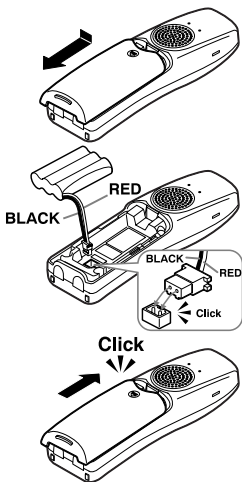

Note: Use only the Uniden BT-446 rechargeable battery pack supplied with your cordless telephone.

 
Installing the Belt Clip

Line up the tabs with the holes on each side of the handset. Press the belt clip down until both tabs click into place. To remove the belt clip, pull both sides of the clip to release the tabs from the holes.



Installing the Optional Headset

Your phone may be used with an optional headset. To use a headset, insert the headset plug into the headset jack. Headsets may be purchased by calling the Uniden Parts Department. See back cover page for contact information.

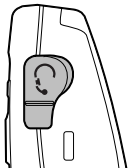


Charging the Accessory Handset

The handset is powered by a rechargeable battery pack that automatically recharges when the handset is placed in the charger.

1. Connect the AC adapter to the **DC IN 9V** jack and to a 120V AC outlet that is not controlled by a wall switch.

Caution: Use only the Uniden AD-0005 adapter.

 2. Set the charger on a desk or tabletop, and place the handset in the charger with the keypad facing forward.
3. Make sure that the **charge** LED illuminates. If the LED does not illuminate, check to see that the AC adapter is plugged in and the handset makes good contact with the charging contacts on the charging cradle.
4. Charge the handset battery pack for at least 15-20 hours before using your new handset for the first time.

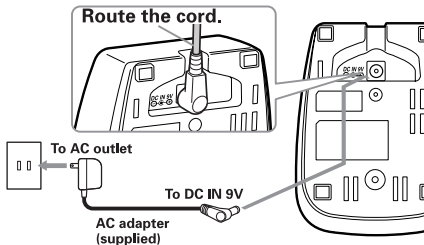


Registering the Handset

You must register the handset to the base before you can use it. Only one handset can be registered at a time. (If an accessory handset has previously been registered to a base, you must reset the handset before you can register it to a new base.)

For Base Models TRU9460, TRU9465, TRU9466, TRU9480, TRU9485:

 To register to a TRU9 series base, simply place the accessory handset in the base. While the handset is registering, **HANDSET REGISTERING** will appear in the LCD. When **REGISTRATION COMPLETE.** is displayed; the handset has been registered to the base. If **REGISTRATION FAILED.** appears, remove the handset from the base and try again.

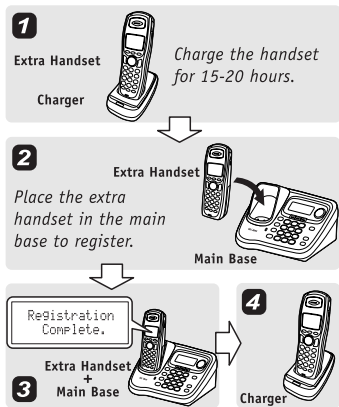

For Other Base Models

1. Select your base model from this list and follow these directions:

MODEL	DIRECTIONS:
TRU9488 TRU9496 UIP1868P UIP1869V TRU8888	<ul style="list-style-type: none"> • On the base, press the MENU soft key. • Scroll down to REGISTER HANDSET and press the OK soft key. • On the handset, press and hold [#] until the display reads HANDSET REGISTERING and you hear a beep.
CLX465 CLX485 ELBT585 ELBT595	<ul style="list-style-type: none"> • On the base, press [menu/select]. • Scroll down to SYSTEM SETUP and press the OK soft key. • Select REGISTER HANDSET and press the OK soft key. • On the handset, press and hold [#] until the display reads HANDSET REGISTERING and you hear a beep.

MODEL	DIRECTIONS:
ELT560	<ul style="list-style-type: none"> • Remove the battery compartment cover from the bottom of the main base. • Press and hold the Registration button located in the battery compartment until the base LEDs start blinking. • On the handset, press and hold [#] until the display reads HANDSET REGISTERING and you hear a beep.
TRU8860 TRU8865	<ul style="list-style-type: none"> • Disconnect the base AC adapter. • While holding the [find handset], reconnect the AC Adapter. • On the handset, press and hold [#] until the display reads HANDSET REGISTERING and you hear a beep.
TRU8866 TRU8885	<ul style="list-style-type: none"> • Disconnect the base AC adapter. • While holding the [flash/find hs], reconnect the AC Adapter. • On the handset, press and hold [#] until the display reads HANDSET REGISTERING and you hear a beep.
TRU8880	<ul style="list-style-type: none"> • Disconnect the base AC adapter. • While holding the [find hs/intercom], reconnect the AC Adapter. • On the handset, press and hold [#] until the display reads HANDSET REGISTERING and you hear a beep.

2. When REGISTRATION COMPLETE. is displayed; the handset has been registered to the base. If REGISTRATION FAILED. appears, please try these steps again.

Resetting Handsets

If you want to register the handset to a different base or replace a handset with another one, you must first clear the registration information from the base and the handset.

1. Press and hold **[*]** and **[#]** for at least 5 seconds, until the SYSTEM RESET menu appears.
2. Select the DEREGISTER HS submenu. WHICH HANDSET? appears in the display.
3. Move the cursor to select the handset ID to be de-registered from the list, and then press the **OK** soft key. DEREGISTER HS appears.
4. Move the cursor to select YES, and then press the **OK** soft key. When ARE YOU SURE? appears, select YES. You will hear a confirmation tone.



Resetting the Handset Without the Base

 
If the original base this handset was registered to is not available for some reason (for example, it is lost or somehow incapacitated), you can still reset the handset and use it with another base.

1. Press and hold **[*]** and **[#]** for more than 5 seconds, until the SYSTEM RESET menu appears.
2. Select the BASE UNAVAILABLE submenu. BASE UNAVAILABLE appears in the display.
3. Move the cursor to select YES, and then press the **OK** soft key. When ARE YOU SURE? appears, select YES. You will hear a confirmation tone, and the handset deletes its own link to the base without trying to contact the base.

Now you are ready to register the handset to the new base.

Using the Interface



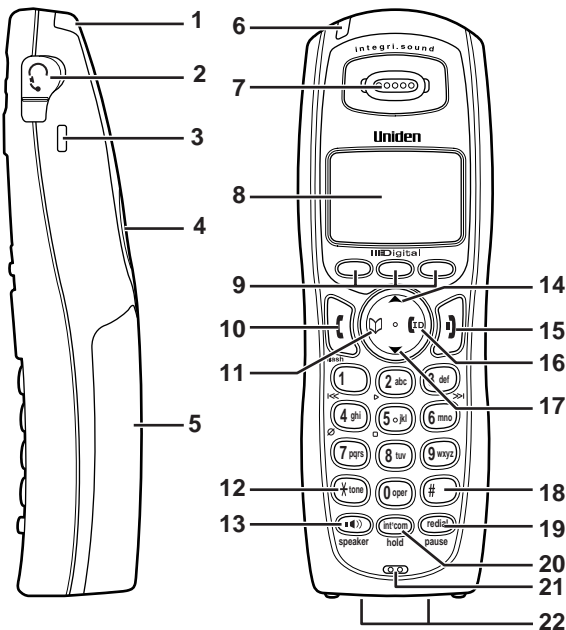







Parts of the Handset



- | | | |
|------------------------------------|--------------------------------------|-----------------------------------------------|
| 1. Handset Antenna | 9. Soft keys | 16. [ID] (caller ID) key |
| 2. Headset Jack Cover | 10. [/flash] (talk/flash) key | 17. [▼] (down) key |
| 3. Beltclip Hole | 11. [☰] (phonebook) key | 18. [#] (pound) key |
| 4. Speakerphone Speaker and Ringer | 12. [*/tone] key | 19. [redial/pause] key |
| 5. Handset Battery Compartment | 13. [🔊] (speaker) key | 20. [int'com/hold] (intercom/hold) key |
| 6. New Message LED | 14. [▲] (up) key | 21. Handset Microphone |
| 7. Handset Earpiece | 15. [⏏] (end call) key | 22. Handset Charging Contacts |


Reading the Display

The handset display uses icons to tell you the status of your phone. The table below lists the icons and what they mean.

ICON	STATUS	DESCRIPTION
	Talk	The talk icon appears while on a call.
	Talk	The privacy icon appears when Privacy mode is turned on.
	Talk	The call record icon appears while recording a conversation (Answering System base only).
	Talk	The mute icon appears when you mute the handset.
	Talk	The speaker icon appears when the handset speakerphone is in use.
	Talk	This icon appears when T-coil mode is turned on.
	Talk	This icon appears when Line 1 is in use. (two-line base only.)
	Talk	This icon appears when Line 2 is in use. (two-line base only.)
	Standby	The ringer off icon indicates that the ringer is turned off.
	Standby/Talk	The battery icon indicates the handset battery status: empty, low, medium, and full.

The Standby Screen

 When the phone is in standby, the handset display shows the following items:




Note: Illustration is of a single line system. Dual line systems will have different soft keys and standby screen.

Using the Four-way Function Key

Your handset has a four-way function key that allows you to move the cursor (or highlighted area) on the display and access the most commonly used features at the touch of a button. By moving this key to the left, you open the Phonebook. Move the key to the right to access Caller ID information.

 To use this four-way key, place your thumb over the key on the station and move to the four positions to get the feel of how it moves and operates.

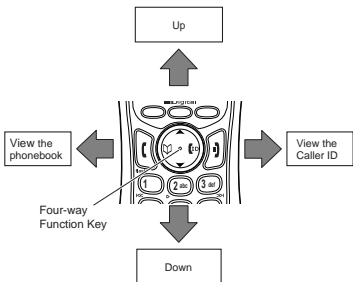

Using the Handset Menu

To open the menu, press the **MENU** soft key. Highlight the option you want by pressing the four-way function key. This will move the cursor; the option currently highlighted appears in reversed out text. Select the highlighted option by pressing the **OK** soft key. To exit the menu and return to standby, press **[*]]** on the handset.

If you do not press a key within 30 seconds, the phone will time out and exit the menu. When setting Date and Time, the time-out period is extended to two minutes.

Entering Text from Your Handset

You can use the number keypad on your phone to enter text by referring to the letters printed on each number key. When you press the number key in a text entry field, the phone displays the first letter printed on the number key. Press the number key twice to display the second letter and three times to display the third. Capital letters are displayed first, then lower case letters, then the number on the key.

If two letters in a row use the same number key, enter the first letter, then use **[right]** or **[left]** on the four-way function key to move the cursor to the next position to enter the second letter. For example, to enter "Movies":

	Number of times key is pressed								
keys	1	2	3	4	5	6	7	8	9
1	1								
2 abc	A	B	C	a	b	c	2		
3 def	D	E	F	d	e	f	3		
4 ghi	G	H	I	g	h	i	4		
5 jkl	J	K	L	j	k	l	5		
6 mno	M	N	O	m	n	o	6		
7 pqrs	P	Q	R	S	P	q	r	s	7
8 tuv	T	U	U	t	u	v	8		
9 wxyz	W	X	Y	Z	w	x	y	z	9
0 oper	&	<	>	<	>	/	(blank)	-	-
	.	,	:	?	!	@	'	"	*
	#	0							

1. Press **[6]** once to enter *M*.
2. Use **[right]** on the four-way function key to move the cursor to the right.
3. Press **[6]** six times to enter *o*.
4. Press **[8]** six times to enter *v*.
5. Press **[4]** six times to enter *i*.
6. Press **[3]** five times to enter *e*.
7. Press **[7]** eight times to enter *s*.
8. Press the **OK** soft key to end your text entry.

If you make a mistake while entering a name, use **[right]** or **[left]** on the four-way function key to move the cursor to the incorrect character. Press the **DELETE** soft key to erase the wrong character, and then enter the correct character. To delete all characters, press and hold the **DELETE** soft key.

Using Your Accessory Handset

Making and Receiving Calls

	Using the handset	Using the speakerphone
Making a call	<ol style="list-style-type: none">1. Remove the handset from the charger.2. Dial the number.3. Press [*/flash].	<ol style="list-style-type: none">1. Remove the handset from the charger.2. Dial the number.3. Press [M].
Answering a call	<ol style="list-style-type: none">1. Pick up the handset. (If AutoTalk is on, the phone will answer when you remove the handset from the charging cradle.)2. Press [*/flash]. (If Any Key Answer is on, you can also press any number keypad.)	<ol style="list-style-type: none">1. Pick up the handset. (If AutoTalk is on, the phone will answer when you remove the handset from the charging cradle.)2. Press [M].
Hanging up	Press [*] .	Press [*] .

Adjusting the Volume

Ringer Volume	Choose from three ringer volume settings (off, low, and high). With the phone in standby, use [▲] and [▼] to adjust the ringer volume.
Earpiece Volume	Choose from six volume levels for the handset. While on a call, press [▲] to make the handset volume louder or [▼] to make it softer.
Speaker Volume	Choose from six volume levels for the handset speakerphone. While on a call, press [▲] to make the speaker volume louder or [▼] to make it softer.

Using Caller ID and Call Waiting

You can store up to 100 Caller ID numbers in your handset. Your phone shares a total of 100 memory entries between your Phonebook and Caller ID. Once you store 100 phonebook names, Caller ID information can not be stored (but it will still display when the call comes in).

Note: You must subscribe to Caller ID and Call Waiting through your telephone provider.

Press **[ID]** to open the Caller ID list. The first thing you will see is the summary screen. From the summary screen, you have the following options:

Scroll through the list	To scroll through the list from A to Z, press [▼] . To scroll through the list from Z to A press [▲] .
Jump to entries beginning with a particular letter	Press the number key corresponding to the letter you want to jump to.
Store a Caller ID entry in the phonebook	Find the entry you want to store and press STORE soft key.
Dial a Caller ID entry	Find the entry you want to dial and press [{/flash] or [*] .
Delete a Caller ID entry	Find the entry you want to delete and press the DELETE soft key.
Delete all entries	Press the DELETE soft key. ARE YOU SURE? appears, select YES and press the OK soft key.
Exit the Caller ID list	Press [*] or press the BACK soft key or [{/flash] again if you are on a call.

Using Call Waiting

If a second call comes in when you are on the phone, a call waiting tone sounds, and the caller ID information of the waiting call appears on the display. Press **[{/flash]** on the handset to accept the waiting call. There is a short pause, and then you will hear the new caller. To return to the original caller, press **[{/flash]** on the handset again.

Using the Phonebook

Your phone allows you to store up to 2 numbers per name and up to 100 names in your phonebook. Your phone shares a total of 100 memory entries between your phonebook and CID. Once you store 100 phonebook entries, CID information will not be stored and will only display at time of new incoming calls. When Phonebook entries are full, you will hear a beep and **MEMORY FULL** appears. You cannot store any additional names and numbers unless you delete some of the existing ones.

Press [**☰**] to enter the phonebook. Once in the phonebook, you have the following options:

Scroll through the entries	To scroll through the phonebook from A to Z, press [▼]. To scroll through the phonebook from Z to A press [▲].
Jump to entries beginning with a particular letter	Press the number key corresponding to the letter you want to jump to.
Store a new entry	Press the NEW soft key and follow the directions.
Copy entries to another handset	<ol style="list-style-type: none"> 1. Find the entry you want to copy. 2. Press the OPTIONS soft key. 3. Select COPY SELECTION, and then press the OK soft key. 4. TO WHICH UNIT? appears. Select the station you want to copy this entry to, and then press the OK soft key. You will hear a confirmation tone.
Copy ALL entries to another handset	<ol style="list-style-type: none"> 1. Press the OPTIONS soft key. 2. Select COPY ALL and press the OK soft key. 3. TO WHICH UNIT? appears. Select the station you want to copy this entry to, and then press the OK soft key. 4. ARE YOU SURE? appears. Select YES and press the OK soft key. You will hear a confirmation tone.
Dial an entry	<ol style="list-style-type: none"> 1. Find the entry you want to dial. 2. Press [/flash] or [☎].
Delete an entry	<ol style="list-style-type: none"> 1. Find the entry you want to delete. 2. Press the OPTIONS soft key. 3. Select DELETE SELECTION, and then press the OK soft key. 4. ARE YOU SURE? appears. Select YES and press the OK soft key. You will hear a confirmation tone.
Delete all entries	<ol style="list-style-type: none"> 1. Press the OPTIONS soft key. 2. Select DELETE ALL and press the OK soft key. 3. ARE YOU SURE? appears. Select YES and press the OK soft key. You will hear a confirmation tone.
Close the phonebook	Press [⏏] or the BACK soft key repeatedly if you are on a call.

Redialing a Number

You can quickly redial the last 3 numbers dialed on the handset.


1. With the phone in standby, press **[redial/pause]** or the **REDIAL** soft key to open the redial list.
2. Use **[▲]** and **[▼]** to scroll through the redial list.
3. When you find the number you want to dial, press **[{/flash]** or **[⏸]**.

Note: You can also press **[{/flash]** or **[⏸]** before you open the redial list. In this case, press **[redial/pause]**.


Muting the Ringer (One Call Only)

While the handset is ringing, press **[i]** to mute the ringer for this call. The phone will ring again on the next call. (The handset must be off the cradle to mute the ringer.)

Muting the Microphone

To mute the microphone so the caller can't hear you, press the **MUTE** soft key while on a call. **MUTE ON** will appear in the display for 2 seconds, but the  icon will appear and remain in the display until the feature is turned off. Repeat the procedure to cancel muting.


Privacy Mode

To prevent other stations from interrupting a call, press the **PRIVACY** soft key while on a call. **PRIVACY MODE ON** will appear in the display for 2 seconds, but the  icon will appear in the display until the feature is turned off. Repeat the procedure to turn off privacy mode.

Using Hold, Conference, Transfer and Intercom

Put a call on hold	Press [int'com/hold] . If you leave a caller on hold for more than five minutes, the call will be disconnected. To return to the party on hold, press [(/flash] or [*]] .
Join a call in progress	To join a call already in progress, press [(/flash] or [*]] . You can hang up normally; the other station remains connected to the call.
Transfer a call	Press [int'com/hold] ; the call will automatically be placed on hold. Use [▲] or [▼] to select the station you want to transfer the call to, and press the OK soft key. (To page all stations at once, select ALL .) When the other station answers, you can talk to the station; the outside call remains on hold. If the other station accepts the call, you will be disconnected.
Cancel a transfer	To cancel the transfer and return to the call, press [(/flash] or [*]] .
Accept a transferred call	To answer the page and speak to the transferring station, press [(/flash] or [int'com/hold] . To accept the call and speak to the caller, press [(/flash] again.
Make an intercom page	With the phone in standby, press [int'com/hold] . Use [▲] or [▼] to select the station you want to talk with, then press the OK soft key. (If you select ALL , all other stations will be paged.)
Cancel a page	To cancel the intercom page, press the CANCEL soft key or [*]] .
Answer an intercom page	Press [(/flash] or [int'com/hold] . If AutoTalk is on, the handset automatically answers the page when you remove it from the cradle.

Accessing Your Answering Machine

If your base has an answering machine, you can use your handset to get your messages and change your answering machine setup. To access the answering machine, press the  soft key. The answering machine announces the number of new and old messages and then waits for your next command. You have the following options:

Play messages	Press [> 2]. The system announces the time, and number of new and old messages.
Repeat a message	Press [<</1] to go to the start of the current message. Press [<</1] repeatedly to go back to a previous message.
Skip a message	Press [>>/3] to go to the beginning of the next message.
Delete a message	While a message is playing, press [∅/4] and the message will be permanently deleted.
End message review	Press [□/5] to stop the message playback.
Record a memo	Press [7] to start recording. Press [□/5] or [7] to stop.
Turn the answering machine on or off	TRU9480 and TRU8 series: Press [6] to turn the answering machine on. Press [9] to turn the answering machine off. TRU9485/9488/9496 & ELT/CLX series: Press [9] to turn the answering machine on/off.
Record a greeting	Press [8] to start recording. Press [□/5] or [8] to stop.
Listen to Help	Press [0] to hear the Help prompts.
Exit and hang up	Press []]] to exit the system and return to standby.


Screening Calls

You can listen to callers who leave a message. Press the **SCREEN** soft key when the system is answering to listen to the caller without answering the phone.

Accessing Voicemail

If you subscribe to a voice mail service, you can program your access number into your handset and access your voice mail at the touch of a button.

1. Press the **MENU** soft key. Select **HANDSET SETUP** and **EDIT VOICE MAIL** submenu.
2. Enter your personal access number (up to 20 digits).
3. If you need to have the phone wait before sending the next digits, press **[redial/pause]** to insert a two-second pause in the dialing sequence. For a longer pause, press the key multiple times. A **P** appears in the display each time you press the key and each pause counts as one digit.
4. Press the **OK** soft key when you are finished.

Once you program your access number, press the  soft key to dial your voice mail service.

Maintenance

Battery Life

With average use, your battery talk time will be approximately 5 hours and standby time will be approximately 7 days. For optimum performance, be sure to return the handset to the cradle after each call. If the handset is left off of the base, the actual talk time duration will be reduced respective to the amount of time the handset is off the cradle.

Note:

Do not place the power cord where it creates a trip hazard or where it could become chafed and create a fire or electrical hazard.

Low Battery Alert

When the battery pack is very low, the display shows **LOW BATTERY** and the empty battery icon. If the phone is in standby, none of the keys will operate. If you are on a call, complete your conversation as quickly as possible, and return the handset to the charging cradle.

Battery Replacement and Handling

With normal usage, your battery should last about one year. When the talk time becomes short, even after the battery is recharged, please replace the battery. A replacement Uniden adapter or battery may be purchased by calling Uniden's Parts department. See back cover page for contact information.

Warning

 
To avoid the risk of personal injury or property damage from fire or electrical shock, use only BT-446 battery pack with your phone.

Caution:

- **This equipment contains a rechargeable Nickel-Metal-Hydride battery.**
- **Do not remove the batteries from the handset to charge them.**
- **Never throw the battery into a fire, disassemble it, or heat it.**
- **Do not remove or damage the battery casing.**
- **Nickel is a chemical known to State of California to cause cancer.**
- **Do not short-circuit the battery.**
- **Do not charge the battery used in this equipment in any charger other than the one specified in the owner's manual. Using another charger may damage the battery or cause the battery to explode.**
- **Rechargeable Batteries Must Be Recycled or Disposed of Properly.**

Clean the Battery Contacts

To maintain a good charge, clean the charging contacts on the handset once a month. Dampen a cloth with plain water. Gently rub the damp cloth over the charging contacts

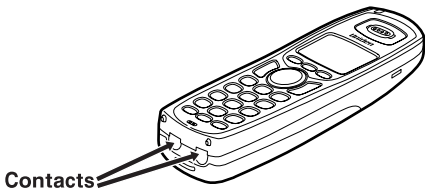

until all visible dirt is removed. Dry the contacts thoroughly before returning the handset to the charging cradle.

Caution: Do not use any chemical products (alcohol, paint thinner, etc.). Doing so may discolor the surface and damage the finish.

The FCC Wants You To Know

Changes or modifications to this product not expressly approved by Uniden, or operation of this product in any way other than as detailed by the owner's manual, could void your authority to operate this product.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Privacy of communications may not be ensured when using this phone.

To insure the safety of users, the FCC has established criteria for the amount of radio frequency energy various products may produce depending on their intended usage. This product has been tested and found to comply with the FCC's exposure criteria. For body worn operation, the FCC RF exposure guidelines were also met when used with the Uniden accessories supplied or designed for this product. Use of other accessories may not ensure compliance with FCC RF exposure guidelines and should be avoided.

I.C. Notice

Terminal Equipment

NOTICE: This equipment meets the applicable Industry Canada Terminal Equipment Technical Specifications. This is confirmed by the registration number. The abbreviation, IC, before the registration number signifies that registration was performed based on a Declaration of Conformity indicating that Industry Canada technical specifications were met. It does not imply that Industry Canada approved the equipment.

NOTICE: The Ringer Equivalence Number (REN) for this terminal equipment is marked on the equipment itself. The REN assigned to each terminal equipment provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed five.

Radio Equipment

The term "IC:" before the radio certification number only signifies that Industry Canada technical specifications were met. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. "Privacy of communications may not be ensured when using this telephone".

As an Energy Star[®] Partner, Uniden has determined that this product or product models meets the Energy Star[®] guidelines for energy efficiency. Energy Star[®] is a U.S. registered mark.



One Year Limited Warranty

Important: Evidence of original purchase is required for warranty service.

WARRANTOR: UNIDEN AMERICA CORPORATION ("Uniden") **ELEMENTS OF WARRANTY:** Uniden warrants, for one year, to the original retail owner, this Uniden Product to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

WARRANTY DURATION: This warranty to the original user shall terminate and be of no further effect 12 months after the date of original retail sale. The warranty is invalid if the Product is (A) damaged or not maintained as reasonable or necessary, (B) modified, altered, or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, (C) improperly installed, (D) serviced or repaired by someone other than an authorized Uniden service center for a defect or malfunction covered by this warranty, (E) used in any conjunction with equipment or parts or as part of any system not manufactured by Uniden, or (F) installed or programmed by anyone other than as detailed by the owner's manual for this product.

STATEMENT OF REMEDY: In the event that the product does not conform to this warranty at any time while this warranty is in effect, warrantor will either, at its option, repair or replace the defective unit and return it to you without charge for parts, service, or any other cost (except shipping and handling) incurred by warrantor or its representatives in connection with the performance of this warranty. Warrantor, at its option, may replace the unit with a new or refurbished unit. **THE LIMITED WARRANTY SET FORTH ABOVE IS THE SOLE AND ENTIRE WARRANTY PERTAINING TO THE PRODUCT AND IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES OF ANY NATURE WHATSOEVER, WHETHER EXPRESS, IMPLIED OR ARISING BY OPERATION OF LAW, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES.** Some states do not allow this exclusion or limitation of incidental or consequential damages so the above limitation or exclusion may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This warranty is void outside the United States of America and Canada. **PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY:** If, after following the instructions in the

owner's manual you are certain that the Product is defective, pack the Product carefully (preferably in its original packaging). Disconnect the battery from the Product and separately secure the battery in its own separate packaging within the shipping carton. The Product should include all parts and accessories originally packaged with the Product. Include evidence of original purchase and a note describing the defect that has caused you to return it. The Product should be shipped freight prepaid, by traceable means, to warrantor at:

Uniden America Service
4700 Amon Carter Blvd.
Fort Worth, TX 76155

Memo

Memo

Memo

At Uniden, we'll take care of you!

Thank you for purchasing a Uniden product. If you have any questions or problems, please do not return this product to the place of purchase.

Having trouble?	Our customer care specialists are here to help you! Visit our website at www.uniden.com or call our Customer Service Hotline at 1-800-297-1023, Monday through Friday, 7 AM to 7 PM or Saturday/Sunday, 9 AM to 5 PM, CST. The Customer Service Hotline is closed on holidays.
Need a part?	To order headsets, additional handsets, replacement batteries, or other accessories, visit our website at www.uniden.com or call 1-800-554-3988, Monday through Friday, 8 AM to 5 PM, CST.
Help for our customers with special needs	If you need special assistance due to a disability or have questions on the accessibility features of this product, please call 1-800-874-9314 (voice or TTY).

May be covered under one or more of the following U.S. patents:

4,797,916	5,381,460	5,426,690	5,434,905	5,491,745
5,493,605	5,533,010	5,574,727	5,581,598	5,650,790
5,660,269	5,661,780	5,663,981	5,671,248	5,696,471
5,717,312	5,732,355	5,754,407	5,758,289	5,768,345
5,787,356	5,794,152	5,801,466	5,825,161	5,864,619
5,893,034	5,912,968	5,915,227	5,929,598	5,930,720
5,960,358	5,987,330	6,044,281	6,070,082	6,125,277
6,253,088	6,314,278	6,418,209	6,618,015	6,671,315
6,714,630	6,782,098	6,788,920	6,788,953	6,839,550
6,889,184	6,901,271	6,907,094	6,914,940	

Other patents pending.

**VISIT
WWW.UNIDEN.COM
TO REGISTER YOUR
PRODUCT**

© 2005 Uniden America Corporation, Fort Worth, Texas. Contains additional foreign articles. Printed in China.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>