



Uniden®

**DECT1820
EXTRA HANDSET
OWNER'S
MANUAL**

OWNER'S MANUAL



Welcome

Congratulations on your purchase of the Uniden DECT1820 optional handset and charger. This expansion handset is compatible with models in the following series: DECT1825, DECT1825+1, DECT1855 and DECT1855+1 (Model numbers may vary.)

Each model within this series will support up to six handsets. You can place a fully featured cordless handset anywhere in your home as long as AC power is available to connect the handset's charging cradle.

IMPORTANT

The DECT1820 expansion handset will not operate unless it has been registered to your main base. Refer to the owner's manual supplied with your main base model for detailed instructions on operating your new expansion handset.

Checking the Package Contents

Make sure you have received the following items in the package. If any of these items are missing or damaged, contact your retailer.

- Cordless Handset
- Charging Cradle
- AC Adapter
(INPUT:240V AC 50Hz)
(OUTPUT:6V DC 200 mA)
- 2 x AAA size Rechargeable Batteries (1.2V 650mAh)
- This Owner's Manual
- Other Printed Material





Installing Your Expansion Handset

Follow these three easy steps to get your new handset ready to use:


- 1 Connect the charger.
- 2 Install the batteries and charge your new handset for 15-20 hours.
- 3 Register your new handset to the main base.

Step 1: Connect the Charger

- 1 Connect the AC adapter to the **DC IN** jack and to a standard 240V AC wall outlet.
- 2 Set the charger on a desk or tabletop.



- **Use only the supplied AC adapter. Do not use other AC adapter.**
- Place the charger close to the AC outlet so that you can unplug the AC adapter easily.

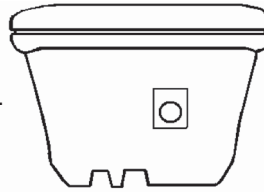



Step 2: Install the Batteries and charge your new handset for 15-20 hours

- 1** Remove the battery compartment cover. Press down on the semi-circle indent and slide the cover off.
- 2** Charge the battery for 15-20 hours before using. To charge the batteries, place the handset on the charger. While charging, the symbol scrolls and when the battery is fully charged, all the bars of the battery symbol will be filled when the phone is off the cradle.

If the symbol does not appear, reposition the handset in the charger, ensuring that the charging points contact.



- Use only the Uniden batteries supplied with your phone.
- Recharge your handset on a regular basis by returning the handset to the charger after each phone call.

Step 3: Register the Handset

YOU NEED TO REGISTER THE DECT1820 TO THE MAIN BASE BEFORE USE!

For Main Base Models DECT1825, DECT1825+1, DECT1855 and DECT1855+1, When you register a new handset to your base, you will be asked to enter the base PIN code.



The pre-set PIN code is 0000. If you wish you can change this code, see owner's manual for detailed instruction.



Before registering, make sure that you have the base and handset in front of you. Also, make sure all handsets and the base are in standby mode.





On the DECT1820 handset you want to register:

1. Press  to access the main menu.
2. Press up or down key until "Add. Settings" is displayed and press .

Press up or down key to display "Register" and press .
Press up or down key to select your base number and press .

On your original base:

Press and hold **find handset** for approx. 3 seconds until you hear the registration tone. You are now in 'registration mode'.

If the base already has the maximum number of handsets (6) registered to it you will need to de-register one of the existing handsets before you can register the new handset. See section below for de-registering handsets.

On the DECT1820 handset:








Enter the base PIN code. Pre-set base PIN code is 0000. You will hear a confirmation tone when registration is complete.

When in standby mode, the new handset number will be displayed. The handset will automatically be allocated with the next available handset number.

If registration is unsuccessful, the display will show **Not Registered** and you will need to follow the registration procedure again.



If you have more than one handset registered to your base you can de-register a handset or the bases registered to use. Before de-registering, make sure all handsets and the base are in standby mode.

- 1 Press  to access the main menu.
- 2 Press up or down key until `Add. Settings` is displayed and press .
- 3 Press up or down key to display `De-register` and press .
- 4 Press up or down key to select `Handset` or `Base` and press .
- 5 Press up or down key to display the handset or base you want to de-register and press .
- 6 Press up or down key to select `Yes` and press .
If the handset has been registered to the base successfully, you will hear a confirmation tone.
- 7 Press  to exit and return to standby.



- Your phone is GAP compatible, which means you can register your DECT1820 handset to other DECT (Digitally enhanced cordless telephone) GAP compatible bases.
- To Register your handset to another manufacturer's base. Follow the procedure for registering shown in the other manufacturer's user guide.
- You can register a DECT1820 handset to up to 4 bases, e.g. one at work and one at home, and switch between them.



Using Your Expansion Handset

Now that your new handset is registered, it can perform all the same functions as the handsets originally included with your phone. With your new handset, you can

- Transfer calls between handsets
- Use two handsets as 2-way radios in DirectLink (Walkie-Talkie) mode
- Hold conference calls
- Access the integrated answering device or voice mail using Handset

See the owner's manual that came with your main base for complete instructions on operating your new expanded phone.





Battery Information

Low battery alert

If the symbol is displayed on the handset, "Charge Battery" appears and you hear the low battery tone, you will need to recharge your handset. We recommend that you place the handset back on the charger between use to ensure that it is always fully charged.

Cleaning the battery charging contacts

To maintain a good charge, clean the charging contacts on the handset once a month. Dampen a cloth with plain water. Gently rub the damp cloth over the charging contacts until all visible dirt is removed. Dry the contacts thoroughly before returning the handset to the cradle.

Caution: Do not use paint thinner, benzene, alcohol, or other chemical products. Doing so may discolor the surface of the telephone and damage the finish.



Contacts





Quick Guide

Function

Make a call

Button press

, enter number.

Preparatory call

Enter number, .

Adjust earpiece volume During a call, or .

End a call

Receive a call

Phone rings, .

Redial

then or to display number,

Privacy

During a call, and select Mute, repeat the same step to select "Un Mute" to resume a call



Store phonebook number

⏏ then ^{menu/ok} select New Entry, ^{menu/ok} enter name, ^{menu/ok} enter number, ^{menu/ok} .
Select Tone, ^{menu/ok} , then select Save, ^{menu/ok} .

Dial phonebook number

⏏ then ^{rdll} or ^{talk} .

Handset ringer melody

^{menu/ok} then ^{rdll} or ^{talk} to Audio Settings ^{menu/ok}
Press ^{rdll} or ^{talk} to Ringer Type ^{menu/ok} then
Press ^{rdll} or ^{talk} to select External,
Internal, Pasins, Alarm, or
Appointment ^{menu/ok} .
Press ^{rdll} or ^{talk} to select the melody, ^{menu/ok} .

Make internal call

^{intcom} then ^{rdll} or ^{talk} to select internal
handset number, ^{menu/ok} or ^{talk} .



Warranty

UNIDEN DECT1820 Cordless Phone

Limited One Year Warranty

Note: Please keep your sales docket as it provides evidence of warranty.

Warrantor: Uniden Australia Pty Limited ABN 58 001 865 498

Uniden New Zealand Limited

Warranty only available in original country of purchase

Elements of Warranty: Uniden warrants to the original retail owner for the duration of this warranty, its DECT1820 Cordless Phone (hereinafter referred to as the Product) to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

Warranty Duration: This warranty to the original retail owner only, shall terminate and be of no further effect ONE (1) Year after the date of original retail sale. This warranty will be deemed invalid if the product is; (A) Damaged or not maintained as reasonable and necessary, (B) Modified, altered or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, (C) Improperly installed, (D) Repaired by someone other than an authorised Uniden Repair Agent for a defect or malfunction covered by this warranty, (E) Used in conjunction with any equipment or parts or as part of a system not manufactured by Uniden, (F) Installed, programmed or serviced by anyone other than an authorised Uniden Repair Agent, or (G) Where the Serial Number label of the product has been removed or damaged beyond recognition.

Parts Covered: This warranty covers for 1 year, the Handset and Charger Unit only.

Accessories: Batteries, AC adaptor etc are covered for 90 days.

Statement of Remedy: In the event that the product does not conform to this warranty at any time while this warranty is in effect, the warrantor at its discretion, will repair the defect or replace the product and return it to you without charge for parts and service. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. THIS GUARANTEE IS IN ADDITION TO AND DOES NOT AFFECT YOUR RIGHTS UNDER THE CONSUMER GUARANTEES ACT.

Procedure for obtaining performance or warranty: In the event that the Product does not conform to this warranty, the Product should be shipped or delivered, freight prepaid, with evidence of original purchase, (eg. a copy of the sales docket), to the warrantor at:

UNIDEN AUSTRALIA PTY LTD


Service Division
345 Princes Highway,
Rockdale, NSW 2216
Fax (02) 9599 3278
www.uniden.com.au

UNIDEN NEW ZEALAND LTD

Service Division
150 Harris Road, East Tamaki,
Auckland
Fax (09) 274 4253
www.uniden.co.nz

Customers in other states should ship or deliver the Product freight pre-paid to the nearest Uniden Authorised Repair Centre. (Contact Uniden for the Warranty Agent nearest you.)



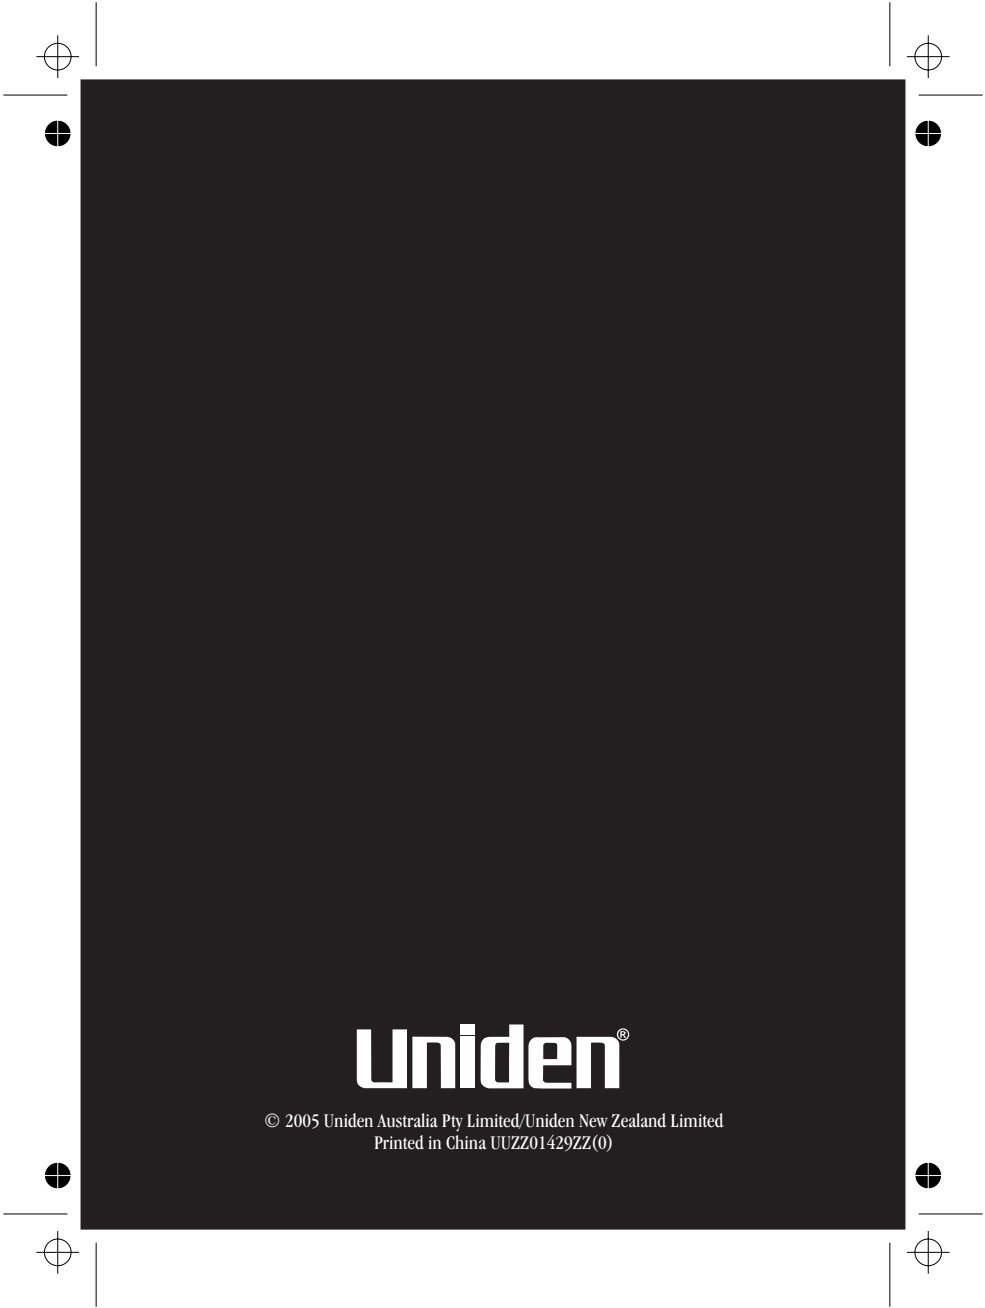

Uniden®

© 2005 Uniden Australia Pty Limited/Uniden New Zealand Limited
Printed in China UZZ01429ZZ(0)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>