

Please fill-out and return this card within 10 days!



039 Q

1 First name: Initial: Last name: Address: Apt number: City: State: Zip code:

2 E-mail address: (EXAMPLE: yourname@yourhost.com)

- 1. Yes! I want to receive offers or communications from Uniden via e-mail.
2. Yes! I want to receive offers or communications that may interest me from other companies via e-mail.

3 Date of purchase: Month Day Year

4 Purchase Price: \$.00 (excluding tax)

5 Serial Number: (Located on the back of each unit)

6 Model Number: (Example: GMRS540-2, WX500)

7 Which Uniden product did you purchase? 1. FRS/GMRS Radio 2. Weather Radio

8 Store Name:

9 Check the two (2) most important reasons influencing your purchase of this Uniden Product:

10 Check the two (2) most important features to you on this Uniden product:

11 How did you first become aware of this product?

12 Your gender: 1. Male 2. Female

13 Your marital status: 1. Married 2. Single

14 Date of your birth: Month Day Year

15 Including yourself, how many people live in your household? Children Adults

To select a call tone:

- 1) Enter the menu. Advance through the menu until CALL appears.
2) Press up or down to increase or decrease the number to the desired call tone.

To transmit the selected call tone, press d-call. The selected tone is transmitted for a fixed length of time.

Setting Silent Mode

When you turn on the silent mode, all incoming calls are muted: the radio blinks the display backlight, the channel indicator, SLNT and call icon to alert you to an incoming call.

Education:

- 1. Some high school 2. Completed high school 3. College degree 4. Graduate degree

I/we buy these things through the mail, over the Internet, or from television:

1. Books/magazines 2. Checks (not from a bank) 3. Children's products 4. Clothing 5. Computer products 6. Cosmetics/jewelry 7. Crafts/hobbies 8. Gardening supplies 9. Gifts 10. Housewares/furnishings 11. Insurance/financial products 12. Music/video/DVD 13. Sports equipment 14. Travel 15. Other

I/we have these credit cards:

- 1. American Express/Diners Club 2. Discover 3. Retail/Gas 4. Visa/MasterCard 5. Other 6. None

Someone in my home enjoys:

1. Astrology 2. Auto racing 3. Automotive work 4. Books 5. Camping/hiking 6. Casino gambling 7. Cigars 8. Collecting 9. Computers/Internet 10. Cooking/recipes 11. Crafts/needlework 12. Cultural art/events 13. Cycling 14. Dieting/weight control 15. Do-it-yourself 16. Donating to charity 17. Fishing 18. Fitness/exercise 19. Gardening 20. Golf 21. Gourmet food/cooking 22. Grandchildren 23. Home decorating 24. Hunting/shooting 25. Investing 26. Lottery/sweepstakes 27. Pets-cats 28. Pets-dogs 29. Pets-other 30. Photography 31. Play sports 32. Self improvement 33. Skiing/snowboarding 34. Travel-Foreign 35. Travel-U.S. 36. Vacation cruises 37. Vitamins/natural foods 38. Wines 39. Woodworking 40. Worship/Bible

Note: If you exit the setting mode before confirming your selection by pressing menu/grp, Key Lock is set to oF (OFF).

To unlock the keypad:

- 1) Turn off the radio by rotating vol/off counterclockwise until it clicks.
2) Turn on the radio again by rotating vol/off clockwise until it clicks.

Automatic Power Save Feature

Your GMR1588-2CK/GMR1595-2CK radio has a unique circuit designed to dramatically extend the life of the batteries.

LCD Backlight

The LCD Backlight automatically turns on when any key (except the PTT and Power boost button) is pressed.

Roger Beep

Roger beep is a beep that is sent to notify the end of transmission (both PTT and VOX transmission). You can hear the roger beep can be heard through the speaker when both roger beep and key beep are on.

To turn the roger beep OFF, press and hold up while turning ON the radio.

USING THE WEATHER RADIO

Your GMR1588-2CK/GMR1595-2CK radio can receive weather broadcasts from the NOAA National Weather Service.

Missed Call Alerts

If you receive an incoming call while silent mode is on and do not respond, the radio will turn on the Missed Call icon.

The GMR1595 will additionally remind you of a missed call by vibrating every minute after the call for 3 minutes.

Key Lock

To lock the keypad:

- 1) Enter the menu. Advance through the menu until LOCK appears.
2) To switch Key Lock from oF (OFF) to on (ON), press up.
3) To confirm the setting, press menu/grp.

Note: If you exit the setting mode before confirming your selection by pressing menu/grp, Key Lock is set to oF (OFF).

Choosing an Emergency/Weather Channel

There are 7 NOAA channel frequencies available and these frequencies are common between the US and Canada.

- 1) Press and hold wx/alert. The alert icon appears.
2) When the unit receives a warning signal, it beeps for 5 seconds.
3) To turn off Weather Alert, press and hold wx/alert.

- When Weather Alert is activated, the highest priority is given to this function.
Weather Alert is activated even if key beep is turned off.

NOAA Weather Radio Frequency List
Channel 1 162.550 MHz Channel 5 162.450 MHz
Channel 2 162.400 MHz Channel 6 162.500 MHz
Channel 3 162.475 MHz Channel 7 162.525 MHz
Channel 4 162.425 MHz

SPECIFICATIONS

Channels 15 GMRS/7 FRS/7 Weather
Sub Codes 18 Sub-Audible Tones
104 DCS Codes

Operating Frequency GMRS/FRS: 462.5500 - 467.7125 MHz
WX: 162.4000 - 162.5500 MHz

Power Source NiMH Battery Pack (BP38) or 4 AAA Alkaline Batteries

Range Channel 1-7 up to 10 miles (15 miles with Power boost button)
Channel 8-14 up to 5 miles
Channel 15-22 up to 10 miles (15 miles with Power boost button)

Battery Life 12 Hours typ. - NiMH
Battery Pack (5/5/90 duty cycle)

Frequency Chart

Table with columns: Ch, Freq, Cross Ref, Ch, Freq, Cross Ref. Lists frequencies for GMRS, FRS, and NOAA channels.

CTCSS Chart (Hz)

Table with columns: Code, Freq, Code, Freq. Lists CTCSS codes and frequencies.

Table with columns: Channels, Sub Codes, Operating Frequency, Power Source, Range Channel, Battery Life

DCS Code List

Table with columns: Tone No., Octal Code, Tone No., Octal Code, Tone No., Octal Code, Tone No., Octal Code. Lists DCS codes for channels 39-73.

REGULATORY INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.

Important: Changes or modifications to this unit not expressly approved by Uniden could void your authority to operate this unit.

- To be safe and sure:
Never open your radio's case.
Never change or replace anything in your radio except the batteries.

Your radio might cause TV or radio interference even when it is operating properly. To determine whether your radio is causing the interference, turn it off.

Hazardous Environments: Do not operate the radio in hazardous environments. Explosion or fire may result.

Care and Safety: To clean the radio, use a soft cloth dampened with water. Do not use cleaners or solvents because they can harm the body of the unit.

Dry the battery compartment with a soft cloth to minimize potential water damage. Leave the battery compartment cover off overnight to ensure complete drying.

RF EXPOSURE INFORMATION

WARNING! Read this information before using the radio. In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters.

Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of the radio complies with the FCC guidelines and these international standards.

Never allow children to operate the radio without adult supervision and the knowledge of the following guidelines.
WARNING! It is up to the user to properly operate this radio transmitter to insure safe operation.

Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the radio, or result in violation of FCC regulations.

Body-worn Operation
This device was tested for typical body-worn operations using the supplied belt-clip.

For hand-held operation, the radio should be held 1 inch from the user's face. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements and should be avoided.

For more information about RF exposure, please visit the FCC web site at www.fcc.gov.

ONE YEAR LIMITED WARRANTY

Important: Evidence of original purchase is required for warranty service.
WARRANTOR: UNIDEN AMERICA CORPORATION ("Uniden")

ELEMENTS OF WARRANTY: Uniden warrants, for one year, to the original retail owner, this Uniden Product to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

WARRANTY DURATION: This warranty to the original user shall terminate and be of no further effect 12 months after the date of original retail sale. The warranty is invalid if the Product is: (A) damaged or not maintained as reasonable or necessary, (B) modified, altered, or used as part of any conversion kits, sub-assemblies, or any configurations not sold by Uniden, (C) improperly installed, (D) serviced or repaired by someone other than an authorized Uniden service center for a defect or malfunction covered by this warranty, (E) used in any conjunction with equipment or parts or as part of any system not manufactured by Uniden, or (F) installed or programmed by anyone other than as detailed by the owner's manual for this product.

STATEMENT OF REMEDY: In the event that the product does not conform to this warranty at any time while this warranty is in effect, warrantor will either, at its option, repair or replace the defective unit and return it to you without charge for parts, service, or any other cost (except shipping and handling) incurred by warrantor or its representatives in connection with the performance of this warranty.

THE LIMITED WARRANTY SET FORTH ABOVE IS THE SOLE AND ENTIRE WARRANTY PERTAINING TO THE PRODUCT AND IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES OF ANY NATURE WHATSOEVER, WHETHER EXPRESS, IMPLIED OR ARISING BY OPERATION OF LAW, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OVERPAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES.

is void outside the United States of America and Canada.

PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY: If, after following the instructions in the owner's manual you are certain that the Product is defective, pack the Product carefully (preferably in its original packaging). Disconnect the battery from the Product and separately secure the battery in its own separate packaging within the shipping carton.

Uniden America Service
4700 Amon Carter Blvd. Fort Worth, TX 76155
(800) 297-1023, 7:00 a.m. to 7:00 p.m. CST,
Monday through Friday: 9:00 a.m. to 5:00 p.m. CST,
Saturday, Sunday and Holidays (except Thanksgiving and Christmas).

Covered under one or more of the following U.S. patents:
4,684,870 4,734,049 5,203,015 5,214,789
5,491,745 5,497,508 5,517,677 5,557,606
5,574,994 5,610,946 5,613,201 5,625,870
5,627,876 5,628,059 5,634,196 5,634,205
5,678,176 5,697,096 5,717,312 5,722,070
5,787,345 5,901,341 6,021,326 6,084,861
6,163,691 6,195,415 6,353,730 6,839,550



© 2006 Uniden America Corporation
All rights reserved Printed in China
UTZZ01018ZZ(0)

Thank you for completing this questionnaire. Your answers will help us and other companies reach you with offers that may interest you.

PLEASE FOLD AND SEAL WITH TAPE BEFORE MAILING. DO NOT STAPLE.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>