

Please fill-out and return this card within 10 days!



039 Q

1 First name: Initial: Last name: Address: Apt number: City: State: Zip code:

2 E-mail address: (EXAMPLE: yourname@yourhost.com)

- 1. Yes! I want to receive offers or communications from Uniden via e-mail.
2. Yes! I want to receive offers or communications that may interest me from other companies via e-mail.

3 Date of purchase: Month Day Year

4 Purchase Price: \$.00 (excluding tax)

5 Serial Number: (Located on the back of each unit)

6 Model Number: (Example: GMRS540-2, WX500)

7 Which Uniden product did you purchase? 1. FRS/GMRS Radio 2. Weather Radio

8 Store Name:

9 Check the two (2) most important reasons influencing your purchase of this Uniden Product:

10 Check the two (2) most important features to you on this Uniden product:

11 How did you first become aware of this product?

12 Your gender: 1. Male 2. Female

13 Your marital status: 1. Married 2. Single

14 Date of your birth: Month Day Year

15 Including yourself, how many people live in your household?

transmitted when you press d-call in standard mode.

- To select a call tone:
1) Enter the menu. Advance through the menu until CALL appears.
2) Press up or down to increase or decrease the number to the desired call tone.

To transmit the selected call tone, press d-call. The selected tone is transmitted for a fixed length of time.

Setting Silent Mode

When you turn on the silent mode, all incoming calls are muted: the radio blinks the display backlight, the channel indicator, SLNT and call to alert you to an incoming call.

To set the silent mode:
1) Enter the menu. Advance through the menu until the SLNT appears.

- 1) Enter the menu. Advance through the menu until the SLNT appears.
2) Press up to display on SLNT.

Note: To prevent unwanted silent alerts, be sure to use a Privacy code or group code whenever you use the Silent mode feature.

Missed Call Alerts

If you receive an incoming call while silent mode is on and do not respond, the radio will turn on the Missed Call icon.

The GMR2099 will additionally remind you of a missed call by vibrating every minute after the call for 3 minutes.

Key Lock

- To lock the keypad:
1) Enter the menu. Advance through the menu until LOCK appears.
2) To switch Key Lock from off (OFF) to on (ON), press up.
3) To confirm the setting, press menu/grp.

Note: If you exit the setting mode before confirming your selection by pressing menu/grp, Key Lock is set to off (OFF).

- To unlock the keypad:
1) Turn off the radio by rotating vol/off counterclockwise until it clicks.
2) Turn on the radio again by rotating vol/off clockwise until it clicks.

Automatic Power Save Feature

Your GMR2089-2CK/GMR2099-2CK radio has a unique circuit designed to dramatically extend the life of the batteries.

LCD Backlight

The LCD Backlight automatically turns on when any key (except the PTT and Power boost button) is pressed.

Roger Beep

Roger beep is a beep that is sent to notify the end of transmission (both PTT and VOX transmission). You can hear the roger beep can be heard through the speaker when both roger beep and key beep are on.

To turn the roger beep OFF, press and hold up while turning ON the radio.

USING THE WEATHER RADIO

Your GMR2089-2CK/GMR2099-2CK radio can receive weather broadcasts from the NOAA National Weather Service.

- 1) To turn on the Weather Radio Broadcast mode, press wx/alert WX appears.
2) Press ch tone/scn, then press up or down to increase or decrease the number to the desired Weather Channel.
3) To exit the Weather Radio Broadcast mode, press wx/alert WX disappears.

- To change the channel continuously, press and hold up or down for more than 1 second.

- When in the Weather Radio Broadcast mode, you can only set the Key Lock from the Menu mode.

Choosing an Emergency/Weather Channel

There are 7 NOAA channel frequencies available and these frequencies are common between the US and Canada.

- 1) Press and hold wx/alert. alert appears.
2) When the unit receives a warning signal, it beeps for 5 seconds. alert, WX and channel indicator blink.
3) To turn off Weather Alert, press and hold wx/alert. alert disappears.

- When Weather Alert is activated, the highest priority is given to this function. It checks the weather alert signals every 7 seconds.

NOAA Weather Radio Frequency List
Channel 1 162.550 MHz Channel 5 162.450 MHz
Channel 2 162.400 MHz Channel 6 162.500 MHz
Channel 3 162.475 MHz Channel 7 162.525 MHz
Channel 4 162.425 MHz

SPECIFICATIONS

Channels 15 GMRS/7 FRS/7 Weather
Sub Codes 108 Sub-Audible Tones
134 DCS Codes

Operating Frequency GMRS/FRS: 462.5500 - 467.7125 MHz
WX: 162.4000 - 162.5500 MHz
Power Source NiMH Battery Pack (BP38) or 4 AAA Alkaline Batteries

Range Channel 1-7 up to 14 miles
20 miles with Power boost button
Channel 8-14 up to 5 miles
Channel 15-22 up to 14 miles
20 miles with Power boost button
Battery Life 12 Hours typ. - NiMH
Battery Pack (5/5/90 duty cycle)

Frequency Chart

Table with 4 columns: Ch, Freq. [MHz], Cross Ref., Ch, Freq. [MHz], Cross Ref.
1 462.5625 FRS & GMRS 1 12 467.6625 FRS 12

CTCSS Chart (Hz)

Table with 4 columns: Code, Freq., Code, Freq.
oFF OFF 20 131.8
1 67.0 21 136.5

16 114.8 36 233.6
17 118.8 37 241.8
18 123.0 38 250.3
19 127.3

DCS Code List

Table with 6 columns: Tone No., Octal Code, Tone No., Octal Code, Tone No., Octal Code
39 023 74 251 109 631
40 025 75 261 110 632

REGULATORY INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.

Important: Changes or modifications to this unit not expressly approved by Uniden could void your authority to operate this unit.

- To be safe and sure:
Never open your radio's case.
Never change or replace anything in your radio except the batteries.

Your radio might cause TV or radio interference even when it is operating properly. To determine whether your radio is causing the interference, turn it off.

Hazardous Environments: Do not operate the radio in hazardous environments. Explosion or fire may result.

Care and Safety: To clean the radio, use a soft cloth dampened with water. Do not use cleaners or solvents because they can harm the body of the unit.

RF EXPOSURE INFORMATION

WARNING! Read this information before using the radio. In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters.

Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of the radio complies with the FCC guidelines and these international standards.

Never allow children to operate the radio without adult supervision and the knowledge of the following guidelines.

WARNING! It is up to the user to properly operate this radio transmitter to insure safe operation. Please adhere to the following:

Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the radio, or result in violation of FCC regulations.

Body-worn Operation
This device was tested for typical body-worn operations using the supplied belt-clip. To maintain compliance with FCC RF exposure requirements, Body-worn operations are restricted to the supplied belt-clip.

For hand-held operation, the radio should be held 1 inch from the user's face. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements and should be avoided.

For more information about RF exposure, please visit the FCC web site at www.fcc.gov.

ONE YEAR LIMITED WARRANTY

Important: Evidence of original purchase is required for warranty service.

WARRANTOR: UNIDEN AMERICA CORPORATION ("Uniden")
ELEMENTS OF WARRANTY: Uniden warrants, for one year, to the original retail owner, this Uniden Product to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

WARRANTY DURATION: This warranty to the original user shall terminate and be of no further effect 12 months after the date of original retail sale.

(A) damaged or not maintained as reasonable or necessary, (B) modified, altered, or used as part of any conversion kits, sub-assemblies, or any configurations not sold by Uniden, (C) improperly installed, (D) serviced or repaired by someone other than an authorized Uniden service center for a defect or malfunction covered by this warranty, (E) used in any conjunction with equipment or parts or as part of any system not manufactured by Uniden, or (F) installed or programmed by anyone other than as detailed by the owner's manual for this product.

STATEMENT OF REMEDY: In the event that the product does not conform to this warranty at any time while this warranty is in effect, warrantor will either, at its option, repair or replace the defective unit and return it to you without charge for parts, service, or any other cost (except shipping and handling) incurred by warrantor or its representatives in connection with the performance of this warranty.

THE LIMITED WARRANTY SET FORTH ABOVE IS THE SOLE AND ENTIRE WARRANTY PERTAINING TO THE PRODUCT AND IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES OF ANY NATURE WHATSOEVER, WHETHER EXPRESS, IMPLIED OR ARISING BY OPERATION OF LAW, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

LEGAL REMEDIES: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This warranty is void outside the United States of America and Canada.

is void outside the United States of America and Canada.

PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY: If, after following the instructions in the owner's manual you are certain that the Product is defective, pack the Product carefully (preferably in its original packaging). Disconnect the battery from the Product and separately secure the battery in its own separate packaging within the shipping carton.

Uniden America Service
4700 Amon Carter Blvd. Fort Worth, TX 76155
(800) 297-1023, 7:00 a.m. to 7:00 p.m. CST, Monday through Friday: 9:00 a.m. to 5:00 p.m. CST, Saturday, Sunday and Holidays (except Thanksgiving and Christmas).

Covered under one or more of the following U.S. patents:
4,684,870 4,734,049 5,203,015 5,214,789
5,491,745 5,497,508 5,517,677 5,557,606
5,574,994 5,610,946 5,613,201 5,625,870
5,627,876 5,628,059 5,634,196 5,634,205
5,678,176 5,697,096 5,717,312 5,722,070
5,787,345 5,901,341 6,021,326 6,084,861
6,163,691 6,195,415 6,353,730 6,839,550
6,980,770



© 2007 Uniden America Corporation
All rights reserved Printed in China
UTZZ01028ZZ(0)



Thank you for completing this questionnaire. Your answers will help us and other companies reach you with offers that may interest you. If you prefer not to receive these offers, please check here []

PLEASE FOLD AND SEAL WITH TAPE BEFORE MAILING. DO NOT STAPLE.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>