

- 8 GMRS / 14 FRS Channels
- 38 CTCSS Codes
- Up to 2 Mile Range*
- 5 Selectable Call Tone Alerts
- Backlit LCD Display
- Battery Recharge Circuit
- Optional NiMH Battery Pack and Charger
- 2 NiMH Battery Packs
- Dual Recharging Cradle with AC Adapter
- Battery Level Meter
- Channel Monitor
- Channel Scan
- Keypad Lock

TR622-2

Congratulations on your purchase of the Uniden TR622-2 (General Mobile Radio Service) radio. This product is a lightweight, palm-sized radio. Use it at sporting events to stay in contact with family and friends, hiking, skiing, outdoors, or in a neighborhood watch for vital communication. This compact, state-of-the-art device is equipped with many features.

OPTIONAL ACCESSORIES


Your package contains two TR622-2 radios, this reference guide, including a product registration card. You may operate the unit using 4 AAA alkaline batteries or the rechargeable NiMH battery pack (not included). The following optional accessories may be purchased from your participating Uniden dealer or call 1-800-554-3988 or visit us on the web at www.uniden.com. **Use only Uniden accessories.**

- NiMH Battery Pack - #BP38
- Recharging Cradle - #RC6248



*Range may vary depending on environmental and/or topographical conditions.

TR622-2 RADIO

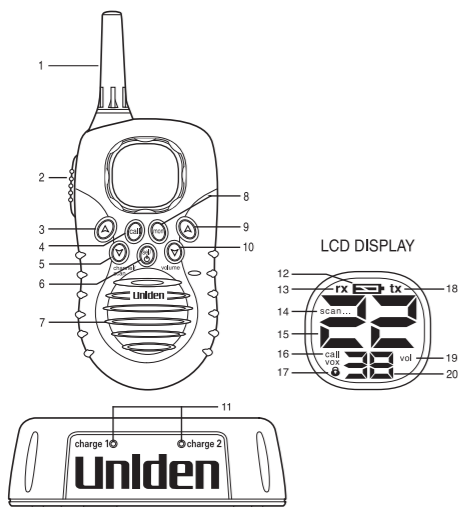

- | | |
|-----------------------------|-----------------------------|
| 1 Antenna | 11 Charging LED's |
| 2 PTT (Push-To-Talk) Button | 12 Battery Level Meter |
| 3 Channel/Scan Up Key | 13 Receive Indicator |
| 4 Call Key | 14 Scan Indicator |
| 5 Channel/Scan Down Key | 15 Channel Indicator |
| 6 Select/Power Key | 16 Call Indicator |
| 7 Speaker | 17 Keypad Lock Indicator |
| 8 Monitor Key | 18 Transmit Indicator |
| 9 Volume Up Key | 19 Volume Setting Indicator |
| 10 Volume Down Key | 20 CTCSS Indicator |

FCC GMRS LICENSE

The TR622-2 radio operates on the General Mobile Radio Service (GMRS) frequencies which require a Federal Communication Commission license to operate. For licensing information and application forms, visit the FCC online at: www.fcc.gov/wtb/uls or call the FCC hotline at 1-800-418-3676. If you have any questions you can contact the FCC direct at 1-888-225-5322.

INSTALL THE BATTERIES

Your TR622-2 radio uses the included NiMH battery pack or 4 AAA alkaline batteries. If alkaline batteries are used, we recommend using high quality alkaline batteries.

To install the NiMH battery pack:

- 1) Make sure your radio is OFF.
- 2) Remove the battery compartment door by pressing the tab at the bottom of the compartment door allowing the door to be removed.
- 3) Place the NiMH battery pack in the compartment, making sure that the charge contacts are on the lower half of the battery pack and facing out. If the NiMH battery pack is installed incorrectly, the radio will not operate.
- 4) Replace the battery compartment door.
- 5) The battery pack must be charged before using for the first time. Place the GMRS622-2 radio into the charging cradle allowing 16 hours

charging time to fully charge the battery pack.

Note: Always make sure your battery pack is fully discharged before recharging to prolong the life of the battery pack. The LED will illuminate while the radio is in the charging cradle.

To install 4 AAA alkaline batteries:

- 1) Make sure your radio is OFF.
- 2) Remove the battery compartment door by pressing the tab at the bottom of the compartment door allowing the door to be removed.
- 3) Install 4 AAA alkaline batteries (not included) into the battery compartment. Be certain to follow the + and - symbols in the compartment. Installing the batteries incorrectly will prevent the radio from operating.
- 4) Replace the battery compartment door.

BATTERY LEVEL AND LOW BATTERY ALERT

This unit has a battery level meter on the display to indicate the status of the batteries. When the batteries in the radio are low, the battery level meter icon will flash. Replace the alkaline batteries immediately or if you are using the NiMH battery pack, you must recharge the battery pack in order to continue using the radio.

Warning! To avoid the risk of personal injury or property damage from fire or electrical shock, only use the Uniden accessories specifically designated for this product.

USING THE RADIO

In order to get the most out of your new radio, read this reference guide completely before attempting to operate the unit.

Turning the Radio On and Adjusting the Volume

 
- 1) Press and hold the **sel/** key to turn the radio ON, and increase the speaker volume by pressing the volume **▲** key. To decrease the volume, press the volume **▼** key.
- 2) Press and hold the **sel/** key again to turn the radio OFF.

Adjusting the Sound (Key Beeps)

Your radio emits a beep each time one of the buttons or keys (except for the **PTT** button and **call** key) are pressed. To turn this sound OFF, press and hold **call** while turning ON the radio. Repeat this step to turn the sound ON.

Navigating through the Menu

To access the advanced features of the TR622-2, your radio has a Menu function.



- 1) To enter the Menu, press the **sel/** key.
- 2) Additional presses of the **sel/** key will advance you through the Menu until exiting to "Normal" operating mode.
- 3) Other methods of exiting the Menu function are:
 - a. Press and hold the **sel/** key again.
 - b. Press **PTT**, **mon**, **volume ▲/▼**, and **call**.
 - c. Wait 10 seconds until the unit automatically returns to "Normal" mode.

Choosing a Channel

Your radio has 22 channels and 38 CTCSS codes you can use to talk to others. In order to speak to someone, each of you must be set to the same channel and CTCSS code.

To choose a channel:

With the radio in "Normal" operating mode press the **channel/scan ▲** or **▼** key to increase or decrease the channel number displayed.

Choosing a CTCSS Code

Each of the channels 1-22 may have any one of the codes, OFF or 1-38 selected. Code "OFF" indicates no CTCSS code selected and your radio can receive a signal regardless of the code settings of the transmitting radio.

- 1) Enter the Menu. The CTCSS code on the LCD display will flash.
- 2) Press the **channel/scan ▲** or **▼** key to increase or decrease the code number displayed. You can also select "OFF" at this stage.
- 3) Exit the Menu to return to "Normal" mode.

Talking on Your Radio

To talk to others using the radio:

- 1) Press and hold the **PTT** button and speak in a clear, normal voice about 2-3 inches away from the microphone. While you are transmitting, the **tx** icon will appear on the display. To avoid cutting off the first part of your transmission, pause slightly after pressing the **PTT** button before you start talking.
- 2) When you are finished speaking, release the **PTT** button. You can now receive incoming calls. While receiving, the **rx** icon will appear on the display.

Transmitting a Call Tone

Your TR622-2 radio is equipped with 5 selectable Call Tones that will be transmitted when the **call** key is pressed.

To select a Call Tone:

- 1) Enter the Menu. Advance through the Menu until the **call** icon is shown on the display. The current Call Tone number () will be indicated.
- 2) Press the **channel/scan ▲** or **▼** key to increase or decrease the number to the desired Call Tone. Each tone will be heard through the speaker.
- 3) Exit the Menu.

To transmit the selected Call Tone, press the **call** key. The selected tone will automatically be transmitted for a fixed length of time. Call Tone will be canceled when the **PTT** button is pressed.

Channel Scan Feature

Your TR622-2 radio has a channel Scan feature that allows you to easily Scan all 22 channels. When an active channel is detected, the radio will pause on that channel until the channel is clear. Then after a 2 second delay, the radio will continue scanning. Pressing **PTT** while the Scan is paused on a channel will allow you to transmit on that channel.

To turn ON channel Scan:

Press and hold either the **channel/scan ▲** or **▼** key until the **scan** icon is displayed. The channel number on the display will change as the radio rapidly cycles through the channels.

To turn OFF channel Scan:

Press **sel/**, **call**, or **PTT**.

Key Lock

To Lock the keypad:

- 1) Enter the Menu. Advance through the Menu until the **lock** icon appears on the display. The current key Lock status (**OFF**) blinks on the display.
- 2) To switch the key Lock mode from **OFF** to **ON**, press the **channel/scan ▲** key.
- 3) To confirm the setting, press the **sel/** key. The radio returns to the "Normal" mode.

Note: If you exit the setting mode before confirming your selection by pressing the **sel/** key, the key Lock setting will be set to **OFF**.

To Unlock the keypad:

- 1) Press and hold the **sel/** key to turn the radio **OFF**.
- 2) Press and hold the **sel/** key again to turn the radio **ON**. The keypad is unlocked.

Automatic Power Save Feature

Your TR622-2 radio has a unique circuit designed to dramatically extend the life of the batteries. If there is no transmission nor an incoming call within 3 seconds, your radio switches to the Power Save mode. The radio is still able to receive transmissions in this mode.

LCD Backlight

The LCD Backlight will automatically turn ON when any key (except PTT button) is pressed. The LCD display will illuminate for 10 seconds before turning OFF.

Monitor Mode Feature

Your TR622-2 radio allows you to listen for weak signals on the current channel at the press of a key.

To turn ON the Monitor Mode:

- 1) Press **mon** for brief listening, the **rx** icon will blink.
- 2) Press and hold **mon** for 2 seconds for continuous listening. The receiver circuit will stay open, and let in both the noise and weak signals.

To turn OFF Monitor Mode:

Press **mon** to return to "Normal" mode, and the **rx** icon stops blinking.

Please do not send products or other correspondence to this address.

039 Q

Uniden®

PRODUCT REGISTRATION DEPARTMENT
PO BOX 44486
DENVER CO 80201-4486
USA



Uniden®

PRODUCT REGISTRATION CARD

Complete the attached registration card and return today to receive these 3 important benefits:

- ▶ **CONFIRM YOUR WARRANTY:**
Your prompt product registration confirms your right to the protection available under the terms and conditions of your Uniden warranty.
- ▶ **PROTECT YOUR PRODUCT:**
We will keep the model number and date of purchase of your new Uniden product on file to help you refer to this information when necessary.
- ▶ **HELP US DEVELOP NEW PRODUCTS:**
We value your input! Your responses will help us bring you new products specifically designed to meet your needs.

Please fill-out and return this card within 10 days!



039 Q

1 First name: Initial: Last name: Address: Apt number: City: State: Zip code:

2 E-mail address: (EXAMPLE: yourname@yourhost.com)

- 1. Yes! I want to receive offers or communications from Uniden via e-mail.
2. Yes! I want to receive offers or communications that may interest me from other companies via e-mail.

3 Date of purchase: Month Day Year

4 Purchase Price: \$.00 (excluding tax)

5 Serial Number: (Located on the back of each unit)

6 Model Number: (Example: GMRS540-2, WX500)

7 Which Uniden product did you purchase? 1. FRS/GMRS Radio 2. Weather Radio

8 Store Name:

9 Check the two (2) most important reasons influencing your purchase of this Uniden Product:

10 Check the two (2) most important features to you on this Uniden product:

11 How did you first become aware of this product?

12 Your gender: 1. Male 2. Female

13 Your marital status: 1. Married 2. Single

14 Date of your birth: Month Day Year

15 Including yourself, how many people live in your household? Children (18 and younger) Adults

16 Date of birth of children in your household 18 years of age and younger:

Gender Male Female Birth Date Month Year
Child #1 1 2
Child #2 1 2

17 For your primary residence, do you:

1. Own 2. Rent

18 Education: (Please check which category applies to you):

1. Some high school 2. Completed high school 3. College degree 4. Graduate degree

19 I/we buy these things through the mail, over the Internet, or from television:

1. Books/magazines 2. Checks (not from a bank) 3. Children's products 4. Clothing 5. Computer products 6. Cosmetics/jewelry 7. Crafts/hobbies 8. Gardening supplies 9. Gifts 10. Housewares/furnishings 11. Insurance/financial products 12. Music/video/DVD 13. Sports equipment 14. Travel 15. Other

20 I/we have these credit cards:

1. American Express/Diners Club 2. Discover 3. Retail/Gas 4. Visa/MasterCard 5. Other 6. None

21 Someone in my home enjoys:

1. Astrology 2. Auto racing 3. Automotive work 4. Books 5. Camping/hiking 6. Casino gambling 7. Cigars 8. Collecting 9. Computers/Internet 10. Cooking/recipes 11. Crafts/needlework 12. Cultural art/events 13. Cycling 14. Dieting/weight control 15. Do-it-yourself 16. Donating to charity 17. Fishing 18. Fitness/exercise 19. Gardening 20. Golf 21. Gourmet food/cooking 22. Grandchildren 23. Home decorating 24. Hunting/shooting 25. Investing 26. Lottery/sweepstakes 27. Pets-cats 28. Pets-dogs 29. Pets-other 30. Photography 31. Play sports 32. Self improvement 33. Skiing/snowboarding 34. Travel-Foreign 35. Travel-U.S. 36. Vacation cruises 37. Vitamins/natural foods 38. Wines 39. Woodworking 40. Worship/Bible

SPECIFICATIONS

Channels 8 GMRS / 14 FRS
CTCSS Codes 38 Sub-Audible Tones
Operating Frequency UHF 462.5500-467.7125 MHz
Power Source 4 AAA Alkaline Batteries or NiMH Battery Pack (BP38)
Output Power 0.5W Conducted
Battery Life 25 Hours typ. - Alkaline Batteries (5/5/90 duty cycle) 15 Hours typ. - NiMH Battery Pack

Frequency Chart

Table with 4 columns: Ch. Freq., Cross Ref., Ch. Freq., Cross Ref. listing frequencies from 462.5625 to 467.6375 MHz.

CTCSS Chart (Hz)

Table with 4 columns: Code, Freq., Code, Freq. listing CTCSS codes and frequencies from 67.0 to 127.3 Hz.

FCC INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.

Important: Changes or modifications to this unit not expressly approved by Uniden could void your authority to operate this unit.

- To be safe and sure: Never open your radio's case. Never change or replace anything in your radio except the batteries.

Your radio might cause TV or radio interference even when it is operating properly. To determine whether your radio is causing the interference, turn it off.

Hazardous Environments: Do not operate the radio in hazardous environments. Explosion or fire may result.

Care and Safety: To clean the radio, use a soft cloth dampened with water. Do not use cleaners or solvents because they can harm the body of the unit.

Dry the battery compartment with a soft cloth to minimize potential water damage. Leave the battery compartment cover off overnight to ensure complete drying.

FCC RF EXPOSURE INFORMATION

WARNING! Read this information before using the radio. In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters.

Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of the radio complies with the FCC guidelines and these international standards.

Never allow children to operate the radio without adult supervision and the knowledge of the following guidelines.

WARNING! It is up to the user to properly operate this radio transmitter to insure safe operation. Please adhere to the following: Use only the supplied or an approved antenna.

Body-worn Operation This device was tested for typical body-worn operations using the supplied belt-clip, which typically provides a space of 1 inch from the body.

For hand-held operation, the radio should be held 1 inch from the user's face. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements and should be avoided.

For more information about RF exposure, please visit the FCC web site at www.fcc.gov.

ONE YEAR LIMITED WARRANTY

Important: Evidence of original purchase is required for warranty service. WARRANTOR: UNIDEN AMERICA CORPORATION ("Uniden")

WARRANTY DURATION: This warranty to the original user shall terminate and be of no further effect 12 months after the date of original retail sale.

STATEMENT OF REMEDY: In the event that the product does not conform to this warranty at any time while this warranty is in effect, warrantor will either, at its option, repair or replace the defective unit and return it to you without charge for parts, service, or any other cost.

THE LIMITED WARRANTY SET FORTH ABOVE IS THE SOLE AND ENTIRE WARRANTY PERTAINING TO THE PRODUCT AND IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES OF ANY NATURE WHATSOEVER.

is void outside the United States of America and Canada.

PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY: If, after following the instructions in the owner's manual you are certain that the Product is defective, pack the Product carefully (preferably in its original packaging).

Uniden America Corporation
Parts and Service Division
4700 Amon Carter Blvd., Fort Worth, TX 76155
(800) 297-1023, 8 a.m. to 5 p.m. Central,
Monday through Friday
www.uniden.com

Covered under one or more of the following U.S. patents:
4,684,870 4,734,049 5,203,015 5,214,789
5,491,745 5,497,508 5,517,677 5,557,606
5,574,994 5,610,946 5,613,201 5,625,870
5,627,876 5,628,059 5,634,196 5,634,205
5,678,176 5,697,096 5,717,312 5,722,070
5,787,345 5,901,341 6,021,326 6,084,861
6,163,691 6,195,415 6,353,730



© 2003 Uniden America Corporation
All rights reserved Printed in China
UTZZ01895ZZ

Thank you for completing this questionnaire. Your answers will help us and other companies reach you with offers that may interest you. If you prefer not to receive these offers, please check here [].

PLEASE FOLD AND SEAL WITH TAPE BEFORE MAILING. DO NOT STAPLE.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>