Home Theater in a Box







Yamaha created this package to greatly enhance your audio and home theater enjoyment. This Quick-Connect Poster will help you get started. Follow the steps to connect the speakers first. Then connect your DVD Player and other components. Refer to your Owner's Manuals as well as those that came with your other components for complete instructions and precautions. Be sure that all components are not plugged in while making connections. You will need the following which are not included in the package: Phillips screwdriver, wire cutter/stripper, optional for wall mounting: brackets, toggle bolts, molly anchor screws or sheet metal screws.



Room Layout

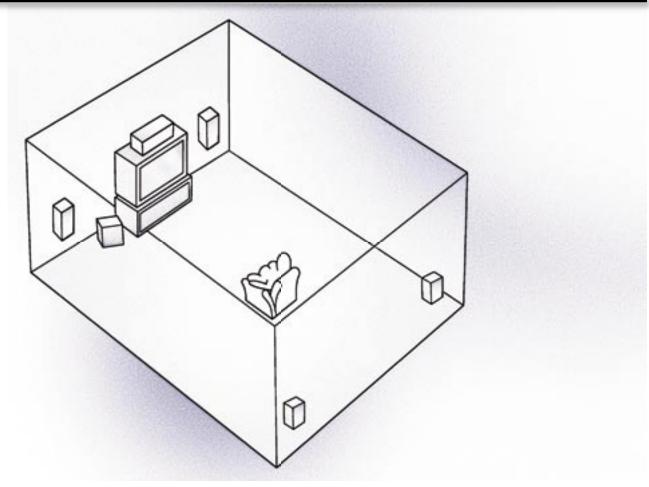

Speaker Placement After connection of the speakers place them so they appear in the approximate positions as shown in the diagram above.

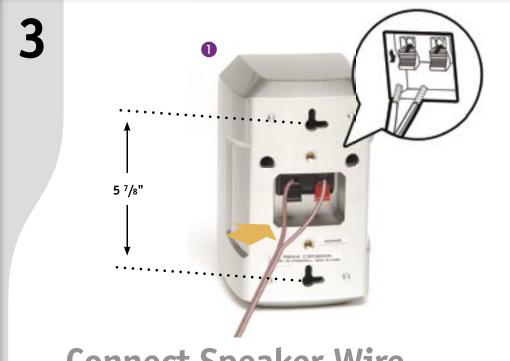


Connect Speaker Wire

Cut speaker wire 1 to appropriate lengths for all speaker connections. Connect speaker wire for front speaker **1** and surround speakers **2**. The positive (+) side of the wire with the white stripe attaches to the red terminal. The negative (-) side attaches to the black terminal. (See your HTR-5830 Owner's Manual for more information on speaker wire connections.)


Mount Surround Speakers (optional) Fasten mounting screws into a firm wall or wall support. Leave 1/4" space between head and wall. Hang the keyholes on the speaker backs on the protruding screws.

WARNING Please contact a reliable source about the best type of hardware for your particular wall's construction. Secure installation is the purchaser's responsibility. See your Owner's Manual for additional precautions.

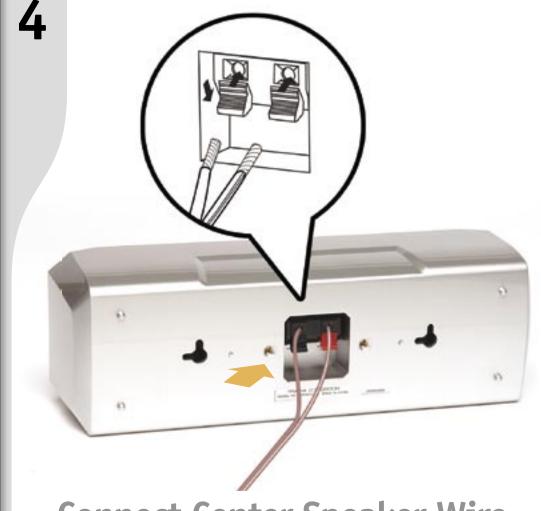

Connect Center Speaker Wire

Connect Center Speaker Wire as shown. The positive (+) side of the wire with the white stripe attaches to the red terminal. The negative (-) side attaches to the black terminal. Place all speakers in desired location as shown in Step 2, Room Layout.

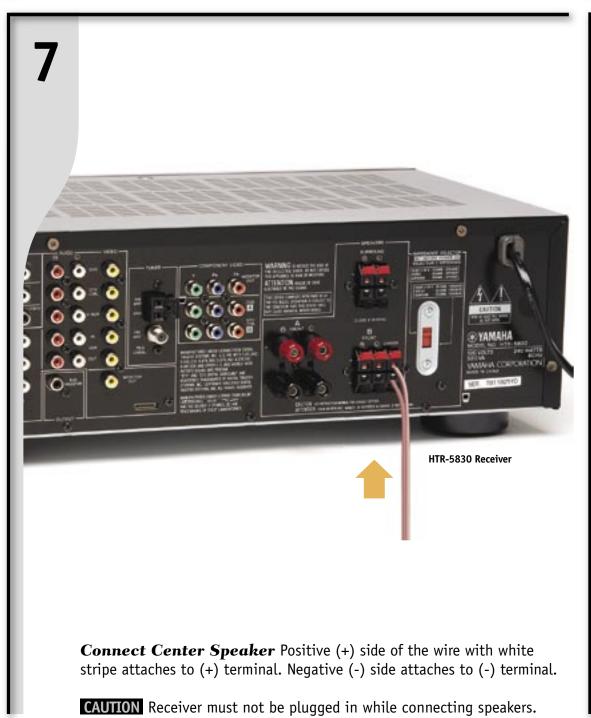



Connect RCA Cable Connect RCA cable **(8)** to subwoofer **(4)**. Set subwoofer VOLUME control to half-way mark and POWER to OFF. Connect

RCA cable to receiver from subwoofer.

WARNING Receiver must not be plugged in while connecting speakers.



Speaker Connections


Connect Front Speakers Positive (+) side of the wire with white stripe attaches to (+) terminal. Negative (-) side attaches to (-) terminal.

CAUTION Receiver must not be plugged in while connecting speakers.




Connect Surround Speakers Positive (+) side of the wire with white stripe attaches to (+) terminal. Negative (-) side attaches to (-) terminal.

CAUTION Receiver must not be plugged in while connecting speakers.

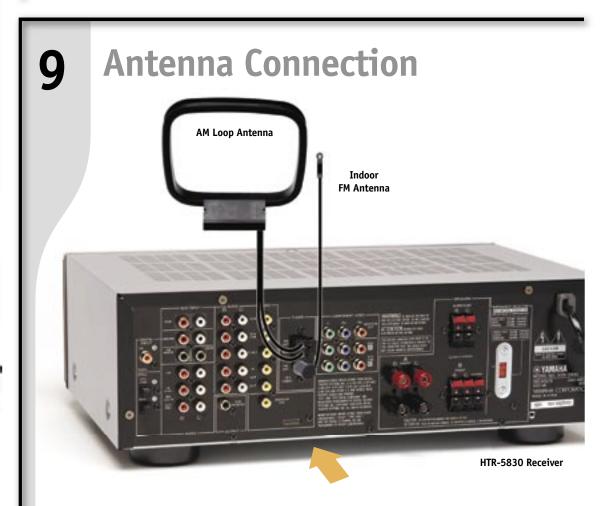

Connect Antennas to Receiver Locate AM loop antenna and indoor FM antenna. Keeping receiver unplugged, connect as shown. For more information about obtaining clear reception and grounding, see your Owner's Manual.

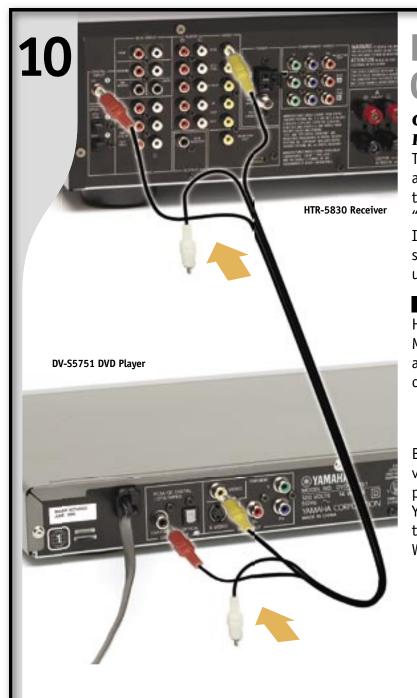

DVD Player Connection

Connect DVD Player

Top: Connect RCA to receiver: Yellow to "DVD," Red to "Digital Input CD Coaxial" as shown, and leave White unplugged.


NOTE Refer to your HTR-5830 Owner's Manual for information about reassigning coaxial digital input.

Bottom: Connect audio/ video cables to DVD player from receiver: Yellow to "Video", Red to "Coaxial", and leave White unplugged.

WARNING Components must not be plugged in while connecting them. Wait until all connections are made before plugging in your components.



on optical input as shown on inset. Connect optical cable (not included) to receiver. Connect optical cable to DVD player from receiver.

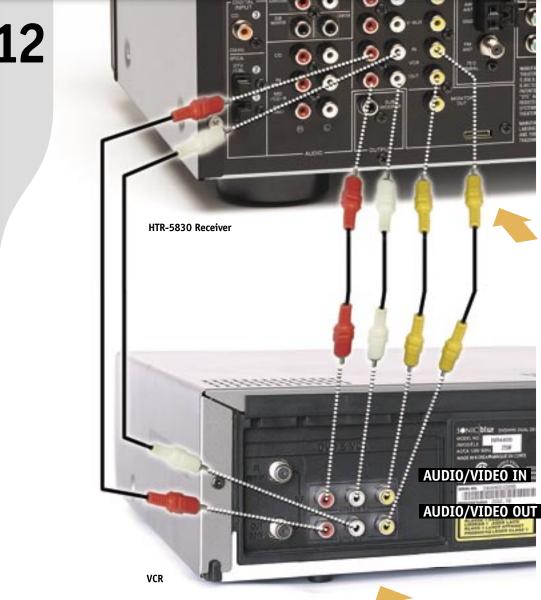

VCR Connection


Connect VCR (optional) Connect audio/video cables (not included) as shown.

NOTE VCR shown is for illustration purposes only. When using a hi-fistereo VCR, set the Tuner/Line switch on the VCR to "Line" position to record from another source connected to the HTR-5830 receiver.





audio/video cables (not included) and optional optical cable (not pictured) to "DTV/CBL" terminals on receiver to A/V OUT connections on Box as shown.

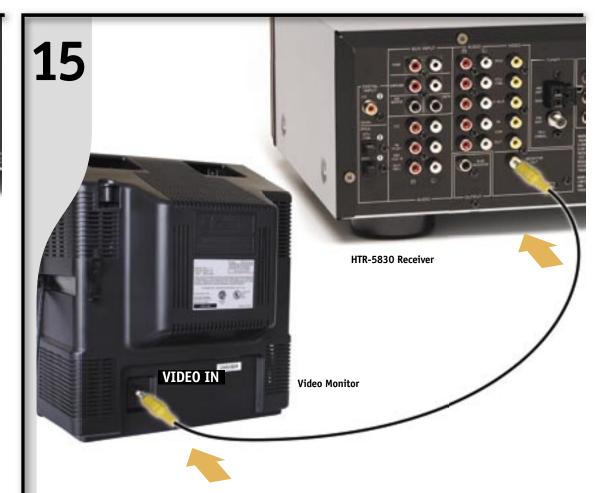

Video Monitor Connection

Connect a Video Monitor (optional) Connect an RCA video cable (not included) to receiver Monitor OUT from your video monitor as shown.



Manual for more information.



Plug In receiver, subwoofer, DVD player and other components. Power on the receiver first, and the other components next. Adjust volume on the receiver. Please see each of your respective

Connect MD/CD-R Recorder (optional) Connect RCA audio cables (not included) to "MD/CD-R" terminals on receiver as shown.



Owner's Manuals for recommended guidelines and settings.

Enjoy the Yamaha Home Theater Experience

Be sure to put batteries in your remotes (see Owner's Manuals for instructions). Refer to your Owner's Manuals for each component in your system for more information. Now, relax and enjoy the unparalleled sound of your Yamaha Home Theater system.

YAMAHA ELECTRONICS CORPORATION, USA 6660 Orangethorpe Avenue Buena Park, CA 90620 http://www.yamaha.com Phone: 1-800-292-2982

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com