



# *YSP-5100 / YSP-4100*

---

*Digital Sound Projector™*

***Owner's Manual***

**English**  
for North America

## IntelliBeam

The “IntelliBeam” logo and “IntelliBeam” are trademarks of Yamaha Corporation.



The “CINEMA DSP” logo and “Cinema DSP” are registered trademarks of Yamaha Corporation.

## UniVolume

The “UniVolume” and “UniVolume” are trademarks of Yamaha Corporation.

## yAired

The “yAired” and “yAired” are trademarks of Yamaha Corporation.




Manufactured under license from Dolby Laboratories.  
Dolby, Pro Logic and the double-D symbol are trademarks of Dolby Laboratories



Manufactured under license under U.S. Patent No's:  
5,451,942;5,956,674;5,974,380;5,978,762;6,226,616;6,487,535 & other U.S. and worldwide patents issued & pending. DTS is a registered trademark and the DTS logos, Symbol, DTS-HD and DTS-HD Master Audio are trademark of DTS, Inc. © 1996-2007 DTS, Inc. All Rights Reserved.



Manufactured under license from Cambridge Mechatronics Ltd. Worldwide patents applied for.

The “” logo and “Digital Sound Projector™” are trademarks of Cambridge Mechatronics Ltd.

## HDMI

“HDMI”, the “HDMI” logo and “High-Definition Multimedia Interface” are trademarks or registered trademarks of HDMI Licensing LLC.

## x.v.Color

“x.v.Color” is a trademark.

## iPod™, iPhone™

iPod is a trademark of Apple Inc., registered in the U.S. and other countries. iPhone is a trademark of Apple Inc.



“Made for iPod” means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards.


“Works with iPhone” means that an electronic accessory has been designed to connect specifically to iPhone and has been certified by the developer to meet Apple performance standards.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.



SIRIUS, XM and all related marks and logos are trademarks of Sirius XM Radio Inc. and its subsidiaries. All rights reserved. **Service not available in Alaska and Hawaii.**

### About this manual

- Make sure you read precautions in “Safety and Accessory Information” (separate booklet) carefully before using this unit.
- This manual describes how to connect and operate this unit. For details regarding the operation of external components, refer to the supplied owner's manual for each component.
- Operations in this manual use keys on the supplied remote control of this unit unless otherwise specified.
-  indicates a tip for your operation.
- An illustration of the remote control in the left pages of this manual indicates the keys to be used in two facing (left and right) pages.
- This manual is produced prior to production. Designs and specifications are subject to change in part as a result of improvements, etc. In case of differences between the manual and the product, the product has priority.

# CONTENTS

## INTRODUCTION

<b>Features</b> .....	<b>4</b>
<b>General operation flow</b> .....	<b>5</b>
<b>Controls and functions</b> .....	<b>6</b>
Front panel .....	6
Front panel display .....	7
Rear panel.....	8
Remote control .....	9

## PREPARATION

<b>Installation</b> .....	<b>10</b>
<b>Connections</b> .....	<b>12</b>
Before connecting components .....	12
Connecting external components .....	12
Connecting a subwoofer.....	13
Connecting the FM antenna .....	14
<b>Preparing the remote control</b> .....	<b>14</b>
Installing batteries in the remote control.....	14
Operation range of the remote control .....	14
<b>Changing OSD language</b> .....	<b>15</b>
<b>AUTO SETUP (IntelliBeam)</b> .....	<b>15</b>
Installing the IntelliBeam microphone.....	15
Using AUTO SETUP (IntelliBeam) .....	16
<b>Using the system memory</b> .....	<b>19</b>
Saving settings .....	19
Loading settings .....	19

## PLAYBACK FEATURES

<b>Playback</b> .....	<b>21</b>
Playing back sources .....	21
Playing back TV sounds.....	21
Playing back a player .....	21
Muting audio output.....	21
Decoder and input channel indicators .....	21
<b>Playback mode</b> .....	<b>22</b>
Selecting surround or stereo playback .....	22
Enjoying CINEMA DSP programs.....	22
Changing the audio output method for surround playback.....	23
Enjoying 2-channel sources in surround sound .....	24
Playing back 5.1-channel sources in 7.1-channel surround .....	24
<b>FM tuning</b> .....	<b>25</b>
Tuning into the desired FM station (Frequency tuning) .....	25
Registering FM stations and tuning in (Preset tuning).....	25
<b>SIRIUS Satellite Radio™ tuning</b> .....	<b>26</b>
Listening to Satellite Radio.....	26
Connecting the SiriusConnect™ tuner.....	26
Activating SIRIUS Satellite Radio™ subscription .....	27
SIRIUS Satellite Radio™ operations.....	27
Registering SIRIUS Satellite Radio™ channels .....	28
Setting the Parental Lock .....	29
Displaying the SIRIUS Satellite Radio™ information ....	30
<b>Playing back iPod™/iPhone™</b> .....	<b>30</b>

<b>Useful features</b> .....	<b>31</b>
Adjusting volume level automatically (UniVolume).....	31
Using the HDMI™ control function.....	31
Using the sleep timer .....	31
Configuring settings for each input source (OPTION menu) .....	32
Displaying the input signal information .....	32

## SETTINGS

<b>Customizing this unit (SET MENU)</b> .....	<b>33</b>
SET MENU items .....	33
Basic SET MENU operation.....	34
MANUAL SETUP .....	34
SOUND SET MENU.....	36
SOUND OUT MENU.....	37
INPUT MENU .....	38
DISPLAY MENU.....	39
<b>System configurations (ADVANCED SETUP)</b> .....	<b>40</b>
<b>Using an external amplifier</b> .....	<b>41</b>
<b>Controlling external components</b> .....	<b>42</b>

## APPENDIX

<b>Troubleshooting</b> .....	<b>43</b>
<b>Glossary</b> .....	<b>47</b>
<b>Specifications</b> .....	<b>48</b>
<b>List of remote control codes</b> .....	<b>49</b>
<b>Index</b> .....	<b>56</b>

# INTRODUCTION

## Features

### Digital Sound Projector

The Digital Sound Projector technology allows one slim unit to control and steer multiple channels of sound to generate multi-channel surround sound, thus eliminates the need for satellite loudspeakers and cabling normally associated with conventional surround sound systems. This unit also employs the beam modes that let you enjoy the surround sound (5 Beam, Stereo+3 Beam, 3 Beam for 5.1-channel audio, 5 Beam plus 2, Stereo + 3 Beam plus 2, 3 Beam for 7.1-channel audio) and 2-channel stereo playback.

### HDMI (High-Definition Multimedia Interface)

- ◆ HDMI input x 4, HDMI output x 1
- ◆ HDMI interface for standard, enhanced, or high-definition video (including 1080p video signal transmission) as well as multi-channel digital audio based on HDCP
  - Automatic audio and video synchronization (lip sync) information capability
  - Deep Color video signal transmission capability
  - “x.v.Color” video signal transmission capability
  - High definition digital audio format signals capability
  - Multi-channel Linear PCM signal capability
- ◆ Simple and easy connections with HDMI supported external components
- ◆ Functional link which enables the remote control of your TV to control this unit (with an HDMI control-compatible TV)
  - Power mode switch capability (on/standby)
  - Volume adjustment capability
  - TV sounds reproduce device selection capability (this unit/TV)

### AUTO SETUP (IntelliBeam)

This unit employs the automatic sound beam and acoustic optimization technology with the aid of the supplied IntelliBeam microphone. You can avoid troublesome listening-based speaker setup and achieve highly accurate sound beam adjustments that best match your listening environment.

### Cinema DSP

This unit employs the Cinema DSP technology developed by Yamaha Electronics Corp. that lets you experience movies at home with all the original dramatic sound impact.

### UniVolume

This unit employs the automatic volume adjustment function. You can limit the volume level of the TV so that it will not increase suddenly when whenever the contents being broadcast change (due to commercials, etc.).

### Various digital audio decoders includes newly added HD audio decoder, and sound technologies

- ◆ Dolby TrueHD, Dolby Digital Plus, Dolby digital Surround EX, Dolby Digital, Dolby Pro Logic, Pro Logic II, Pro Logic IIx
- ◆ DTS-HD Master Audio, DTS-HD High Resolution Audio, DTS 96/24, DTS-ES, DTS, DTS-ES (discrete and matrix), DTS Neo: 6
- ◆ Music Enhancer to improve the sound quality of compression artifacts such as the MP3 format
- ◆ Bass Extension to produce powerful bass sounds

### Sophisticated FM tuner

- ◆ 40-station random and direct preset tuning
- ◆ Automatic preset tuning

### SIRIUS Satellite Radio

- ◆ SIRIUS Satellite Radio tuning capability, using SiriusConnect tuner, sold separately
- ◆ SIRIUS Satellite Radio information displaying capability

### Wireless connection (yAired)

- ◆ Wireless connection with iPod/iPhone, using Yamaha wireless transmitter for iPod (PDX-50TX/PDX-50BC)
- ◆ Wireless connection with subwoofer, using Yamaha wireless subwoofer kit (SWK-W10) (not available in some countries)
- ◆ iPod/iPhone interlock feature to turn on/off this unit or switch the input source in conjunction with iPod/iPhone operations

### Versatile Remote Control

The supplied remote control comes with preset remote control codes used to control external components connected to this unit.

# General operation flow

## 1 Install this unit and connect to other components.

“Installation” (page 10), “Connections” (page 12)



## 2 Run AUTO SETUP to optimize the beam and sound settings.

“AUTO SETUP (IntelliBeam)” (page 15)



## 3 Play back a source.

“Playback” (page 21).



## 4 Change the playback method (surround/stereo), CINEMA DSP and/or beam modes settings.

“Playback mode” (page 22).




## 5 Configure this unit's settings and/or set remote control codes.

“Customizing this unit (SET MENU)” (page 33), “Controlling external components” (page 42).

# Controls and functions

## Front panel

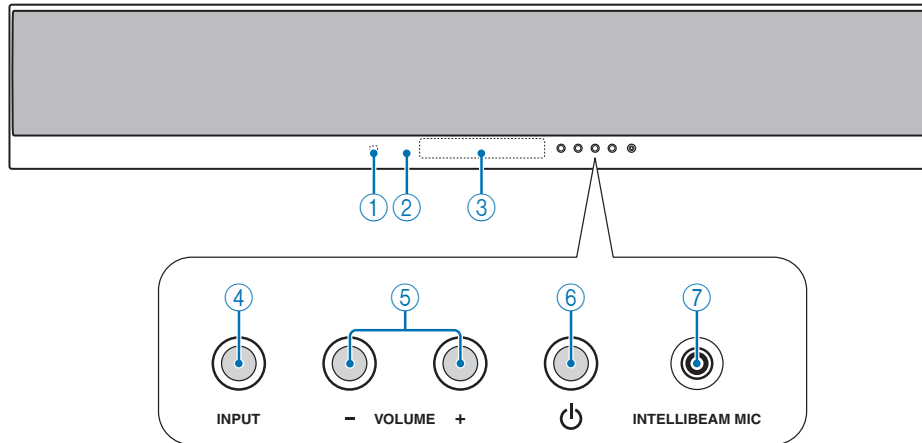

① **Remote control sensor**

Receives infrared signals from the remote control (page 14).

② **Power LED**

Lights up when the power is turned on (page 21).

③ **Front panel display**

Shows information about the operational status of this unit (page 7).

④ **INPUT**

Press repeatedly to switch between input sources.

⑤ **VOLUME +/-**

Controls the volume level of all audio channels.

Control range: MIN (minimum), 01 to 99, MAX (maximum)

⑥ **Power (⏻) key**

Turns on the power of this unit or sets it to the standby mode (page 21).


**Note**

- In the standby mode, this unit consumes a small amount of power in order to receive infrared signals from the remote control or to search for HDMI signals.

⑦ **INTELLIBEAM MIC jack**

Connect the supplied IntelliBeam microphone for AUTO SETUP (page 15).

## Front panel display

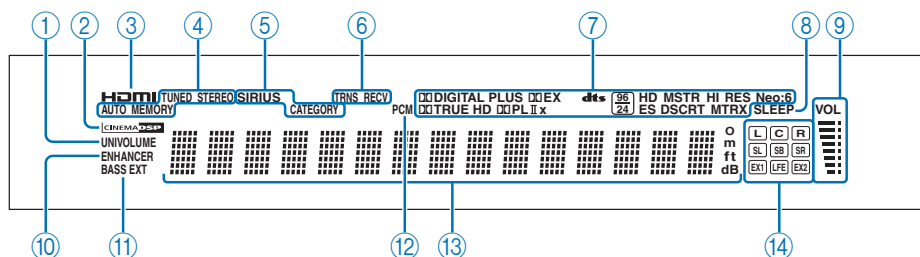

### ① UNIVOLUME indicator

Lights up when the UniVolume function is turned on (page 31).

### ② CINEMA DSP indicator

Lights up when a sound field program is selected (page 22).

### ③ HDMI indicator

Lights up when the signal of the selected input source is input from the HDMI IN jack(s).

### ④ Tuner indicators

FM: Light up when this unit is tuned into an FM station (page 25).  
SIRIUS: MEMORY flashes during the preset operation (page 28).

### ⑤ SIRIUS indicators

Light up when this unit is tuned into a SIRIUS Satellite Radio channel (page 26).

### ⑥ Wireless indicators

**TRNS** Lights up when a wireless connection is established between the Yamaha wireless subwoofer kit (SWK-W10) and this unit (page 13).

**RECV** Lights up when a wireless connection is established between the Yamaha wireless transmitter for iPod (PDX-50TX) and this unit (page 30).

### ⑦ Decoder indicators

Light up when the corresponding decoder operates (page 21).

### ⑧ SLEEP indicator

Lights up when the sleep timer is set (page 31).

### ⑨ Volume level indicator

Displays the current volume level.

### ⑩ ENHANCER indicator

Lights up when the Music Enhancer is selected (page 37).

### ⑪ BASS EXT indicator

Lights up when the bass extension mode is turned on (page 37).

### ⑫ PCM indicator

Lights up when this unit is reproducing PCM (Pulse Code Modulation) digital audio signals.


### ⑬ Multi-information display

Shows information with alphanumeric characters when you adjust the parameters of this unit. Current input source and audio output method are displayed when this unit is turned on.

### ⑭ Input channel indicators

The channel component of the current input signal is displayed (page 21).

## Rear panel

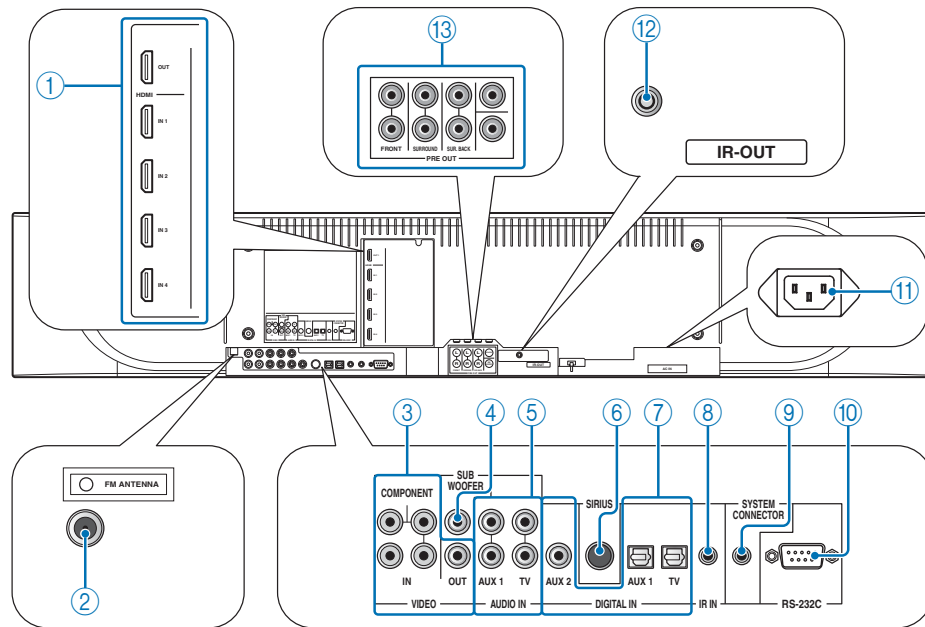

### Note

- The rear panel illustration shows jacks and their names to help you find them easily. They are not exactly the same as the ones on the actual rear panel of this unit.

#### ① HDMI jacks

Connect your HDMI components (page 12).

#### ② FM ANTENNA jack

Connect the FM antenna (page 14).

#### ③ VIDEO jacks

Connect to the video jacks of your external components (page 12).

#### ④ SUBWOOFER jack

Connect your subwoofer (page 13).

#### ⑤ AUDIO IN jacks

Connect to the analog audio output jacks of your external components (page 12).

#### ⑥ SIRIUS antenna jack

Connect a SiriusConnect tuner (sold separately) (page 26).

#### ⑦ DIGITAL IN jacks

Connect to the digital audio output jacks of your external components (page 12).

#### ⑧ IR IN terminal

This is a control expansion terminal for commercial use only.

#### ⑨ SYSTEM CONNECTOR terminal

Use to connect a Yamaha subwoofer equipped with a SYSTEM CONNECTOR terminal to this unit (page 13).

#### ⑩ RS-232C terminal

This is a control expansion terminal for commercial use only.

#### ⑪ AC IN

Connect the supplied power cable (page 12).

#### ⑫ IR-OUT terminal


This is a control expansion terminal for commercial use only.

#### ⑬ PRE OUT jacks

Connect your external amplifier (page 41).



## Remote control

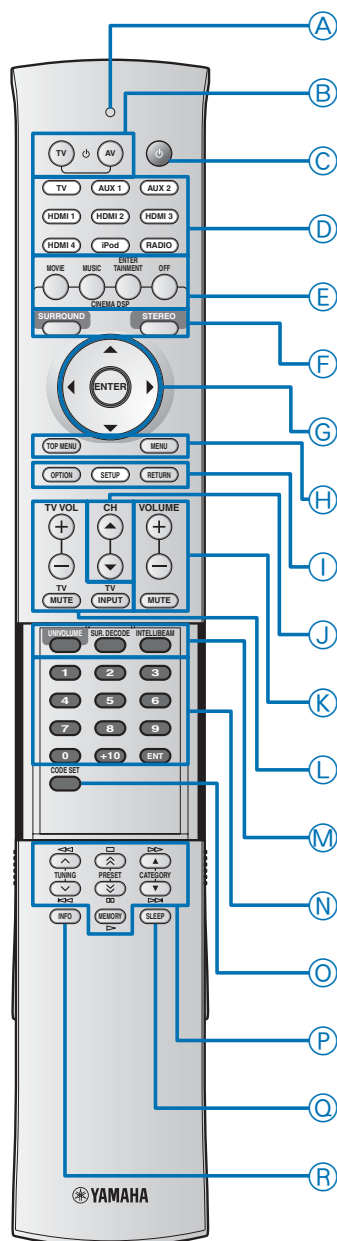

### Note

- When operating the keys located on the slide cover (INFO, SLEEP, etc.), close the slide cover completely before operation.

#### A Transmission indicator

Lights up when infrared control signals are being output.

#### B TV (⏻)

Turns on the power of your TV or set it to the standby mode (page 42).

#### B AV (⏻)

Turns on the power of the selected component or set it to the standby mode (page 42).

#### C Power (⏻) key

Turns on the power of this unit or set it to the standby mode (page 21).

#### D Input selector keys

Use to select an input source (page 21). An input source key currently selected lights up when the remote control is operated.

#### E CINEMA DSP program keys

Select the CINEMA DSP programs (page 22).

#### F SURROUND/STEREO

Switches between surround and stereo playback (page 22).

#### G Cursor (▲ / ▼ / ◀ / ▶) keys, ENTER

Select and adjust menu items.

#### H TOP MENU

Displays the top menu of a Blu-ray disc or DVD (page 42).

#### H MENU

Displays the menu of a Blu-ray disc or DVD (page 42).

#### I OPTION

Displays the option menu (page 32). The remote control turns to setting mode (⓪SETUP lights up).

#### I SETUP

Displays the SETUP menu (page 33). Press and hold to directly enter the LANGUAGE SETUP menu (page 15). Lights up when the remote control is turned into the setting mode of the main unit.

#### ⓪ RETURN

Returns to the previous menu screen (page 34).

#### J CH ▲ / ▼

Changes the channels of your TV/recorder (page 42).

#### K VOLUME +/-

Increases or decreases the volume level of this unit (page 21).

#### K MUTE

Mutes the sound. (page 21).

#### L TV operation keys

Use to control your TV (page 42).

#### M UNIVOLUME

Turns on or off the UniVolume function (page 31).

#### M SUR.DECODE

Selects a decoder for surround playback (page 24). The remote control turns to setting mode (⓪SETUP lights up).

#### M INTELLIBEAM

Enters the AUTO SETUP menu (page 16). The remote control turns to setting mode (⓪SETUP lights up).

#### N Numeric keys

Use to enter numbers.

#### ⓪ CODE SET

Sets remote control codes for external component operations (page 42).

#### P Tuner / external component operation keys

Use to select or preset an FM station or Sirius Satellite Radio channel or control playback of your external components (pages 25, 26 and 42).

#### ⓪ SLEEP

Sets the sleep timer (page 31).

#### R INFO

Displays information about signals currently input to this unit (page 32).

# PREPARATION

## Installation


This section describes a suitable installation location to install this unit using a wall mount bracket, a rack, a table top stand or a floor stand. To achieve desired surround sound effects, install this unit where there are no objects such as furniture obstructing the path of sound beams (page 11). Depending on your installation environment, connections with external components (page 12) should be done before installation.

### Notes

- Make sure you leave an adequate amount of ventilation space so that heat can escape. We recommend installing this unit using a wall mount bracket, a rack, a table top stand or a floor stand.
- Be sure to install this unit where it will not fall subject to vibrations, such as from an earthquake, and where it is out of the reach of children.
- When using a cathode-ray tube (CRT) TV, do not install this unit directly above your TV.
- If the picture on your TV screen becomes blurred or distorted, we recommend moving this unit away from your TV.

### ■ Attach the stands

Attach the supplied stands to this unit as shown below. Make sure that you attach the left and right stands correctly. These stands are unnecessary if you use the optional wall mount bracket.

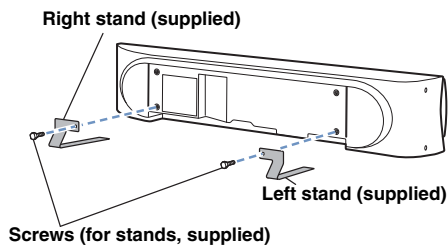


### Note

- Depending on a rack, table top stand, or floor stand, the stands may not be necessary.

### ■ Using a rack


You can install this unit either above or under your TV in a commercially available rack. It should be large enough to allow adequate ventilation space around this unit and strong enough to support the weight of both this unit and your TV.

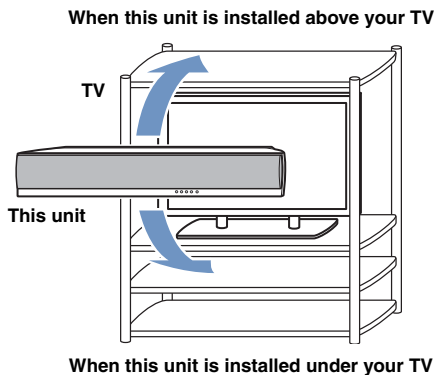



### ■ Using a wall mount bracket

You can use the optional wall mount bracket (such as SPM-K30) to mount this unit on the wall in your listening room.

Attachment of the wall mount bracket: refer to the owner's manual supplied with the wall mount bracket.

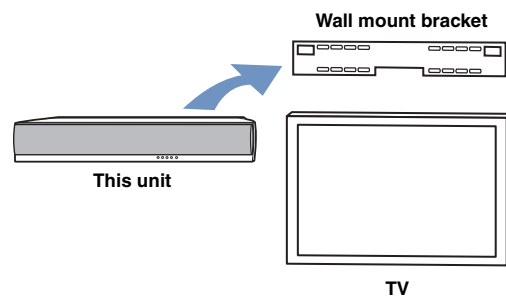


### Dimensions when using SPM-K30

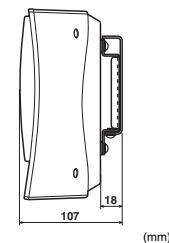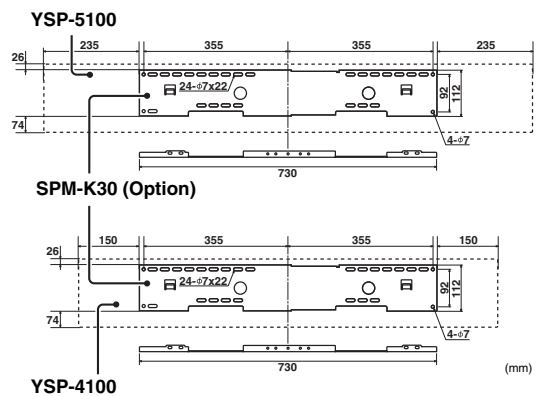


### ■ Using a table top stand or a floor stand

You can mount both your TV and this unit on a commercially available table top stand or floor stand.


## ■ Ideal installation condition

 : Object such as furniture

Parallel installation (with 5Beam)

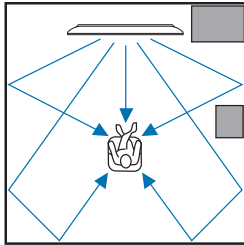


Corner installation (with Stereo+3Beam)

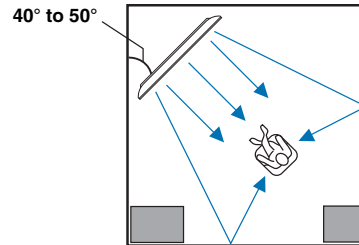

## ■ For better listening environment


### Example 1

Install this unit as close to the exact center of the wall as possible.

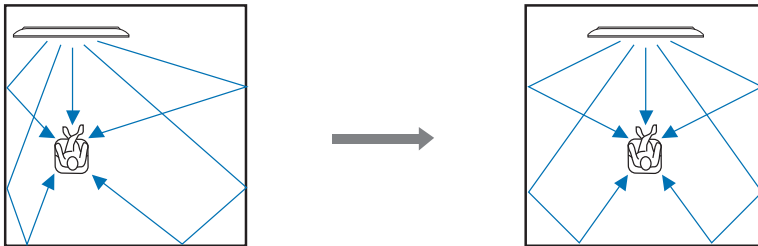


### Example 2

Install this unit so that the sound beams can be reflected off the walls.

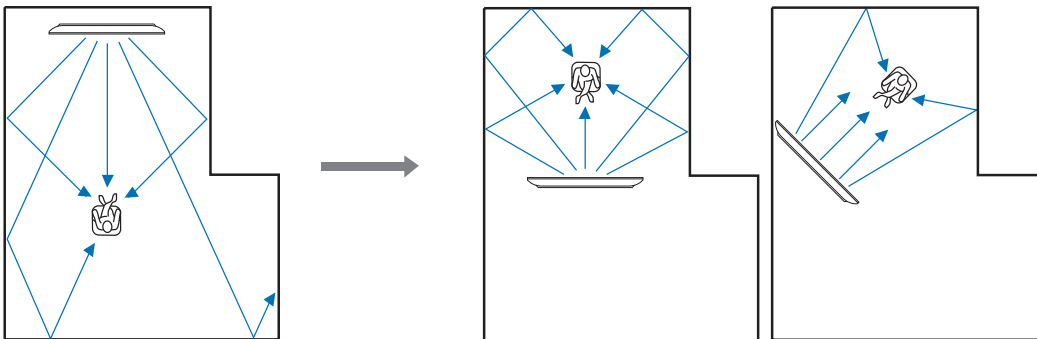

### Example 3

Install this unit as close to the exact front of your normal listening position as possible.

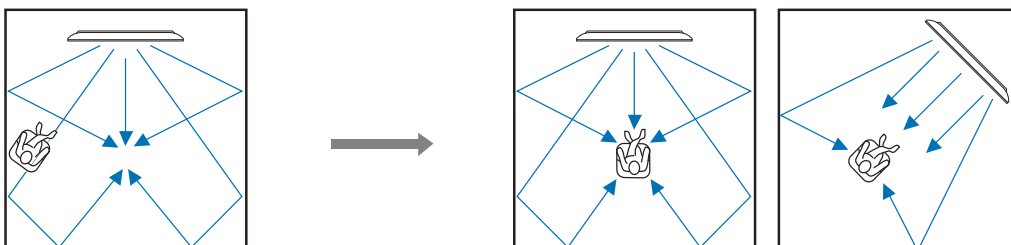

# Connections

 
## Before connecting components

### ■ Cables used for connections

The symbols on the left of cable names (such as 1, 1, and 1) correspond with the symbols described in “Connecting your TV and Blu-ray disc player” (page 12) and “Connecting audio video components” (page 13).


#### For audio and video

##### 1 HDMI cable




#### For audio

 
##### 1 Audio pin cable (supplied)



##### 2 Optical cable (supplied)

 

##### 3 Digital audio pin cable (supplied)

 


#### For video

##### 1 Video pin cable (supplied)


 
##### 2 Component video pin cable



### ■ Information on HDMI

An HDMI cable can transmit both audio and video signals at the same time. If your TV and other components have HDMI jacks, use HDMI cables for simpler and easier connections.

See also: “Using the HDMI control function” (page 31), “INPUT MENU” (page 38)

Input source	Audio signal type
Blu-ray disc HD DVD	Dolby Digital, Dolby Digital Plus, Dolby TrueHD, DTS, DTS-HD High Resolution Audio, DTS-HD Master Audio, 2-channel PCM, multi-channel PCM
DVD video	Dolby Digital, DTS, 2-channel PCM, multi-channel PCM
DVD audio	2-channel PCM, multi-channel PCM



- This unit automatically converts input video signals and outputs the signals from the HDMI OUT jack.
- The HDMI of this unit supports High-Bandwidth Digital Content Protection (HDCP).
- We recommend that you use an HDMI cable shorter than 5 m (16 ft) with the HDMI logo printed on it.

### ■ Priority order for audio input signals


When digital and analog audio signals are simultaneously input from a single source component, this unit plays back digital audio signals by priority. For example, if audio signals are input to the DIGITAL IN (AUX 1) and AUDIO IN (AUX 1) jacks simultaneously, this unit plays back audio signals input to the DIGITAL IN (AUX 1) jack when “AUX1” is selected as the input source.

## Connecting external components

Connect external components (TV, Blu-ray disc player, etc.) to this unit. Do not plug the power supply cable into an AC wall outlet until all connections are complete.


### ■ Connecting your TV and Blu-ray disc player

The following connection example shows a way to connect your TV and Blu-ray disc player by using the HDMI jacks. When you connect them by using the other jacks, refer to “Connecting audio and video components” (page 13). The symbols beside the cables correspond with the symbols described in “Cables used for connections” (page 12).

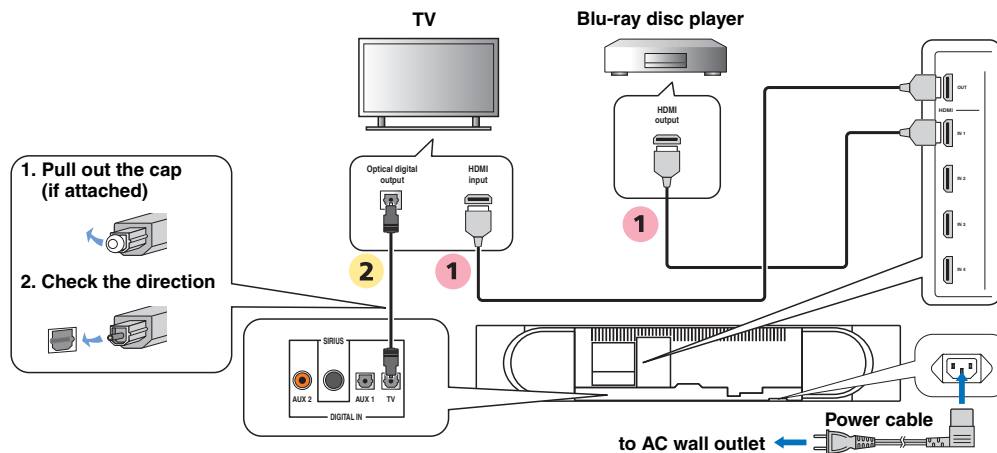

## ■ Connecting audio and video components

Determine the connection types depending on the jacks available on this unit and your external components. The symbols in the following table correspond with the symbols described in “Cables used for connections” (page 12).

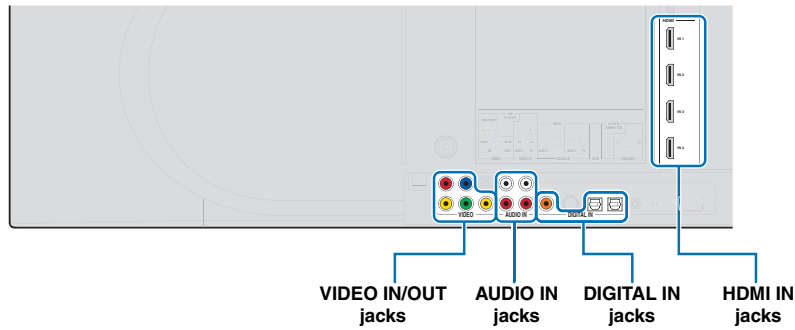

External component	Signal type	Jacks to use		Cable to use	Input selection key
		On external component	On this unit		
TV	Video	Composite video input	VIDEO OUT	1	TV
	Audio	Analog audio output	AUDIO IN (TV)	1	
External component with HDMI output	Audio/video	HDMI output	HDMI IN 1-4	1	HDMI1-4
External component with component video output	Audio	Coaxial digital output	DIGITAL IN (AUX 2)	3	AUX2
	Video	Component video output	VIDEO IN (COMPONENT)	2	
External component with composite video output	Audio	Optical digital output	DIGITAL IN (AUX 1)	2	AUX1
		Analog audio output	AUDIO IN (AUX 1)	1	
	Video	Composite video output	VIDEO IN (VIDEO)	1	




- Video signals input from the VIDEO IN (VIDEO) jack can be output not only to the VIDEO OUT jack but also the HDMI OUT jack. Video signals input from the VIDEO IN (COMPONENT) jacks are output to the HDMI OUT jack.

## Connecting a subwoofer

### Wireline connection


Connect the monaural input jack on your subwoofer to the SUBWOOFER jack on this unit.

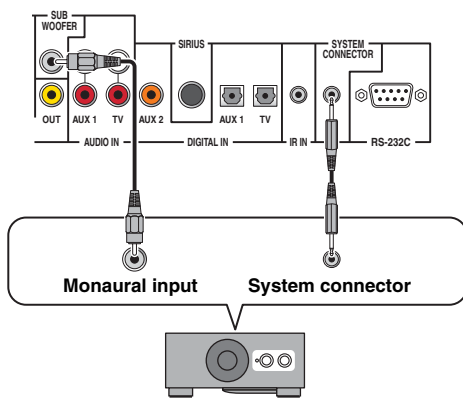

- If the subwoofer is connected by using a system type connection, changing the power mode of this unit controls the power mode of the subwoofer (Yamaha subwoofer).

### Wireless connection

You can make a wireless connection of your subwoofer by using the Yamaha wireless subwoofer kit (SWK-W10). About SWK-W10, refer to “Safety and Accessory Information” (separate booklet). See also: “WIRELESS SETUP” (page 39)

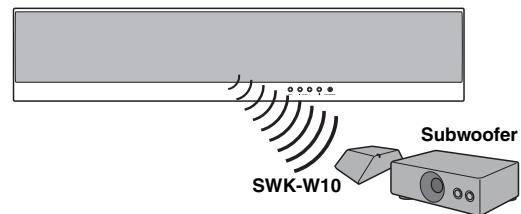



- For proper transmission, you need to set the group IDs of this unit and SWK-W10 to the same value. For the Group ID settings, refer to “Group ID” (page 39) and “Safety and Accessory Information (separate booklet)”.

### Note

- Be sure to use the product only in the country in which it was purchased.

## Connecting the FM antenna

Connect the supplied FM antenna or your antenna to the FM ANTENNA jack on this unit.

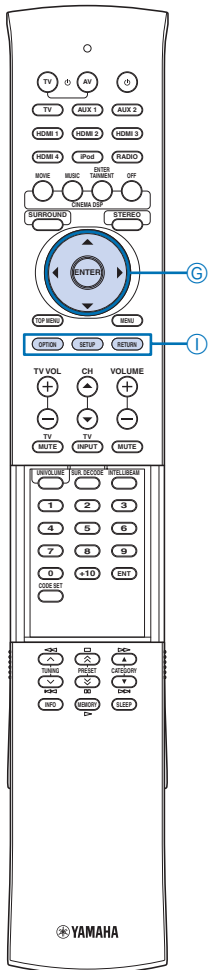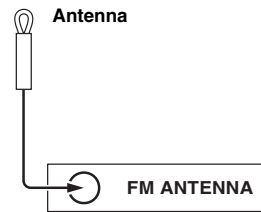


## Preparing the remote control

### Note

- Before installing batteries or using the remote control, make sure that you read precautions on the remote control and batteries in “Safety and Accessory Information” (separate booklet).


## Installing batteries in the remote control

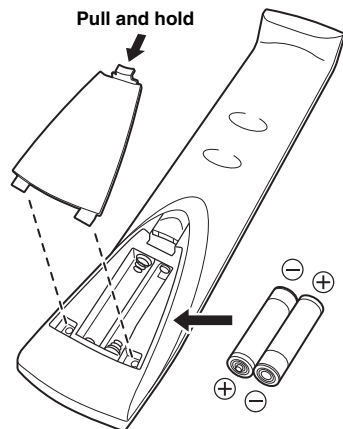

- 1 Pull and hold the tab on the battery cover and then open the cover.
- 2 Insert the two supplied batteries (R03P, UM4, AAA) into the battery compartment. Make sure you insert the batteries according to the polarity markings (+/-).
- 3 Close the battery cover.

## Operation range of the remote control

The remote control transmits a directional infrared beam. Use the remote control within 6 m (20 ft) of this unit and point it toward the remote control sensor of this unit during operation.

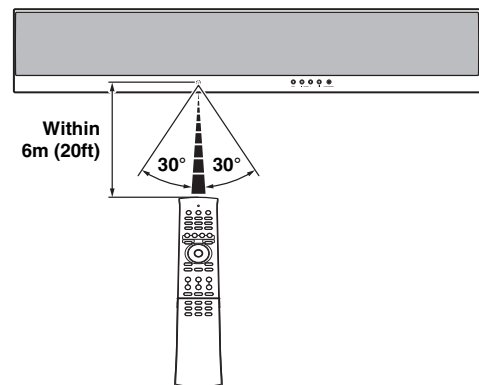

- Ⓞ ENTER
- Ⓞ ▲ / ▼
- Ⓛ SETUP

## Changing OSD language

You can select an OSD language among English, German, French, Spanish, Italian, Dutch and Russian. Before operating the following steps, select this unit as the video input on your TV.

- 1 Press and hold **①**SETUP until the “LANGUAGE SETUP” menu appears on your TV.



- 2 Press **⊙**△ / ▽ to select the desired language and then press **⊙**ENTER.

Choices: ENGLISH (English), DEUTSCH (German), Français (French), ESPAÑOL (Spanish), ITALIANO (Italian), NEDERLANDS (Dutch), Русский (Russian)

Initial setting: ENGLISH (English)

- 3 To exit from the menu, press **①**SETUP.

Changing OSD language

AUTO SETUP (IntelliBeam)

Using the system memory

## AUTO SETUP (IntelliBeam)

This unit creates a sound field by reflecting sound beams off the walls of your listening room and by broadening the cohesion of all the channels. Just as you would arrange the speaker position of other audio systems, you need to set the beam angle to enjoy the best possible sound from this unit.


### Notes

- After you have completed the AUTO SETUP procedure, be sure to disconnect the IntelliBeam microphone.
- The IntelliBeam microphone is sensitive to heat.
  - Keep the IntelliBeam microphone away from direct sunlight.
  - Do not place the IntelliBeam microphone on top of this unit.
- You cannot use the AUTO SETUP when “PREOUT” is selected in “SOUND OUT” (page 38).
- You cannot run the AUTO SETUP while playing back the iPod/iPhone by using PDX-50TX. To run the AUTO SETUP, stop playback and then disconnect the iPod/iPhone from PDX-50TX. About PDX-50TX, refer to “Safety and Accessory Information” (separate booklet).

### Installing the IntelliBeam microphone

Follow the procedure below to connect the IntelliBeam microphone to this unit and place it in a proper location.

- 1 Connect the supplied IntelliBeam microphone to the INTELLIBEAM MIC jack on the front panel.


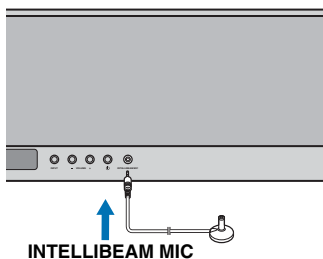



- 2 Place the IntelliBeam microphone on a flat level surface at your normal listening position.

Place the IntelliBeam microphone on the extended center line of this unit and 1.8 m (6.0 ft) or more away from it. Also, make sure place the IntelliBeam microphone within 1 m (3.3 ft) upper or lower from the center height of this unit.




- Use the supplied cardboard microphone stand or a tripod to place the IntelliBeam microphone at the same height as your ears would be when you are seated.

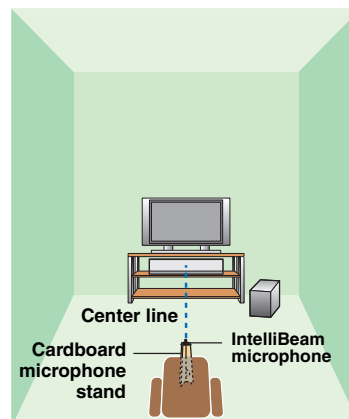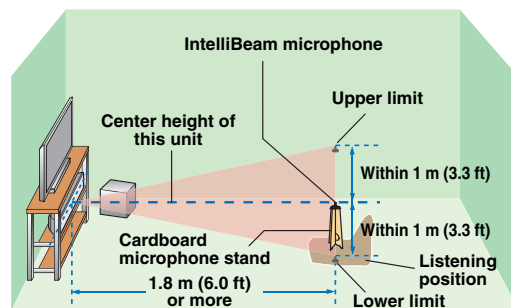


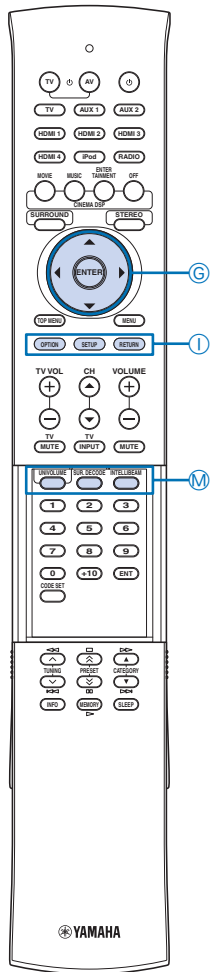

## ■ Assembling the supplied cardboard microphone stand

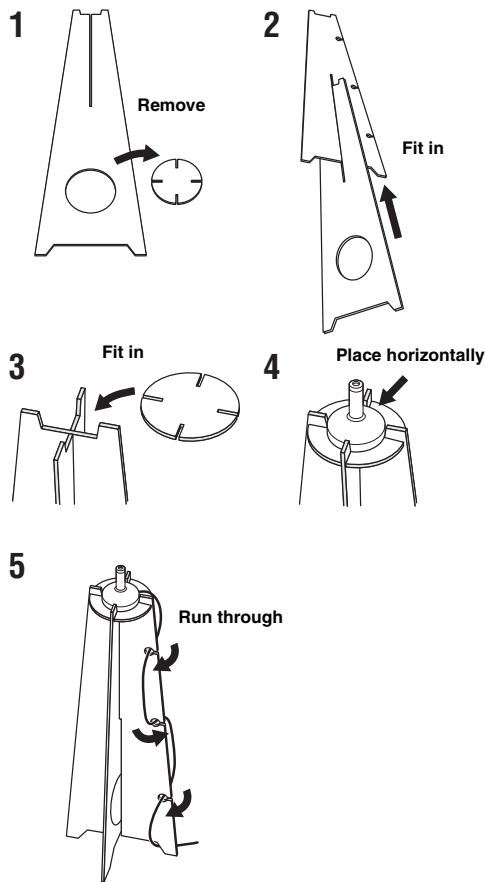

- If a subwoofer with adjustable volume and crossover frequency controls is connected to this unit, turn it on, set the volume to about half way and then set the crossover frequency to the maximum as shown below.

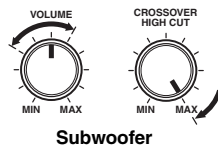

## Using AUTO SETUP (IntelliBeam)

You can select one of the following AUTO SETUP types depending on your purpose.

### “BEAM+SOUND OPTIMZ”

#### (Beam optimization and sound optimization)

Use to optimize the beam angle, delay, volume, and quality so that the parameters best match your listening environment. It is recommended that you should select this optimization feature in the following cases:

- If you make settings for the first time
- If the unit has been relocated
- If your listening room has been restructured
- If the objects in your listening room (furniture, etc.) have been rearranged

This menu takes about three minutes.

### “BEAM OPTIMZ ONLY”

#### (Beam optimization only)

Use to optimize the beam angle so that the parameter best matches your listening environment. This menu takes about one minute.

### “SOUND OPTIMZ ONLY”

#### (Sound optimization only)

Use to optimize the beam delay, volume, and quality so that the parameters best match your listening environment. You must optimize the beam angle with “BEAM OPTIMZ ONLY” before starting “SOUND OPTIMZ ONLY”. It is recommended that you should select this optimization feature in the following cases:

- If you have opened or closed the curtains in your listening room before using this unit
- If you have manually set the beam angle. This menu takes about three minutes.

### Notes

- It is normal for loud test tones to be output during the AUTO SETUP procedure. Make sure that there are no children around in the listening room while the AUTO SETUP procedure is in progress.
- Make sure that your listening room is as quiet as possible. For accurate measurement, turn off air conditioner or other devices that make noises.
- To achieve the best results possible, vacate your listening room until the AUTO SETUP procedure is completed so that you may not obstruct the path of sound beams.
- If there are curtains in your listening room, we recommend following the procedure below.
  1. Open the curtains to improve sound reflection.
  2. Run “BEAM OPTIMZ ONLY”.
  3. Close the curtains.
  4. Run “SOUND OPTIMZ ONLY”.

- To return to the previous screen while using SET MENU, press **①RETURN**.

### 1 Press **①SETUP**.

The remote control keys to be used and available operations in each step are displayed at the bottom of the screen.



- You can also start the “BEAM+SOUND OPTIMZ” procedure simply by holding down **ⓂINTELLIBEAM** for more than two seconds. In this case, proceed to step 4.

- ⓄENTER
- Ⓞ△ / ▽
- ①RETURN
- ①SETUP
- ⓂINTELLIBEAM



- 2 Press  $\odot$   $\triangle$  /  $\nabla$  to select “AUTO SETUP” and then press  $\odot$ ENTER.**



- 3 Press  $\odot$   $\triangle$  /  $\nabla$  to select “BEAM+SOUND OPTIMZ”, “BEAM OPTIMZ ONLY” or “SOUND OPTIMZ ONLY” and then press  $\odot$ ENTER.**



- 4 Prepare to leave the room.**

The best setting may not be done if you are in the room. Prepare to leave the room in 10 seconds after pressing  $\odot$ ENTER in step 5.



- Wait outside the room during the AUTO SETUP procedure.
- The AUTO SETUP procedure takes about 3 minutes.
- To cancel the AUTO SETUP procedure after it is started, press  $\textcircled{1}$ RETURN.


- 5 Press  $\odot$ ENTER to start the AUTO SETUP procedure and then leave the room within 10 seconds.**



The setup screen automatically changes during the AUTO SETUP procedure.

If an error occurs, an error buzzer sounds and an error message is displayed. For details on error messages, see “Error messages for AUTO SETUP” (page 18).

If the AUTO SETUP procedure is complete, this unit rings the chimes.

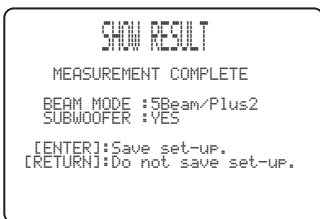

- If “ENVIRONMENT CHECK [FAILED]” is displayed, refer to “Error messages for AUTO SETUP” (page 18), press  $\textcircled{1}$ RETURN, and then run the AUTO SETUP procedure again.
- If “SUBWOOFER :NOT APPLICABLE” is displayed even though a subwoofer is connected to this unit and turned on, check the connection and then increase the volume level of the subwoofer and run the AUTO SETUP procedure again.
- Depending on the environment of your listening room, the beam angles of front right and left and surround left and right may be set to the same value even if “BEAM MODE :5 BEAM” is displayed as a result.


- 6 Press  $\odot$ ENTER to confirm the results.**

The menu screen disappears in two seconds.



- If you do not want to reflect the results, press  $\textcircled{1}$ RETURN.

- 7 Disconnect the IntelliBeam microphone.**

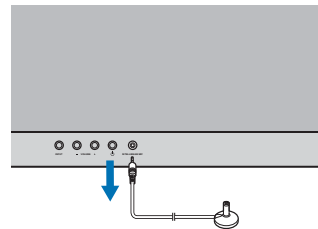

The measurement results are stored in the internal memory of this unit until you run the AUTO SETUP procedure again or configure the settings manually.

Changing OSD language

AUTO SETUP (IntelliBeam)

Using the system memory


## ■ Error messages for AUTO SETUP

If an error message is displayed on your TV, check the error message list to solve the problem and then follow the procedure below.

[ERROR E-1]: Press **Ⓞ**ENTER to run the AUTO SETUP procedure again or **Ⓡ**RETURN to cancel the operation  
Other errors: Press **Ⓡ**RETURN to cancel the operation and then run the AUTO SETUP procedure again.

### Note

If the problem is difficult to be solved, configure the settings manually in “MANUAL SETUP” (page 34).

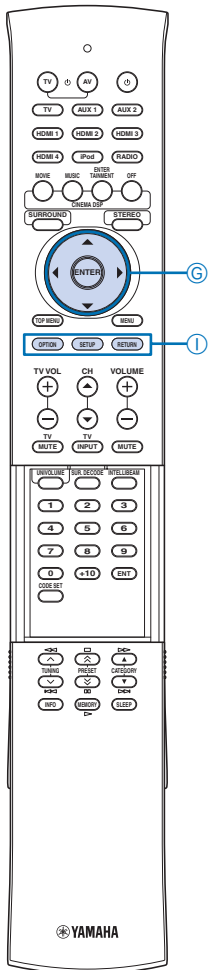

Error message	Cause	Remedy	See page
<b>ERROR E-1</b> <b>Please test in quieter environment.</b>	There is too much unwanted noise in your listening room.	Make sure that your listening room is as quiet as possible. You may want to choose certain hours during the day when there is not much noise coming from outside.	—
<b>ERROR E-2</b> <b>No MIC detected. Please check MIC connection and re-try.</b>	The IntelliBeam microphone is not connected to this unit or disconnected during the AUTO SETUP procedure.	Connect the IntelliBeam microphone to this unit firmly.	15
<b>ERROR E-3</b> <b>Unexpected control is detected. Please re-try.</b>	Some other operations were performed on this unit while the AUTO SETUP procedure was in progress.	Do not perform any other operations while the AUTO SETUP procedure is in progress.	—
<b>ERROR E-4</b> <b>Please check MIC position. MIC should be set in front of the unit and re-try.</b>	The IntelliBeam microphone is not placed in front of this unit.	Make sure that the IntelliBeam microphone is installed in front of this unit.	15
<b>ERROR E-5</b> <b>Please check MIC position. MIC should be set above 1.8m/6.0ft and re-try.</b>	The IntelliBeam microphone is not placed in the right distance from this unit.	Make sure that the IntelliBeam microphone is installed more than 1.8 m (6.0 ft) from the front of this unit and within 1 m (3.3 ft) from the center height of this unit.	15
<b>ERROR E-6</b> <b>Volume level is lower than expected. Please check MIC position/connection and re-try.</b>	The IntelliBeam microphone cannot collect the sound produced by this unit because the sound output level is too low.	Make sure that the IntelliBeam microphone is firmly connected to this unit and placed in a proper location. If the problem persists, contact the nearest authorized Yamaha service center for assistance.	15
<b>ERROR E-7</b> <b>Unexpected error happened. Please re-try.</b>	An internal system error occurred.	Repeat the AUTO SETUP procedure.	—

ⓄENTER

Ⓞ△ / ▽

ⓇRETURN

ⓇSETUP

## Using the system memory

You can save the current beam and sound settings in the system memory of this unit. It is handy to save certain settings according to the varying conditions of your listening environment. For example, if there are curtains in the path of sound beams, the effectiveness of the sound beams will vary depending on whether the curtains are open or closed.



• If there are curtains in your listening room, we recommend following the procedure below.


1. While the curtains are open, run “BEAM+SOUND OPTIMZ” (page 16) and then save the settings to “MEMORY1”.
2. While the curtains are closed, run “SOUND OPTIMZ ONLY” (page 16) and then save the settings to “MEMORY2”.

### Saving settings

#### 1 Press **⓪**SETUP.



#### 2 Press **⓪**ENTER.

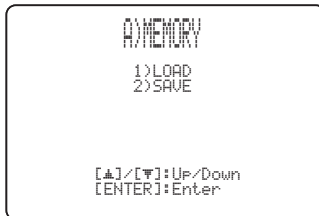

#### 3 Press **⓪** ▲ / ▼ to select “SAVE” and then press **⓪**ENTER.



#### 4 Press **⓪** ▲ / ▼ to select the desired memory number and then press **⓪**ENTER.



#### 5 Press **⓪**ENTER.

The current beam and sound settings are saved to the selected memory number.




### Loading settings


#### 1 Press **⓪**SETUP.



#### 2 Press **⓪**ENTER.

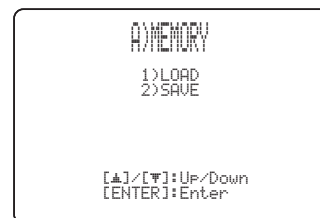

#### 3 Press **⓪**ENTER again.

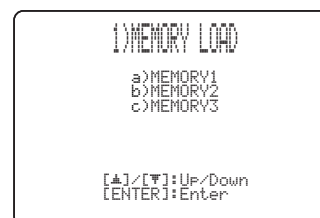


• If system settings are already stored in the selected memory number, this unit overwrites the old settings.


Changing OSD language

AUTO SETUP (IntelliBeam)

Using the system memory

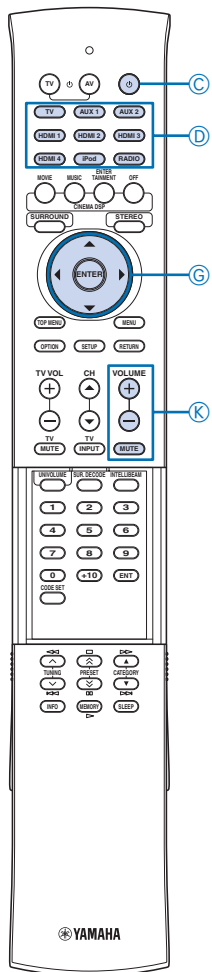

**4** Press **ⓐ** **Ⓛ** / **Ⓜ** to select the memory number to be loaded and then press **ⓐ** **ENTER**.

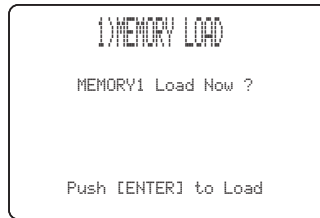

**5** Press **ⓐ** **ENTER**.  
The beam and sound settings saved in the selected memory number are loaded.



- ⓐ Power
- Ⓛ AUX1/2
- Ⓜ HDMI1
- Ⓨ HDMI1-4
- Ⓩ Input selector keys
- ⓐ ENTER
- Ⓛ △ / ▽
- Ⓨ MUTE
- Ⓩ VOLUME +/-


# PLAYBACK FEATURES

## Playback

### Playing back sources

This section describes how to playback source input from your external components. For details on your external components, refer to the owner's manual supplied with each component.


- 1 Press **Ⓞ**Power (**⏻**) key to turn on this unit.
- 2 Turn on external components (TV, Blu-ray disc player, etc.) connected to this unit.
- 3 Press one of the **Ⓜ**Input selector keys to select an external component as an input source.

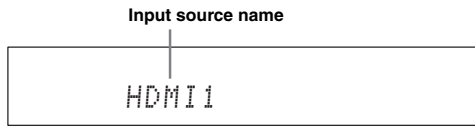

- You can change the input source name displayed on the front panel display (page 38).

- 4 Start playback of the external component that you have selected as the input source, or select a radio station on the tuner.
  - FM tuning (page 25)
  - Playing back iPod/iPhone (page 30)

- 5 Press **Ⓚ**VOLUME +/- to adjust the volume.

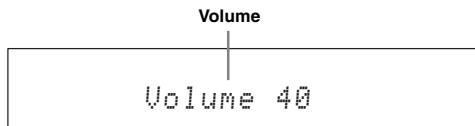

- 6 Press **Ⓞ**Power (**⏻**) key to turn this unit to the standby mode.

### Playing back TV sounds

- 1 Select the desired TV channel.
- 2 Press **Ⓜ**TV to select the TV as the input source.
- 3 Mute the sound output on the TV.

### Playing back a player

- 1 Select the player as the video input on the TV.
- 2 Press **Ⓜ**HDMI1-4 or **Ⓜ**AUX1/2 to select the player as the input source.

For example, if the player is connected to the HDMI IN 1 jack of this unit, press **Ⓜ**HDMI1.
- 3 Start playback of the player.
- 4 Mute the sound output on the TV.



- If your player supports the HD audio, check whether the audio output setting on the player is set to the value which supports HD audio output ("Auto", "Bitstream", etc.).
- If your player does not support the HD audio, check whether the audio output setting on the player is set to multi-channel linear PCM.
- If your player is connected to this unit through the digital connection, check whether the audio output setting on the player is set to digital output ("Bitstream", "Dolby Digital", "DTS", etc.).
- To enhance the surround sound effect, set the audio setting of your player to the multi-channel audio mode.
- You can use the supplied demonstration DVD to check the digital signals being input from the player through the digital connection (HDMI, optical or coaxial). The **DIGITAL** indicator lights up when this unit detects the digital audio signal input.

### Muting audio output


- 1 Press **Ⓚ**MUTE to mute the audio output.
- 2 Press **Ⓚ**MUTE again to resume audio output.

### Decoder and input channel indicators

- **Decoder indicators**

Depending on the input source and the selected decoder, the indicators in the front panel display light up as follows:

Changing OSD language
AUTO SETUP (IntelliBeam)
Using the system memory
<b>Playback</b>
Playback mode
FM tuning
SIRIUS Satellite Radio™ tuning
Playing back iPod™
Useful features

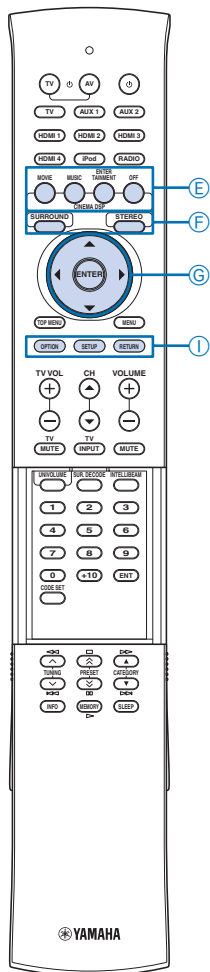


Status	Indicator
When PCM signals are being input	PCM
When Dolby TrueHD signals are being input	TRUE HD
When Dolby Digital Plus signals are being input	DIGITAL PLUS
When Dolby Digital signals are being input	DIGITAL
When Dolby Digital EX signals are being input	EX
When Dolby Pro Logic is selected as the surround decoder	PL
When Dolby Pro Logic II is selected as the surround decoder	PL II
When Dolby Pro Logic IIx is selected as the surround decoder	PL II x
When DTS HD Master Audio signals are being input	<b>dts</b> + HD + MSTR
When DTS HD High Resolution signals are being input	<b>dts</b> + HD + HI RES
When DTS digital signals are being input	<b>dts</b>
When DTS 96/24 signals are being input	<b>dts</b> + 96/24
When DTS ES discrete is selected as the surround decoder	<b>dts</b> + ES + DSCRT
When DTS ES matrix is selected as the surround decoder	<b>dts</b> + ES + MTRX
When DTS Neo:6 is selected as the surround decoder	<b>dts</b> + Neo:6



- You can select an audio signal to be played back (Auto or DTS) in “Decoder Mode” (page 32).

### Input channel indicators

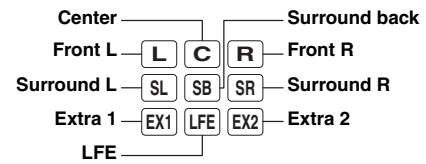

Depending on the channel component of the current digital input signal, the input channel indicators in the front panel display light up as follows:

Input signal	Indicator
2-channel stereo	L R
5.1-channel	L C R SL SB SR LFE
6.1-channel	L C R SL SB SR LFE
7.1-channel	L C R SL SB SR EX1 LFE EX2



- Extra (EX1/EX2) indicators light up when 7.1-channel signals recorded in a Blu-ray disc (etc.) are being input. Normally, surround back channel signals are recorded in the extra channels. This may vary depending on the disc.

## Playback mode

You can select the playback method (surround or stereo), desired CINEMA DSP program and decoder to enjoy playback of the input source.

### Selecting surround or stereo playback

Use to select the playback method (surround or stereo). See also: “Enjoying CINEMA DSP programs” (page 22), “Changing the audio output method for surround playback” (page 23).

#### Press **F** SURROUND or **F** STEREO.

You can enjoy high realistic sensation with surround playback and hi-fi sound with stereo playback.



- Normal sounds (not sound beams) are output from the front right and front left channels. When you play back multi-channel sources, all signals except those from the front right and left channels are mixed down and output from the front right and left channels.
- When the stereo playback is selected, CINEMA DSP (page 22) and the decoder (page 24) become ineffective.

### Enjoying CINEMA DSP programs

This unit is equipped with a Yamaha CINEMA DSP (digital sound field processing) chip containing several sound field programs used to enhance your playback experience. Most of the CINEMA DSP programs are precise digital recreations of actual acoustic environments of famous concert halls, music venues, and movie theaters.



- When you enjoy the CINEMA DSP programs, press **F** SURROUND to select the surround playback, and then follow the steps below.
- The CINEMA DSP programs are not available in the following conditions.
  - Stereo playback is selected.
  - HD audio signals are being played back.
  - Audio signals with sampling frequency of higher than 96 kHz are being played back.
  - Audio signals are output from the PRE OUT jacks.

- E** CINEMA DSP
- F** OFF
- F** STEREO
- F** SURROUND
- G** ENTER
- G**  $\Delta$  /  $\nabla$
- G**  $\leftarrow$  /  $\rightarrow$
- G**  $\nabla$
- I** SETUP

**1 Press the desired  $\text{\textcircled{C}}$  CINEMA DSP key.**

The CINEMA DSP category name appears in the front panel display and the CINEMA DSP indicator (page 7) lights up.

**2 While the category name is displayed, press the  $\text{\textcircled{C}}$  CINEMA DSP key repeatedly.**

Each time you press the key, program switches.



- To turn off the CINEMA DSP program, press  $\text{\textcircled{C}}$  OFF.

**■ Movie (MOVIE)****Sci-Fi**

This program clearly reproduces dialogs and special sound effects of the latest science fiction films and lets you feel a broad and expansive cinematic space.

**Spectacle**

This program reproduces the wide and grand environment and lets you have added impressions on spectacular scenes with strong visual impacts.

**Adventure**

This program reproduces the thrilling environment of the latest action films and lets you feel the dynamic and excitement of fast-moving scenes.

**■ Music (MUSIC)****Music Video**

This program produces a vibrant environment and lets you feel as if you are at an actual jazz or rock concert.

**Concert Hall**

This program creates a rich surround effect of a large round concert hall with a great deal of presence, emphasizing the extension of sounds, and lets you feel as if you are seated close to the center of the stage.

**Jazz Club**

This program recreates the acoustic environment of “The Bottom Line”, a famous jazz club in New York once and lets you feel as if you are seated right in front of the stage.

**■ Entertainment (ENTERTAINMENT)****Sports**

This program reproduces the energetic environment of live sports broadcasting, converging a commentator’s voice on the center and broadening the overall atmosphere of the stadium, and lets you feel as if you are seated at an actual stadium or a ball park.

**Drama**

This program stables reverberations that match a wide range of movie genres from serious dramas to musicals and comedies, and offers an optimum 3D feeling, reproducing effects tones and background music softly but cubically around clear words.

**Talk Show**

This program reproduces excitement of live talk shows. It enhances the ambience of gaiety while keeping the conversations at a comfortable volume.

**Game**

This program is suitable for role-playing and adventure games. It utilizes the sound field effects for movies to represent the depth and spatial feeling of the field during play, while offering movie-like surround effects in the movie scenes in the game.

**Mch Stereo**

This program downmixes multi-channel source to 2 channels and then outputs the sound from all speakers and produces stereo sounds in wide range. It is ideal for background music at parties, etc.

**Changing the audio output method for surround playback**


You can set the number of beam output channels and audio output method.

**1 Press  $\text{\textcircled{1}}$  SETUP.**


The “SET MENU” screen appears on the TV.

**2 Use  $\text{\textcircled{C}}$   $\triangle$  /  $\nabla$  and  $\text{\textcircled{C}}$  ENTER to select “SOUND OUT MENU”- “SOUND BEAM OUT CONFIG” - “CHANNEL OUT”.****3 Press  $\text{\textcircled{C}}$   $\triangleleft$  /  $\triangleright$  to select the number of output channels.**

Choices: 5.1ch, 7.1ch  
Initial setting: 7.1ch

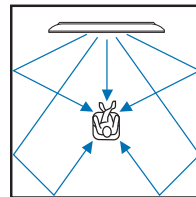**4 Press  $\text{\textcircled{C}}$   $\nabla$  to select “BEAM MODE”.****5 Press  $\text{\textcircled{C}}$   $\nabla$  to select the desired audio output method.****6 To exit from the menu, press  $\text{\textcircled{1}}$  SETUP.****■ Beam modes for “5.1ch”****5Beam**

Outputs sound beams from the front right and left, center, and surround right and left channels. This mode is ideal for enjoying surround sound effects to the fullest when you watch 5.1-channel audio discs.

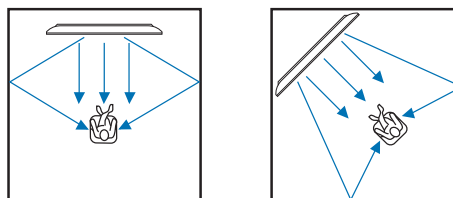**Stereo+3Beam**

Outputs normal sound from the front right and left channels and sound beams from the center and surround right and left channels. This mode is ideal for watching live recordings on a DVD.

Playback


Playback mode

FM tuning

SIRIUS Satellite  
Radio™ tuning


Playing back iPod™

Useful features

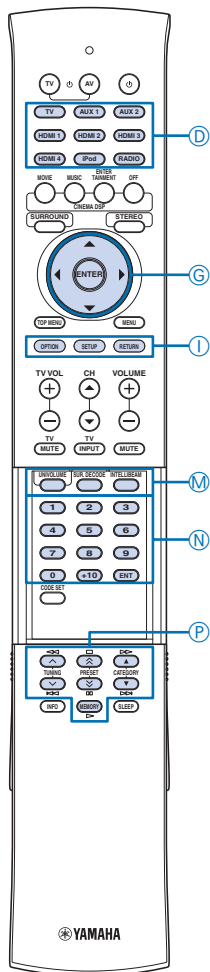

- Ⓓ RADIO
- Ⓔ ENTER
- Ⓖ ▲ / ▼
- Ⓘ OPTION
- Ⓛ RETURN
- Ⓜ SUR.DECODE
- Ⓝ Numeric keys
- Ⓟ TUNING ▲ / ▼
- Ⓢ MEMORY


### 3 Beam

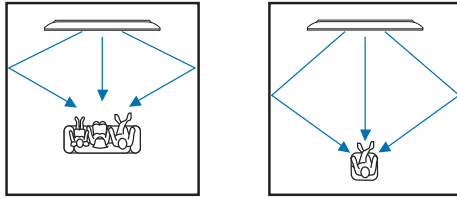

Outputs sound beams from the front right and left and center channels. For playback of multi-channel sources, surround right and left channel sources are mixed into the front right and left channels. This mode is ideal for enjoying movies with the whole family. In addition, you can use this mode when the listening position is close to the backside of the wall.


#### ■ Beam modes for “7.1ch”

### 5BeamPlus2

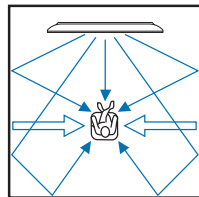


Outputs sound beams from the front right and left, center, and surround back right and left channels. Surround right and left channel sources are mixed into the front right and left channels. This mode is ideal for enjoying surround sound effects to the fullest when you watch 7.1-channel audio discs.

### ST+3BeamPlus2

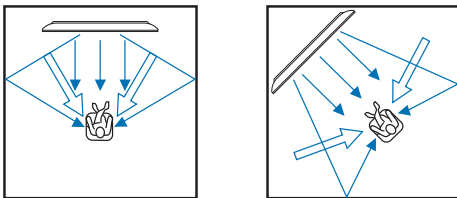

Outputs normal sound from the front right and left channels and sound beams from the center and surround back right and left channels. Surround right and left channel sounds are output by using front right and left channel sound and surround back right and left sound beams. This mode is ideal for watching live recordings on a DVD.

### 3 Beam

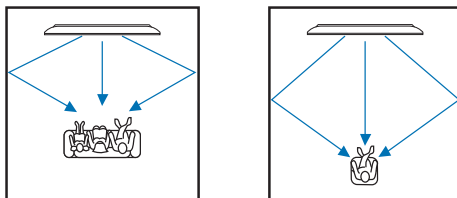

Outputs sound beams from the front right and left and center channels. For playback of multi-channel sources, surround right and left and surround back right and left channel sources are mixed into the front right and left channels. This mode is ideal for enjoying movies with the whole family. In addition, you can use this mode when the listening position is close to the backside of the wall.

## Enjoying 2-channel sources in surround sound

This unit can decode 2-channel sources for 7.1-channel or 5.1-channel playback so that you can enjoy a variety of surround sound effects by switching the decoder.



- The decoders are available only when surround playback (page 22) is selected.
- Available decoders vary depending on the “CHANNEL OUT” setting (page 23).

Press **Ⓜ** SUR.DECODE repeatedly to switch between decoders.

### 2ch → 5ch

Decoder		Recommended source
Pro Logic (Dolby Pro Logic)	—	All sources
PLII (Dolby Pro Logic II)	Movie Music Game	Movies Music Games
Neo:6 (DTS Neo:6)	Cinema Music	Movies Music

### 2ch → 7ch

Decoder		Recommended source
PLIIx (Dolby Pro Logic IIx)	Movie Music Game	Movies Music Games
Neo:6 (DTS Neo:6)	Cinema Music	Movies Music

## Playing back 5.1-channel sources in 7.1-channel surround

This unit decodes 5.1-channel sources and then playback them in up to 7.1-channel surround. One of the following decoders is automatically selected depending on the input signals. Set “CHANNEL OUT” to “7.1ch” (page 23).

5.1ch input source	Decoder
PCM, Dolby Digital, Dolby Digital EX, Dolby TrueHD, Dolby Digital Plus	Dolby Pro Logic IIx Movie/Music
DTS Digital, DTS ES matrix, DTS HD Master Audio, DTS HD High Resolution Audio	DTS ES matrix
DTS ES discrete	DTS ES discrete



- Press **Ⓜ** SUR.DECODE to switch between Dolby Pro Logic Movie and Music. To switch to the Dolby Pro Logic IIx Music decoder, select “PLIIxMusic”. To switch to the Dolby Pro Logic IIx Movie decoder, select one of the decoders other than “PLIIxMusic”.



# FM tuning

The FM tuner of this unit provides the following two modes for tuning.

- **Frequency tuning mode**  
You can tune into a desired FM station by searching or specifying its frequency.
- **Preset tuning mode**  
You can preset the frequencies of FM stations by registering them to specific numbers, and later just select those numbers to tune into.

**Note**

Adjust the FM antenna connected to this unit for the best reception.

## Tuning into the desired FM station (Frequency tuning)

**1 Press  $\text{RADIO}$  repeatedly to select "FM".**

 
**Note**

- If you select "FM" with INPUT on the front panel, press  $\text{RADIO}$  on the remote control prior to step 2 so that you can operate the procedures from step 2.

**2 Press  $\text{TUNING}$   $\wedge$  /  $\vee$  to specify the frequency.**

The TUNED indicator on the front panel display lights up when the tuner is tuned into a station. The STEREO indicator also lights up if the program being broadcasted is in stereo.  
See also: "FM Mode" (page 32)

**Lights up**



The frequency changes in the following manner according to how you press  $\text{TUNING}$   $\wedge$  /  $\vee$ .

**When you press the key more than 1 second**

The tuner searches the frequency of a station that is detectable around the current frequency. This is effective when the tuner can receive strong signals without any interference. Once the search starts, release the key. When you keep holding the key, the search continues even when a station is detected. This is useful when you want to tune in to a specific station.

**When you press and release the key**

The tuner increases or decreases the frequency in steps. Use this method when the tuner cannot receive strong signals and stations are skipped during the search.

**3 To directly specify the frequency, use  $\text{NUMERIC}$  keys to enter the frequency of the station.**

Enter only integers. For example, if you want to set the frequency to 88.9 MHz, enter "889".

**Note**

- When you press  $\text{NUMERIC}$  keys during preset tuning, a preset number is selected. Set the tuner to the frequency tuning mode using  $\text{TUNING}$   $\wedge$  /  $\vee$  prior to the operation.



- The reception is noisy and the sound is hard to listen, switch to monaural mode to get better reception. In the option menu, select "Mono" in "FM Mode" (page 32).

## Registering FM stations and tuning in (Preset tuning)

You can register up to 40 FM stations automatically or manually.

**Registering stations automatically**

The tuner automatically detects FM stations with strong signals and registers up to 40 stations.

 
**1 Press  $\text{RADIO}$  repeatedly to select "FM".**

**2 Press  $\text{OPTION}$ .**  
The option menu (page 32) appears on the front panel display.

**3 Press  $\text{ENTER}$   $\triangle$  /  $\nabla$  to select "Auto Preset" and then press  $\text{ENTER}$ .**



This unit starts to preset FM radio stations in 5 seconds.



Preset number      Frequency



- You can select the preset number at which the preset starts by pressing  $\text{ENTER}$   $\triangle$  /  $\nabla$  before pressing  $\text{ENTER}$ .
- To cancel the operation, press  $\text{RETURN}$ .

If auto preset is complete, "Preset Complete" appears.

**4 To exit from the menu, press  $\text{OPTION}$ .**

**Registering stations manually**

You can manually register FM stations with weak signals.

**1 Tune into the desired FM station.**

**2 Press  $\text{MEMORY}$ .**  
"Manual Preset" appears on the front panel display, followed soon by the preset number to which the station will be registered.



- By holding down  $\text{MEMORY}$  for more than 2 seconds, you can skip the following steps and automatically register the selected station to an empty preset number (next to the lastly-registered preset number).

Playback


Playback mode

FM tuning


SIRIUS Satellite Radio™ tuning

Playing back iPod™

Useful features

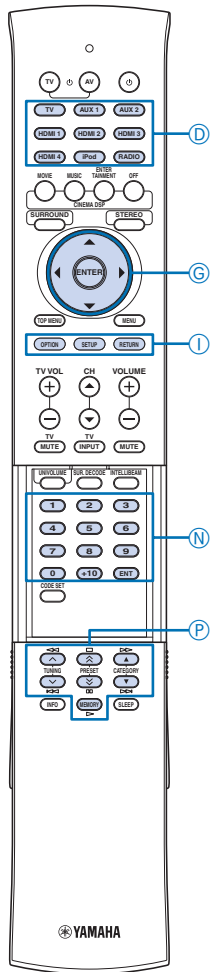

**3 Press  $\textcircled{P}$ PRESET  $\wedge / \vee$  to select the preset number to which the station will be registered.**  
When you select a preset number to which no station is registered, “Empty” appears. When you select a preset number to which any station has been already registered, the frequency of the station is displayed.

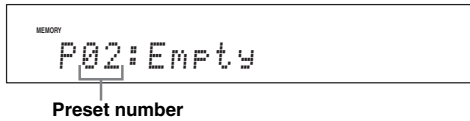

**Preset number**

- You can also specify a preset number using the  $\textcircled{N}$ Numeric keys.

**4 Press  $\textcircled{P}$ MEMORY.**  
When registration is complete, the front panel display returns to the original state.

- To cancel registration, press  $\textcircled{I}$ RETURN or leave this unit without any operations for about 30 seconds.

**Calling a preset station (Preset tuning)**  
You can call preset stations registered automatically or manually.

**Press  $\textcircled{P}$ PRESET  $\wedge / \vee$  to select the desired preset number.**

- Preset numbers to which no stations are registered are skipped.
- “No Presets” is displayed if no stations are registered.

- You can directly select a preset number by pressing the  $\textcircled{N}$ Numeric keys while calling a preset station.
- When you press  $\textcircled{N}$ Numeric keys during normal frequency tuning, a frequency is entered. Set the tuner to the preset tuning mode using  $\textcircled{P}$ TUNING  $\wedge / \vee$  prior to the operation.

**Clearing preset stations**

Use to clear the preset FM stations.

 
**1 Press  $\textcircled{I}$ RADIO repeatedly to select “FM”.**

**2 Press  $\textcircled{I}$ OPTION.**

The option menu (page 32) appears on the front panel display.

**3 Press  $\textcircled{G}$   $\triangle / \nabla$  to select “Clear Preset” and then press  $\textcircled{G}$ ENTER.**

A preset station is displayed.



**Preset station**

- To cancel the clearing operation, press  $\textcircled{I}$ RETURN.

**4 Press  $\textcircled{G}$   $\triangle / \nabla$  to select a preset station to be cleared, and then press  $\textcircled{G}$ ENTER.**

The selected preset station is cleared. If the operation is completed, “Cleared” appears. To clear the multiple preset stations, repeat step 4.

**5 To exit from the menu, press  $\textcircled{I}$ OPTION.**

- $\textcircled{I}$ RADIO
- $\textcircled{G}$ ENTER
- $\textcircled{G}$   $\triangle / \nabla$
- $\textcircled{I}$ OPTION
- $\textcircled{I}$ RETURN
- $\textcircled{N}$ Numeric keys
- $\textcircled{N}$ 0
- $\textcircled{N}$ ENT
- $\textcircled{P}$ CATEGORY  $\triangle / \nabla$
- $\textcircled{P}$ MEMORY
- $\textcircled{P}$ PRESET  $\wedge / \vee$
- $\textcircled{P}$ TUNING  $\wedge / \vee$

## SIRIUS Satellite Radio™ tuning

### Listening to Satellite Radio

To listen to Satellite Radio, you’ll need to connect a SIRIUS Satellite Radio tuner (sold separately) to your Sirius-Ready receiver. SIRIUS Satellite Radio is available to residents of the US (except Alaska and Hawaii) and Canada.

Satellite Radio delivers a variety of commercial-free music from categories ranging from Pop, Rock, Country, R&B, Dance, Jazz, Classical and many more plus coverage of all the top professional and college sports including play by play games from select leagues and teams. Additional programming includes expert sports talk, uncensored entertainment, comedy, family programming, local traffic and weather and news from your most trusted sources.


Once you’ve purchased a SIRIUS tuner you’ll need to activate it and subscribe to begin enjoying the service. Easy to follow installation and setup instructions are provided with the SIRIUS tuner. There are a variety of programming packages available, including the option of adding “The Best of XM” programming to the SIRIUS service. The “Best of XM” service is not available to SIRIUS Canada subscribers at this time. Please check with SIRIUS Canada for any updates using the numbers and web address below.

Family friendly packages are also available to restrict channels featuring content that may be inappropriate for children.

To subscribe to SIRIUS, U.S. and Canadian customers can call 1-888-539-SIRI (1-888-539-7474) or visit [sirius.com](http://sirius.com) (US) or [siriuscanada.ca](http://siriuscanada.ca) (Canada).

### Connecting the SiriusConnect™ tuner

Connect the SiriusConnect tuner (sold separately) to the SIRIUS jack on the rear panel of this unit. For details, see the operating instructions provided with the SiriusConnect tuner.

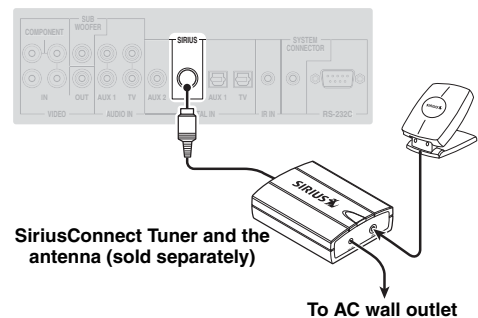

**SiriusConnect Tuner and the antenna (sold separately)**

**To AC wall outlet**



- To ensure optimal reception of the SIRIUS Satellite Radio signals, the antenna of the SiriusConnect tuner must be placed at or near a window with no obstacles in the path to the sky. The orientation of the antenna for the best reception differs depending on the area. Refer to the instruction manuals supplied with the SiriusConnect tuner for the installation of the antenna. You can mount it indoors or outdoors.
- Use the “Antenna Level” information in the front panel display (page 30) to check the antenna reception level and adjust the orientation of the antenna.
- You need to connect the SiriusConnect tuner to an AC wall outlet.

### Note

- If “ANTENNA ERR” appears on the front panel display, the connection of the SiriusConnect tuner or antenna is incorrect. In such cases, check the connection of the SiriusConnect tuner and the antenna.

## Activating SIRIUS Satellite Radio™ subscription

Before using the SIRIUS Satellite Radio feature, you need to activate your SIRIUS Satellite Radio subscription. To activate the subscription you need the Sirius ID which is uniquely assigned to the SiriusConnect tuner. Sirius ID is 12-digit number and it appears on the package of the SiriusConnect tuner, on the label of the SiriusConnect tuner, and when you tune into the SIRIUS Satellite Radio channel “0” (see below).

### ■ Displaying the Sirius ID of your SiriusConnect tuner

**1** Press **Ⓜ**RADIO repeatedly to select “SIRIUS”.

**2** Press **Ⓝ**0 and then **Ⓝ**ENT to display the Sirius ID of your SiriusConnect tuner. “000 Sirius ID” and “xxxxxxxxxxxx” (“xxxxxxxxxxxx” indicates the 12-digit Sirius ID of your SiriusConnect tuner) appears on the front panel display. Write the Sirius ID below.

ID: \_\_\_\_\_

**3** Contact SIRIUS Satellite Radio to activate your subscription.

#### SIRIUS Satellite Radio online information

Contact for activation  
 URL: <https://activate.siriusradio.com/>  
 Phone: 1-888-539-SIRIUS (1-888-539-7474)



 
- Status messages appear on the front panel display during the activation. For details, see “SIRIUS Satellite Radio” (page 44). Once the activation is finished, “SUB UPDATED” appears.

## SIRIUS Satellite Radio™ operations

**1** Press **Ⓜ**RADIO repeatedly to select “SIRIUS”.

The SIRIUS indicator lights up on the front panel display and the SIRIUS Satellite Radio information for the currently selected channel appears on the front panel display.

Light up



Channel number Channel name



- When you select “SIRIUS” as the input source, this unit automatically recalls the previously selected channel.

### Notes

- When you have not activated your subscription yet, you can only select “184” or “000”.
- If a status message or an error message appears on the front panel display, see “SIRIUS Satellite Radio” (page 44).

**2** Search for a channel by using one of the SIRIUS Satellite Radio search modes.

 
- To select a channel from the all channel list, see “All Channel Search mode” on this page.
- To select a channel by category, see “Category Search mode” on this page.
- To select the desired channel directly by entering the channel number, see “Direct number access” on this page.
- To select a channel from the preset channels, see “Calling a preset channel (Preset Search mode)” (page 28).



- You can display the SIRIUS Satellite Radio information on the front panel display (page 30).
- You can set the SIRIUS Satellite Radio preset channels (page 28).

### ■ All Channel Search mode

Press **Ⓜ**TUNING **^** / **∨** repeatedly to search for a channel within all channels.



Channel number Channel name



- You can search for a channel quickly by holding down **Ⓜ**TUNING **^** / **∨**.
- You can skip channels to the previous or next category by pressing **Ⓜ**CATEGORY **△** / **∇**.

Playback


Playback mode

FM tuning

SIRIUS Satellite Radio™ tuning

Playing back iPod™

Useful features

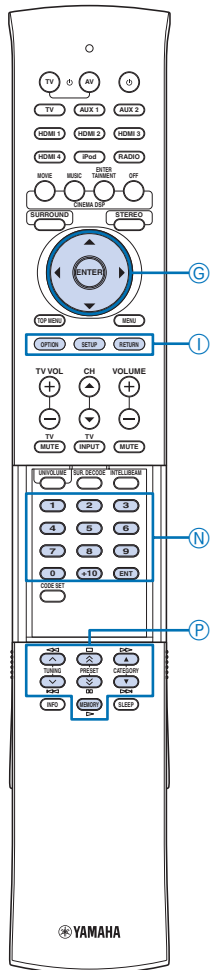


- ⒸENTER
- Ⓒ △ / ▽
- Ⓒ ◀ / ▶
- ⒾOPTION
- ⒾRETURN
- ⓃNumeric keys
- ⓃENT
- ⓅCATEGORY △ / ▽
- ⓅMEMORY
- ⓅPRESET ⤴ / ⤵
- ⓅTUNING ⤴ / ⤵

## ■ Category Search mode

- 1 Press **ⓅCATEGORY** △ / ▽ repeatedly to select the channel category.

The CATEGORY indicator lights up on the front panel display during channel category selection. When you select the category, the first channel in the category is selected.

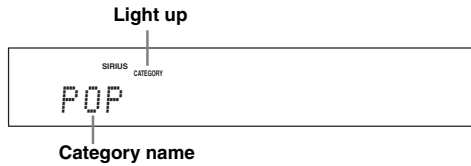

- If you do not operate within 10 seconds, the Category Search mode is automatically canceled.

- 2 While the CATEGORY indicator lights up, press **ⓅTUNING** ⤴ / ⤵ repeatedly to search for a channel within the selected channel category.

- You can search for a channel quickly by pressing and holding **ⓅTUNING** ⤴ / ⤵.

### Note

- This unit skips the channels when this unit is in the All Channel Search mode or Category Search mode in the following cases (it is not malfunction of this unit):
  - the channel is locked (page 29).
  - the channel is out of service.
  - you do not subscribe to the channel.

## ■ Direct number access

In the All Channel Search mode or Category search mode, press the **ⓃNumeric** keys to enter the desired three-digit channel number.

For example, to enter the number 123, press the **ⓃNumeric** keys as “1”, “2” and “3”.

- To display the Sirius ID number displayed on the front panel display, select channel “0”.
- To enter a one-digit or two-digit channel number, press the **ⓃNumeric** keys on the remote control and then press **ⓃENT** to confirm the input number.
- Instead of pressing **ⓃENT** to tune into the channel immediately, you can wait a few seconds until this unit confirms the entered channel number.
- If no key is pressed within a few seconds after you enter a one-digit or two-digit number, this unit automatically confirms the entered channel number.
- If the selected channel is locked, “PIN:\_\_\_” appears on the front panel display. Enter the four-digit Parental Lock code number by using the **ⓃNumeric** keys or press **ⓃENT** to cancel (page 29).
- If the selected channel is not available, an advisory message may appear. For details, see “SIRIUS Satellite Radio” (page 44) in “Troubleshooting”.

 
## Registering SIRIUS Satellite Radio™ channels

You can use this feature to store up to 40 SIRIUS Satellite Radio channels. You can then recall any preset channel easily by selecting the preset channel number as described in “Calling a preset channel (Preset Search mode)” on this page.

### ■ Registering preset channels


- 1 Search a channel you want to set as a preset channel in one of the SIRIUS Satellite Radio search modes.

For details, see “SIRIUS Satellite Radio operations” (page 27).



- 2 Press **ⓅMEMORY**.

The MEMORY indicator lights up on the front panel display.

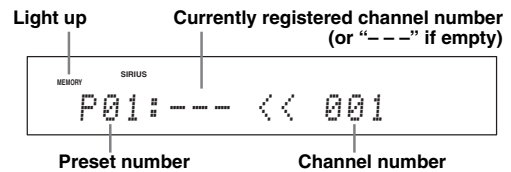

- By holding down **ⓅMEMORY** for more than 2 seconds, you can skip the following steps and automatically register the selected channel to an empty preset number (next to the lastly-registered preset number).
- To cancel the preset operation, press **ⒾRETURN**.

- 3 Press **ⓅPRESET** ⤴ / ⤵ to select a preset number to which the selected channel is registered.


- You can also select a preset number using the **ⓃNumeric** keys.
- If you select a preset number being used (currently registered channel number appears next to the preset number), the current preset channel will be overwritten.

- 4 Press **ⓅMEMORY**.

### ■ Calling a preset channel (Preset Search mode)

 Prior to selecting a preset channel in the Preset Search mode, you must preset SIRIUS channels. For details, see “Registering preset channels” on this page.

Press **ⓅPRESET** ⤴ / ⤵ repeatedly to change the preset channel number (1 to 40).




## ■ Clearing preset channels

You can clear the assignments of preset SIRIUS Satellite Radio channels.

**1 Press  $\text{OPTION}$  on the remote control.**  
The option menu for “SIRIUS” appears on the front panel display.

**2 Press  $\text{UP}$  /  $\text{DOWN}$  repeatedly to select “Clear Preset” and then press  $\text{ENTER}$ .**

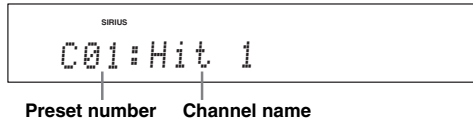

• To cancel the clearing operation, press  $\text{RETURN}$ .

**3 Press  $\text{UP}$  /  $\text{DOWN}$  to select the preset number to reset and then press  $\text{ENTER}$ .**

The selected preset number is reset. To reset another preset number, repeat step 3.

**4 To exit from the menu, press  $\text{OPTION}$ .**

## Setting the Parental Lock

You can use the Parental Lock feature to limit the access to the desired SIRIUS Satellite channels. This unit automatically skips the locked channels when this unit is in the All Channel Search mode or Category Search mode.

### ■ Setting the code number and locking channels

 
Use this feature to set the Parental Lock code number (PIN) and select the channels to be locked.

**1 Press  $\text{OPTION}$  on the remote control.**  
The option menu for “SIRIUS” appears on the front panel display.

**2 Press  $\text{UP}$  /  $\text{DOWN}$  repeatedly to select “ParentalLock” and then press  $\text{ENTER}$ .**

**3 Use  $\text{LEFT}$  /  $\text{RIGHT}$  (to select a digit to edit) and  $\text{UP}$  /  $\text{DOWN}$  (to select a number) to enter the desired 4-digit code number.**

If you have entered a code number before, enter the same code number.



The entered code number is needed for tuning in the channel or unlocking the channel. Write it down below.  
Code number: \_\_\_\_\_

**4 Press  $\text{ENTER}$ .**  
The confirmation screen appears.

**5 Press  $\text{ENTER}$  again to confirm the code number.**

 
### Note

- If a code number is already registered and you enter the different number, “Wrong” appears and the screen returns to step 3. Enter the correct code number.
- If you forget the Parental lock code or want to change it, reset it using “SIRIUS PIN” (page 41).

**6 Press  $\text{LEFT}$  /  $\text{RIGHT}$  to select the category of a channel you want to lock.**



**7 Press  $\text{UP}$  /  $\text{DOWN}$  to select a channel you want to lock.**



**8 Press  $\text{ENTER}$  to lock the selected channel.**  
You can toggle channel lock and unlock as you press  $\text{ENTER}$ .



**9 Repeat steps 6 through 8 to lock all the desired channels.**

**10 To exit from the menu, press  $\text{OPTION}$ .**

This unit is tuned into the last channel you select in the “Parental Lock” screen. If the channel is locked, this unit is tuned into “184 Weather” or “000 Sirius ID”.

### ■ Tuning into the locked channels

Tune into the channel with direct number access (page 28) or Preset Search mode (page 28). When you tune into the locked channel, “LOCKED CH” appears on the front panel display, followed by the following message. Enter the Parental lock code by using the  $\text{NUMERIC}$  keys. To cancel this operation, press  $\text{EXIT}$ .



### Note

- If an incorrect number is entered, “Wrong” appears on the front panel display and this unit is tuned into the previously selected channel.

Playback


Playback mode

FM tuning

SIRIUS Satellite  
Radio™ tuning

Playing back iPod™

Useful features

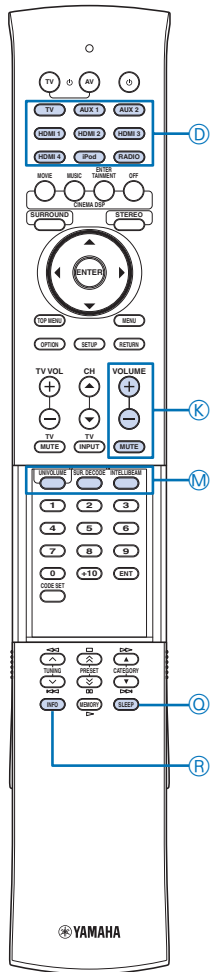


## Displaying the SIRIUS Satellite Radio™ information

Use this feature to display the SIRIUS Satellite Radio information on the front panel display.

### Note

- If a status message or an error message appears on the front panel display, see “SIRIUS Satellite Radio” (page 44).

Press **Ⓡ**INFO repeatedly to toggle the following SIRIUS Satellite Radio information display modes.

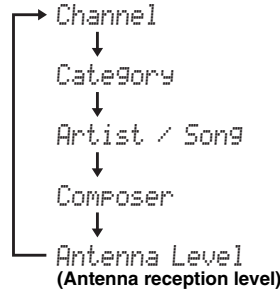

## Display example (Artist / Song)



- If the SIRIUS Satellite Radio information contains a character that cannot be recognized by this unit, the character will be displayed with a space.
- When the antenna of the SiriusConnect tuner cannot receive the signals, “ACQUIRING” appears on the front panel display.
- When an information is unavailable, “—” appears.

## Playing back iPod™/iPhone™

By using the Yamaha wireless transmitter for iPod (PDX-50TX/PDX-50BC), you can use the iPod/iPhone as a remote control and enjoy playback of your iPod/iPhone on this unit. About PDX-50TX/PDX-50BC, refer to “Safety and Accessory Information” (separate booklet). See also: “iPod Interlock” (page 39)




- This unit supports the following iPod/iPhone models.
  - iPod 5th generation
  - iPod classic
  - iPod touch
  - iPod nano
  - iPhone
  - iPhone 3G

### Notes

- Be sure to use the product only in the country in where it was purchased.
- This unit does not support iPod (4th generation or before), iPod without Dock connector, iPod photo and iPod mini.
- You cannot run the AUTO SETUP while playing back the iPod/iPhone by using PDX-50TX. To run the AUTO SETUP, stop playback and then disconnect the iPod/iPhone from PDX-50TX.

Connect your iPod/iPhone and PDX-50TX, and then start playback.

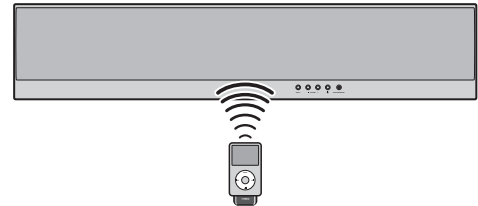

- When you start playback of your iPod/iPhone, this unit automatically operates as follows.
  - When this unit is on, this unit selects “iPod” as the input source.
  - When this unit is in the standby mode, this unit turns on and selects “iPod” as the input source.
- You can also select the input source with **Ⓧ**iPod.
- To adjust the volume level, use the volume control on the iPod/iPhone or **Ⓚ**VOLUME +/- on this unit.
- This unit automatically turns to the standby mode in the following conditions.
  - The iPod/iPhone is disconnected from PDX-50TX.
  - The iPod/iPhone is turned into sleep mode.

- Ⓧ iPod
- Ⓚ VOLUME +/-
- Ⓜ UNIVOLUME
- Ⓚ SLEEP
- Ⓡ INFO

## Useful features

### Adjusting volume level automatically (UniVolume)

This function adjusts the volume level of the TV so that it will not increase suddenly when whenever the contents being broadcast change (due to commercials, etc.).

Press **UNIVOLUME**.

The UNIVOLUME indicator lights up on the front panel display.



- To turn off the UniVolume function, press **UNIVOLUME** again.
- We recommend turning off the UniVolume function during playback of music.

### Using the HDMI™ control function

You can operate the following functions of this unit with the remote control of your TV when the TV (HDMI control function supported) is connected to the HDMI OUT jack of this unit.

- Turning on this unit or to the standby (conjunction with TV)
- Adjusting the volume
- Selecting a device to reproduce TV sounds (this unit or TV)



- Even if your TV supports the HDMI control function, some functions may not be available. For details, refer to the manual supplied with your TV.
- If you connect this unit and Blu-ray disc player or DVD player (HDMI control function supported) with HDMI, you can also control those devices with the HDMI control function. For details, refer to the manual supplied with each device.
- We suggest that you use products (TV, Blu-ray disc/DVD player, etc.) from the same manufacturer.
- The HDMI control-compatible components include Panasonic VIERA Link compatible TV, DVD player/recorder and Blu-ray disc player.

To use this function, you need to set HDMI control function and register the HDMI components to the TV.



- For some HDMI components, you only need to set the HDMI control function. Registering HDMI components to TV is not required in this case.

#### Setting the HDMI control function

**1 Turn on all devices connected to this unit with HDMI.**

**2 Enable the HDMI control function on each device.**

For this unit, set "HDMI CONTROL" to "ON" (page 39).

For external devices, refer to the manual supplied with each device.

**3 Turn off the TV and then turn on it again.**

#### Registering HDMI components to TV

**1 Select this unit as the input source of the TV.**

**2 Turn on the HDMI control device (Blu-ray disc or DVD player) connected to this unit.**

**3 Select the HDMI control device (Blu-ray disc or DVD player) as the input source of this unit to check the video input.**

#### Note


- In case the HDMI control function does not work, check the followings. Also, turning off (unplug) and turning on (plug) the TV may be effective.
  - "HDMI CONTROL" is set to "ON" on this unit (page 39).
  - The HDMI control function is enabled on the TV.
  - If you changed the connection method or connected components, repeat steps 1-3.

### Using the sleep timer

Use this feature to automatically set this unit to the standby mode after a specified period of time.

**1 Press **SLEEP** repeatedly to set the interval for the sleep timer.**

The SLEEP indicator (page 7) flashes in the front panel display while switching the interval for the sleep timer.

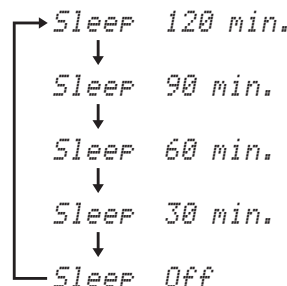

**2 Wait for a few seconds without operating this unit to confirm the setting for the sleep timer.**

The SLEEP indicator lights up in the front panel display, indicating that the sleep timer is activated.



- If this unit is set to the standby mode, the sleep timer setting is canceled.

Playback


Playback mode

FM tuning

SIRIUS Satellite  
Radio™ tuning

Playing back iPod™

Useful features

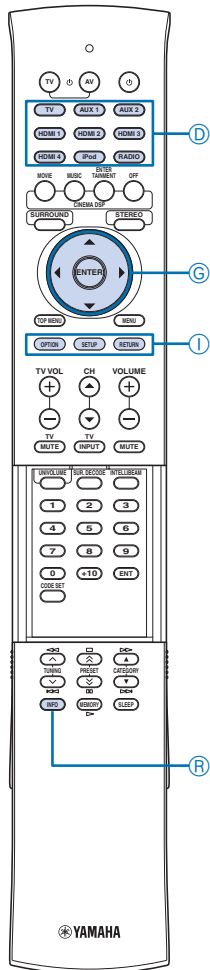

## Configuring settings for each input source (Option menu)

You can configure various settings for each input source (TV, AUX1/2, HDMI1-4, iPod, FM and SIRIUS).

Available menu items vary depending on the selected input source.

**1 Press  $\textcircled{D}$  Input selector keys to select the desired input source.**

**2 Press  $\textcircled{I}$  OPTION.**

The first item of the option menu for the selected input source appears on the front panel display.



**3 Press  $\textcircled{G}$   $\triangle$  /  $\nabla$  to select the desired menu item and then press  $\textcircled{G}$  ENTER.**

**4 Press  $\textcircled{G}$   $\leftarrow$  /  $\rightarrow$  to select the desired setting and then press  $\textcircled{G}$  ENTER.**

**5 To exit from the menu, press  $\textcircled{I}$  OPTION.**

### Option menu items

The following menu items are provided for each input source.

Input source	Menu items			
HDMI1~4	Volume Trim	Decoder Mode		
TV	Volume Trim	Decoder Mode		
AUX1~2	Volume Trim	Decoder Mode		
FM	Volume Trim	FM Mode	Auto Preset	Clear Preset
SIRIUS	Volume Trim	Clear Preset	Parental Lock	
iPod	Volume Trim			

Details of the menu items are as follows. The configuration will be reflected to the input source currently selected.



- The initial settings are marked with “\*”.

### Volume Trim (Volume trim)

Use to reduce any change in volume when switching input sources by correcting volume differences between input sources.

Adjustable range: -6.0dB to +6.0dB (in 0.5 dB steps)  
Initial setting: 0.0dB

### Decoder Mode (Decoder mode)

Use to select DTS digital audio signals for reproduction.  
Choices: Auto\*, DTS

- Select Auto to automatically select audio input signals.
- Select DTS to selects DTS signals only. Other input signals are not reproduced.

### FM Mode (FM receiving mode)

Use to set the FM broadcasting receiving mode.

Choices: Stereo\*, Mono

- Select Stereo to receive in stereo mode by priority.
- Select Mono to receive in monaural mode.

### Auto Preset (Automatic preset)

Use to automatically detect FM radio stations and registers them as preset stations (page 25).

### Clear Preset (Clear preset station)

Use to clear the preset FM stations (page 26) or preset SIRIUS Satellite Radio channels (page 29).

 
### ParentalLock (Parental lock)

Use to limit access to the desired SIRIUS Satellite Radio channels (page 29).

## Displaying the input signal information

Use to display information of the sampling frequency, video signal type, and resolution for each input source on the front panel display.

**1 Select an input source (TV, AUX1/2, and HDMI1-4) and then press  $\textcircled{R}$  INFO.**



**2 Press  $\textcircled{R}$  INFO repeatedly to change items to be displayed.**

### Sampling frequency (Audio Sampling)

The sampling frequency per second in analog- to-digital conversion.

### Video signal (Video Signal In)

Signal type and resolution of video input signal.

$\textcircled{D}$  Input selector keys

$\textcircled{G}$  ENTER

$\textcircled{G}$   $\triangle$  /  $\nabla$

$\textcircled{G}$   $\leftarrow$  /  $\rightarrow$

$\textcircled{I}$  OPTION

$\textcircled{R}$  INFO




# SETTINGS

## Customizing this unit (SET MENU)

You can manually configure various settings for this unit in “SET MENU”.


### SET MENU items

Menu	Sub menu	Features	Page
MEMORY	LOAD	Loads the beam and sound settings saved in the memory.	19
	SAVE	Saves the current beam and sound settings to the memory.	19
AUTO SETUP	BEAM+SOUND OPTIMZ	Optimizes the beam and sound settings automatically.	16
	BEAM OPTIMZ ONLY	Optimizes the beam settings automatically.	16
	SOUND OPTIMZ ONLY	Optimizes the sound settings automatically.	16
MANUAL SETUP	SETTING PARAMETERS	Adjusts the listening room and listening position settings.	34
	BEAM ADJUSTMENT	Adjusts the various sound beam settings.	35
	IMAGE LOCATION	Adjusts the sound position of the front right and left channels.	35
SOUND SET MENU	TONE CONTROL	Adjusts the output level of high-frequency or low-frequency sound.	36
	SUBWOOFER SET	Configures the subwoofer settings.	36
	AUDIO DELAY	Adjusts delay in output timing between video signals and audio signals.	36
	DRC:Dynamic Range Control	Adjusts the dynamic range.	37
	BASS EXTENSION	Selects the bass sound extension.	37
	MUSIC ENHANCER	Selects the compressed audio enhancer.	37
	CHANNEL LEVEL	Adjusts the volume of each channel.	37
SOUND OUT MENU	SOUND BEAM OUT CONFIG	Configures the sound beam output settings.	37
	SOUND OUT	Configures the audio signal output settings.	37
INPUT MENU	INPUT ASSIGNMENT	Assigns jacks according to the component to be used.	38
	INPUT RENAME	Renames the displayed input source.	38
	HDMI SETUP	Configures the HDMI settings.	39
	WIRELESS SETUP	Configures the wireless settings.	39
DISPLAY MENU	F. DISPLAY SETUP	Configures the front panel display settings.	39
	OSD SETUP	Configures the OSD settings.	40
	LANGUAGE SETUP	Changes the language used in the OSD.	40
	UNIT SETUP	Changes the display unit of measurement.	40

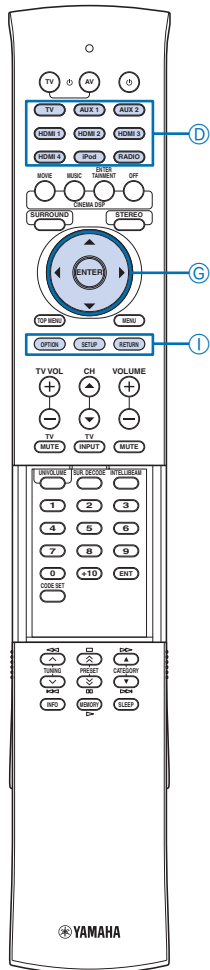


## Basic SET MENU operation

### 1 Press ①SETUP.

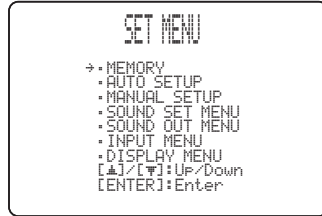

### 2 Press ② ▲ / ▼ to select the desired menu and then press ②ENTER.

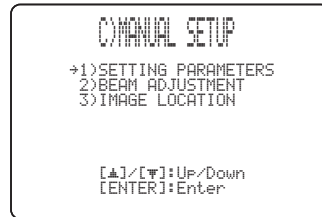

- To return to the previous menu, press ①RETURN.

### 3 Press ③ ▲ / ▼ / ◀ / ▶ and ②ENTER to configure each parameter.



- The initial settings are marked with “\*\*”.

#### Note

- The menu screen disappears if one of the ②Input selector keys is pressed while the SET MENU is being configured.

### 4 To exit from the menu, press ①SETUP.

## MANUAL SETUP

Use this menu to manually adjust the parameters related to the sound beam output. To fine-adjust parameters configured by AUTO SETUP, use “BEAM ADJUSTMENT” and “IMAGE LOCATION”.

### ■ SETTING PARAMETERS (Setting parameters)

#### SET MENU → MANUAL SETUP → SETTING PARAMETERS

Use to set the position of this unit in your listening room and the distance of this unit from the listening position.



- If you make adjustments in “SETTING PARAMETERS”, the “BEAM ADJUSTMENT” parameters are automatically adjusted.

#### Note

- If you make adjustments in “SETTING PARAMETERS”, the beam optimization settings made in the AUTO SETUP procedure will be lost.

②Input selector keys

②ENTER

③ ▲ / ▼ / ◀ / ▶

③ ▲ / ▼

③ ▼


①RETURN

①SETUP

### 1 In “SETTING PARAMETERS 1/3”, configure “INSTALLED POSITION”.

Select the installed position of this unit.

Choices: FLAT TO WALL\* (parallel to wall), ANGLE TO WALL OR CORNER (angle to wall or corner)

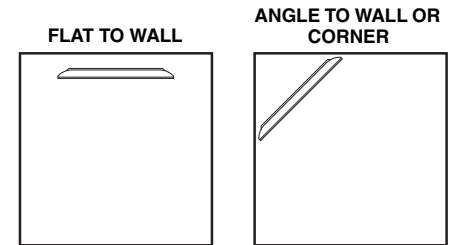

#### Note


- If you change this setting, “BEAM MODE” setting changes automatically (page 23).

### 2 Configure “INSTALLED HEIGHT”.

Specify the installed height of this unit.

Control range: 0.0 m to 3.0 m (0.0 ft to 10.0 ft)

Initial setting: 1.0 m (3.5 ft)

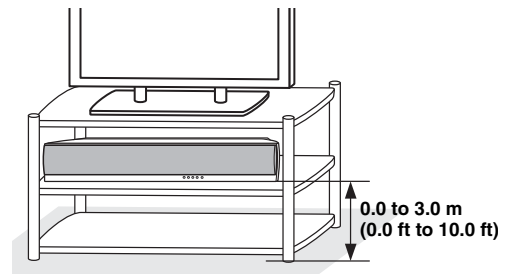


- Press ③ ▼ to proceed to the next page.

### 3 In “SETTING PARAMETERS 2/3”, configure the listening room settings.


Specify the length and width of the listening room.

Control range: 2.0 m to 12.0 m (6.5 ft to 40.0 ft)

When this unit is installed parallel to wall, specify the width of the listening room and the distance between this unit and rear wall.

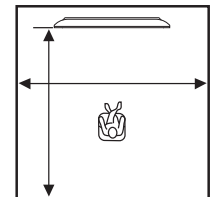

When this unit is installed at the corner of the room, specify the width of length of the listening room.

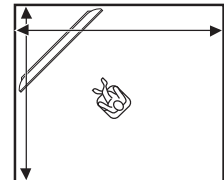


### 4 In “SETTING PARAMETERS 3/3”, configure the distance settings.

Specify the distance between the listening position and this unit. When this unit is installed parallel to wall, you also need to specify the distance between the listening position and left wall.

Control range (from this unit): 1.8 m to 9.0 m (6.0 ft to 30.0 ft)


Control range (from left wall): 0.6 m to 11.4 m (2.0 ft to 38.0 ft)

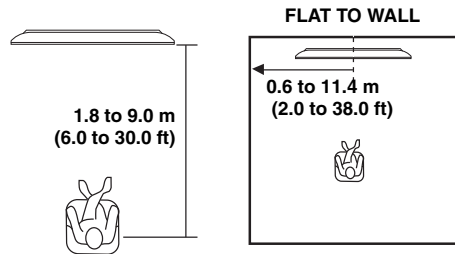

**Note**

- Configure this setting only when you have adjusted “HORIZONTAL ANGLE”.
- Control range: 0.3 m to 24.0 m (1.0 ft to 80.0 ft)

The length of each arrow indicates the beam travel length.

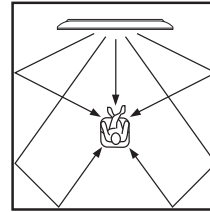

**BEAM ADJUSTMENT (Beam adjustment)**

**SET MENU → MANUAL SETUP → BEAM ADJUSTMENT**

Use to manually adjust the various sound beam settings.

**Notes**


- The “BEAM ADJUSTMENT” parameters are automatically adjusted (except “Center” in “FOCAL LENGTH”) if you run the AUTO SETUP (page 15) or if you configure “SETTING PARAMETERS” (page 34).
- Depending on the beam mode settings (page 23), some channel positions may not be available for selection. In this case, “-” is displayed.

**1 Configure “HORIZONTAL ANGLE”.**

Adjust the horizontal angle of sound beams for each channel using test tones.

Adjust toward L (left) to move the direction of the output to the left and adjust toward R (right) to move it to the right.

Control range: L90° to R90°

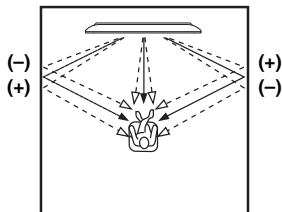


- Press to switch the channels.

**2 Configure “VERTICAL ANGLE”.**

Adjust the vertical angle of sound beams for each channel using test tones.

Adjust toward - (minus) to move the angle downward and adjust toward + (plus) to move the angle upward.

Control range: -45° to +45°

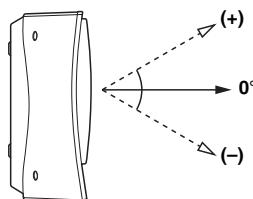


**3 Configure “BEAM TRAVEL LENGTH”.**

Adjust the distance that sound beams travel after being output and reflected off the wall until they arrive at the listening position so that all sounds can arrive at the listening position at the same time.

**4 Configure “FOCAL LENGTH”.**

Adjust the distance from the front of this unit to the focal point of output for each channel to achieve an expansive feeling for each channel. Adjust toward - (minus) to move the focus outward (widen the sweet spot) and adjust toward + (plus) to move the focus toward the normal position (narrow the sweet spot).

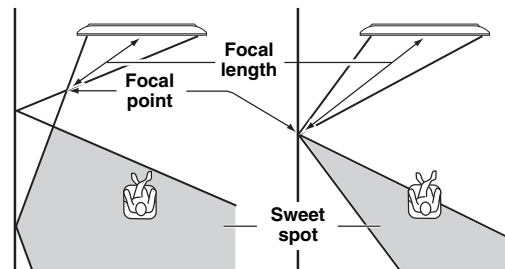


Control range: -1.0 m to +13.0 m (-3.5 ft to +43.5 ft)



- We recommend that you use the initial setting (-0.5 m or -1.5 ft) for “Center”.
- The width of the sweet spot becomes slightly wider than the width of this unit if you run the AUTO SETUP (page 15) or if you configure “SETTING PARAMETERS” (page 34).

**Example**

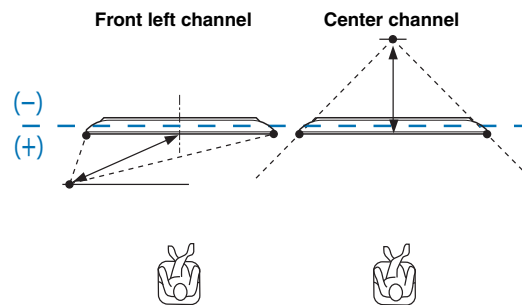

**IMAGE LOCATION (Image location)**

**SET MENU → MANUAL SETUP → IMAGE LOCATION**

Use to adjust the direction from which the front left and right channel sound is heard so that each sound can be heard closer to the center channel.

Use this feature to redirect audio signals if the sound coming from the front left and right channels seems unnatural.

Customizing this unit (SET MENU)

System configurations (ADVANCED SETUP)

Using an external amplifier

Controlling external components

You can adjust this parameter only when “5BeamPlus2”, “5 Beam” or “3 Beam” is selected in “BEAM MODE” (page 23).




- To adjust the volume of each channel, see “CHANNEL LEVEL” (page 37)

Choices: OFF\*, ON

- Select “ON” to configure the sound direction.


## 1 Adjust the image location for the front left channel (LEFT).

The higher the percentage, the louder the output from the center

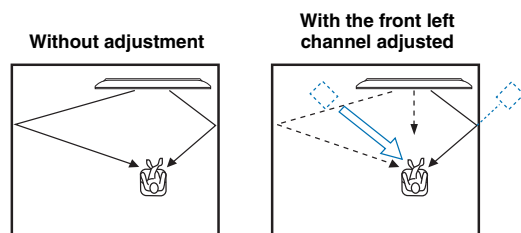

## 2 Adjust the image location for the front right channel (RIGHT).

The higher the percentage, the louder the output from the center

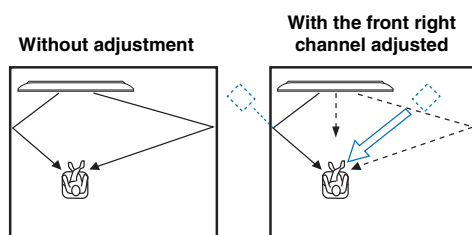

## SOUND SET MENU

### ■ TONE CONTROL (Tone control)

SET MENU → SOUND SET MENU → TONE CONTROL

Use to adjust the tonal quality of sound beams.

#### TREBLE (Treble)

Use to adjust the high-frequency response.

Choices: -10.0 dB to +10.0 dB

Initial setting: 0.0 dB

#### BASS (Bass)

Use to adjust the low-frequency response.

Choices: -10.0 dB to +10.0 dB

Initial setting: 0.0 dB

### ■ SUBWOOFER SET (Subwoofer settings)

SET MENU → SOUND SET MENU → SUBWOOFER SET

Use to configure the subwoofer settings.

#### BASS OUT (Bass out)

Select where to output low-frequency effect (LFE) and low-frequency (bass) signals.

Choices: SUBWOOFER, FRONT OR AUTO\*

- Select SUBWOOFER if you connect a subwoofer with a subwoofer cable. LFE and low-frequency signals from other channels are directed to the subwoofer.
- Select FRONT OR AUTO if you do not use a subwoofer or connect a subwoofer by wireless. LFE and low-frequency signals from other channels are directed to the front right and left channels when you do not use a subwoofer. They are directed to the subwoofer automatically when a wireless connection between a subwoofer and this unit is established properly. If the wireless connection is cut off, they are directed to the front channels automatically.

#### CROSS OVER (Crossover)

When “BASS OUT” is set to “SUBWOOFER”, you can use this feature to select a crossover (cutoff) frequency for all low-frequency signals. All frequencies below the selected frequency will be sent to the subwoofer position. Choices: 80Hz, 100Hz, 120Hz\*

#### LFE LEVEL (Low-frequency effect level)

Adjust the output level of the low-frequency effect (LFE) channel according to the capacity of your subwoofer. This setting is effective only when this unit decodes Dolby Digital or DTS signals.

Choices: -20 dB to 0 dB\*

#### DISTANCE (Distance)

Adjust the distance of the subwoofer from the listening position.

Choices: 0.3 m to 15.0 m (1.0 ft to 50.0 ft)

Initial setting: 3.0 m (10.0 ft)

### ■ AUDIO DELAY (Audio delay)

SET MENU → SOUND SET MENU → AUDIO DELAY

Use to adjust delay in output timing between video signals and audio signals.

#### AUTO LIP SYNC (Automatic lipsync)

Select whether to automatically adjust the audio output delay when a TV that supports the automatic lipsync is connected to the HDMI OUT jack of this unit.

Choices: ON\*, OFF

- Select ON if the TV connected to the HDMI OUT jack of this unit supports the automatic lipsync. The audio output delay is automatically adjusted.
- Select OFF if the TV connected to the HDMI OUT jack of this unit does not support the automatic lipsync or you want to disable the automatic lipsync. You can manually adjust the audio output delay in “HDMI”.

#### TV

Adjust the audio output delay applied to signals input from the TV jacks.

Control range: 0 msec\* to 400 msec

#### HDMI

Manually adjust the audio output delay applied to signals input from the HDMI IN jacks. This setting is effective only when “AUTO LIP SYNC” is set to “OFF”

Control range: 0 msec to 400 msec

Initial setting: 30msec

#### AUX1/2

Adjust the audio output delay applied to signals input from the AUX1/2 jacks.

Control range: 0 msec to 400 msec

Initial setting: 30msec


## ■ DRC:Dynamic Range Control (Dynamic range control)

### SET MENU → SOUND SET MENU → DRC:Dynamic Range Control

Use to adjust the dynamic range compression. Dynamic range is the difference between the smallest sound that can be heard above the noise of the equipment and the biggest sound that can be heard without distortion.

#### Adaptive DRC (Adaptive dynamic range control)

Select whether to automatically adjust the dynamic range in conjunction with the volume level. When this function is enabled, the dynamic range is adjusted as follows.  
When the volume level is low: Narrow the dynamic range. Loud sound is played back softer, and soft sound which is hard to be listened to is played back louder.  
When the volume level is high: Widen the dynamic range. From soft sound to loud sound, source sound is played back without adjusting volume.

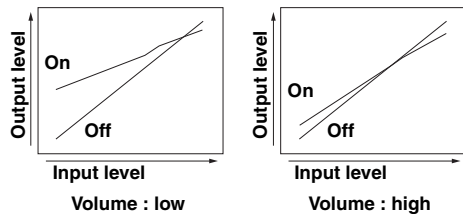

Choices: On\*, Off

- Select On to enable the adaptive dynamic range control.
- Select Off to disable the adaptive dynamic range control.



- “Dolby/DTS DRC” is automatically set to “Max” when “Off” is selected.
- This setting is automatically set to “Off” when the UniVolume function is turned on while this setting is automatically set to “On” when the UniVolume function is turned off.

#### Dolby/DTS DRC (Dynamic range of Dolby Digital and DTS signals)

Select the amount of dynamic range applied when this unit is decoding Dolby Digital and DTS signals

Choices: Max\* (Maximum), Standard, Min/Auto (Minimum/Auto)

- Select Max to output sound without adjusting the dynamic range of the input signals.
- Select Standard to set the standard dynamic range recommended for regular home use.
- Select Min/Auto to set the dynamic range suitable for low volume or a quiet environment, such as at night, for bitstream signals except for Dolby TrueHD signals (Min) or adjust the dynamic range for Dolby TrueHD signals based on input signal information (Auto).



- “Adaptive DRC” is automatically set to “Off” when the settings other than “Max” is selected.

## ■ BASS EXTENSION (Bass extension)

### SET MENU → SOUND SET MENU → BASS EXTENSION

Use to turn on or off the bass sound extension. When this function is enabled, the BASS EXT indicator lights up on the front panel display (page 7).

Choices: OFF, MID\*, DEEP

- Select OFF to output bass sounds without change.
- Select MID to output moderately-enhanced bass sounds.
- Select DEEP to output deep bass sounds.

## ■ MUSIC ENHANCER (Music Enhancer)

### SET MENU → SOUND SET MENU → MUSIC ENHANCER

Use to turn on or off the compressed audio enhancer. When this function is enabled, the ENHANCER indicator lights up on the front panel display (page 7).

#### AUX1/2

Select whether to apply the compressed audio enhancer for playback of AUX1/2 input sources.

Choices: ON, OFF\*

- Select ON to enable the compressed audio enhancer for playback of AUX1/2 input sources.
- Select OFF to disable the compressed audio enhancer for playback of AUX1/2 input sources.

#### iPod

Select whether to apply the compressed audio enhancer to iPod/iPhone playback.

Choices: ON\*, OFF

- Select ON to enable the compressed audio enhancer for iPod/iPhone playback.
- Select OFF to disable the compressed audio enhancer for iPod/iPhone playback.

## ■ CHANNEL LEVEL (Channel level)

### SET MENU → SOUND SET MENU → CHANNEL LEVEL

Use to adjust the volume of each channel with test tones. Control range: -10.0 dB to +10.0 dB

#### Note

- Adjustable channels vary depending on the “CHANNEL OUT” setting.
- “Surround Back R” and “Surround Back L” are not adjustable when “SOUND OUT” is set to “SPEAKER”.

## SOUND OUT MENU

### ■ SOUND BEAM OUT CONFIG (Sound beam output configuration)

#### SET MENU → SOUND OUT MENU → SOUND BEAM OUT CONFIG

Use to configure the number of output channels or audio output method. For details, see “Changing the audio output method for surround playback” (page 23).

### ■ SOUND OUT (Sound output)

#### SET MENU → SOUND OUT MENU → SOUND OUT


Use to configure the audio signal output settings.

Customizing this unit (SET MENU)

System configurations (ADVANCED SETUP)

Using an external amplifier

Controlling external components

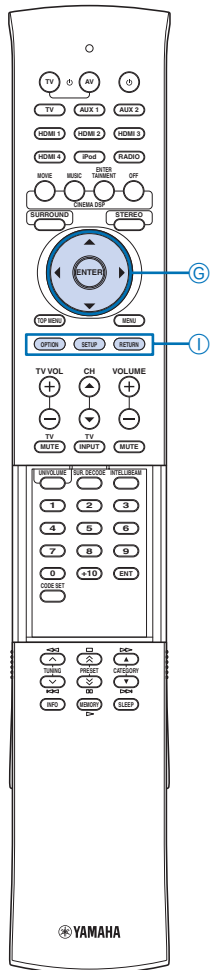

### SOUND OUT (Sound output redirection)

Use to redirect the output of audio signals. Audio output of all the channels switches simultaneously.

Choices: SPEAKER\*, PRE OUT

- Select SPEAKER to output sounds from this unit.
- Select PRE OUT to output audio signals from the PRE OUT jacks of this unit. You also need to configure the parameters from “BASS OUT” to “LFE Level” described below.



- The parameters from “BASS OUT” to “LFE Level” are settings for the PRE OUT jacks when they are selected as audio output jacks.

### BASS OUT (Bass sound output redirection)

Use to redirect the output of bass sounds. The settings under “BASS OUT” are for the PRE OUT jacks.

Choices: SUBWOOFER, FRONT\*

- Select SUBWOOFER to output bass sounds from the subwoofer.
- Select FRONT to output bass sounds from the external front right and left speakers.

### Front SP Size (Front speaker size for PRE OUT)

Select the size of external front speakers.

Choices: Small, Large\*

- Select Small if the diameter of the front speaker’s woofer is smaller than 16 cm. Low-frequency parts of front right and left channel signals are output from the subwoofer.

### Center SP Size (Center speaker size for PRE OUT)

Select the size of external center speakers.

Choices: None, Small\*

- Select None if no center speaker is used. Center channel signals are mixed into the front right and left speakers.
- Select Small if a center speaker is used. Low-frequency parts of center channel signals are output from the subwoofer (or mixed into the front right and left channel signals if subwoofer is not available).

### PRE OUT Volume (PRE OUT volume)

Adjust the output level of the PRE OUT jacks.

Control range: -30.0 dB to 0.0 dB

Initial setting: -18.0 dB

### LFE Level (Low-frequency effect level for PRE OUT)

Adjust the low-frequency effect output level of the PRE OUT jacks. This setting is effective only when this unit decodes Dolby Digital or DTS signals.

Control range: -20 dB to +0 dB\*

## INPUT MENU

### ■ INPUT ASSIGNMENT (Input assignment)

SET MENU → INPUT MENU → INPUT ASSIGNMENT

Use to change the key assignments of input jacks on this unit. The parenthesis references displayed in the menu screen indicate the initial settings.

See also: “AUDIO SELECT” (page 39)



- Press to proceed to the next page.

### AUDIO1

Select the key to which the AUDIO IN (TV) jacks are assigned.

Choices: TV\*, AUX1, AUX2, HDMI1, HDMI2, HDMI3, HDMI4

#### Note

- The input already selected in “AUDIO2” is not displayed. To set the input selected in “AUDIO2”, change “AUDIO2” parameter, and then reconfigure.

### AUDIO2

Select the key to which the AUDIO IN (AUX 1) jacks are assigned.

Choices: AUX1\*, AUX2, HDMI1, HDMI2, HDMI3, HDMI4, TV

#### Note

- The input already selected in “AUDIO1” is not displayed. To set the input selected in “AUDIO1”, change “AUDIO1” parameter, and then reconfigure.

### OPTICAL1

Select the key to which the DIGITAL IN (TV) jack is assigned.

Choices: TV\*, AUX1, AUX2, HDMI1, HDMI2, HDMI3, HDMI4

#### Note

- The input already selected in “OPTICAL2” or “COAX” is not displayed. To set the input selected in one of these parameters, change the corresponding parameter, and then reconfigure.

### OPTICAL2

Select the key to which the DIGITAL IN (AUX 1) jack is assigned.

Choices: AUX1\*, AUX2, HDMI1, HDMI2, HDMI3, HDMI4, TV

#### Note

- The input already selected in “OPTICAL1” or “COAX” is not displayed. To set the input selected in one of these parameters, change the corresponding parameter, and then reconfigure.

### COAX

Select the key to which the DIGITAL IN (AUX 2) jack is assigned.

Choices: AUX2\*, HDMI1, HDMI2, HDMI3, HDMI4, TV, AUX1

#### Note

- The input already selected in “OPTICAL1” or “OPTICAL2” is not displayed. To set the input selected in one of these parameters, change the corresponding parameter, and then reconfigure.

### ■ INPUT RENAME (Input rename)

SET MENU → INPUT MENU → INPUT RENAME

Use to change the name of the input source displayed when the input source is selected. Select a name from templates, or enter an original name.

#### Selecting a name from templates

- 1 Press to select the input source to be renamed.

ENTER

/

/

RETURN

**2 Press  $\odot$   $\triangleleft$  /  $\triangleright$  to select an input source name.**

Choices: TV, Blu-ray, DVD, HDDVD, STB, Satellite, Game

**3 To exit from the menu, press  $\odot$  RETURN.****Entering an original name****1 Press  $\odot$   $\triangle$  /  $\nabla$  to select the input source to be renamed.****2 Press  $\odot$  ENTER.**

“ $\nabla$ ” appears above the new name display to indicate the position to be entered.

**3 Press  $\odot$   $\triangleleft$  /  $\triangleright$  to place the \_ (underscore) under the space or the character you want to edit.****4 Press  $\odot$   $\triangle$  /  $\nabla$  to select the desired character.****5 Repeat steps 3 and 4 to edit other characters.****6 To complete the setting, press  $\odot$  ENTER.****7 To exit from the menu, press  $\odot$  RETURN.**

- A to Z, 0 to 9, a to z, and symbols (!, ?, <, >, etc.) are available for input.

**HDMI SETUP (HDMI setup)****SET MENU → INPUT MENU → HDMI SETUP**

Use to configure the settings related to HDMI signals and HDMI control function.

**SUPPORT AUDIO (Support audio)**

Use to select a component to play back HDMI audio signals. This setting is effective only when “HDMI CONTROL” is set to “OFF”.



- HDMI video signals input to one of the HDMI IN jacks of this unit are always output from the HDMI OUT jack.

Choices: (Model name of this unit)\*, OTHER

- Select this unit to play back HDMI audio signals on this unit.
- Select OTHER to play back HDMI audio signals on the component connected to the HDMI OUT jack.

**AUDIO SELECT (Audio select)**

Select whether or not to output HDMI audio signals input to each HDMI IN jacks. This function is useful when you want to enjoy another audio input source while watching HDMI video sources. For example, if you set “HDMI1” of “AUDIO SELECT” to “OFF” and “OPTICAL1” of “INPUT ASSIGNMENT” to “HDMI1” (page 38), you can enjoy the audio source input to the DIGITAL IN (AUX 1) jack while watching the HDMI video source input to HDMI IN 1 jack.

Choices: OFF, ON\*

**HDMI CONTROL (HDMI control)**

Use this function to link this unit and an HDMI control-compatible TV via HDMI. For details, see “Using the HDMI control function” (page 31).

Choices: OFF\*, ON

- Select OFF to turn off the HDMI control function. The standby consumption power of this unit decreases.
- Select ON to turn off the HDMI control function.

**WIRELESS SETUP (Wireless setup)****SET MENU → INPUT MENU → WIRELESS SETUP**

Use to configure the wireless connection between this unit and PDX-50TX or SWK-W10.

**Wireless Function (Wireless function)**

Select whether or not to use the wireless function of this unit.

Choices: No, Yes\*

- Select No to disable the wireless function of this unit.
- Select Yes to enable the wireless function of this unit.

**iPod Interlock (iPod interlock)**

Select whether or not to use the iPod/iPhone interlock function. When the iPod/iPhone interlock function is on, this unit automatically turns on if you turn on the iPod/iPhone when this unit is in the standby mode. In addition, this unit is set to the standby mode if the iPod/iPhone is set to the standby mode.

Choices: OFF, ON\*

- Select OFF to disable the iPod/iPhone interlock function. The standby consumption power of this unit decreases.
- Select ON to enable the iPod/iPhone interlock function.

**Group ID (Group ID)**

The group ID is used for wirelessly connecting Yamaha products that support yAired. To establish a connection among this unit, PDX-50TX and SWK-W10, set the group ID of these products to the same group.

Choices: A1\*, A2, A3, B1, B2, B3



- PDX-50TX supports “1” (A1), “2” (A2), and “3” (A3) only.

**DISPLAY MENU****F.DISPLAY SETUP (Front panel display setup)****SET MENU → DISPLAY MENU → F.DISPLAY SETUP**

Use to adjust the brightness and display settings of the front panel display.

**STANDARD DIMMER (Standard dimmer)**

Use to adjust the brightness of the front panel display when you operate this unit.

Choices: -2, -1, OFF\*

**AUTO DIMMER (Auto dimmer)**

Use to adjust the brightness of the front panel display when you do not operate this unit. The front panel display automatically dims or turns off according to this setting if no operation is performed for a specified period of time.

Choices: DISPLAY OFF, -3 to -1, OFF\*


- Select OFF for the same brightness as “STANDARD DIMMER”.
- Select -3 to -1 to get dimmer (based on “STANDARD DIMMER”).
- Select DISPLAY OFF to turn off the front panel display.

Customizing this unit  
(SET MENU)

System configurations  
(ADVANCED SETUP)

Using an external amplifier

Controlling external components

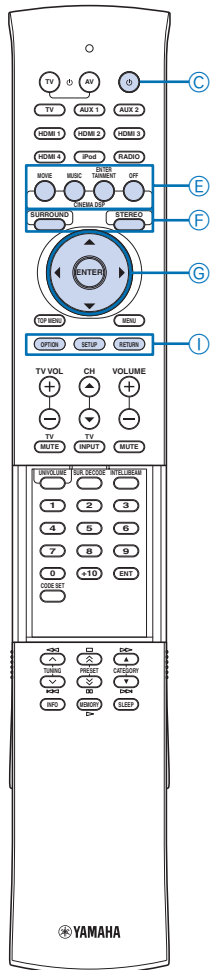

## ■ OSD SETUP (OSD setup)

### SET MENU → DISPLAY MENU → OSD SETUP

Use to adjust the display position and select the background color of the OSD.

#### OSD SHIFT (OSD shift)

Use to adjust the vertical position of the OSD. Adjust toward the – (minus) direction to raise the position of the OSD, and adjust toward the + (plus) direction to lower it.

Choices: –5 to +5  
Initial setting: ±0

#### OSD BACK COLOR (OSD background color)

Use to select the background color of the OSD.  
Choices: Blue\*, Gray, Black, Purple, Red

## ■ LANGUAGE SETUP (Language setup)

### SET MENU → DISPLAY MENU → LANGUAGE SETUP

Use to select the language used in the OSD.

Choices: ENGLISH (English), DEUTSCH (German), Français (French), ESPAÑOL (Spanish), ITALIANO (Italian), NEDERLANDS (Dutch), Русский (Russian)

Initial setting: ENGLISH (English)

## ■ UNIT SETUP (Unit Setup)

### SET MENU → DISPLAY MENU → UNIT SETUP

Use this to change the display unit of measurement.

Choices: METERS, FEET\*

- Select METERS to enter distances in meters.
- Select FEET to enter distances in feet.

#### Note

- If you change this setting, the adjusted sound beam settings may change.


## System configurations (ADVANCED SETUP)

This unit has additional menus that are displayed in the front panel display. These menus offer additional operations to adjust and customize the way this unit operates.

**1** Press **Ⓞ**Power **⏻** key to set this unit to the standby mode.

**2** While holding down **INPUT** on the front panel, press **Ⓞ**Power **⏻** key on the remote control.


Keep holding down **INPUT** until “ADVANCED SETUP” appears on the front panel display.

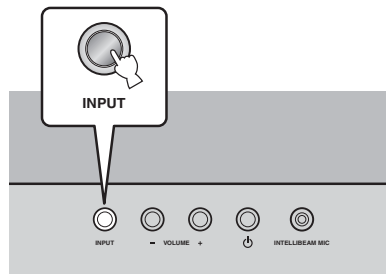

**3** Press **Ⓞ**SETUP.

**4** Press **Ⓞ** **⬅** / **➡** to select the desired menu and then press **Ⓞ**ENTER.

 Example (when “DEMO MODE” is selected)



- To return to the previous screen, press **Ⓞ**RETURN.

**5** Press **Ⓞ** **⬅** / **➡** to select the desired parameter.

**6** Press **Ⓞ**Power **⏻** key to set this unit to the standby mode.

The new setting will be reflected when you turn on this unit next time.



- The initial settings are marked with “\*”.

#### TURN ON VOLUME (Volume level at power-on)

Set the initial volume level when the power of this unit is turned on.

Control range: OFF\*, 01 to 99, MAX (Maximum)

#### MAX VOLUME SET (Maximum volume setting)

Set the maximum volume level so that this unit will not output sound beyond the limited volume level.

Control range: 01 to 99, MAX\* (Maximum)

#### PANEL INP.KEY (Front panel input key)

Select whether or not to enable the **INPUT** key on front panel key. To disable the operations, select “P.INPUT: OFF”.

Choices: P.INPUT: ON\*, P.INPUT: OFF

#### F.PANEL KEY (Front panel key)

Select whether or not to enable front panel key operations (except ADVANCED SETUP operations). To disable the operations, select “F.PANEL: OFF”.

Choices: F.PANEL: ON\*, F.PANEL: OFF

- ⓄPower
- ⓄOFF
- ⓄSTEREO
- ⓄSURROUND
- ⓄENTER
- Ⓞ **⬅** / **➡**
- Ⓞ **⬅** / **➡**
- ⓄRETURN
- ⓄSETUP



**R.INPUT POWER (Power-on by remote control input keys)**

Select whether or not to automatically turn on this unit when you select an input source on the remote control. To enable the function, select “R.INPUT PW: ON”.  
Choices: R.INPUT PW: OFF\*, R.INPUT PW: ON

**AC ON STANDBY (Standby after AC on)**

Set this unit to the standby mode when the AC power is recovered after the power to this unit was lost temporarily (disconnect the AC power plug from the wall outlet, power outage, etc.). To enable the function, select “AC STANDBY: ON”.  
Choices: AC STANDBY: OFF\*, AC STANDBY: ON

**SIRIUS PIN (SIRIUS Satellite Radio PIN)**

Reset the Parental Lock cord for SIRIUS Satellite Radio.  
Choices: CANCEL\*, RESET

**MEMORY PROTECT (Memory protect)**

Protect the settings you have saved in the system memory. To protect the settings, select “PROTECT: ON”.  
Choices: PROTECT: OFF\*, PROTECT: ON

**DEMO MODE (Demo mode)**

Test the sound beam output from this unit to experience the sound beam. To set this unit to the demo mode, select “BEAM DEMO: ON”.  
Choices: BEAM DEMO: OFF\*, BEAM DEMO: ON

- To move the beam horizontally, turn off this unit and then turn on it again (“DEMO” appears on the front panel display). Playback an input source and then press **ⓔ**OFF.
- To stop the beam movement, press **ⓔ**OFF again.
- To adjust the beam angle manually, press **ⓕ**SURROUND or **ⓕ**STEREO when the beam is not moving.




- After you checked the sound beam output, set this setting to “BEAM DEMO: OFF”.
- If you set “SOUND OUT” to “PRE OUT”, “DEMO MODE” does not function.

**FACTORY PRESET (Factory preset)**

Reset all of the parameters of this unit to the factory presets.  
Choices: CANCEL\*, RESET

## Using an external amplifier

You can connect an external amplifier to the PRE OUT jacks. Set “SOUND OUT” (page 37) to “PRE OUT” and then configure “PRE OUT BASS Management” parameters.  
See also: “Changing the audio output method for surround playback” (page 23)

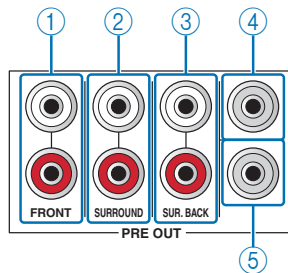**① FRONT PRE OUT jacks**

Output front right and left channel signals.

**② SURROUND PRE OUT jacks**

Output surround right and left channel signals.

**③ SUR. BACK PRE OUT jacks**

Output surround back right and left channel signals.

**④ CENTER PRE OUT jack**

Outputs center channel signals.

**⑤ SUBWOOFER PRE OUT jack**

Connect a subwoofer with a built-in amplifier.

**Note**

- The following functions are disabled when an external amplifier is used.
  - AUTO SETUP (page 15)
  - CINEMA DSP programs (page 22)
  - UniVolume (page 31)
  - MUSIC ENHANCER (page 37)
  - BASS EXTENSION (page 37)
  - Adaptive DRC (page 37)


Customizing this unit  
(SET MENU)

System  
configurations  
(ADVANCED SETUP)

Using an external  
amplifier

Controlling external  
components

## Controlling external components

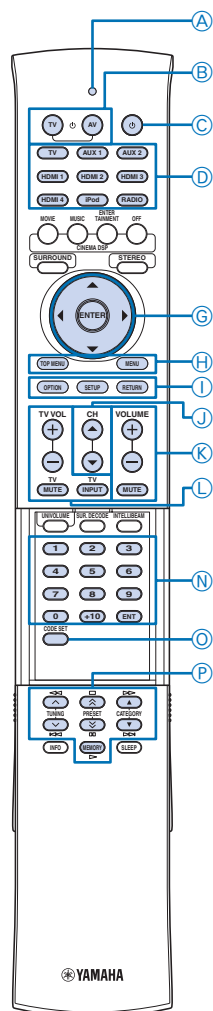

- Ⓐ Transmission indicator
- Ⓑ AV
- Ⓑ TV
- Ⓒ Power
- Ⓓ Input selector keys
- Ⓔ Cursor (▲ / ▼ / ◀ / ▶) keys
- Ⓕ ENTER
- Ⓖ MENU
- Ⓖ TOP MENU
- Ⓘ RETURN
- Ⓜ CH ▲ / ▼
- Ⓚ MUTE
- Ⓚ VOLUME +/-
- Ⓛ TV operation keys
- Ⓝ Numeric keys
- Ⓞ CODE SET
- Ⓟ External component operation keys

### Note

Depending on the external AV component you are using, you may not be able to operate the component with the remote control, even if a remote control code is set. In this case, operate the component using the supplied remote control.

You can control external components using the following keys on the remote control of this unit by setting the appropriate remote control codes (page 49). Before operating the control keys, press one of the Ⓓ Input selector keys to select an external component to be controlled.

#### Ⓑ TV ⏻

Turns on the power of your TV or set it to the standby mode.

#### Ⓑ AV ⏻

Turns on the power of the selected component or set it to the standby mode.

#### Ⓔ Cursor (▲ / ▼ / ◀ / ▶) keys, ENTER

Use to select menu items.

#### Ⓖ TOP MENU

Displays the top menu of a Blu-ray disc or DVD.

#### Ⓖ MENU

Displays the menu of a Blu-ray disc or DVD.

#### Ⓘ RETURN

Returns to the previous menu screen.

#### Ⓜ CH ▲ / ▼

Switches between available channels for your external component.

#### Ⓛ TV operation keys

##### TV VOL +/-

Adjusts the audio output level of your TV.

##### TV MUTE

Temporarily mutes audio output from your TV.

##### TV INPUT

Switched the input source for your TV.

#### Ⓝ Numeric keys

Use to enter numeric digits or specify a channel number.

#### Ⓞ CODE SET

Sets remote control codes for external component operations (page 42).

#### Ⓟ External component operation keys

Use to control playback of your external component.



The Ⓑ TV ⏻ and Ⓛ TV operation keys always work regardless of the selected input source.

### Notes

- Depending on external components, some or all operations may not work. In this case, operate the component using the supplied remote control.
- If you operate your TV with the remote control of this unit when the HDMI control function is activated, this unit or external component connected to this unit with HDMI works improperly in some cases.

### Setting remote control codes

- 1 While holding down Ⓞ CODE SET, press Ⓓ Input selector key to which the remote control code is assigned.

Ⓐ Transmission indicator flashes twice.

- 2 Release Ⓞ CODE SET.

- 3 Press Ⓝ Numeric keys to enter the remote control code (page 49) for your external component.

Each time you press you press the key,

Ⓐ Transmission indicator flashes once. Once the 5-digit remote control code is entered properly,

Ⓐ Transmission indicator lights up for approximately 2 seconds.



To clear remote control code set to a selected input source, enter "00010".

### Note

- If any key other than Ⓝ Numeric keys is pressed, Ⓐ Transmission indicator flashes 5 times and the setting mode is canceled.

- 4 Perform a test operation using the remote control of this unit.

If the external component functions correctly, the remote control code setup is successful. If it does not function correctly, the remote control code may be incorrect. Check the remote control code for your external component (page 49) and try again.

### Note

- If no operation is performed after step 1 or in the middle of step 2 within 30 seconds, Ⓐ Transmission indicator flashes 5 times and the setting mode is canceled.

### Resetting all remote control codes

- 1 While holding down Ⓞ CODE SET, press Ⓘ SETUP.

Ⓐ Transmission indicator flashes twice.

- 2 Release Ⓞ CODE SET.

- 3 Press Ⓝ Numeric keys to enter "99999".

Each time you press the Ⓝ Numeric keys,

Ⓐ Transmission indicator flashes once. Once the remote control code is entered properly,

Ⓐ Transmission indicator lights up for approximately 2 seconds and then the initialization is completed.

### Note

 
 
 
 
 
- If one of the other keys is pressed, Ⓐ Transmission indicator flashes 5 times and the initialization is canceled.

# APPENDIX

## Troubleshooting

Refer to the chart below when this unit does not function properly. If the problem you are experiencing is not listed below or if the instruction below does not help, set this unit to the standby mode, disconnect the AC power supply cable, and contact the nearest authorized Yamaha dealer or service center.

### ■ General

Problem	Cause	Remedy	See page
<b>This unit does not operate properly.</b>	The internal microcomputer has been frozen by an external electric shock (such as lightning or excessive static electricity) or by a power supply with low voltage.	Disconnect the AC power supply cable from the outlet and plug it in again after about 30 seconds.	12
<b>This unit fails to turn on when  Power ( key is pressed, or enters the standby mode soon after the power has been turned on.</b>	The AC power supply cable is not firmly connected to the AC wall outlet.	Connect the AC power supply cable firmly to the AC wall outlet.	12
	This unit has been exposed to a strong external electric shock (such as lightning and strong static electricity).	Set this unit to the standby mode, disconnect the AC power supply cable, plug it back in after 30 seconds, and use it normally.	12
<b>This unit suddenly enters the standby mode.</b>	The internal temperature becomes too high and the overheat protection circuitry has been activated.	Wait for about one hour for this unit to cool down and turn it back on.	—
	The sleep timer has turned the unit off.	Turn on the power and play back the source again.	21
<b>No sound.</b>	Incorrect input or output cable connections.	Connect the cables properly. If the problem persists, the cables may be defective.	12
	No appropriate input source has been selected.	Select an appropriate input source with INPUT or  Input selector keys.	21
	The volume is turned down.	Turn up the volume.	21
	The sound is muted.	Press  MUTE or  VOLUME +/- to resume audio output and adjust the volume level.	21
	The signals this unit cannot reproduce (such as PCM signals with more than 96 kHz of sampling frequency) are being received from the source component.	Play a source whose signals can be reproduced by this unit.	—
		Change the system settings of the source component.	—
	The HDMI components connected to this unit do not support the HDCP copy protection standards.	Connect the HDMI components that support the HDCP copy protection standards.	12
	“SUPPORT AUDIO” is set to “OTHER” and HDMI audio signals are not being played back on this unit.	Set “SUPPORT AUDIO” to this unit in “SET MENU”.	39
<b>No sound or too small sound from a specific channel</b>	The output level of the channel is muted.	Raise the output level of the channel.	37
	The beam setting is inappropriate.	Adjust the beam setting.	35
	You play back the source in the stereo mode.	Start surround playback.	22
	Some audio output methods do not output sound beams for certain channels.	Select another beam mode.	23
<b>No sound from the subwoofer.</b>	“BASS OUT” is set to “FRONT OR AUTO” in “SUBWOOFER SET”.	Set “BASS OUT” to “SUBWOOFER” in “SUBWOOFER SET”.	36
	The source does not contain low bass signals.		
<b>No sound from the subwoofer connected by wireless.</b>	The group IDs of this unit and SWK-W10 are not set to the same value.	Check whether the group IDs of this unit and SWK-W10 are set to the same value.	39
	“Wireless Function” is set to “No”.	Set “Wireless Function” to “Yes”.	39
<b>Distorted or too little bass sound.</b>	“CROSS OVER” is set incorrectly in “SUBWOOFER SET”.	Set “CROSS OVER” correctly in “SUBWOOFER SET”.	36

Customizing this unit  
(SET MENU)

System configurations  
(ADVANCED SETUP)

Using an external amplifier

Controlling external components

Problem	Cause	Remedy	See page
<b>Surround sound effects are insubstantial.</b>	The listening room is not a regular shape.	Install this unit in a square or rectangular shaped room.	—
	There is no wall in the path of the sound beam.	Try placing a flat object, such as a board, in the path of the sound beam.	—
<b>Digital audio signals cannot be played back. (DIGITAL indicator does not light up in the front panel display.)</b>	The playback component is connected to this unit with an analog connection.	Connect them with an HDMI connection or a digital connection.	12
	The external component is not set to output digital audio signals.	Refer to the owner's manual supplied with your component and check the setting.	—
	Bit streaming is disabled on the external component.	Refer to the owner's manual supplied with your component and check the setting.	—
<b>There is noise interference when a subwoofer is not connected to this unit.</b>	The protection circuitry was in operation because a source with strong bass elements was played back.	Turn down the volume level.	21
		Set "BASS OUT" to "SUBWOOFER" in "SUBWOOFER SET".	36
		Connect a subwoofer and adjust settings for "SUBWOOFER SET".	36
<b>On-screen display does not appear.</b>	The cable is not connected to the TV or this unit properly.	Connect the cable properly.	12
<b>The HDMI control function does not work properly.</b>	"HDMI CONTROL" is set to "OFF" in "SET MENU".	Set "HDMI CONTROL" to "ON" in "SET MENU".	39
	The HDMI control function is disabled on your TV.	Refer to the owner's manual supplied with your TV and check the setting.	—
	The number of the connected HDMI components is over the limit.	Disconnect some of the HDMI components.	—
<b>The automatic lipsync is not effective even "AUTO LIP SYNC" is set to "ON".</b>	The TV does not support the automatic lipsync.	Set "AUTO LIP SYNC" to "OFF" and then manually adjust the audio output delay.	36
<b>"Not Available" appears on the front panel display after key operation.</b>	The key is unable to function in the current condition.		—

## ■ FM tuner


Problem	Cause	Remedy	See page
<b>FM stereo reception is noisy.</b>	The characteristics of FM stereo broadcasts may cause this problem when the transmitter is too far away or the antenna input is poor.	Check the antenna connections.	14
		Try using a high-quality directional FM antenna.	—
		Use the manual tuning method.	25
<b>There is distortion, and clear reception cannot be obtained even with a good FM antenna.</b>	There is multi-path interference.	Adjust the antenna position to eliminate multi-path interference.	—
<b>The desired station cannot be tuned into with the automatic tuning method.</b>	The signal is too weak.	Use a high-quality directional FM antenna.	—
		Use the manual tuning method.	25
<b>Previously preset stations can no longer be tuned into.</b>	This unit has been disconnected for a long period.	Preset the stations again.	25

## ■ SIRIUS Satellite Radio

Status message	Cause	Remedy	See page
<b>ANTENNA ERR</b>	The antenna is not connected to the SiriusConnect tuner properly.	Check the connection of the antenna and SiriusConnect tuner.	26
<b>SIRIUS LOADING</b>	This unit is communicating with the SiriusConnect tuner.	The message disappears normally within several tens of seconds.	—
<b>CHECK TUNER</b>	The SiriusConnect tuner is not connected to the SIRIUS jack of this unit correctly.	Check the connection of the SiriusConnect tuner and this unit.	26
	The SiriusConnect tuner is not connected to the AC wall outlet.	Connect the power cable of the SiriusConnect tuner to the AC wall outlet.	26

Status message	Cause	Remedy	See page
<b>ACQUIRING</b>	The signal is too weak.	Adjust the orientation of the antenna of the SiriusConnect tuner. Use the "Antenna Level" information on the front panel display to check the antenna reception level.	—
<b>UPDATE</b>	The SiriusConnect tuner is updating the channel list.	Wait until the updating is complete.	—
	The period of the subscription is end.	Contact SIRIUS Satellite Radio to renew the subscription.	27
<b>FW UPDATING</b>	The SiriusConnect tuner is updating the firmware.	Wait until the updating is complete.	—
<b>SUB UPDATED</b>	The subscription information is updated.	—	—

## ■ Remote control

Problem	Cause	Remedy	See page
<b>The remote control does not work and/or function properly.</b>	Wrong distance or angle.	The remote control functions within a maximum range of 6 m (20 ft) and no more than 30 degrees off-axis from the front panel.	14
	Direct sunlight or lighting (from an inverter type of fluorescent lamp, etc.) is striking the remote control sensor of this unit.	Reposition this unit.	—
	The batteries are weak.	Replace all batteries.	14
<b>Cannot operate external components with the remote control of this unit.</b>	The external component you want to operate is not selected as the input source.	Press the desired  Input selector key to select the external component you want to operate.	42
	The remote control code was not correctly set.	Set the remote control code correctly or try another code for the same manufacturer using the "List of remote control codes".	42
	Even if the remote control code is correctly set, there are some models that do not respond to the remote control.	Use the remote control supplied with the external component.	—

## ■ iPod

Problem	Cause	Remedy	See page
<b>No sound.</b>	PDX-50TX is connected to another device.	Select the same group ID as selected on this unit.	—
	PDX-50TX and this unit are not connected since they are set to different groups.	Set both PDX-50TX and this unit to the same group.	39
	"Wireless Function" is set to "No".	Set "Wireless Function" to "Yes".	39
	Distance is too far.	Move PDX-50TX closer to this unit.	—
	There is a device (microwave oven, wireless LAN, etc.) outputting signals in 2.4 GHz frequency band nearby.	Move this unit away from the device. If the device is IEEE802.11n-compliant, change the channel setting of the device so as not to affect the unit.	—
	The iPod or iPhone is not connected to PDX-50TX firmly.	Connect the iPod or iPhone firmly.	—
	The firmware of the iPod or iPhone is not updated.	Download the latest iTunes software to update the firmware of the iPod or iPhone.	—
	The signal from PDX-50TX is blocked by your body or metallic objects, etc.	Change the way of holding, orientation, or position of PDX-50TX to avoid the object blocking the signal.	—
	The battery of iPod or iPhone is low.	Charge the iPod or iPhone.	—
	The iPod or iPhone is in the process of connecting with this unit.	Please wait for a while.	—
	The protection circuitry has been activated by excessive volume.	Turn down the volume.	21
<b>Controlling volume on the iPod or iPhone does not work.</b>	The iPod or iPhone being used is not supported by this unit.	Use an iPod or iPhone supported by this unit.	30
	The iPod or iPhone is not connected to PDX-50TX firmly.	Connect the iPod or iPhone firmly.	—

Problem	Cause	Remedy	See page
<b>Suddenly this unit produces sounds even though an iPod or iPhone is not connected.</b>	This unit is connected to another device.	Change the group ID of this unit.	39
<b>The iPod/iPhone interlock function does not work.</b>	"iPod Interlock" is set to "OFF".	Set "iPod Interlock" to "ON".	39

### ■ Dolby Digital

Dolby Digital is a digital surround sound system that gives you completely independent multi-channel audio. With 3 front channels (left, center, and right) and 2 surround stereo channels, Dolby Digital provides 5 full-range audio channels. With an additional channel especially for bass effects, called LFE (low-frequency effect), the system has a total of 5.1-channels (LFE is counted as 0.1-channel). By using 2-channel stereo for the surround channels, more accurate moving sound effects and surround sound environment are possible than with Dolby Surround. The wide dynamic range (from maximum to minimum volume) reproduced by the 5 full-range channels and the precise sound orientation generated using digital sound processing provide listeners with excitement and realism previously unheard of. With this unit, any sound environment from monaural up to a 5.1-channel configuration can be freely selected for your enjoyment.

### ■ Dolby Digital Surround EX

Dolby Digital EX creates 6 full-bandwidth output channels from 5.1-channel sources.

For the best results, Dolby Digital EX should be used with movie sound tracks recorded with Dolby Digital Surround EX. With this additional channel, you can experience more dynamic and realistic moving sound especially with scenes with “fly-over” and “fly-around” effects.

### ■ Dolby Digital Plus

Dolby Digital Plus is an advanced audio technology developed for high-definition programming and media including HD broadcasts, and Blu-ray Disc. Selected as an optional audio standard for Blu-ray Disc, this technology delivers multichannel sound with discrete channel output. Supporting bitrates up to 6.0 Mbps, Dolby Digital Plus can carry up to 7.1 discrete audio channels simultaneously. Supported by HDMI version 1.3 and designed for the optical disc players and AV receivers/amplifiers of the future, Dolby Digital Plus also remains fully compatible with the existing multichannel audio systems that incorporate Dolby Digital.

### ■ Dolby Pro Logic II

Dolby Pro Logic II is an improved technique used to decode vast numbers of existing Dolby Surround software. This new technology enables a discrete 5-channel playback with 2 front left and right channels, 1 center channel, and 2 surround left and right channels (instead of only 1 surround channel for conventional Pro Logic technology). Music and Game modes are also available for 2-channel sources in addition to the Movie mode.

### ■ Dolby Pro Logic IIx

Dolby Pro Logic IIx is a new technology enabling discrete multichannel playback from 2-channel or multi-channel sources. There are three modes available: “Music mode” for music sources, “Movie mode” for movie sources (for 2-channel sources only) and “Game mode” for game sources.

### ■ Dolby Surround

Dolby Surround uses a 4-channel analog recording system to reproduce realistic and dynamic sound effects: 2 front left and right channels (stereo), a center channel for dialog (monaural), and a surround channel for special sound effects (monaural). The surround channel reproduces sound within a narrow frequency range. Dolby Surround is widely used with nearly all video tapes and laser discs, and in many TV and cable broadcasts as well. The Dolby Pro Logic decoder built into this unit employs a digital signal processing system that automatically stabilizes the volume on each channel to enhance moving sound effects and directionality.

### ■ Dolby TrueHD

Dolby TrueHD is an advanced lossless audio technology developed for high-definition disc-based media including Blu-ray Disc. Selected as an optional audio standard for Blu-ray Disc, this technology delivers sound that is bit-for-bit identical to the studio master, offering a high-definition home theater experience. Supporting bitrates up to 18.0 Mbps, Dolby TrueHD can carry up to 8 discrete channels of 24-bit/96 kHz audio simultaneously. Dolby TrueHD also remains fully compatible with the existing multichannel audio systems and retains the metadata capability of Dolby Digital, allowing dialog normalization and dynamic range control.

### ■ DTS 96/24

DTS 96/24 offers an unprecedented level of audio quality for multichannel sound on DVD video, and is fully backward-compatible with all DTS decoders. “96” refers to a 96 kHz sampling rate compared to the typical 48 kHz sampling rate. “24” refers to 24-bit word length. DTS 96/24 offers sound quality transparent to the original 96/24 master, and 96/24 5.1-channel sound with full-quality full-motion video for music programs and motion picture soundtracks on DVD video.

### ■ DTS Digital Surround

DTS digital surround was developed to replace the analog soundtracks of movies with a 6-channel digital sound track, and is now rapidly gaining popularity in movie theaters around the world. DTS, Inc. has developed a home theater system so that you can enjoy the depth of sound and natural spatial representation of DTS digital surround in your home. This system produces practically distortion-free 6-channel sound (technically, left, right, and center channels, 2 surround channels, plus an LFE 0.1-channel as a subwoofer, for a total of 5.1 channels). The unit incorporates a DTS-ES decoder that enables 6.1-channel reproduction by adding the surround back channel to existing 5.1-channel format.

### ■ DTS Neo:6

Neo:6 decodes the conventional 2-channel sources for 6-channel playback by the specific decoder. It enables playback with the full-range channels with higher separation just like digital discrete signal playback. Two modes are available: Music mode for playing music sources and Cinema mode for movies.

### ■ DTS-HD High Resolution Audio

DTS-HD High Resolution Audio is a high resolution audio technology developed for high-definition disc-based media including Blu-ray Disc. Selected as an optional audio standard for Blu-ray Disc, this technology delivers sound that is virtually indistinguishable from the original, offering a high-definition home theater experience. Supporting bitrates up to 6.0 Mbps for Blu-ray Disc, DTS-HD High Resolution Audio can carry up to 7.1 discrete channels of 24-bit/96 kHz audio simultaneously. DTS-HD High Resolution Audio also remains fully compatible with the existing multichannel audio systems that incorporate DTS Digital Surround.

### ■ DTS-HD Master Audio

DTS-HD Master Audio is an advanced lossless audio technology developed for high-definition disc-based media including Blu-ray Disc. Selected as an optional audio standard for Blu-ray Disc, this technology delivers sound that is bit-for-bit identical to the studio master, offering a high-definition home theater experience. Supporting bitrates up to 24.5 Mbps for Blu-ray Disc, DTS-HD Master Audio can carry up to 7.1 discrete channels of 24-bit/96 kHz audio simultaneously. Supported by HDMI version 1.3 and designed

for the optical disc players and AV receivers/amplifiers of the future, DTS-HD Master Audio also remains fully compatible with the existing multichannel audio systems that incorporate DTS Digital Surround.

## ■ HDMI

HDMI (High-Definition Multimedia Interface) is the first industry-supported, uncompressed, all-digital audio/video interface. Providing an interface between any source (such as a set-top box or AV receiver) and an audio/video monitor (such as a digital television), HDMI supports standard, enhanced, or high-definition video as well as multi-channel digital audio using a single cable. HDMI transmits all ATSC HDTV standards and supports 8-channel digital audio, with bandwidth to spare to accommodate future enhancements and requirements.

When used in combination with HDCP (High-bandwidth Digital Content Protection), HDMI provides a secure audio/video interface that meets the security requirements of content providers and system operators. For further information on HDMI, visit the HDMI website at "<http://www.hdmi.org/>".

## ■ LFE 0.1-channel

This channel is for the reproduction of low bass signals. The frequency range for this channel is 20 Hz to 120 Hz. This channel is counted as 0.1 because it only enforces a low-frequency range compared to the full-range reproduction by the other 5/6 channels in Dolby Digital or DTS 5.1/6.1-channel systems.

## ■ PCM (Linear PCM)

Linear PCM is a signal format under which an analog audio signal is digitized, recorded, and transmitted without using any compression. This is used as a method of recording CDs and DVD audio. The PCM system uses a technique for sampling the size of the analog signal per very small unit of time. Standing for pulse code modulation, the analog signal is encoded as pulses and then modulated for recording.

## ■ "x.v.Color"

A color space standard supported by HDMI version 1.3. It is a more extensive color space than sRGB, and allows the expression of colors that could not be expressed before. While remaining compatible with the color gamut of sRGB standards, "x.v.Color" expands the color space and can thus produce more vivid, natural images. It is particularly effective for still pictures and computer graphics.

# Specifications

## AMP SECTION

- Maximum Output Power
  - Woofer ..... 20 W/ch (4 Ω, 100 Hz, 10% THD)
  - Small dia. speaker ..... 2 W/ch (4 Ω, 1 kHz, 10% THD)

## SPEAKER SECTION

- Speaker type ..... 2-way acoustic suspension magnetic
- Driver
  - Small dia. speakers ..... 4 cm (1-9/16 in) cone magnetic shielding type × 40
  - Woofers ..... 11 cm (4-5/16 in) cone × 2
  - Tweeters (YSP-5100 only) ..... 2.5 cm (1 in) balanced dome x 2
- Frequency response
  - YSP-5100 ..... 75 Hz to 20 kHz (-10dB, Stereo mode)
  - YSP-4100 ..... 90 Hz to 20 kHz (-10dB, Stereo mode)

## CONNECTIONS

- Input Jacks
  - TV, AUX 1 AUDIO IN ..... 2 pairs (Analog)
  - TV, AUX 1 DIGITAL IN
    - (FS=32 kHz, 44.1 kHz, 48 kHz, 64 kHz, 88.2 kHz, 96 kHz)
    - ..... 2 (Optical digital)
  - AUX 2 DIGITAL IN
    - (FS=32 kHz, 44.1 kHz, 48 kHz, 64 kHz, 88.2 kHz, 96 kHz)
    - ..... 1 (Coaxial digital)
  - AUX 1 VIDEO IN ..... 1 (Composite)
    - [U.S.A., Canada, Korea, and General models] ..... NTSC
    - [Other models] ..... PAL
  - AUX 2 VIDEO IN ..... 1 (Component)
  - HDMI IN ..... 4
- Output Jacks
  - SUBWOOFER ..... 1
  - VIDEO OUT (composite input or menu screen) ..... 1 (Composite)
    - [U.S.A., Canada, Korea, and General models] ..... NTSC
    - [Other models] ..... PAL
  - HDMI OUT ..... 1
- System Connector Jack
  - INTELLIBEAM MIC ..... 1 (Microphone input)
  - RS-232C ..... 1 (System control)
  - SYSTEM CONNECTOR ..... 1 (for subwoofer power interlock)
  - IR IN ..... 1 (System control)
  - IR-OUT ..... 1 (System control)

## FM SECTION

- Tuning Range
  - [U.S.A. and Canada models] ..... 87.5 to 107.9 MHz
  - [Other models] ..... 87.50 to 108.00 MHz

## Wireless

- Frequency ..... 2.4 GHz

## GENERAL

- Power Supply
  - [U.S.A. and Canada models] ..... AC 120 V, 60 Hz
  - [Australia model] ..... AC 220–240 V, 50/60 Hz
  - [Europe and Russia models] ..... AC 220–240 V, 50/60 Hz
  - [Korea model] ..... AC 220–240 V, 50/60 Hz
  - [General model] ..... AC 110–120 V, 50/60 Hz
  - [China and Asia models] ..... AC 220–240 V, 50/60 Hz
- Power Consumption ..... 55 W
- Standby Power Consumption
  - HDMI Control OFF/Wireless Power OFF ..... 0.5 W or less
  - HDMI Control ON/yAired ON (factory preset) ..... 1.0 W or less
- Dimensions (W x H x D)
  - YSP-5100
    - Maximum dimension ..... 1200 x 212 x 90 mm (47-1/4 x 8-3/8 x 5-5/8 in)
    - With stands ..... 1200 x 214 x 110.7mm (47-1/4 x 8-7/16 x 4-3/8 in)
  - YSP-4100
    - Maximum dimension ..... 1030 x 212 x 90 mm (40-17/32 x 8-3/8 x 5-5/8 in)
    - With stands ..... 1030 x 214 x 110.7mm (40-17/32 x 8-7/16 x 4-3/8 in)
- Weight
  - YSP-5100 ..... 11.0 kg (24.3 lbs)
  - YSP-4100 ..... 10.0 kg (22.1 lbs)

\* Specifications are subject to change without notice.

HDMI interface of this unit is based on the following standard:

- HDCP (High-bandwidth Digital Content Protection System) licensed by Digital Content Protection, LLC.



# List of remote control codes

## TV

ACCENT	14801, 16201	BASIC	00101	16701, 16801, 17801,	DUMONT	00201, 15401, 16301
ACUPHASE	16201	BASIC LINE	14701, 14801, 15701,	17901, 18101, 18201,	DURABRAND	16801, 17601, 18201
ACTION	14701, 14801, 15401		15901, 16201	18601	DUX	15701, 16201
ACURA	00101	BAUR	00401, 04601, 06701,	CITY	D-VISION	15701, 16201
ADDISON	01201, 01601, 08401		14701, 14801, 15701,	CLARION	DWIN	09201, 10101
ADMIRAL	01301, 02201, 05801,		16101, 16201	CLARIVOX	DYNAMIC	14801
	14701, 14801, 15001,	BAYSONIC	02701	CLATRONIC	DYNATECH	15401
	15201, 18601	BEAUMARK	02601		DYNATRON	15701, 16201
ADVENT	09601	BEC	14701	CLP CLASSIC	DYNEX	15701
ADYSON	14701, 15401	BECRESE	14701, 15401	COLORTYME	ECE	00401
AEA	15701, 16201	BEKO	04701, 06201, 09001,	COMPUTRON	ELBE	03501, 15001, 15701,
AGB	06801		09101, 14701, 15701,	CONCERTO		16201
AIKO	01201, 14801, 15701,	BELCOR	16201	CONCORDE	ELBIT	14701
	16201	BELL & HOWELL	16301	CONDOR	ELECS	14701
AIM	15701, 16201		02001, 14701, 18401,	CONIC	ELECTRATUNE	15401
AIWA	16901, 17101, 17701,		18601, 18701	CONRAC	ELECTRO TECH	14801
	18301	BENCHMARK-BEAUMARK		CONRAD	ELECTROBAND	00001
AKAI	00101, 00301, 02901,		14701, 14801, 15401	CONTEC	ELECTROHOME	15401, 16301, 17901,
	04601, 06801, 08901,	BEON	00401, 14701, 15701,			19001
	10501, 14701, 14801,		16201	CONTINENTAL EDISON		
	15401, 15701, 16201,	BESTAR	14701, 14801, 15701,			
	16701		15901, 16201	CORONADO		
AKIBA	15701, 16201	BESTAR-DAEWOO		COSMEL		
AKITO	15701, 16201		15901	CRAIG		
AKURA	03701, 14701, 14801,	BIGSTON	14801	CROSLEY		
	15701, 16201	BLACK DIAMOND		CROWN		
ALBA	00101, 00401, 04801,		16201			
	08501, 14701, 14801,	BLAUPUNKT	02801			
	15701, 16201	BLUE SKY	08501, 11401, 14701,			
ALFA	14701		15701, 16201	CRYSTAL		
ALLSTAR	14701, 15701, 16201	BONDSTEC	03301, 15501	CTC		
AMERICA ACTION		BPL	15701, 16201	CURTIS MATHES		
	02701	BRADFORD	02701			
AMPRO	09401	BRANDT	01701, 04201, 15801,			
AMSTRAD	00101, 00401, 02501,		16001			
	04801, 05101, 05301,	BRENDSTAR	14801			
	06801, 14801, 15001,	BRINKMANN	15701, 16201			
	15701, 16201	BRIONVEGA	14701, 15001, 15701,			
ANAM	00101, 02701, 03401,		16201			
	15701, 16201	BRIORRYEGA	14701			
ANAM NATIONAL		BROCKWOOD	15401	CXC		
	03401, 08301, 15701,	BROKSONIC	03101, 05801, 15401,	DAEWOO		
	16201		16801			
ANGLO	14801	BROKWOOD	16301			
ANITECH	00101, 14701, 14801,	BUSH	00101, 00101, 00401,			
	15401, 15701, 16201		04801, 04901, 08501,			
ANSONIC	14801, 15701, 15901,		11401, 14701, 15701,			
	16201		15901, 16101, 16201			
AOC	00101, 00301, 00901,	BYDESIGN	14301, 14401, 14501,			
	01201, 01301, 01601,		14601	DAICHI		
	02601, 02701, 05601,	CAMPLE	15401	DANSAI		
	14701, 15401, 16301,	CANDLE	00301, 15401, 16301,			
	16501, 17901		17801, 17901	DAWA		
APEX DIGITAL		CAPEHART	14701, 15401	DAYTON		
	09301, 09701, 09901	CARAD	15701, 16201	DAYTRON		
AR SYSTEM	15701, 16201	CARENA	15701, 16201			
ARC EN CIEL	16001	CARNIVALE	00301	DE GRAAF		
ARCAM	16001	CARREFOUR	14701, 15701, 16201	DECCA		
ARDEM	15701, 16201	CARVER	00801, 02401, 14701			
ARISTONA	14701, 15701, 16201	CASCADE	00101, 15701, 16201	DEITRON		
ART TECH	14701	CASIO	15701, 16101, 16201	DENON		
ASA	01401	CATHAY	00401, 14701, 15701,	DENVER		
ASBERG	14701, 15701, 16201		16201	DESMET		
ASORA	14801	CCE	00401, 15701, 16201			
ASTRA	14801, 15701, 16201	CELEBRITY	00001	DIAMANT		
ATLANTIC	14701, 15701, 16201	CELERA	09701	DIAMOND		
ATORI	14801	CENTURION	00401, 14701, 15701,	DIGATRON		
ATORO	14801		16201, 17901	DIGILINE		
AUDIOSONIC	00401, 01701, 14701,	CGE	03301, 14801, 16001	DIGISTAR		
	14801, 15701, 15901,	CGM	14801	DIGITOR		
	16201	CHANGHONG	09701	DIK		
AUDIOTON	14801	CHING TAI	00101, 01201	DIMENSIA		
AUDIOVOX	14701	CHUN YUN	00001, 00101, 01201,	DIXI		
AUTOVOX	15501, 16101		02701	DORIC		
AWA	00101, 14801, 15701,	CHUNG HSIN	00701, 01601, 02701	DTS		
	15901, 16201	CIE	14801	DUAL		
BAIRD	15801	CIMLINE	00101, 14801			
BANG & OLUFSEN		CINERAL	01201, 05601			
	07201	CIRCUIT CITY	15401			
		CITIZEN	00301, 00901, 01201,			
			14701, 15401, 16301,			

FORTRESS	01301, 15401	HARRAD	15401	18701, 18901, 19001,	LUMA	14701, 14801, 15001,	
FRABA	15701, 16201	HARVARD	02701, 15401	19101,		15701, 15901, 16201	
FRIAC	15701, 16201	HARWOOD	15701, 16201	JCB	00001	LUMATRON	15701, 16201
FRONTECH	02201, 03301, 03701,	HAUPPAUGE	15701, 16201	JEAN	00101, 00601, 01201,	LUX MAY	14701, 15701, 16201
	14801, 16101	HAVERMY	01301		02101, 03101	LUXMAN	16301, 17901
FUJITSU	08701, 10401, 15401,	HCM	00101, 05101, 14801,	JENSEN	09601, 16301, 17901,	LUXOR	04501, 04601, 15201,
	15701, 16201		15701, 16201		19501		16101
FUJITSU GENERAL		HEATHKIT	14701	JETPOINT	14701	LXI	00501, 00801, 02001,
	15001	HEDZON	15701, 16201	JINLIPU	14801		02101, 02601, 14701,
FUNAI	02501, 02701, 03701,	HELLO KITTY	05601	JMB	15701, 15901, 16201		16301, 16601, 17401,
	14801, 15401, 17201,	HEMMERMANN		JULIBEE	16201		17701, 17901, 18101,
	17701, 18201		16101	JUMBOTRONIC			18401, 18701
FUTURE	15701, 16201	HIFIVOX	16001		14701	M ELECTRONIC	00101, 00401, 01401,
FUTURETECH		HIGHLINE	15701, 16201	JVC	00701, 04801, 05801,		01501, 01701, 02201,
	02701	HILINE	14801		08401, 08701, 14701,		03801, 04401, 04901,
GALAXI	15701, 16201	HINARI	00101, 00401, 14701,		18901		06001, 14801
GALAXIS	15701, 16201		14801, 15701, 16201	KAISER	14701	M ELECTRONICS	14701, 14801
GALERIA	14801	HISAWA	05701	KAISUI	00101, 14701, 14801,	MACYS	15401
GATEWAY	13301, 13401	HISENSE	19201		15701, 16201	MADISON	15701, 16201
GBC	14801, 15901	HITACHI	00101, 00301, 01201,	KAPSCH	02201	MAGNADYNE	03301, 06801, 14701,
GE	00301, 00501, 00601,		01501, 01701, 01801,	KARCHER	07701, 14701, 14801,		14801
	01201, 02601, 02701,		02201, 02601, 03001,		15701, 16201	MAGNAFON	06801
	05601, 07101, 11801,		04501, 06101, 06901,	KATHREIN	07001, 15701, 16201	MAGNASONIC	14701, 14801, 15401
	12201, 12601, 15801,		07301, 11701, 12101,	KAWASHO	16301, 17901	MAGNAVOX	00301, 00801, 12001,
	16301, 16401, 16601,		14701, 15401, 15701,	KEC	02701		12601, 14701, 15701,
	17301, 17401, 17901,		15801, 16101, 16201,	KENDO	00401, 14701, 14801,		16201, 16301, 17201,
	18401, 18701, 19001,		16301, 17701, 17901,		15001, 15701, 16201		17801, 17901
	19101		18601, 18901	KENNEDY	15001	MAGNUM	15701, 16201
GEC	00401, 06801, 15701,	HORIZONT	14701	KENWOOD	00301, 15401, 16301,	MAJESTIC	18401, 18601, 18701
	16101, 16201	HORNYPHON	14701		17901	MANESTH	03701, 04101, 14701,
GELOSO	00101, 14801, 15901	HORNYPHONE		KIOTA	14801		15701, 16201
			15701, 16201	KITON	16201	MANHATTAN	15701, 16201
GEMSOUND	14801	HUA TUN	00101	KITON	15701	MARANTZ	00301, 00401, 00801,
GENERAL	14801	HUANYU	04901, 15901	KLH	15401		07001, 14701, 15701,
GENERAL ELECTRIC	15801	HYPER	14801, 15501	KNEISSEL	03501, 05401, 15301,		16201, 16301, 17901
GENERAL TECHNIC	14801	HYPSON	00401, 03701, 14701,		15701, 15901, 16201	MARK	00401, 14701, 15701,
	14801		14801, 15701, 16201	KOBIC	14801		15901, 16201
GENEXXA	02201, 14701, 15701,	IBERIA	15701, 16201	KOLIN	00701, 01601, 02701	MASUDA	15701, 16201
	16201	ICE	03701, 04801, 14701,	KOLSTER	14701, 15701, 16101,	MATSUI	00101, 00401, 02901,
GIBRALTER	00201, 00301, 16301		14801, 15701, 16201		16201		04801, 06301, 06801,
GITEM	14701	ICT	15701, 16201	KONICHI	14801		14701, 14801, 15701,
GM	14801	IMA	15401	KONKA	15701, 16201, 18001,		16101, 16201
GMG	14801	IMPERIAL	03301, 04701, 05201,		19401	MATSUSHITA	03401, 08301
GOLDHAND	14801		14701, 15701, 16101,	KORPEL	00401, 14701, 15701,	MAVA	15401
GOLDSTAR	00301, 00401, 01701,		16201		16201	MAXAM	14801
	02001, 02601, 05001,	INDIANA	00401, 14701, 15701,	KOSMOS	15701, 16201	MAXELL	14801
	14701, 14801, 15201,		16201	KOYODA	00101	MCE	14801
	15401, 15501, 15701,	INFINITY	00801, 14701	KTV	00301, 02701, 15401	MEDIATOR	00401, 14701, 15701,
	16201, 16301, 16501,	INGELEN	02201	KUASHO	14701, 15401		16201
	17701, 17901, 18901	INGERSOLL	14801	KUBA	16101	MEDION	08501, 10301, 11401,
GOODMANS	00401, 04801, 04901,	INNO HIT	06801, 14701, 14801,	KUBA ELECTRONIC			15701, 16201
	08201, 14701, 14801,		15201, 15701, 16201		16101	MEGATRON	01801, 02601, 16301,
	15701, 15801, 15901,	INNOHIT	14701, 14801, 15201	KURAZAI	18601		17901
	16201	INNOVA	00401	L&S ELECTRONIC		MELECTRONIC	15701, 15801, 15901,
GOREMJE	04701	INNOVATION	15701, 16201		10301		16101, 16201
GPM	14801	INSIGNIA	16801, 17001, 17201,	LEADER	14801	MEMOREX	00101, 01901, 02001,
GRADIENTE	00701, 02401, 15701,		17501, 17601, 18001,	LECSON	15701, 16201		02601, 03401, 05801,
	16201		18201, 19401, 19501	LEGEND	14801		11401, 14801, 16301,
GRADIN	14701, 14801	INTEQ	00201	LENCO	14701, 14801, 15701,		16801, 17901, 18401,
GRAETZ	02201, 04601, 15701,	INTERACTIVE			15901, 16201		18601, 18701
	16201		15701, 16201	LENOIR	14801	MEMPHIS	14801
GRANADA	00401, 02901, 04301,	INTERBUY	14801, 15701, 16201	LEVIS AUSTRIA		MERCURY	14801, 15701, 16201
	06801, 14701, 15701,	INTERDISCOUNT			15701, 16201	METZ	05501, 15701, 16201
	15801, 16201		14701	LEYCO	00401, 03701, 14701,	MGA	00301, 01901, 02601,
GRANDIN	07701, 15701, 15901,	INTERFUNK	00401, 02201, 03301,		15701, 16201		15701, 16201, 16301,
	16201		04601, 06701, 14701,	LG	00301, 00401, 00901,		16501, 17901, 18901,
GRENADIER	14801		15701, 16101, 16201		01601, 02601, 09001,		19001
GRUNDIG	00401, 02801, 06301,	INTERNAL	15701, 15901, 16201		15701, 16201, 16301,	MICROMAXX	10301, 15701, 16201
	07001, 07401, 15701,	INTERVISION	00401, 03701, 05001,		16501, 17701, 17901,	MICROSTAR	10301
	16201		14901, 15701, 16201		18901	MIDLAND	00201, 00501, 00601,
GRUNPY	02701	IRRADIO	14701, 14801, 15101,	LIESENK & TTER			15401, 16401, 16601,
GTT	14801		15201, 15501, 15701,		00401, 15701, 16201		17401, 18701
HAIER	17601, 18801		16201	LIESENK?TTER		MINATO	15701, 16201
HALLMARK	02601, 15401, 16301,	IST	14701		14701	MINERVA	06301
	17901	ISUKAI	14701, 15701, 16201	LIESENKOTTER		MINOKA	05101, 14701, 15701,
HANKOOK	00301, 02601, 02701	ITL	14801		14701, 15701, 16201		16201
HANSEATIC	00401, 04101, 04601,	ITS	04801, 14801, 15701,	LIFE	14801	MINUTZ	19101
	05201, 07001, 14701,		16201	LIFETEC	14801, 15701, 15901,	MITSUBISHI	00301, 01301, 01601,
	14801, 15301, 15701,	ITT	02201, 04601, 06901,		16201		01901, 02001, 02601,
	16101, 16201		16101	LINITRON	15401		02701, 03101, 03401,
HANTAREX	06801, 14701, 14801,	ITT NOKIA	16101	LLOYD	15401		06701, 11201, 11901,
	15701, 16201	ITV	15701, 15901, 16201	LLOYD'S	14801		14701, 14801, 15701,
HANTOR	15701, 16201	JBL	00801, 14701	LODGENET	18401, 18601, 18701		16201, 16301
HARLEY DAVIDSON	15401	JC PENNEY	16301, 16401, 16501,	LOEWE	06701, 14701, 15701,		16501, 17901, 19001
	15401		16601, 16701, 17301,		16201	MIVAR	03901, 04001, 06801,
HARMAN/KARDON	00801		17401, 17801, 17901,	LOGIK	15701, 16201, 18401,		07601, 15201, 15301
			18101, 18401, 18501,		18601, 18701	MONTGOMERY WARD	18401, 18601,

	18701		16201	PYMI	14801	SAMSUX	15401, 17901
MORGAN'S	15701, 16201	OTTO-VERSAND	14701, 14801, 14901	QUASAR	00601, 03401, 08301,	SAMTRON	16701
MOTOROLA	01301, 14701	PACIFIC	15701, 16201		16401	SANKY	15401
MTC	00301, 00901, 06701,	PAEL	15101	QUELLE	00401, 01401, 04601,	SANSEI	05601
	15401, 16101, 16301,	PALLADIUM	04701, 05201, 14701,		06701, 14701, 14801,	SANSUI	05801, 14701, 14801,
	16501, 16701, 17901,		15701, 16101, 16201		15001, 15101, 15201,		15401, 15701, 16201,
	18101	PALSONIC	15701, 16201		15401, 15501, 15701,		16801
MULTITEC	15701, 16201	PANAMA	03701, 14801, 15701,	R LINE	14701, 15701, 16201	SANYO	01401, 02001, 02701,
MULTITECH	00101, 02701, 14701,		16201	RADIALVA	15701, 16201		02901, 04301, 10201,
	14801, 15401, 15701,	PANASHIBA	14801	RADIO SHACK	15401, 15701, 16201,		14801, 15301, 15701,
	16101, 16201	PANASONIC	00401, 00601, 00801,		16301, 17701, 17901,	SAVE	15701, 16201
MUSIKLAND	15701, 16201		02201, 03401, 08301,		18401, 18701, 18901	SBR	00401, 14701, 15701,
MYRYAD	07001, 15701, 16201		12401, 14701, 15701,	RADIOLA	00401, 14701, 15701,		16201
NAD	02101, 02601, 04601,		16201, 16401		16201	SCEPTRE	20201
	11301, 16301, 17901,	PANAVISION	15701, 16201	RADIOMARELLI	06801, 15701, 16201	SCHAUB LORENZ	04601, 15901, 16101
	18101	PANAVOX	14801	RADIOSHACK	00301, 00501, 02001,	SCHNEIDER	00401, 03301, 04801,
NAIKO	15701, 16201	PANORAMA	14801		02601, 02701		08501, 14701, 14801,
NAKIMURA	15701, 15901, 16201	PATHE CINEMA	03201, 04101, 15301,	RADIOSTONE	16201		15001, 15301, 15501,
NAMSUNC	14801		16101	RADIOTONE	14701, 14801, 15701		15601, 15701, 15801,
NATIONAL	14701	PATHE MARCONI	16001	RCA	00001, 00301, 00501,	SCOTCH	02601, 16301, 17901
NEC	00101, 00301, 00601,		00101, 14801		01101, 01201, 02601,	SCOTT	02601, 02701, 03101,
	02001, 02101, 02401,	PCE/PEC	15401		08601, 11501, 11801,		15401, 16301, 17901
	02601, 05701, 06501,	PENNEY	00301, 00501, 00601,		13901, 12201, 12501,	SEARS	00501, 00801, 02001,
	13201, 14801, 15701,		00901, 02101, 02601,		12601, 12801, 15801,		02101, 02501, 02601,
	15901, 16201, 16301,	PERDIO	12201, 15401		16301, 16401		16301, 16601, 16701,
	16501, 17901	PERFEKT	04101, 15701, 16201	REALISTIC	00301, 02001, 02601,		17201, 17401, 17901,
NECKERMANN	00401, 07001, 14701,	PHILCO	00301, 00401, 00801,		14701, 14801, 15701,	SEG	18101, 18201, 18401,
	14801, 15001, 15701,		01801, 02601, 02701,		17901, 18401, 18701,		18701, 18901
	16101, 16201		03301, 05801, 13101,		17901, 18401, 18701,	SEI	03701, 08501, 14801,
NEI	00401, 14701, 15701,	PHILIPS	17801, 17901	RECOR	15701, 16201		15401, 15701, 16101,
	16201		00001, 00301, 00401,	RECORD	14701	SEI-SINUDYNE	14701, 15701, 16201
NETSAT	00401, 15701, 16201		00601, 00801, 01201,	RECTILIGNE	15701, 16201	SELECO	02201, 03501, 15001,
NEUFUNK	15701, 16201		01601, 02601, 04901,	REDIFFUSION	04601		15301
NEWAVE	00101, 01201, 01301,		07001, 08801, 12601,	REDSTAR	15701, 16201	SEMIVOX	02701
	02601		15701, 15801, 15901,	REFLEX	15701, 16201	SEMP	02101
NEWTECH	14701, 14801, 15701,		16201, 16301	REGENTE	14801	SEMUA	15401
	15801, 16201		17201, 17301, 17801,	REOC	09001	SENCORA	14801
NEXXTECH	17501		18201	REVOX	00401, 14701, 15701,	SENTRA	16101
NIKKAI	00401, 03701, 14701,	PHILIPS (F)	14701		16201	SHARP	00301, 01301, 08301,
	15401, 15701, 16201	PHOENIX	14701, 15701, 16201	REVOX/STUDER	14701		15401, 16301, 17901
NIKKO	00301, 01201, 02601,	PHONOLA	00401, 14701, 15701,	REX	02201, 03501, 03701,	SHEN YING	00101, 01201
	16301, 17901		16201		15001, 15301	SHENG CHIA	00101, 01301, 03101
NOBLEX	14801	PILOT	00301, 15701, 16201,	RFT	05201, 15301, 15701,	SHINTOSHI	15701, 16201
NOBLIKO	15101		16301		16201	SHIVAKI	14701, 15701, 15901,
NOGAMATIC	16001	PIONEER	01701, 02201, 02301,	ROADSTAR	00101, 03701, 05201,		16201
NOKIA	04601, 05901, 06001,		03801, 08601, 09501,		14801, 15701, 16201	SHOGUN	16301
	06901, 08101, 14801,		11301, 14701, 15701,	RODEX	15701, 16201	SHOW	14801
	15901, 16101		15801, 16201, 16301,	ROSITA	14801	SIAREM	06801
NONAME	14701		17901	ROWA	14801	SIEMENS	00401, 02801, 14701,
NORCENT	09301, 10801	PLANTRON	14701, 14801, 15701,	ROYAL	14801		15401, 15701, 16201
NORDMENDE	01701, 03801, 07101,		16201	RUKOPIR	15701, 16201	SIERA	15701, 16201
	15701, 15801, 16001,	POLAROID	19201, 19501, 19601	RUNCO	00201, 00301, 06501,	SIERRA	14701
	16201	POPPY	14801		07501	SIGNATURE	18401, 18601, 18701,
NORMEREL	15701, 16201	PORTLAND	01201, 15401, 15901,	SABA	01701, 02201, 03801,	SILMA	14701
NOVABEAM	14701		16301, 16501, 17901		04201, 15801, 16001	SILVA	14801, 15701, 16201
NOVATRONIC	14701, 14801, 15701,	PRANDONI PRINCE	15101	SACCS	03201	SILVER	15701, 16201
	15901, 16201	PRANDONI-PRINCE	06801	SAGEM	07701	SIMPSON	17801
NTC	01201	PRICE CLUB	16701	SAISHO	00101, 03701, 06801,	SINGER	14701, 14801, 15701,
O GENERAL	14801	PRIMA	09601, 14801, 15401,		14701		16201
OCEANIC	02201, 04601		17001, 17501	SAIVOD	15701, 16201	SINUDYNE	06801, 14701, 15001,
OKANO	14801, 15701, 16201	PRINCESS	14801	SAKURA	14801		15701, 16101, 16201
OLEVIA	19701, 19801, 19901,	PRINZ	16101	SALORA	02201, 04601, 06901,	SKANTIC	04501
	20001	PRISM	00601, 16401		15201, 16101	SKY	00401, 15701, 16201
OLYMPIC	14801	PROELCO	14701	SAMBERS	06801, 15101, 15201	SKYGIANT	02701
ONCEAS	14801	PROFEX	00101, 04601, 14801,	SAMPO	00101, 00301, 01201,	SKYWORTH	00401
ONWA	02701, 05301		14901		01301, 02001, 02501,	SNYDER	14701
OPERA	14701, 15701, 16201	PROFITRONIC	14701, 15701, 16201	SAISON	02601, 08301, 13301,	SONAVOX	02201, 15701, 16201
OPTIMUS	02001, 02301, 03401,	PROLINE	15701, 16201	SAIYOD	15701, 16201	SONIKO	15701, 16201
	08301	PROSCAN	00501, 16601, 17401,	SAKURA	14801	SONITRON	02901
OPTONICA	01301		18401, 18701	SALORA	02201, 04601, 06901,	SONNECLAIR	15701, 16201
ORBIT	14701, 15701, 16201	PROSONIC	15701, 15901, 16201		15201, 16101	SONOKO	00101, 00401, 14701,
ORIENT	14801	PROTEC	14701, 14801	SAMBERS	06801, 15101, 15201		14801, 15701, 16201
ORION	00401, 03101, 04101,	PROTECH	00101, 00401, 03301,	SAMPO	00101, 00301, 01201,	SONOLOR	02201, 02901
	05801, 06801, 14701,		03701, 05201, 08501,		01301, 02001, 02501,	SONTEC	00401, 14701, 15701,
	14801, 15401, 15701,	PROTON	15701, 16101	SAMSUNG	02601, 08301, 13301,		16201
	16201, 16801		16201		15401, 16301, 17901,	SONY	00001, 08301, 11101,
ORLINE	15701, 16201	PROTECT	16201		18901		11601, 12701, 12901,
ORMOND	15701, 16201	PROVISION	15701, 16201		18901, 20301	SOUND & VISION	15701, 16201
OSAKI	03701, 05101, 15701,	PULSAR	00201, 16301				
	15901, 16201	PULSER	14701, 14801, 15401				
OSIO	15701, 16201	PYE	14701, 15701, 15901,				
OSUME	15701, 16201		16101, 16201				
OTF	14801						
OTTO VERSAND	00401, 04101, 06701,						
	07001, 14701, 14801,						
	14901, 15501, 15601,						
	15701, 15801, 16101,						



RCA	00305, 01005, 02605, 08705	02102				LOEWE OPTA	04602
RIO	07405	AMERICAN HIGH		FISHER	01002, 01602, 05402, 06102	LOGIK	01402, 02002
ROADSTAR	05905	00302, 06402		FUJI	00202, 00302, 06402	LUXOR	00802, 01102, 01602, 04902
ROTEL	01305	AMSTRAD	00002, 04702	FUJITSU	00002, 00902	LXI	00402, 05702, 05902
SABA	06005	ANAM	00402, 01902, 02002, 02102, 02902	FUNAI	00002, 04702, 05902, 06302	M ELECTRONIC	00002, 04702
SAMSUNG	01105, 04505	ANAM NATIONAL	01902, 04502	GARRARD	00002, 06302	MAGNASONIC	04302
SANYO	02005	ANITECH	01402	GE	00302, 01202, 02002, 03502, 03702, 03802, 05502, 05602, 06402	MAGNAVOX	00002, 00302, 00502, 01502, 05602, 05902, 06402
SCHNEIDER	06005	ASA	00402, 01502	GEC	01502	MAGNIN	02002, 05502
SCOTT	05805, 06005	ASHA	02002, 05502	GENERAL	00902	MANESTH	00902, 01402
SEARS	07805	ASUKA	00402	GO VIDEO	02802	MARANTZ	00302, 01502, 04602, 05402, 05802, 06002, 06102, 06402
SHANGHAI	05805	AUDIO DYNAMICS	05402, 05802, 06002	GOLDHAND	01402	MARTA	00402, 05702
SHARP	01405	AUDIOVOX	00402, 02102, 05702	GOLDSTAR	00402, 01802, 02902, 04202, 05402, 05702, 05902	MATSUI	02602, 02702, 05002
SHERWOOD	03205	BAIRD	00002, 00602, 01602, 04902	GOODMANS	00002, 00402, 01402, 02102, 04702	MATSUSHITA	00302, 06402
SHINCO	08705	BASIC LINE	01402, 02102	GO-VIDEO	05502	MEDION	02602
SHINSONIC	00505, 08705	BEAUMARK	02002, 05502	GRADIENSTE	00002, 06302	MEI	00302, 06402
SINGER	05905	BELL & HOWELL	01602, 06102	GRAETZ	00602, 01602, 02002	MEMOREX	00002, 00302, 00402, 00502, 01002, 01102, 01602, 02002, 02202, 02602, 04202, 04702, 05502, 05702, 05902, 06102, 06302
SKYMASTER	05605	BLAUPUNKT	01902, 04602, 04802, 05102, 05302	GRANADA	01502, 01602	MEMPHIS	01402
SLIM ART	03305	BRANDT	02402	GRANADA (UK)	04602, 04802	METZ	00402, 02502, 04502, 04602, 05202
SM ELECTRONIC	02805	BRANDT ELECTRONIC	00602	GRANDIN	00002, 00402, 01402	MGA	00802, 02002
SM ELECTRONICS	05605, 05905	BROKSONIC	01702, 02602, 04402	GRUNDIG	01402, 01502, 01902, 02502, 04602	MGN TECHNOLOGY	02002, 05502
SONY	00505, 04005	BUSH	01402, 02102, 02702	HANSEATIC	00402	MINERVA	04602
STANDARD	06005	CALIX	00402, 05702	HARLEY DAVIDSON	00002, 06302	MINOLTA	00702, 06202, 06502
SUPERSCAN	07805	CANDLE	05402, 05502, 05702	HARMAN KARDON	05402	MITSUBISHI	00602, 00802, 01302, 01502, 03502, 05802, 06002, 06202
SV2000	07805	CANNON	05602, 06402	HARMAN/KARDON	01502	MOTOROLA	00302, 01102, 06402
SVA	05805	CANON	00302	HARWOOD	01402	MTC	00002, 02002, 04702, 05502, 05902, 06302
SYLVANIA	02205, 07805, 08405	CARVER	01502	HCM	01402	MULTITECH	00002, 01402, 04702, 05502, 05902, 06302
SYMPHONIC	07805, 08405, 08605	CCE	01402, 02102	HEADQUARTER	05902, 06102, 06502, 06602	MURPHY	00002, 04702
TATUNG	03205	CGE	00002, 04702	HINARI	01402, 02002, 02702, 05002	MYRYAD	01502
TEAC	01005, 02605	CIMLINE	01402	HI-Q	01002	NAD	01602
TECHNICS	00005	CINERAL	02102	HITACHI	00002, 00402, 00602, 00702, 02002, 04702, 06202	NATIONAL	01902, 04802
TENSAI	05905, 06005	CINEVISION	05702	HUGHES NETWORK SYSTEMS	00702	NEC	00302, 00402, 00602, 01102, 01302, 01602, 05402, 05802, 06002, 06102, 06602
TEVION	06005	CITIZEN	00402, 02102, 04302, 05402, 05502, 05702	HYPSON	01402	NECKERMANN	01502, 04602, 05002
THETA DIGITAL	01005	COLORTYME	05402	IMPERIAL	00002, 04702	NESCO	01402
THOMSON	00305	COLT	01402	INSIGNIA	05702	NEWAVE	00402
TOSHIBA	00105, 04605	COMBITECH	02702	INSTANT REPLAY	05902, 06402	NIKKO	00402, 05702
URBAN CONCEPTS	00105	CRAIG	00402, 01002, 01402, 02002, 05502, 05702	INTEQ	05702	NOBLEX	02002, 05502
VOXSON	05605	CROWN	01402, 02102	INTERFUNK	01502	NOBLIKO	04602
WHITE WESTINGHOUSE	08405	CURTIS MATHES	00302, 00602, 01202, 03702, 05402, 05502, 05602, 05902, 06402	ITT	00602, 01602, 02002, 04902	NOKIA	00602, 01602, 02002, 04902
XBOX	00305	CYBERNEX	02002, 05502	ITV	00402, 02102	NORDMENDE	00602, 02402
YAMAHA	00005, 00705, 00805, 04305, 04405	CYRUS	01502	JC PENNEY	05402, 05502, 05602, 05702, 05802, 06002, 06102, 06202, 06402, 06502, 06602, 06702	OCEANIC	00002, 00602
YUKAI	05605	DAEWOO	00902, 01602, 02102, 03402, 04302, 06302	JENSEN	00602, 06202, 06602	OKANO	02302, 02602
ZENITH	00105, 01205, 02905, 07405	DANSAI	01402	JVC	00602, 00902, 01302, 05402, 05802, 06002, 06102, 06602	OLYMPUS	00302, 01902, 04802, 06402
ZEUS	03305	DBX	05402, 05802, 06002	KAISUI	01402	OPTIMUS	00402, 01102, 01602, 02802, 05502, 05702
<b>BD PLAYER</b>							
DENON	01307	DE GRAAF	00702	KEC	00402, 02102	OPTONICA	05502
LG	00907	DECCA	00002, 01502, 04702	KENDO	04902	ORION	01702, 02602, 02702, 04402, 05002
LOEWE	00307	DEGRAAF	04702	KENWOOD	00602, 01302, 05402, 05802, 06002, 06102, 06602	OSAKA	04702
MARANTZ	00707	DENON	00702	KLH	01402	OSAKI	00002, 00402, 01402, 04702
ONKYO	00207	DIMENSIA	05602	KODAK	00302, 00402, 05702, 06402	OTTO VERSAND	01502
PANASONIC	00807	DUAL	00602	KOLIN	00602, 00802	PALLADIUM	00402, 00602, 01402
PHILIPS	00607	DUMONT	00002, 01502, 01602, 04702	KORPEL	01402	PANASONIC	00302, 01802, 01902, 03102, 03702, 04502, 04802, 05102, 05302, 05602, 06402
PIONEER	01007, 01107	DURABRAND	05702	LENCO	02102	PATHE MARCONI	00602
SAMSUNG	00507	DYNATECH	00002, 04702, 05902, 06302	LEYCO	01402	PENNEY	00302, 00402, 00702, 02002, 03702, 04202
SHARP	01207	ELCATECH	01402	LG	00402, 00702, 00902, 02902, 05902		
SONY	00407	ELECTROHOME	00402, 05702	LLOYD	04702, 05902, 06302		
YAMAHA	00007, 00107	ELECTROPHONIC	00402, 05702	LLOYD'S	00002		
<b>DVD RECORDER</b>							
PHILIPS	00806	EMEREX	00102	LOEWE	00402, 01502, 04502		
VICTOR	01406	EMERSON	00002, 00302, 00402, 00802, 00902, 01702, 02002, 02102, 04302, 04402, 04702, 05002, 05502, 05702, 05902, 06102, 06302, 06402				
YAMAHA	00706	ESC	02002, 02102				
<b>VCR</b>							
ADMIRAL	01102	FERGUSON	00602, 02402				
ADVENTURA	00002	FIDELITY	00002, 04702				
AIKO	02102	FINLANDIA	01502, 01602				
AIWA	00002, 00402, 02202, 02602, 02702	FINLUX	00002, 00702, 01502, 01602, 04702, 04802, 04902				
AKAI	00602, 02302, 04902, 05902, 06602	FIRSTLINE	00402, 00802, 00902,				
AKIBA	01402						
ALBA	01402, 02102, 02302, 02702						
AMERICA ACTION							

PENTAX	00702, 05402, 06202, 06502	SONIC BLUE	03002, 03102	ADELPHIA	04503	TS	00103
PERDIO	00002, 04702	SONTEC	00402	ALLEGRO	02903, 03403	TV86	03603
PHILCO	00302, 05602, 06402	SONY	00002, 00102, 00202, 00302, 03302, 04102, 04702	AMERICAST	02003	UNIKA	03703, 03803, 04303
PHILIPS	00302, 01502, 03202, 03902, 04002, 04602, 06402	STS	00702, 06202, 06402, 06502	ANTRONIX	03703, 03803	UNITED CABLE	00103
PHONOLA	01502	SUNKAI	02602	ARCHER	03703, 03803, 04003, 04303	UNIVERSAL	02903, 03703, 03803, 04003, 04303, 04603
PILOT	00402, 05702	SUNSTAR	00002, 04702	AT&T	04503	VIEWSTAR	03103, 03203, 03603, 04103
PIONEER	00702, 01302, 01502, 05802, 06002, 06202, 06702	SUNTRONIC	00002	BELL SOUTH	02003	VERIZON FIOS	05003, 05103
POLK AUDIO	01502	SYLVANIA	00002, 00302, 00802, 01502, 04702, 05602, 05902, 06302, 06402	BIRMINGHAM CABLE COMMUNICATIONS	00803	ZENITH	00003, 01503, 02003, 03403, 04303
PROFITRONIC	02002	SYMPHONIC	00002, 04702, 05902, 06302	BRITISH TELECOM	00103		
PROLINE	00002, 04702	TANDBERG	05002, 05202	CABLETENNA	03703		
PROSCAN	01202, 03802, 05602	TANDY	00002, 01602, 05902, 06102	CABLEVIEW	03703		
PROTEC	01402	TASHIKO	00002, 00402, 04702, 05702	CENTURY	04303		
PULSAR	00502	TATUNG	00002, 00602, 00902, 01302, 01502, 04702, 06602	CITIZEN	04303		
PYE	01502	TEAC	00002, 00602, 02102, 02202, 03402, 04702, 05902, 06302, 06602	COGECO	04503		
QUARTER	06102	TECHNICS	00302, 01902, 04802, 06402	COMCAST	04503		
QUARTZ	06102	TECO	00302, 00402, 00602, 01102	COMTRONICS	03103		
QUASAR	00302, 03702, 05602, 06402	TEKNIKA	00002, 00302, 00402, 04702, 05702, 05902, 06302, 06402	CONTEC	03503		
QUELLE	01502, 04602, 04802, 05002	TELEAVIA	00602	DAERYUNG	00203, 01403, 01903		
RADIO SHACK	05502, 05602, 05702, 05902, 06102, 06302, 06402	TELEFUNKEN	00602, 02402	DIRECTOR	01303		
RADIOLA	01502	TENOSAL	01402	FILMNET	01203		
RADIOSHACK	00002	TENSAI	00002	GARRARD	04303		
RADIX	00402, 05702	THOMAS	00002	GC ELECTRONICS	03803		
RANDEX	00402, 05702	THOMSON	00602, 01202, 01302, 02402	GENERAL INSTRUMENT	00103, 00803, 01303, 01703		
RCA	00302, 00702, 01202, 02002, 03502, 03702, 03802, 05502, 05602, 05702, 06202, 06402, 06502	TIVO	03202, 03302	GENERAL INSTRUMENT (GI)	02803, 04503, 04703, 04803		
REALISTIC	00002, 00302, 00402, 01002, 01102, 01602, 04702, 05502, 05602, 05702, 05902, 06102, 06302, 06402	TMK	02002, 05002, 05502	GOLDSTAR	00503		
REOC	02602	TOSHIBA	00602, 00802, 00902, 01302, 01502, 03602, 06202	HAMLIN	00303, 00703		
REPLAYTV	03002, 03102	TOTEVISION	00402, 02002, 05502, 05702	HITACHI	04703		
REX	00602	UHER	02002	JASCO	04303		
RIO	05702	UNITECH	02002, 05502	JERROLD	00103, 00803, 01303, 01703, 02803, 04203, 04703		
ROADSTAR	00402, 01402, 02002, 02102	UNIVERSUM	00002, 00402, 01502, 02002	LG	00503		
RUNCO	00502	VECTOR	00902	MAGNAVOX	03203		
SABA	00602, 02402	VECTOR RESEARCH	05402, 05802, 06002	MEMOREX	00003		
SAISHO	05002	VICTOR	00602, 01302, 05802, 06002	MNET	01203		
SAISHO	05002	VIDEO CONCEPTS	00902, 05402, 05802, 06002	MOTOROLA	00803, 01303, 01703, 02303, 02803, 04503, 04703, 04803		
SALORA	00802	VIDEOMAGIC	00402	MOVIE TIME	03603		
SAMPO	00402, 01102	VIDEOSONIC	02002, 05502	NOKIA	04903		
SAMSUNG	00902, 02002, 02802, 05502, 06202	VILLAIN	00002	NOOS	01803		
SANKY	00502, 01102	WARDS	00002, 00302, 00702, 01002, 01102, 01202, 01402, 01502, 02002, 05502, 05602, 05702, 05902, 06202, 06302, 06402, 06502	NSC	03603		
SANSUI	00002, 00602, 01302, 04402, 05802, 06002, 06602	WHITE WESTINGHOUSE	01402, 05902	OAK	03503, 03903		
SANYO	01002, 01602, 02002, 05502, 06102	XR-1000	00002, 00302, 01402, 06302, 06402	PACE	00603, 02203		
SAVILLE	02702	YAMAHA	00602, 05402, 05802, 06002, 06602	PANASONIC	00003, 00203, 00403, 02703		
SBR	01502	YAMISHI	01402	PARAGON	00003		
SCHAUB LORENZ	00002, 00602, 01602	YOKAN	01402	PHILIPS	01003, 01103, 03203, 04303		
SCHNEIDER	00002, 01402, 01502, 04702	YOKO	02002	PHILIPS-MAGNAVOX	03003, 03303		
SCOTT	00802, 00902, 01702	ZENITH	00002, 00202, 00502, 04402, 05702, 05802, 05902, 06002	PIONEER	00503, 01603, 01903		
SEARS	00002, 00302, 00402, 00702, 01002, 01602, 04202, 05702, 06102, 06202, 06402, 06502, 06702			PULSAR	00003		
SEG	02002			PVP STEREO VISUAL MATRIX	00103		
SEI	01502			QUASAR	00003		
SELECO	00602			RADIO SHACK	03003, 03303, 03403		
SEMP	00902			RCA	02403, 02503, 04303		
SHARP	01102, 03502, 05902			REALISTIC	03803		
SHINTOM	01402, 01602, 06202			REGAL	00703, 00903		
SHOGUN	05502			REMBRANDT	04703		
SIEMENS	00402, 01502, 01602, 04602			RUNCO	00003		
SIGNATURE	05902			SAGEM	01803		
SILVA	00402			SAMSUNG	00003, 00503		
SINGER	00902, 01402, 06402			SCIENTIFIC ATLANTA	00203, 01403, 01903		
SINUDYNE	01502, 05202			SHAW	04503		
				SIGNATURE	04703		
				SONY	02103		
				STARCOM	00103		
				SUPERCABLE	00803		
				TANDY	04103		
				TELE+1	01203		
				TOCOM	02803, 04203, 04403, 04803		
				TORX	00103		
				TOSHIBA	00003		
				TRANS PX	00803		

### CABLE TV TUNER

ABC	00103, 00203, 02803, 04703
-----	----------------------------

### SATELLITE TUNER

@SAT	06404
ABSAT	00104
ALBA	01404
ALPHASTAR	02504
AMSTRAD	03004
ASTON	00304, 05004
ASTRO	00604
ATSAT	06404
AVALON	01304
BLAUPUNKT	00604
BRITISH SKY BROADCASTING	03004, 05204
CANAL DIGITAL	03104
CANAL SATELLITE	03104
CANAL+	03104
CHAPARRAL	00804
CITYCOM	05304
COMAG	09004, 09104, 09704, 10104, 10304, 11604, 11704, 11804, 12004
CONNEXIONS	01304
CROSSDIGITAL	04604
CYRUS	00704
DAERYUNG	01304
DAEWOO	06304
D-BOX	02104, 04904
DIGENIUS	01104
DIRECTV	00904, 01204, 01504, 01704, 02204, 02304, 02804, 04104, 04604, 05104, 06904
DISH NETWORK SYSTEM	02604, 03704
DISHPRO	02604, 03704
DISTRATEL	00004
DMT	04004
DNT	00704, 01304
DREAM MULTIMEDIA	05804
DREAMBOX	08604, 08704, 09604, 09804, 09904, 10004, 10404, 10604
ECHOSTAR	00504, 01304, 01604, 02604, 03104, 03604, 03704, 04304
ENGEL	03804
EXPRESSVU	02604
FINLUX	01404
FOXTEL	07004, 07104, 07204, 07304, 07404
FRACARRO	03604
FTE	03404
FUBA	01304
GALAXIS	03404, 04704
GE	01504
GENERAL INSTRUMENT	03504, 08204, 08304
GOI	02604
GOLD BOX	03104
GRUNDIG	00604, 03004
HIRSCHMANN	00604, 01304
HITACHI	01404, 02804
HOUSTON	08504, 10704, 10804, 11004, 11104, 11304, 11904
HTS	02604
HUGHES NETWORK SYSTEM	

	02304, 05104, 06904	WISI	00604, 01304, 01404
HUMAX	03404, 05304	XSAT	00104
INVIDEO	03604	ZEHNDER	04004
JVC	02604	ZENITH	03304
KATHREIN	00104, 00604, 00704, 01004, 01804, 05604		
KREISELMEYER	00604		
LABGEAR	06304		
LOGIX	03804		
LORENZEN	01104		
MAGNAVOX	02004, 02204		
MANHATTAN	01404, 03804, 04204		
MARANTZ	00704		
MEDIASAT	03104		
MEMOREX	02204		
METRONIC	00004		
MITSUBISHI	02304		
MOTOROLA	03504		
MYRYAD	00704		
NEXT LEVEL	03504		
NOKIA	01404, 02104, 02404, 04904, 05704, 06804		
OCTALTV	03704		
ORBITECH	04504		
PACE	01404, 03004, 05204, 06604		
PANASONIC	00904, 01904, 03004, 06504		
PANDA	01404		
PAYSAT	02204		
PHILIPS	00204, 00704, 01404, 02004, 02204, 02304, 03104, 04104, 05104, 06904		
PIONEER	03104		
PRIMESTAR	08204, 08304		
PROMAX	01404		
PROSCAN	01204, 01504		
RADIOLA	00704		
RADIOSHACK	03504		
RADIX	01304		
RCA	00404, 01204, 01504, 03204		
RFT	00704		
SABRE	01404		
SAGEM	02904, 04804, 05904		
SAMSUNG	03804, 04604, 06004, 06204		
SAT CONTROL	06404		
SATSTATION	04204		
SCHWAIGER	04704		
SEEMANN	01304		
SIEMENS	00604		
SKY	03004, 03304, 05204, 12104, 12204, 12304		
SKY HD	12404		
SKY MASTER	07504, 07604, 07704, 07804, 07904, 08004		
SKY+ (SKY Digital +)	08104		
STARCHOICE	08204, 08304		
SM ELECTRONIC	05404		
SMART	08804, 08904, 09204, 09304, 09404, 09504, 10204, 10304, 10504, 10904, 11204, 11404, 11504		
SONY	01704, 03004, 06704		
STAR CHOICE	03504		
STRONG	06404		
TANTEC	01404		
TECHNISAT	04404, 04504		
TELESTAR	04504		
THOMSON	01404, 03104, 03904, 06104		
Tivo	08404		
TOPFIELD	05504		
TOSHIBA	02304, 02704, 06904		
TPS	02904, 05904		
ULTIMATETV	01204, 01704		
UNIDEN	02004, 02204		
UNIVERSUM	00604		
VENTANA	00704		

# Index

## ■ Numerics

2-channel source surround decode .....	24
3Beam, beam mode .....	24
5.1ch beam mode .....	23
5.1-channel source 7.1-channel decode .....	24
5Beam, beam mode .....	23
5BeamPlus2, beam mode .....	24
7.1ch beam mode .....	24

## ■ A

AC IN jack .....	8
AC ON STANDBY, ADVANCED SETUP .....	41
Activating SIRIUS Satellite Radio subscription .....	27
Adaptive DRC, Dynamic range control .....	37
Adaptive dynamic range control, Dynamic range control .....	37
Adjusting volume level automatically UniVolume .....	31
ADVANCED SETUP .....	40
Adventure. CINEMA DSP program .....	23
All Channel Search mode, SIRIUS Satellite Radio .....	27
Attaching stands, installation .....	10
Audio / video component connection .....	13
AUDIO DELAY, SOUND SET MENU .....	36
Audio delay, SOUND SET MENU .....	36
AUDIO IN jacks .....	8
Audio Sampling, input signal information .....	32
AUDIO SELECT, HDMI setup .....	39
Audio select, HDMI setup .....	39
AUTO DIMMER, Front panel display setup .....	39
Auto dimmer, Front panel display setup .....	39
AUTO LIP SYNC, Audio delay .....	36
Auto Preset, option menu .....	32
AUTO SETUP .....	15
AUTO SETUP, Error messages .....	18
Automatic lipsync, Audio delay .....	36
Automatic preset, option menu .....	32
AUX1/2, Audio delay .....	36
AV button, Remote control .....	9
AV key, controlling external component .....	42

## ■ B

BASS EXT indicator .....	7
BASS EXTENSION, SOUND SET MENU .....	37
Bass extension, SOUND SET MENU .....	37
BASS OUT, Subwoofer settings .....	36
Bass out, Subwoofer settings .....	36
Bass sound output redirection, Sound output .....	38
BEAM ADJUSTMENT, MANUAL SETUP .....	35
Beam adjustment, MANUAL SETUP .....	35
Beam mode, 5.1ch .....	23
Beam mode, 7.1ch .....	24
Blu-ray disc player connection .....	12

## ■ C

cardboard microphone stand assemble .....	16
Category Search mode, SIRIUS Satellite Radio .....	28
CENTER PRE OUT jack .....	41
Center SP Size, Sound output .....	38
Center speaker size for PRE OUT, Sound output .....	38
CH key, controlling external component .....	42
CH keys, Remote control .....	9
CHANNEL LEVEL, SOUND SET MENU .....	37
Channel level, SOUND SET MENU .....	37
CINEMA DSP indicator .....	7
CINEMA DSP program keys, Remote control .....	9
CINEMA DSP programs .....	22
Clear preset station, option menu .....	32
Clear Preset, option menu .....	32
CODE SET key, controlling external component .....	42
CODE SET key, Remote control .....	9
Concert Hall. CINEMA DSP program .....	23
Configuring input source settings .....	32
Connecting audio / video components .....	13
Connecting Blu-ray disc player .....	12

Connecting external components .....	12
Connecting FM antenna .....	13
Connecting SiriusConnect tuner .....	26
Connecting subwoofer .....	14
Connecting TV .....	12
Connections .....	12
Controlling external component .....	42
Corner installation, placement .....	11
CROSS OVER, Subwoofer settings .....	36
Crossover, Subwoofer settings .....	36
Cursor keys, controlling external component .....	42
Cursor keys, Remote control .....	9
Customizing this unit .....	33

## ■ D

Decoder indicators .....	7, 21
Decoder Mode, option menu .....	32
Decoder mode, option menu .....	32
DEMO MODE, ADVANCED SETUP .....	41
Demo mode, ADVANCED SETUP .....	41
DIGITAL IN jacks .....	8
Direct number access, SIRIUS Satellite Radio .....	28
Display language change .....	15
DISPLAY MENU .....	39
Displaying input signal information .....	32
DISTANCE, Subwoofer settings .....	36
Distance, Subwoofer settings .....	36
Dolby Digital Plus, glossary .....	47
Dolby Digital Surround EX, glossary .....	47
Dolby Digital, glossary .....	47
Dolby Pro Logic II, glossary .....	47
Dolby Pro Logic IIX, glossary .....	47
Dolby Surround, glossary .....	47
Dolby TrueHD, glossary .....	47
Dolby/DTS DRC, Dynamic range control .....	37
Drama. CINEMA DSP program .....	23
DRC:Dynamic Range CTRL, SOUND SET MENU .....	37
DTS 96/24, glossary .....	47
DTS Digital Surround, glossary .....	47
DTS Neo:6, glossary .....	47
DTS-HD High Resolution Audio, glossary .....	47
DTS-HD Master Audio, glossary .....	47
Dynamic range control, SOUND SET MENU .....	37
Dynamic range of Dolby Digital and DTS signals, Dynamic range control .....	37

## ■ E

ENHANCER indicator .....	7
ENTER key, controlling external component .....	42
ENTER key, Remote control .....	9
ENTERTAINMENT. CINEMA DSP program .....	23
Entertainment. CINEMA DSP program .....	23
Error messages, AUTO SETUP .....	18
External amplifier using .....	41
External component connection .....	12
External component control .....	42
External component operation keys, controlling external component .....	42
External component operation keys, Remote control .....	9

## ■ F

F.DISPLAY SETUP, DISPLAY MENU .....	39
F.PANEL KEY, ADVANCED SETUP .....	40
FACTORY PRESET, ADVANCED SETUP .....	41
Factory preset, ADVANCED SETUP .....	41
FM antenna connection .....	13
FM ANTENNA jack .....	8
FM Mode, option menu .....	32
FM receiving mode, option menu .....	32
FM tuner, troubleshooting .....	44
FM tuning .....	25
Frequency tuning, FM tuning .....	25
Front panel .....	6

Front panel display .....	6, 7
Front panel display setup, DISPLAY MENU .....	39
Front panel input key, ADVANCED SETUP .....	40
Front panel key, ADVANCED SETUP .....	40
FRONT PRE OUT jacks .....	41
Front SP Size, Sound output .....	38
Front speaker size for PRE OUT, Sound output .....	38

## ■ G

Game. CINEMA DSP program .....	23
General, troubleshooting .....	43
Group ID, Wireless setup .....	39

## ■ H

HDMI control function .....	31
HDMI CONTROL, INPUT MENU .....	39
HDMI control, INPUT MENU .....	39
HDMI indicator .....	7
HDMI jacks .....	8
HDMI SETUP, INPUT MENU .....	39
HDMI setup, INPUT MENU .....	39
HDMI, Audio delay .....	36
HDMI, glossary .....	48

## ■ I

IMAGE LOCATION, MANUAL SETUP .....	35
Image location, MANUAL SETUP .....	35
INFO key, Remote control .....	9
INPUT ASSIGNMENT, INPUT MENU .....	38
Input assignment, INPUT MENU .....	38
Input channel indicators .....	7, 22
INPUT key, Front panel .....	6
INPUT MENU .....	38
INPUT RENAME, INPUT MENU .....	38
Input rename, INPUT MENU .....	38
Input selector keys, Remote control .....	9
Input signal information display .....	32
Input source setting configuration .....	32
Installing batteries, remote control .....	14
IntelliBeam .....	15
INTELLIBEAM key, Remote control .....	9
INTELLIBEAM MIC jack .....	6
iPod Interlock, Wireless setup .....	39
iPod interlock, Wireless setup .....	39
iPod, troubleshooting .....	45
iPod/iPhone playback .....	30
IR IN terminal .....	8
IR-OUT terminal .....	8

## ■ J

Jazz Club. CINEMA DSP program .....	23
-------------------------------------	----

## ■ L

LANGUAGE SETUP, DISPLAY MENU .....	40
Language setup, DISPLAY MENU .....	40
LFE 0.1-channel, glossary .....	48
LFE Level, Sound output .....	38
LFE LEVEL, Subwoofer settings .....	36
Linear PCM, glossary .....	48
Loading settings .....	19
Low-frequency effect level for PRE OUT, Sound output .....	38
Low-frequency effect level, Subwoofer settings .....	36

## ■ M

MANUAL SETUP .....	34
MAX VOLUME SET, ADVANCED SETUP .....	40
Maximum volume setting, ADVANCED SETUP .....	40
Mch Stereo. CINEMA DSP program .....	23
MEMORY PROTECT, ADVANCED SETUP .....	41
Memory protect, ADVANCED SETUP .....	41
MENU key, controlling external component .....	42
MENU key, Remote control .....	9
MOVIE. CINEMA DSP program .....	23



Movie, CINEMA DSP program .....	23	SIRIUS PIN, ADVANCED SETUP .....	41	VOLUME +/- keys, Front panel .....	6
Multi-information display .....	7	SIRIUS Satellite Radio channel registration .....	28	VOLUME +/- keys, Remote control .....	9
MUSIC ENHANCER, SOUND SET MENU .....	37	SIRIUS Satellite Radio PIN, ADVANCED SETUP ...	41	Volume level at power-on, ADVANCED SETUP .....	40
Music Video, CINEMA DSP program .....	23	SIRIUS Satellite Radio subscription activation .....	27	Volume level indicator .....	7
MUSIC, CINEMA DSP program .....	23	SIRIUS Satellite Radio, troubleshooting .....	44	Volume Trim, option menu .....	32
Music, CINEMA DSP program .....	23	SIRIUS Satellite Radio™ tuning .....	26	Volume trim, option menu .....	32
MUTE key, Remote control .....	9	SiriusConnect tuner connection .....	26		
Muting audio output .....	21	SLEEP indicator .....	7	<b>W</b>	
<b>N</b>		SLEEP key, Remote control .....	9	wall mount bracket using, installation .....	10
Numeric keys, controlling external component .....	42	Sleep timer .....	31	Wireless Function, Wireless setup .....	39
Numeric keys, Remote control .....	9	SOUND BEAM OUT CONFIG, SOUND OUT MENU .....	37	Wireless function, Wireless setup .....	39
<b>O</b>		Sound beam output configuration, SOUND OUT MENU .....	37	Wireless indicators .....	7
Operation range, remote control .....	14	SOUND OUT MENU .....	37	WIRELESS SETUP, INPUT MENU .....	39
OPTION key, Remote control .....	9	SOUND OUT MENU .....	37	Wireless setup, INPUT MENU .....	39
OSD BACK COLOR, OSD setup .....	40	SOUND OUT, SOUND OUT MENU .....	37	<b>X</b>	
OSD background color, OSD setup .....	40	Sound output redirection, Sound output .....	38	x.v.Color, glossary .....	48
OSD language change .....	15	Sound output, SOUND OUT MENU .....	37		
OSD SETUP, DISPLAY MENU .....	40	SOUND SET MENU .....	36		
OSD setup, DISPLAY MENU .....	40	Specifications .....	48		
OSD SHIFT, OSD setup .....	40	Spectacle, CINEMA DSP program .....	23		
OSD shift, OSD setup .....	40	Sports, CINEMA DSP program .....	23		
<b>P</b>		ST+3BeamPlus2, beam mode .....	24		
PANEL INP.KEY, ADVANCED SETUP .....	40	Stand attachment, installation .....	10		
Parallel installation, placement .....	11	STANDARD DIMMER, Front panel display setup ...	39		
Parental lock, input signal information .....	32	Standard dimmer, Front panel display setup .....	39		
ParentalLock, input signal information .....	32	Standby after AC on, ADVANCED SETUP .....	41		
PCM indicator .....	7	STEREO key, Remote control .....	9		
PCM, glossary .....	48	Stereo+3Beam, beam mode .....	23		
Playback .....	21	Subwoofer connection .....	14		
Playing back iPod/iPhone .....	30	SUBWOOFER jack .....	8		
Power key, Ffront panel .....	6	SUBWOOFER PRE OUT jack .....	41		
Power key, Remote control .....	9	SUBWOOFER SET, SOUND SET MENU .....	36		
Power LED .....	6	Subwoofer settings, SOUND SET MENU .....	36		
Power-on by remote control input keys, ADVANCED SETUP .....	41	SUPPORT AUDIO, HDMI setup .....	39		
PRE OUT jacks .....	8	Support audio, HDMI setup .....	39		
PRE OUT Volume, Sound output .....	38	SUR, BACK PRE OUT jacks .....	41		
PRE OUT volume, Sound output .....	38	SUR.DECODE key, Remote control .....	9		
Preset tuning, FM tuning .....	25	SURROUND key, Remote control .....	9		
<b>R</b>		SURROUND PRE OUT jacks .....	41		
R.INPUT POWER, ADVANCED SETUP .....	41	System configurations .....	40		
Rack using, installation .....	10	SYSTEM CONNECTOR terminal .....	8		
Rear panel .....	8	System memory using .....	19		
RECV, Wireless indicators .....	7	<b>T</b>			
Registering SIRIUS Satellite Radio channels .....	28	Table top stand/floor stand using, installation .....	10		
Remote control .....	9	Talk Show, CINEMA DSP program .....	23		
Remote control code list .....	49	TONE CONTROL, SOUND SET MENU .....	36		
Remote control code resetting all .....	42	Tone control, SOUND SET MENU .....	36		
Remote control code setting .....	42	TOP MENU key, controlling external component .....	42		
Remote control preparation .....	14	TOP MENU key, Remote control .....	9		
Remote control sensor .....	6	Transmission indicator, Remote control .....	9		
Remote control, troubleshooting .....	45	TREBLE, Tone control .....	36		
Resetting all remote control code .....	42	Treble, Tone control .....	36		
Resolution, input signal information .....	32	TRNS, Wireless indicators .....	7		
RETURN key, controlling external component .....	42	Troubleshooting .....	43		
RETURN key, Remote control .....	9	Tuner indicators .....	7		
RS-232C terminal .....	8	Tuner operation keys, Remote control .....	9		
<b>S</b>		TURN ON VOLUME, ADVANCED SETUP .....	40		
Sampling frequency, input signal information .....	32	TV .....	36		
Satellite radio listening, SIRIUS Satellite Radio .....	26	TV button, Remote control .....	9		
Saving settings .....	19	TV connection .....	12		
Sci-Fi, CINEMA DSP program .....	23	TV INPUT key, controlling external component .....	42		
SET MENU .....	33	TV key, controlling external component .....	42		
SET MENU operation .....	34	TV MUTE key, controlling external component .....	42		
Setting Loading .....	19	TV operation keys, Remote control .....	9		
SETTING PARAMETERS, MANUAL SETUP .....	34	TV VOL +/- key, controlling external component .....	42		
Setting parameters, MANUAL SETUP .....	34	TV, Audio delay .....	36		
Setting remote control code .....	42	<b>U</b>			
Setting saving .....	19	UNIT SETUP, DISPLAY MENU .....	40		
Setting the Parental Lock, SIRIUS Satellite Radio .....	29	Unit setup, DISPLAY MENU .....	40		
SETUP key, Remote control .....	9	UNIVOLUME indicator .....	7		
SIRIUS antenna jack .....	8	UNIVOLUME key, Remote control .....	9		
SIRIUS indicators .....	7	<b>V</b>			
		VIDEO jacks .....	8		
		Video Signal In, input signal information .....	32		



This Quick Reference Guide explains steps to connect external components to this unit and start playback. For detailed operation, refer to the "Owner's Manual" in the supplied CD-ROM.


Check that you received all of the supplied accessories referring to "Supplied accessories" (page 6 of "Safety and Accessory Information" (separate booklet)). For instructions on how to operate or set the external components, refer to the owner's manual supplied with each component.

### 1 Installing this unit


#### Decide where to install this unit.

This unit uses sound beams to create surround effects (the arrows in the following diagrams indicate the images of paths of 5-channel sound beams). To achieve desired surround sound effects, install this unit where there are no objects such as furniture obstructing the path of sound beams.

When installing this unit parallel to the wall

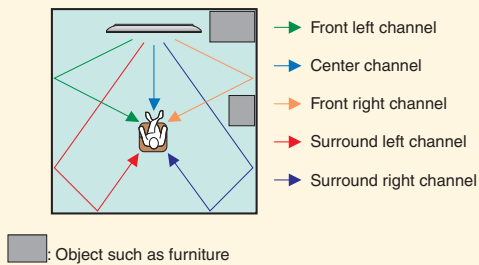


When installing this unit in the corner of a room

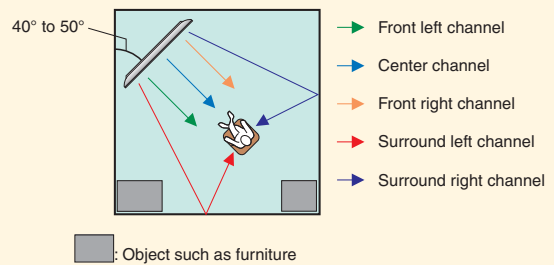


#### Attach the stands.

Attach the supplied stands to this unit as shown below. Make sure that you attach the left and right stands correctly. These stands are unnecessary if you use the optional wall mount bracket.

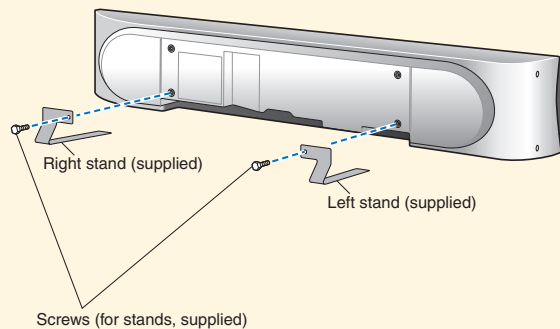

#### When installing this unit using a rack

When installing this unit, be careful not to scratch this unit, rack or floor. Depending on your installation environment, connections with external components (next step) should be done before installation.

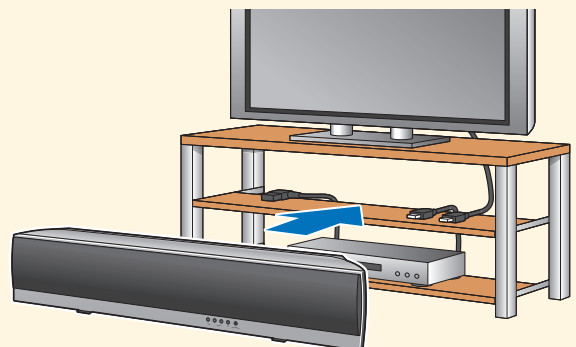


## 2 Connecting external components to this unit

### Connect your TV and Blu-ray disc player to this unit.

The rear panel illustration shows jacks and their names to help you find them easily. They are not exactly the same as the ones on the actual rear panel of this unit. Do not plug the power cable into an AC wall outlet until all connections are complete.

#### Example - A

This example shows a way to make the most of the capability of this unit. You can enjoy Blu-ray disc audio and video with higher quality via the HDMI cable. In addition, by inputting TV sounds to this unit through the optical cable, you can enjoy multi-channel audio from the TV.

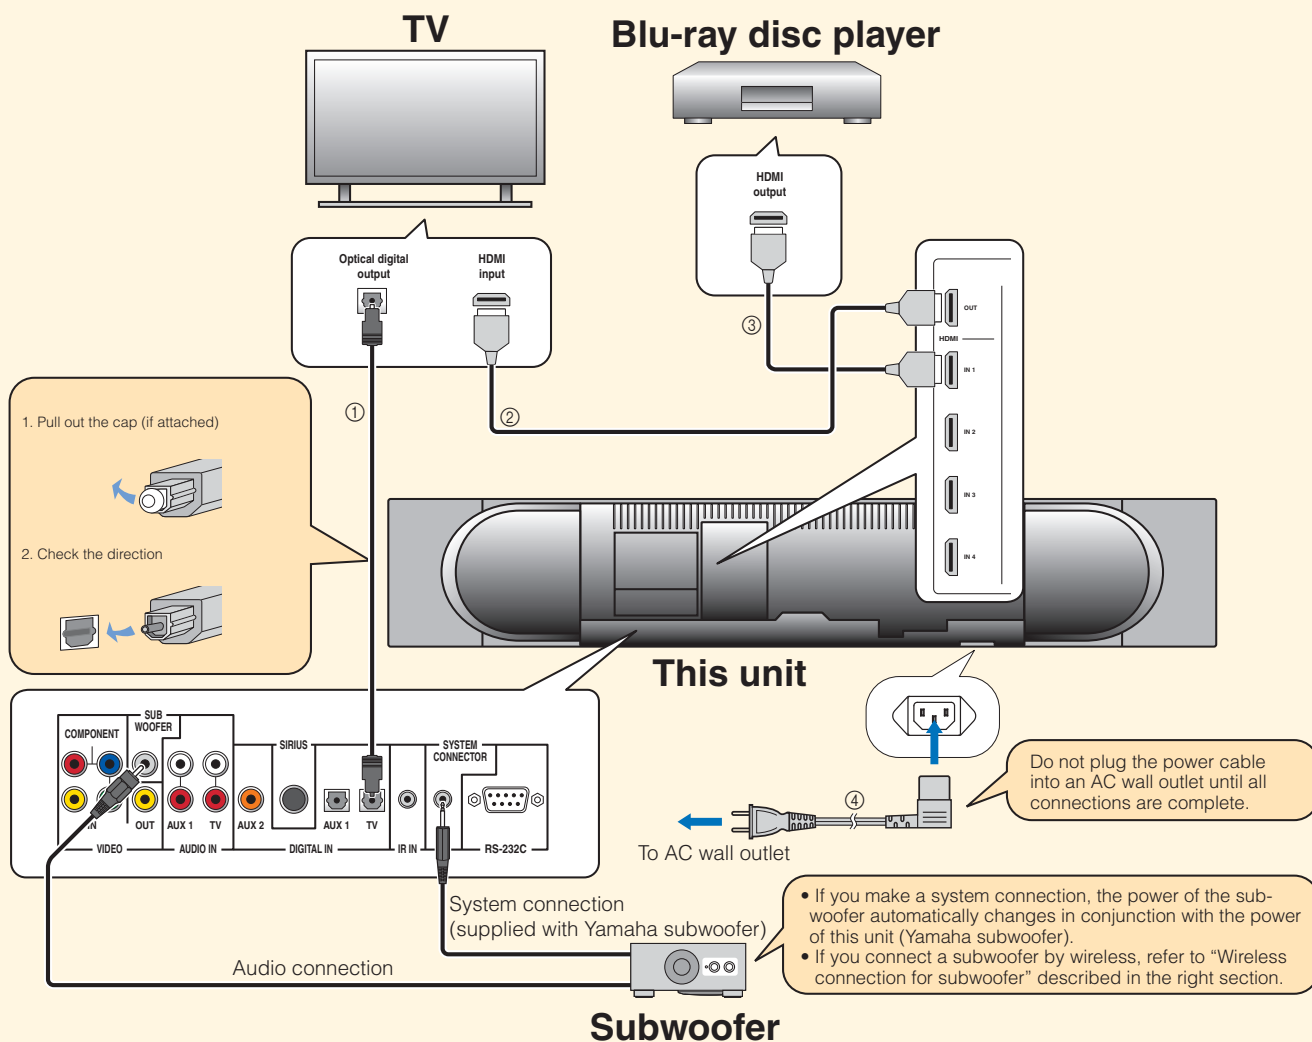

Connect cables in the order of the circled numbers.

Supplied	Sold separately
① Optical cable (to play back TV digital sounds on this unit)	② HDMI cable (to display the Blu-ray disc video and this unit's menu screen on the TV)
④ Power cable	③ HDMI cable (to input the digital audio/video signals of the Blu-ray disc to this unit)



If you connect this unit to an HDMI control-compatible TV (except some models) via HDMI, you can use the remote control supplied with your TV to turn on or off the power, select the audio output component, and adjust the volume level of this unit. For details, see "Using the HDMI control function" of "Owner's Manual" (on the supplied CD-ROM).


## 2

# Connecting external components to this unit

These examples show ways to connect additional components (such as a tuner or game console), a subwoofer by wireless, and an indoor FM antenna. Do not plug the power supply cable into an AC wall outlet until all connections are complete.


### Example - a

This example shows a way to make the most of the capability of this unit. Connect your external component to one of the HDMI IN jacks of this unit.

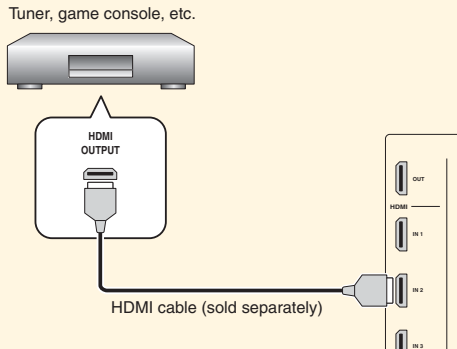


### Example - b

This example shows a way to connect your external component using the AUX1 (optical digital or stereo analog) and VIDEO IN jacks.

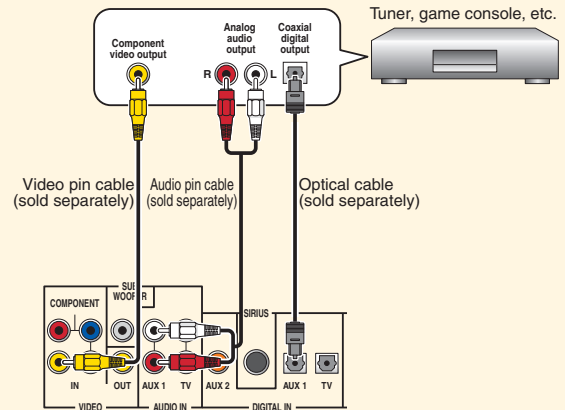

### Wireless connection for subwoofer


This shows a way to connect a subwoofer by using the Yamaha wireless subwoofer kit (SWK-W10). For instructions on SWK-W10, refer to "Safety and Accessory Information" (separate booklet).

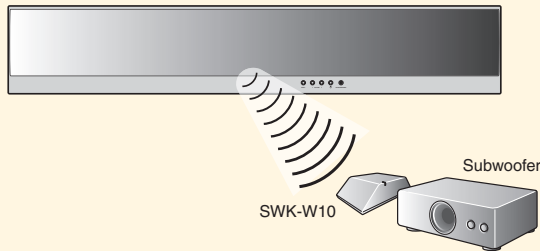

For proper transmission, you need to set the group IDs of this unit and SWK-W10 to the same value. For the Group ID setting of this unit, refer to "WIRELESS SETUP" of "Owner's Manual" (supplied CD-ROM).


### Example - c

This example shows a way to connect your external component using the AUX2 (coaxial digital) and COMPONENT VIDEO IN jacks.

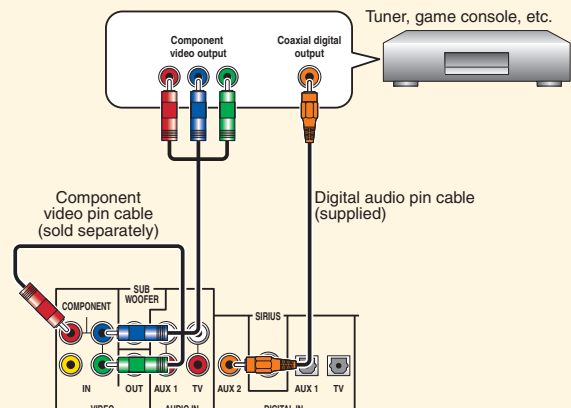

### Connecting the FM antenna


Connect the supplied FM antenna.

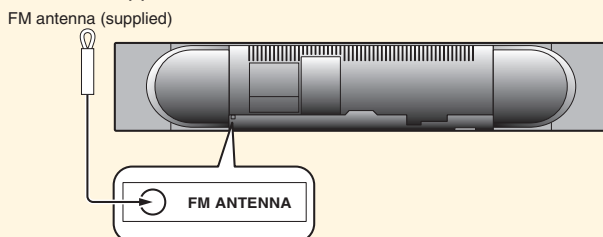

## 2 Connecting external components to this unit

### Example - B


This example shows a way to connect a TV and Blu-ray disc player using the supplied cables. You can enjoy the multi-channel audio from the Blu-ray disc player and the analog/digital audio from the TV. Use the video pin cable supplied with your Blu-ray disc player to make a video connection between your Blu-ray disc player and this unit.

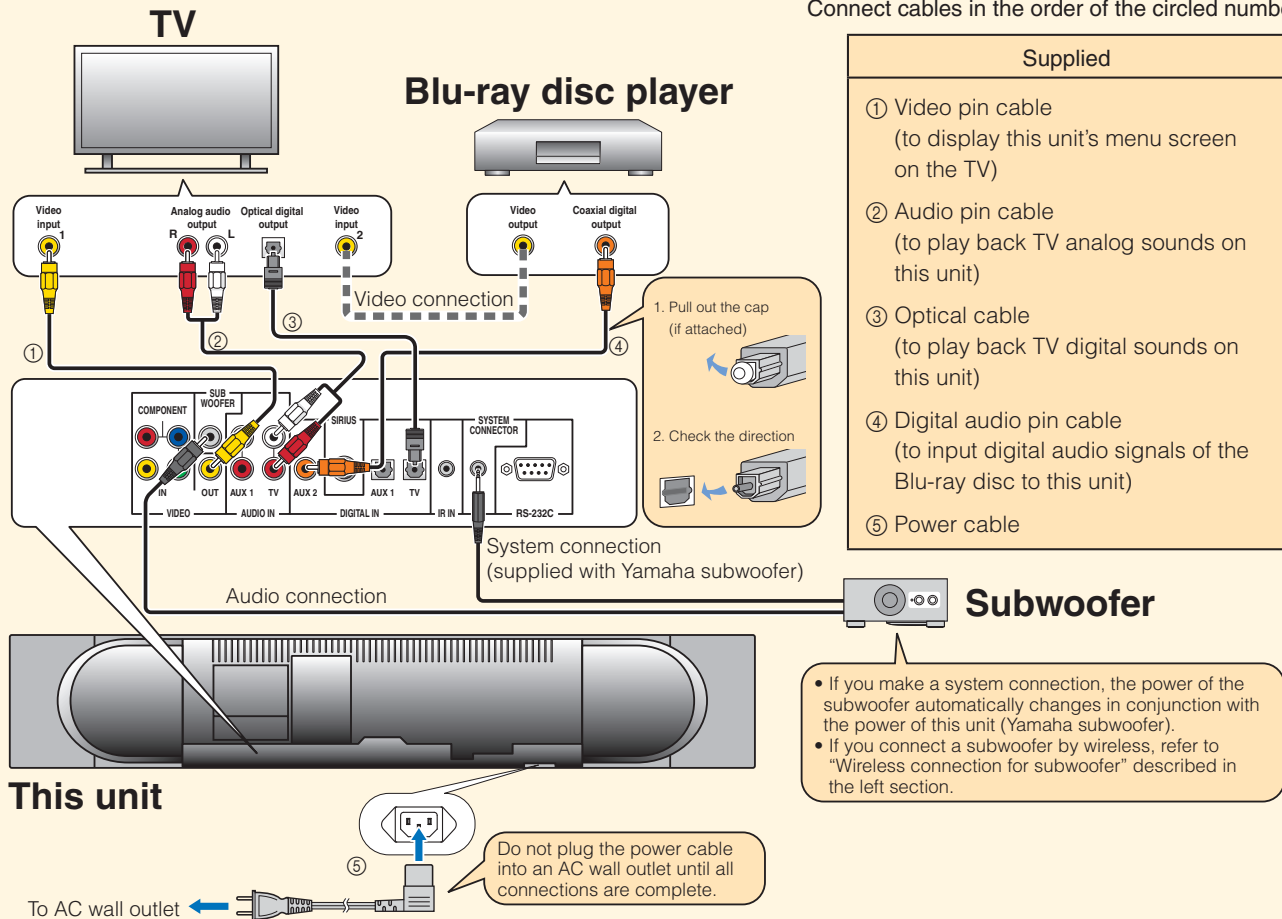


## 3 Preparing the remote control

### Install batteries in the remote control.

Make sure you insert the batteries according to the polarity markings (+/-).

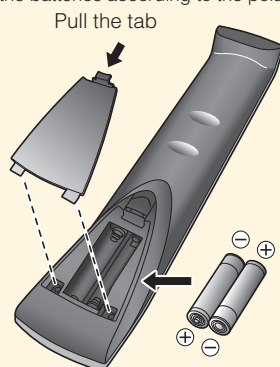

### Operation range

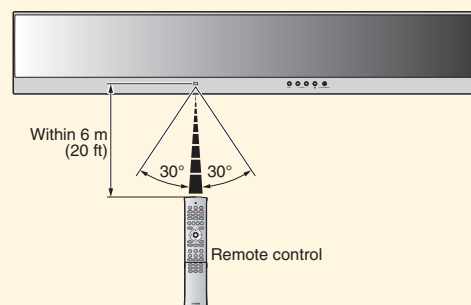

# 4


## Carrying out the AUTO SETUP (IntelliBeam)

Carry out the AUTO SETUP to adjust the settings so that the best listening environment is created.

The IntelliBeam technology allows you to achieve sound adjustments that best match your listening environment. It is normal for loud test tones to be output during the AUTO SETUP procedure. Make sure that there are no children around in the listening room while the AUTO SETUP procedure is in progress.


### 1 Connect the supplied IntelliBeam microphone to the INTELLIBEAM MIC jack on the front panel.

If necessary, use the supplied cardboard microphone stand. Assemble the stand and place the IntelliBeam microphone on top of it horizontally as shown below.

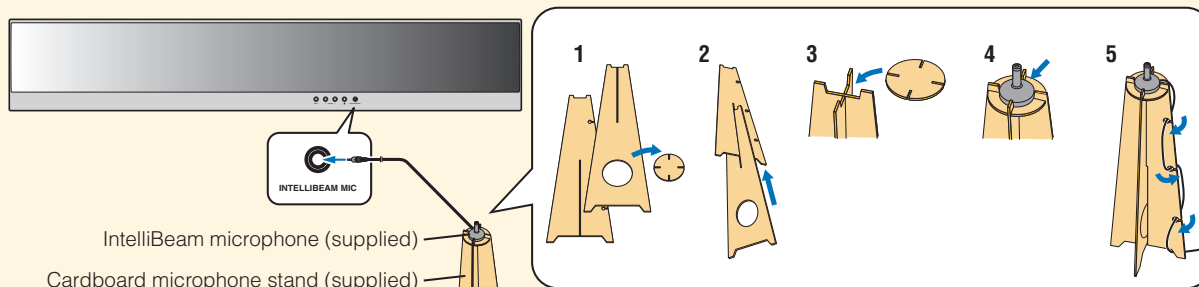

### 2 Set the IntelliBeam microphone at your normal listening position.


Use the supplied cardboard microphone stand or a tripod to place the IntelliBeam microphone at the same height as your ears would be when you are seated.

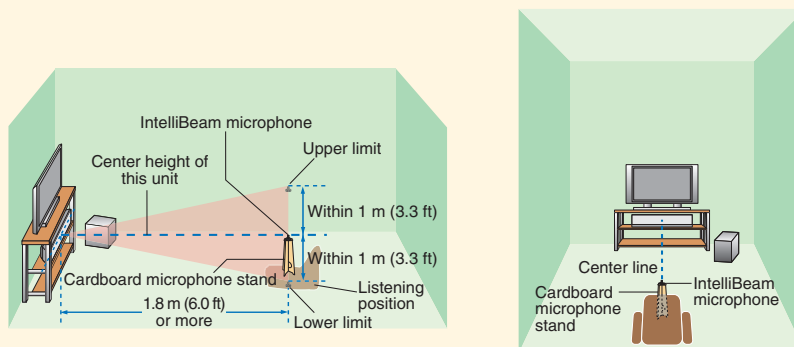

Place the IntelliBeam microphone on the extended center line of this unit and 1.8 m (6.0 ft) or more away from it. Also, make sure place the IntelliBeam microphone within 1 m (3.3 ft) upper or lower from the center height of this unit.

### 3 Press the Power (⏻) key on the remote control.

The power of this unit turns on. If a subwoofer with adjustable volume and crossover frequency controls is connected to this unit, turn it on, set the volume to about half way and then set the crossover frequency to the maximum as shown below.

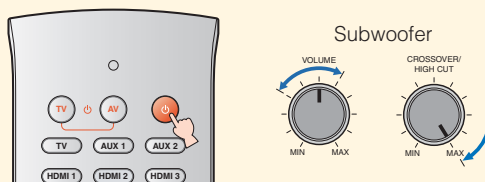


### 4 Turn on the power of your TV and select this unit as the video input on your TV.

If this unit is connected to the HDMI input on the TV (as shown in "Example - A"), switch the video input to "HDMI". If this unit is connected to the video input 1 on the TV (as shown in "Example - B"), switch the video input to "1".

## 4 Carrying out the AUTO SETUP (IntelliBeam)


### 5 Press and hold INTELLIBEAM for more than 2 seconds.

The INTELLIBEAM key is located inside of the slide cover.

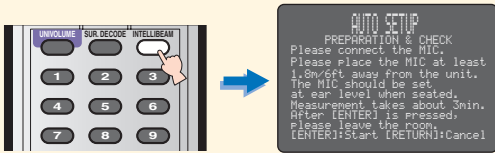

### 9 Press ENTER.

The following screen appears on the TV for 2 seconds and then the menu screen disappears from the TV.

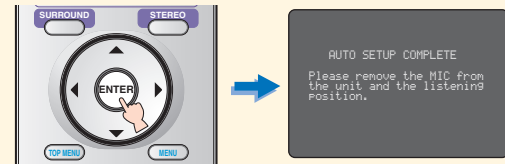

### 6 Make sure that your listening room is as quiet as possible.


For accurate measurement, turn off air conditioner or other devices that make noises.

### 7 Prepare to leave the room.

The best setting may not be done if you are in the room. Prepare to leave the room in 10 seconds after pressing ENTER in step 8.


- When leaving the room, bring this Quick Reference Guide with you.
- Wait outside the room during the AUTO SETUP procedure.
- The AUTO SETUP procedure takes about 3 minutes.
- To cancel the AUTO SETUP procedure after it is started, press RETURN.

### 8 Press ENTER to start the AUTO SETUP procedure and then leave the room within 10 seconds.

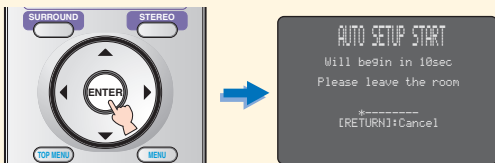

The setup screen automatically changes during the AUTO SETUP procedure.

When the AUTO SETUP procedure is complete, the "SHOW RESULT" screen appears on the TV.

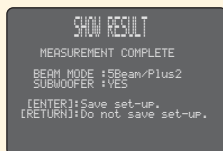


If "ENVIRONMENT CHECK (FAILED)" is displayed, see "Error messages for AUTO SETUP" of "Owner's Manual" (on the supplied CD-ROM) and then run the procedure again.

- The result may differ depending on the environment.
- If any error occurs, the corresponding error message appears on the screen. In this case, see "Error messages for AUTO SETUP" of "Owner's Manual" (on the supplied CD-ROM).

### 10 Disconnect the IntelliBeam microphone.

Now the AUTO SETUP is complete. Keep the IntelliBeam microphone in a safe place. The settings are automatically saved in the system memory.

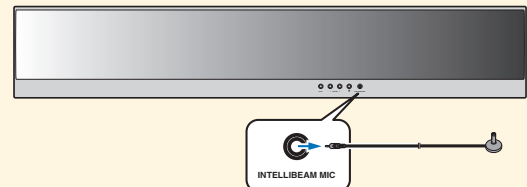

## 5 Checking digital audio input

You can check the digital signals being input from the Blu-ray disc player through the digital connection (HDMI, optical, coaxial) by using the supplied demonstration DVD.

### 1 Press HDMI1-4 or AUX1/2 to select the Blu-ray disc player as the input source and start playback of the demonstration DVD.



### 2 Check whether the DIGITAL indicator lights up.



- If the indicator does not light up, check the setting for digital audio output on the player. For details, see "Using the supplied demonstration DVD" (page 7 of "Safety and Accessory Information" (separate booklet)).



# Basic playback operations

## Playing back audio signals

### Enjoying Blu-ray discs in surround sound

- 1 Select the Blu-ray disc player as the video input on your TV.

- 2 1) Press HDMI1-4 or AUX1/2 to select the Blu-ray disc player as the input source.

For example, if the Blu-ray disc player is connected to the HDMI IN 1 jack of this unit (as shown in "Example - A"), press HDMI1.




- 2) Start playback of a Blu-ray disc.

### Enjoying TV in surround sound

- 1 Select the desired TV channel.

- 2 Press TV to select the TV as the input source.

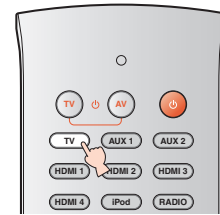

- 3 Press VOLUME +/- to adjust the volume.

If the TV speakers output sounds, mute it.



- 4 Press SURROUND and then the CINEMA DSP keys to select the desired CINEMA DSP program.

Each time you press the CINEMA DSP key, program switches. For details on each program, see "Enjoying CINEMA DSP programs" of "Owner's Manual" (on the supplied CD-ROM). To turn off the CINEMA DSP program, press OFF.




# Playing back audio signals

## Playing back iPod/iPhone

- 1 Prepare your iPod/iPhone and the Yamaha wireless transmitter for iPod (PDX-50TX/PDX-50BC).

For instructions on PDX-50TX/PDX-50BC, refer to "Safety and Accessory Information" (separate booklet).


- 2 Start play back of your iPod/iPhone.

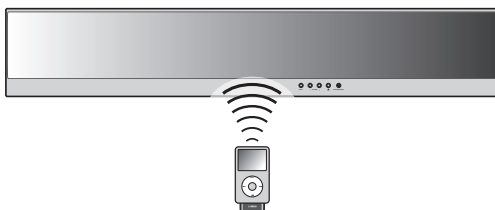

- For proper transmission, you need to set the group IDs of this unit and PDX-50TX to the same value. For the Group ID setting of this unit, refer to "WIRELESS SETUP" of "Owner's Manual" (supplied CD-ROM).

## FM tuning

- 1 Press RADIO repeatedly to select "FM".

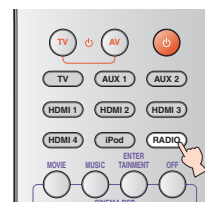

FM 88.9 MHz

- 2 Press TUNING  $\wedge$  /  $\vee$ .

Frequency is changed.




FM 92.5 MHz

# Using the audio functions of this unit

## Selecting surround or stereo playback

- Press SURROUND or STEREO.

You can enjoy stereoscopic sound field with surround playback and hi-fi sound with stereo playback.

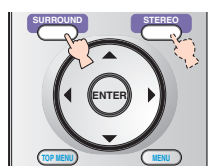

## Adjusting volume level automatically (UNIVOLUME)

- Press UNIVOLUME.

You can limit the volume level of the TV so that it will not increase suddenly when whenever the contents being broadcast change (due to commercials, etc.). The UNIVOLUME key is located inside of the slide cover.





# *YSP-5100 / YSP-4100*


---

## *Digital Sound Projector™*


For more detailed information, refer to the Owner's Manual on the CD-ROM. To view the Owner's Manual, click "English" in the screen displayed automatically when you insert the CD-ROM into your PC. Then follow the on-screen instructions. If the screen is not displayed automatically, open the "index.html" in the CD-ROM.  
Caution: Do not attempt to play this CD-ROM on an audio CD player.

Including "Wireless transmitter for iPod PDX-50TX/PDX-50BC Owner's Manual" and "Wireless subwoofer kit SWK-W10 Owner's Manual"

# IMPORTANT SAFETY INSTRUCTIONS

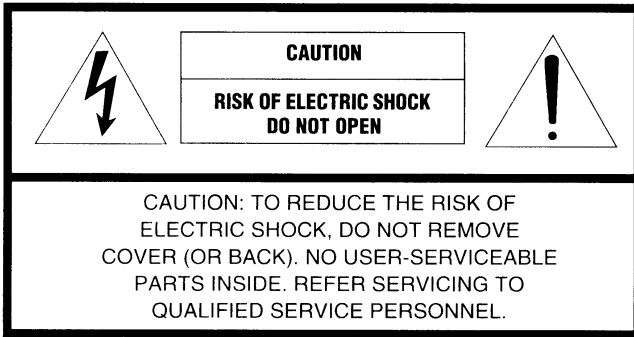

## ■ Explanation of Graphical Symbols

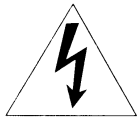

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert you to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert you to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer’s instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11 Only use attachments/accessories specified by the manufacturer.
- 12 Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13 Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



## We Want You Listening For A Lifetime

Yamaha and the Electronic Industries Association’s Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion – and, most importantly, without affecting your sensitive hearing.

Since hearing damage from loud sounds is often undetectable until it is too late, Yamaha and the Electronic Industries Association’s Consumer Electronics Group recommend you to avoid prolonged exposure from excessive volume levels.



## FCC INFORMATION (for US customers)

### 1. IMPORTANT NOTICE: DO NOT MODIFY THIS UNIT!

This product, when installed as indicated in the instructions contained in this manual, meets FCC requirements. Modifications not expressly approved by Yamaha may void your authority, granted by the FCC, to use the product.

### 2. IMPORTANT:

When connecting this product to accessories and/or another product use only high quality shielded cables. Cable/s supplied with this product MUST be used. Follow all installation instructions. Failure to follow instructions could void your FCC authorization to use this product in the USA.

### 3. NOTE:

This product has been tested and found to comply with the requirements listed in FCC Regulations, Part 15 for Class "B" digital devices. Compliance with these requirements provides a reasonable level of assurance that your use of this product in a residential environment will not result in harmful interference with other electronic devices.

This equipment generates/uses radio frequencies and, if not installed and used according to the instructions found in the users manual, may cause interference harmful to the operation of other electronic devices.

Compliance with FCC regulations does not guarantee that interference will not occur in all installations. If this product is found to be the source of interference, which can be determined by turning the unit "OFF" and "ON", please try to eliminate the problem by using one of the following measures:

Relocate either this product or the device that is being affected by the interference.

Utilize power outlets that are on different branch (circuit breaker or fuse) circuits or install AC line filter/s.

In the case of radio or TV interference, relocate/reorient the antenna. If the antenna lead-in is 300 ohm ribbon lead, change the lead-in to coaxial type cable.

If these corrective measures do not produce satisfactory results, please contact the local retailer authorized to distribute this type of product. If you can not locate the appropriate retailer, please contact Yamaha Electronics Corp., U.S.A. 6660 Orangethorpe Ave, Buena Park, CA 90620.

The above statements apply ONLY to those products distributed by Yamaha Corporation of America or its subsidiaries.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- 1) this device may not cause harmful interference, and
- 2) this device must accept any interference received including interference that may cause undesired operation.

See user manual instructions if interference to radio reception is suspected.

This equipment complies with FCC/IC radiation exposure limits set forth for uncontrolled equipment and meets the FCC radio frequency (RF)

Exposure Guidelines in Supplement C to OET65 and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated with at least 20 cm and more between the radiator and person's body (excluding extremities: hands, wrists, feet and ankles).

### NOTICE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### FCC WARNING

Change or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### FOR CANADIAN CUSTOMERS

To prevent electric shock, match wide blade of plug to wide slot and fully insert.

This Class B digital apparatus complies with Canadian ICES-003.

### POUR LES CLIENTS RÉSIDANT AU CANADA

Afin d'éviter les risques de décharges électriques, veuillez à insérer à fond la large broche de la fiche dans la large fente de la prise de courant. Cet appareil numérique de Classe B est conforme à la norme canadienne ICES-003.

# Caution: Read this before operating this unit.

- 1 To assure the finest performance, please read this manual carefully. Keep it in a safe place for future reference.
- 2 Install this sound system in a well ventilated, cool, dry, clean place with at least 5 cm (2 in) of space above (or below) this unit – away from direct sunlight, heat sources, vibration, dust, moisture, and/or cold.
- 3 Locate this unit away from other electrical appliances, motors, or transformers to avoid humming sounds.
- 4 Do not expose this unit to sudden temperature changes from cold to hot, and do not locate this unit in an environment with high humidity (i.e. a room with a humidifier) to prevent condensation inside this unit, which may cause an electrical shock, fire, damage to this unit, and/or personal injury.
- 5 Avoid installing this unit where foreign object may fall onto this unit and/or this unit may be exposed to liquid dripping or splashing. On the top of this unit, do not place:
  - Other components, as they may cause damage and/or discoloration on the surface of this unit.
  - Burning objects (i.e. candles), as they may cause fire, damage to this unit, and/or personal injury.
  - Containers with liquid in them, as they may fall and liquid may cause electrical shock to the user and/or damage to this unit.
- 6 Do not cover this unit with a newspaper, tablecloth, curtain, etc. in order not to obstruct heat radiation. If the temperature inside this unit rises, it may cause fire, damage to this unit, and/or personal injury.
- 7 Do not plug in this unit to a wall outlet until all connections are complete.
- 8 Do not operate this unit upside-down. It may overheat, possibly causing damage.
- 9 Do not use force on switches, knobs and/or cords.
- 10 When disconnecting the power cable from the wall outlet, grasp the plug; do not pull the cable.
- 11 Do not clean this unit with chemical solvents; this might damage the finish. Use a clean, dry cloth.
- 12 Only voltage specified on this unit must be used. Using this unit with a higher voltage than specified is dangerous and may cause fire, damage to this unit, and/or personal injury. Yamaha will not be held responsible for any damage resulting from use of this unit with a voltage other than specified.
- 13 To prevent damage by lightning, keep the power cord and outdoor antennas disconnected from a wall outlet or this unit during a lightning storm.
- 14 Do not attempt to modify or fix this unit. Contact qualified Yamaha service personnel when any service is needed. The cabinet should never be opened for any reasons.
- 15 When not planning to use this unit for long periods of time (i.e. vacation), disconnect the AC power plug from the wall outlet.
- 16 Be sure to read the “Troubleshooting” section (of “Owner’s Manual” on the supplied CD-ROM) on common operating errors before concluding that this unit is faulty.
- 17 Before moving this unit, press the power (⏻) key to set it to standby mode and disconnect the AC power plug from the wall outlet.
- 18 Condensation will form when the surrounding temperature changes suddenly. Disconnect the power cable from the outlet, then leave this unit alone.
- 19 When using this unit for a long time, this unit may become warm. Turn the power off, then leave this unit alone for cooling.
- 20 Install this unit near the AC outlet and where the AC power plug can be reached easily.
- 21 The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

## WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

## CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

## WARNING

THE POWER SUPPLY CABLE OF THIS UNIT MUST BE CONNECTED TO THE MAIN SOCKET OUTLET VIA A PROTECTIVE EARTHING CONNECTION.

Radio waves may affect electro-medical devices. Do not use this unit near medical devices or inside medical facilities.

This unit is not disconnected from the AC power source as long as it is connected to the wall outlet, even if this unit itself is turned off by the power (⏻) key. This state is called the standby mode. In this state, this unit is designed to consume a very small quantity of power.

Do not use this unit within 22 cm (9 inches) of persons with a heart pacemaker implant or defibrillator implant.

## IMPORTANT

Please record the serial number of this unit in the space below.

MODEL:

Serial No.:

The serial number is located on the rear of the unit. Retain this Safety and Accessory Information in a safe place for future reference.

 




 
 
 
 


 


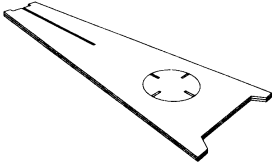
 
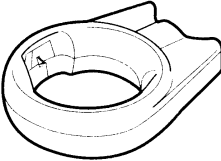
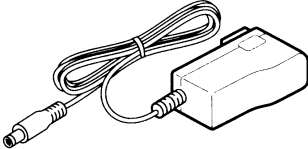
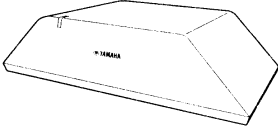
## Notes on remote controls and batteries

- Do not spill water or other liquids on the remote control.
- Do not drop the remote control.
- Do not leave or store the remote control in the following conditions:
  - places of high humidity, such as near a bath
  - places of high temperatures, such as near a heater or stove
  - places of extremely low temperatures
  - dusty places
- Insert the battery according to the polarity markings (+ and -).
- Change all batteries if you notice the following conditions: the operation range of the remote control narrows or the transmit indicator does not flash or is dim.
- If the batteries run out, immediately remove them from the remote control to prevent an explosion or acid leak.
- If you find leaking batteries, discard the batteries immediately, taking care not to touch the leaked material. If the leaked material comes into contact with your skin or gets into your eyes or mouth, rinse it away immediately and consult a doctor. Clean the battery compartment thoroughly before installing new batteries.
- Do not use old batteries together with new ones. This may shorten the life of the new batteries or cause old batteries to leak.
- Do not use different types of batteries (such as alkaline and manganese batteries) together. Specification of batteries may be different even though they look the same.
- Before inserting new batteries, wipe the compartment clean.
- If the remote control is without batteries for more than 2 minutes, or if exhausted batteries remain in the remote control, the contents of the memory may be cleared. In such a case, install new batteries and set the remote control code.
- Dispose of batteries according to your regional regulations.

# Supplied accessories

Check that you have received all of the following parts.

## Accessories supplied with YSP-5100/YSP-4100

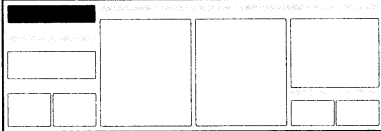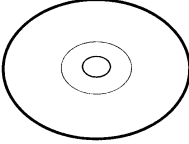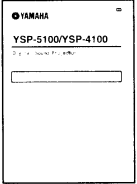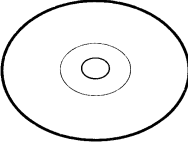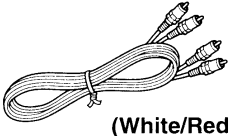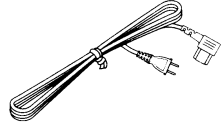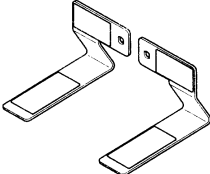Remote control x1	Quick Reference Guide x1	Demonstration DVD x1	Safety and Accessory Information x1
			
	Manual CD-ROM x1	Battery x2 (R03P, UMA, AAA)	Optical cable x1
			
	Digital audio pin cable x1	Video pin cable x1	Audio pin cable x1
	 (Orange)	 (Yellow)	 (White/Red)
			
Indoor FM antenna x1	Stand (right/left) x1 pair	Screw set (for stand) x1 set	Cardboard microphone stand x1
			
Wireless transmitter for iPod x1 (PDX-50TX)	Charging cradle x1 (PDX-50BC)	AC adapter for PDX-50BC x1 (MU12-2050100-A1)	
			
Wireless subwoofer kit x1 (SWK-W10)			
			

# Using the supplied demonstration DVD

By playing back the supplied demonstration DVD, you can check the digital signals being input properly from the Blu-ray disc player through the digital connection (HDMI, optical, or coaxial) and experience this unit's multi-channel surround sound.

## ■ Playing back the demonstration DVD

### 1 Select input sources both on this unit and your TV so that audio signal of DVD is input to this unit and video signal is input to your TV.

HDMI connection: On your TV, select this unit as the input source. On this unit, select the Blu-ray disc player as the input source.

Audio/Video connection: Select the Blu-ray disc player as the input source on both of your TV and this unit.

### 2 Load the demonstration DVD.

 
### 3 Select "Rain and Thunder" from the DVD menu.

Display the DVD menu screen by using the remote control of the Blu-ray disc player and then playback "Rain and Thunder".

### 4 Check the indicator displayed on the front panel display.

 DIGITAL (Dolby Digital) indicator lights up.


 DIGITAL indicator



Front panel display

If the indicator does not light up, the digital audio signal of the demonstration DVD is not input to this unit. Check the connections and settings of the Blu-ray disc player.

#### Note

-  DIGITAL indicator does not light up when the Blu-ray disc player is not playing back the demonstration DVD and the DVD menu screen is displayed.


### 5 Experience the Dolby Digital 5.1ch surround sound.

The sound of rain and buzzing of cicadas are heard from all around the listening position.



- Enjoy the surround sound in surround playback mode (page 22 of "Owner's Manual" (on the supplied CD-ROM)).

## ■ If DIGITAL indicator does not light up

If  DIGITAL indicator does not light up on the front panel display in step 4, check the followings.

### Is the Blu-ray disc player connected to this unit using a digital cable?

You need to connect these components with digital cables (HDMI cable, optical cable, or coaxial cable) to playback 5.1-channel contents such as Dolby Digital.

### Is an input source selected correctly on this unit?

Check that which input jack of this unit the Blu-ray disc player is connected to. Then check whether the name of input source displayed on the front panel display of this unit is the same as that of the input jack used.



- If you connect the Blu-ray disc player to the HDMI IN 1 jack, when you select HDMI 1 as the input source, "HDMI 1" should be displayed.

### Is digital audio output set correctly on the Blu-ray disc player?

HDMI connection: Set the digital audio output setting to "AUTO" or "Bitstream".

Digital audio connection: Enable "Dolby Digital/DTS" or "Bitstream".



- Refer to the owner's manual supplied with the Blu-ray disc player for the settings.



# Wireless transmitter for iPod PDX-50TX/PDX-50BC Owner's Manual

PDX-50TX is a wireless transmitter designed for iPod or iPhone series. PDX-50TX employs the Yamaha “yAired” technology to establish a wireless connection with another Yamaha product that supports “yAired” and enables playback of the iPod or iPhone on your Yamaha product.

Also the charging cradle PDX-50BC can be used for charging the iPod or iPhone, or to play music or movies for an extended time.

## ■ Cautions

- 1 To assure the finest performance, please read this manual carefully. Keep it in a safe place for future reference.
- 2 Locate this unit away from other electrical appliances, motors, or transformers to avoid humming sounds.
- 3 Do not expose this unit to sudden temperature changes from cold to hot, and do not locate this unit in an environment with high humidity (i.e. a room with a humidifier) to prevent condensation inside this unit, which may cause an electrical shock, fire, damage to this unit, and/or personal injury.
- 4 Avoid installing this unit where foreign object may fall onto this unit and/or this unit may be exposed to liquid dripping or splashing. On the top of this unit, do not place:
  - Other components, as they may cause damage and/or discoloration on the surface of this unit.
  - Burning objects (i.e. candles), as they may cause fire, damage to this unit, and/or personal injury.
  - Containers with liquid in them, as they may fall and liquid may cause electrical shock to the user and/or damage to this unit.
- 5 Do not cover this unit with a newspaper, tablecloth, curtain, etc. in order not to obstruct heat radiation. If the temperature inside this unit rises, it may cause fire, damage to this unit, and/or personal injury.
- 6 Do not plug in this unit to a wall outlet until all connections are complete.
- 7 Do not use force on switches, knobs and/or cords.
- 8 When disconnecting the power cable/AC adapter from the wall outlet, grasp the plug; do not pull the cable.
- 9 Do not clean this unit with chemical solvents; this might damage the finish. Use a clean, dry cloth.
- 10 Only voltage specified on this unit must be used. Using this unit with a higher voltage than specified is dangerous and may cause fire, damage to this unit, and/or personal injury. Yamaha will not be held responsible for any damage resulting from use of this unit with a voltage other than specified.
- 11 Do not attempt to modify or fix this unit. Contact qualified Yamaha service personnel when any service is needed. The cabinet should never be opened for any reasons.
- 12 When not planning to use this unit for long periods of time (i.e. vacation), disconnect the AC power plug from the wall outlet.
- 13 Be sure to read the "Troubleshooting" section on common operating errors before concluding that this unit is faulty.
- 14 Before moving this unit, turn off this unit, and disconnect the AC power plug from the wall outlet.
- 15 Condensation will form when the surrounding temperature changes suddenly. Disconnect the power cable from the outlet, then leave this unit alone.
- 16 When using this unit for a long time, this unit may become warm. Turn the power off, then leave this unit alone for cooling.
- 17 Install this unit near the AC outlet and where the AC power plug can be reached easily.
- 18 Be sure to use the AC adaptors supplied with this unit. Using an AC adaptor other than those provided may cause fire or damage to this unit.

### WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

### CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Radio waves may affect electro-medical devices.  
Do not use this unit near medical devices or inside medical facilities.


Do not use this unit within 22 cm (9 inches) of persons with a heart pacemaker implant or defibrillator implant.

Even if an iPod or iPhone is not connected to this unit, this unit is not disconnected from the AC power source as long as it is connected to the AC wall outlet. In this state, this unit is designed to consume a very small quantity of power.


Be sure to use this product only in the country in where it was purchased.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

- 1 **Connect the AC adapter to PDX-50BC (charging cradle) and then connect the AC plug to the AC wall outlet.**

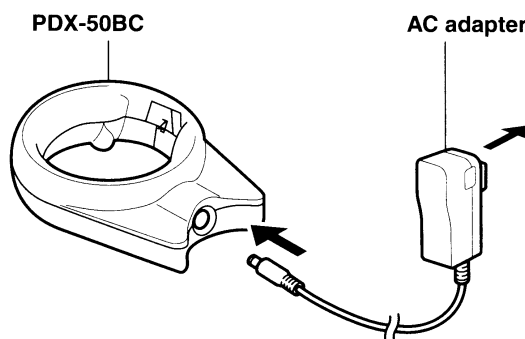


- 2 **Remove the transparent film on the pad.**

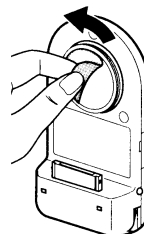


### 3 Connect your iPod or iPhone to PDX-50TX (transmitter).

The green LED lights up if a wireless connection between PDX-50TX and another Yamaha product is established.

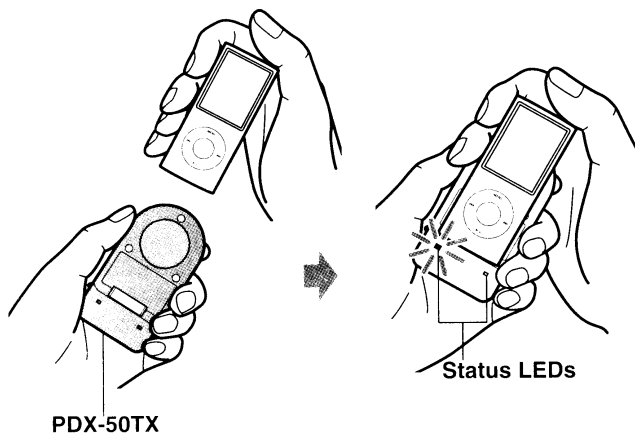


LED	Status
Off	An iPod or iPhone is not connected, or has stopped playing. However, lights up for 30 seconds or 2 minutes (depends on the iPod/iPhone) after connecting or stopping playback.
Flashes green continuously	Connection in progress, please wait.
Flashes green once	Adjusting the volume level.
Lights up green	A connection is established. You are ready to start playback of iPod on another Yamaha product.
Lights up green and flashes red	Flashes red for 2 seconds: An unsupported iPhone or iPod is connected. Keeps flashing red: Connection failed.
Flashes red (regardless of green status)	The battery of the iPod or iPhone is low.

### 4 Adjust the angle of your iPod or iPhone so that it is aligned parallel to PDX-50TX.

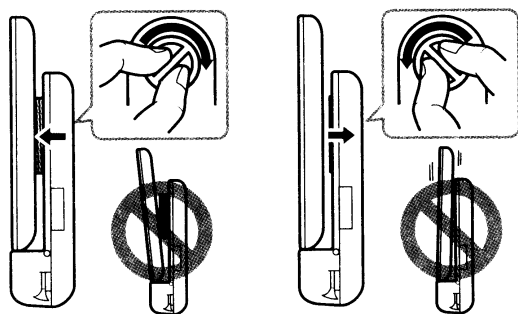


### 5 To charge the iPod or iPhone, place it on PDX-50BC.

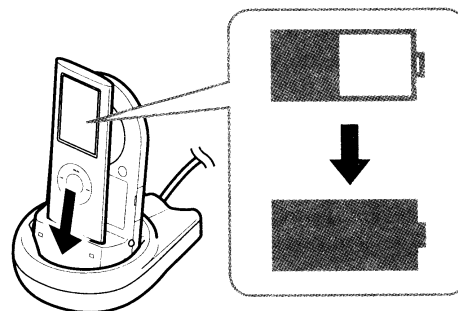

#### ■ Group selection switch

Use this switch to set the group ID. To establish a wireless connection (yAired) with another Yamaha product, set both the products to the same group.


Group selection switch

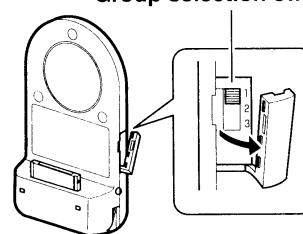

- PDX-50TX supports “1” (A1), “2” (A2), and “3” (A3) on some Yamaha products that support “yAired”.

#### ■ Disconnecting the iPod or iPhone

 To disconnect the iPod or iPhone from PDX-50TX (transmitter), pull the iPod or iPhone upward.



- Disconnection may be difficult under low temperature. In this case, do not disconnect the iPod or iPhone by force; loosen off the tab on the back of PDX-50TX to make the disconnection easier.

## ■ Troubleshooting

Refer to the table below if the unit does not function properly. If the problem you are experiencing is not listed below, or if the instruction below does not help, contact the nearest authorized Yamaha dealer or service center.

Problem	Cause	Remedy
No sound.	PDX-50TX and another Yamaha product are not connected since they are set to different groups.	Set both PDX-50TX and another Yamaha product to the same group.
	The signals are obstructed because there is an obstacle between the transmitting-side product and this unit.	Remove the obstacle.
		Move this unit to another position.
	There is a device (microwave oven, wireless LAN, etc.) outputting signals in 2.4 GHz frequency band nearby.	Move PDX-50TX away from the device.
	The iPod or iPhone is not connected to PDX-50TX firmly.	Connect the iPod or iPhone firmly.
	The firmware of the iPod or iPhone is not updated.	Download the latest iTunes software to update the firmware of the iPod or iPhone. For details, refer to the owner's manual supplied with your iPod or iPhone.
	The signal from PDX-50TX is blocked by your body or metallic objects, etc.	Change the way of holding, orientation, or position of PDX-50TX to avoid the object blocking the signal.
	The battery of iPod or iPhone is low.	Charge the iPod or iPhone.
	The volume is turned down.	Turn up the volume.
	It is in the process of a connection.	Please wait for a while.
The protection circuitry has been activated by excessive volume.	Turn down the volume.	
Controlling volume on the iPod or iPhone does not work.	The iPod or iPhone being used is not supported by this unit.	Use an iPod or iPhone supported by this product.
	The iPod or iPhone is not connected to PDX-50TX firmly.	Connect the iPod or iPhone firmly.

## ■ Specifications

### Supported iPod

..... iPod (5th generation), iPod classic, iPod nano, iPod touch

### Supported iPhone

..... iPhone, iPhone 3G, iPhone 3GS (as of August 2009)

### Power supply

U.S.A. and Canada models..... AC 120 V, 60 Hz

Other models..... AC 100 to 240 V, 50/60 Hz

Power consumption ..... 4 W

Power consumption without connecting iPod/iPhone

..... less than 1 W

Transmission range .... Approx. 20 m (66 ft) (without interference)

Maximum playback duration

..... Approx. 10 hours (from full charged iPod)

Dimensions (W x D x H)

PDX-50TX.....45.4 x 21.6 x 81 mm (1-29/32 x 7/8 x 3-7/32 in)

PDX-50BC.....56 x 20.5 x 74 mm (2-7/32 x 13/16 x 2-15/16 in)

Weight

PDX-50TX..... 29 g (1.02 oz)

PDX-50BC..... 29.5 g (1.04 oz)

\* Specifications are subject to change without notice

yA<sup>red</sup>

iPod™, iPhone™

iPod is a trademark of Apple Inc., registered in the U.S. and other countries.

iPhone is a trademark of Apple Inc.



“Made for iPod” means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards.

“Works with iPhone” means that an electronic accessory has been designed to connect specifically to iPhone and has been certified by the developer to meet Apple performance standards.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

# Wireless subwoofer kit SWK-W10 Owner's Manual

SWK-W10 is a wireless subwoofer kit that employs the Yamaha “yAired” technology to enable receiving subwoofer signals via a wireless communication. By connecting SWK-W10 to your subwoofer (with internal amplifier) using a subwoofer cable, you can enjoy bass sounds wirelessly received from the transmitting-side Yamaha product. Also, since the power and volume level of the subwoofer are controlled in conjunction with transmitting-side operations, it is so simple to operate.

## ■ Cautions

- 1 To assure the finest performance, please read this manual carefully. Keep it in a safe place for future reference.
- 2 Install this sound system in a well ventilated, cool, dry, clean place and away from direct sunlight, heat sources, vibration, dust, moisture and cold. For proper ventilation, allow the following minimum clearances.  
Top: 5 cm (2 in)
- 3 Locate this unit away from other electrical appliances, motors, or transformers to avoid humming sounds.
- 4 Do not expose this unit to sudden temperature changes from cold to hot, and do not locate this unit in an environment with high humidity (i.e. a room with a humidifier) to prevent condensation inside this unit, which may cause an electrical shock, fire, damage to this unit, and/or personal injury.
- 5 Avoid installing this unit where foreign object may fall onto this unit and/or this unit may be exposed to liquid dripping or splashing. On the top of this unit, do not place:
  - Other components, as they may cause damage and/or discoloration on the surface of this unit.
  - Burning objects (i.e. candles), as they may cause fire, damage to this unit, and/or personal injury.
  - Containers with liquid in them, as they may fall and liquid may cause electrical shock to the user and/or damage to this unit.
- 6 Do not cover this unit with a newspaper, tablecloth, curtain, etc. in order not to obstruct heat radiation. If the temperature inside this unit rises, it may cause fire, damage to this unit, and/or personal injury.
- 7 Do not plug in this unit to a wall outlet until all connections are complete.
- 8 Do not operate this unit upside-down. It may overheat, possibly causing damage.
- 9 Do not use force on switches, knobs and/or cords.
- 10 When disconnecting the power cable from the wall outlet, grasp the plug; do not pull the cable.
- 11 Do not clean this unit with chemical solvents; this might damage the finish. Use a clean, dry cloth.
- 12 Only voltage specified on this unit must be used. Using this unit with a higher voltage than specified is dangerous and may cause fire, damage to this unit, and/or personal injury. Yamaha will not be held responsible for any damage resulting from use of this unit with a voltage other than specified.
- 13 Do not attempt to modify or fix this unit. Contact qualified Yamaha service personnel when any service is needed. The cabinet should never be opened for any reasons.
- 14 When not planning to use this unit for long periods of time (i.e. vacation), disconnect the AC power plug from the wall outlet.
- 15 Be sure to read the "Troubleshooting" section on common operating errors before concluding that this unit is faulty.
- 16 Before moving this unit, disconnect the AC power plug from the wall outlet.
- 17 Condensation will form when the surrounding temperature changes suddenly. Disconnect the power cable from the outlet, then leave this unit alone.

- 18 When using this unit for a long time, this unit may become warm. Leave this unit alone for cooling.
- 19 Install this unit near the AC outlet and where the AC power plug can be reached easily.

### WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

### CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Even if a subwoofer is not connected to this unit, this unit is not disconnected from the AC power source as long as it is connected to the AC wall outlet. In this state, this unit is designed to consume a very small quantity of power.

Do not use this unit within 22 cm (9 inches) of persons with a heart pacemaker implant or defibrillator implant.

Be sure to use this product only in the country in where it was purchased.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

### IMPORTANT



Please record the serial number of this unit in the space below.

MODEL:

Serial No.:


The serial number is located on the rear of the unit. Retain this Owner's Manual in a safe place for future reference.

- The name plate is located on the bottom of the unit.

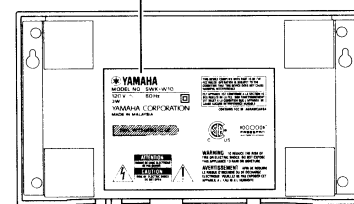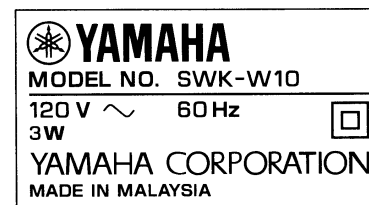

**1** Keep this unit and your subwoofer (with internal amplifier) unplugged from AC wall outlets.

**2** Set the group ID of this unit to one used on the transmitting-side Yamaha product.

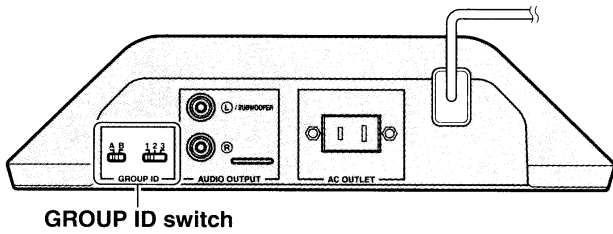


- For information about the group ID of the transmitting-side Yamaha product, refer to the manual supplied with the product.
- If the transmitting-side product is not equipped with an A/B switch, set the A/B switch of this unit to “A”.

**3** Install this unit near your subwoofer.  
Place this unit on your subwoofer or mount this unit on the wall using the hooking holes on the bottom surface.

**4** Connect the cables in the following order.

- ① Connect the AUDIO OUTPUT (SUBWOOFER) of this unit and the input jack of your subwoofer using a subwoofer cable.
- ② Plug the power cable of your subwoofer to the AC OUTLET terminal of this unit.
- ③ Plug the power cable of this unit to an AC wall outlet.

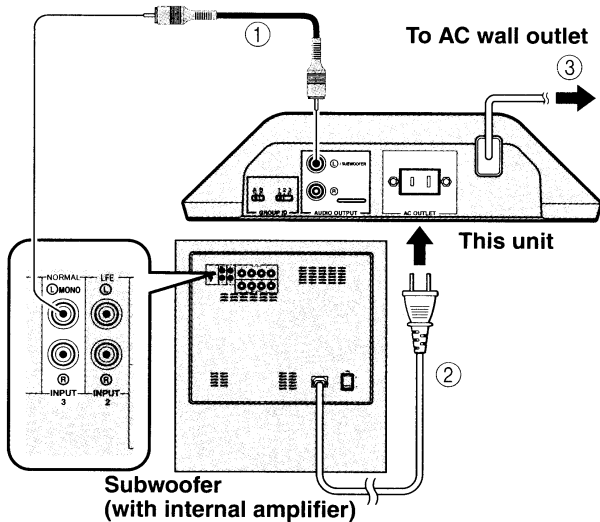


**Note**


- Do not plug a subwoofer which power consumption is higher than 100 W to the AC OUTLET terminal of this unit.

**5** Turn on the subwoofer.

**6** Set the volume of your subwoofer to about half way and then set the crossover frequency to the maximum.

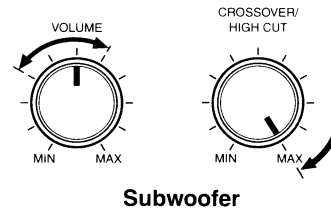

**7** Turn on the transmitting-side product.  
The LED turns to green if a wireless connection between this unit and transmitting-side product is established.

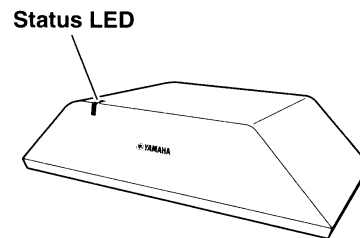

LED	Status
Red	This unit is turned off because the transmitting-side product is also turned off. Turn on the transmitting-side product to turn on this unit.
Orange	A wireless connection is being established. Please wait.
Green	A wireless connection is established properly.

**Note**

- If your subwoofer is operable with the remote control, set the subwoofer’s power management setting to “Always On” to make the power control of this unit functions properly.

## ■ Troubleshooting

Refer to the table below if the unit does not function properly. If the problem you are experiencing is not listed below, or if the instruction below does not help, contact the nearest authorized Yamaha dealer or service center.

Problem	Cause	Remedy
No sound.	This unit and transmitting-side Yamaha product are not connected since they are set to different groups.	Set both this unit and transmitting-side Yamaha product to the same group.
	The signals are obstructed because there is an obstacle between the transmitting-side product and this unit.	Remove the obstacle.
		Move this unit to another position.
	There is a device (microwave oven, wireless LAN, etc.) outputting signals in 2.4 GHz frequency band nearby.	Move this unit away from the device.
	The connection between this unit and your subwoofer is improper.	Check the connection.
	The volume is turned down.	Raise the output level of the subwoofer.
		Adjust the volume control of the transmitting-side product to turn up the volume. The subwoofer volume raises in conjunction with the operation of the transmitting-side product.
The wireless connection is unstable for some reasons.	Unplug this unit from the AC wall outlet and then plug it again. Check if the LED status lights green.	
The subwoofer is set to the standby mode when the AC power of the subwoofer is turned to ON.	Set the subwoofer's power management setting so that the subwoofer power interlocks with the AC power of the subwoofer.	
	Set audio setting on the subwoofer to audio detection mode.	
Too low volume.	The volume is turned down.	Turn up the volume or adjust the crossover frequency on your subwoofer.
The status LED does not light up green.	This unit and transmitting-side Yamaha product are not connected since they are set to different groups.	Set both this unit and transmitting-side Yamaha product to the same group.

## ■ Specifications

### Power supply

U.S.A. and Canada models ..... AC 120 V, 60 Hz

Australia model ..... AC 240 V, 50 Hz

Other models ..... AC 230 V, 50 Hz

Power consumption ..... 3 W

Power consumption without wireless connection ..... 1.5 W or less

AUDIO OUTPUT (SUBWOOFER) ..... 2 V/120 Hz or less

AC OUTLET ..... 100 W maximum

Transmission range.... Approx. 20 m (66 ft) (without interference)

Dimensions (W × D × H) ..... 120 × 53.5 × 120.5 mm

(4-7/8 × 2-1/4 × 4-7/8 in)

Weight..... 0.8 kg (1.8 lbs)

\* Specifications are subject to change without notice





YAMAHA

*YSP-5100·YSP-4100*

(K1P5HK)

COMPACT  
DISC

..... YC174A0 .....

©2009 YAMAHA CORPORATION

Owner's Manual / Mode D'emploi  
CD-ROM

COMPACT  
disc

# Digital Sound Projector™

## Demonstration DVD



X9280A0

© All rights reserved

Not for sale






## Registering Your New Yamaha Product is Fast and Easy

Thank you for purchasing a new product from Yamaha Electronics. We'd like to continue providing you with high quality products and better service. So, we've made it simple to register your new product purchase online. Please take a few minutes to visit our website at [www.yamaha.com/YEC/registration/](http://www.yamaha.com/YEC/registration/) and complete the information and questions included there. We appreciate your business and we look forward to hearing from you.

Failure to complete the registration form does not diminish your warranty rights in any way.

Register online at [www.yamaha.com/YEC/registration/](http://www.yamaha.com/YEC/registration/)

*Product registration applies to USA customers only.*

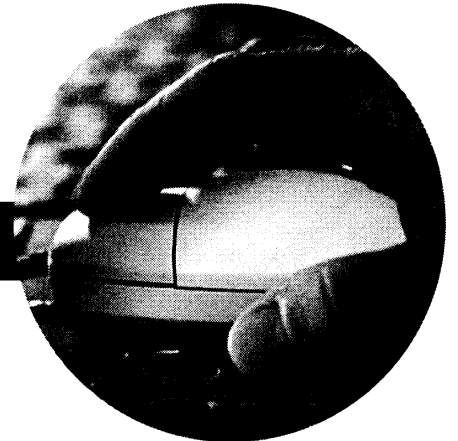

YAMAHA Home Audio products are designed and manufactured to provide a high level of trouble-free performance. YAMAHA Electronics Corporation, USA, is proud of the experienced craftsmanship that goes into each and every YAMAHA Home Audio product. YAMAHA sells its Home Audio products only through a network of high quality, specially authorized dealers and is pleased to offer the following Limited Warranty, which applies only to products purchased from our authorized dealers. YAMAHA Home Audio products are backed by a nationwide network of high quality YAMAHA Authorized Service Centers, providing prompt, courteous, and professional service. We suggest that you read the Limited Warranty thoroughly, and invite you to contact your authorized YAMAHA dealer or the YAMAHA Electronics Corporation, USA, Service Department if you have any questions.



## > LIMITED WARRANTY < HOME AUDIO PRODUCTS

### Type of Product

A/V and Stereo Receivers, Processor and Integrated Amplifiers, Separate Amplifiers and Preamplifiers, Tuners, CD Players and Changers, HDD Players and Recorders, Powered Loudspeakers, Media Controllers and Speaker Systems purchased individually, as a pair, or as part of an Integrated or Packaged system. .... 2 years

Cassette Decks, BLU-RAY Disc Players, DVD Players and Changers, Integrated Systems (Receiver or Amplifier combined or on same chassis with CD or DVD Player), Desktop Audio Systems (i.e. TSX and PDX Series), Multimedia Speakers and Accessories. .... 1 year

### Duration of Warranty

(beginning from first consumer purchase)

### What is Covered and what is Not Covered:

This warranty covers all defects in materials or workmanship in this product, but DOES NOT COVER the following:

- (1) Damage, deterioration or malfunction resulting from:
  - a. Accident, negligence, misuse, abuse, improper installation or operation or failure to follow instructions contained in your Owner's Manual.
  - b. Any shipment of the product. (Claims must be presented to the carrier.)
  - c. Repair or attempted repair by anyone other than YAMAHA or an authorized YAMAHA Service Center.
- (2) Any unit which has been altered or on which the serial number has been defaced, modified or removed.
- (3) Normal wear, battery replacement and any periodic maintenance.
- (4) Any unit which has not been purchased from an authorized YAMAHA Home Audio dealer in the USA. If you are uncertain as to whether a dealer has been authorized by YAMAHA, please contact YAMAHA's Service Department.
- (5) Any unit used for industrial or commercial purposes.

### Who may enforce the warranty:

This warranty is enforceable only by the original purchaser.

### What we will pay for and what you must pay for:

YAMAHA will repair or replace units covered by this warranty, without charge to the consumer for labor or materials. Some repair parts may be used or rebuilt replacements, that meet or exceed Yamaha specifications for new parts, in exchange for defective parts. YOU ARE RESPONSIBLE FOR ANY INSTALLATION OR REMOVAL CHARGES AND FOR ANY INITIAL SHIPPING CHARGES, if the product(s) must be shipped for warranty service. However, we will pay the return shipping charges to any destination within the USA if the repairs are covered by the warranty.

### How you can get Warranty Service:

- (1) If your YAMAHA product(s) require service, contact the authorized YAMAHA dealer and the dealer will advise you of the procedures to be followed. If this is not practical, contact YAMAHA at the address, telephone number or Internet URL shown below. We may request that you send the defective product(s) to a local authorized YAMAHA Service Center, to an authorized YAMAHA Regional Service Center, or authorize return of the defective product(s) to YAMAHA for repair.
- (2) Product(s) shipped for service should be packed securely and must be accompanied by a detailed explanation of the problem(s) requiring service, as well as your sales receipt or other proof of date and place of purchase, as evidence of warranty coverage.
- (3) Warranty registration is not required for warranty coverage.

### Limitation of Implied Warranties:

ANY IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE LENGTH OF THIS WARRANTY. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

### Exclusion of Damages:

YAMAHA'S LIABILITY FOR ANY DEFECTIVE PRODUCT IS LIMITED TO REPAIR OR REPLACEMENT OF THE PRODUCT, AT OUR OPTION. IF WE ELECT TO REPLACE THE PRODUCT, THE REPLACEMENT MAY BE A RECONDITIONED UNIT. YAMAHA SHALL NOT BE LIABLE FOR DAMAGES BASED UPON INCONVENIENCE, LOSS OF USE, DAMAGE TO ANY OTHER EQUIPMENT OR OTHER ITEMS AT THE SITE OF USE, OR ANY OTHER DAMAGES WHETHER INCIDENTAL, CONSEQUENTIAL OR OTHERWISE. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS AND/OR DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

Should you have any questions about service received or if you need assistance in locating an authorized YAMAHA Service Center, please contact:



SERVICE DEPARTMENT

**YAMAHA Electronics Corporation, USA**

6660 Orangethorpe Avenue, Buena Park, California 90620-1345

Telephone: (800) 292-2982, 8 AM to 4 PM Pacific time

Internet URL: <http://www.yamaha.com/ye/>

Do not return any product to the above address; it is not a service location. YAMAHA products are backed by a nationwide network of high quality YAMAHA authorized Service Centers, providing prompt, courteous and professional service. **For referral to your nearest authorized YAMAHA Preferred Customer Service Center or authorized YAMAHA Regional Service Center call 1-800-4 YAMAHA.**

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>