


User Manual

GETTING STARTED? EASY.

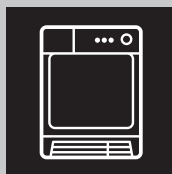

ZTE7101PZ

EN User Manual
Tumble Dryer

ZANUSSI

SAFETY INFORMATION

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible if an incorrect installation and use causes injuries and damages. Always keep the instructions with the appliance for future reference.

CHILDREN AND VULNERABLE PEOPLE SAFETY



WARNING!

Risk of suffocation, injury or permanent disability.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Do not let children play with the appliance.
- Children of less than 3 years should be kept away unless continuously supervised.
- Keep all packaging away from children.
- Keep all detergents away from children.
- Keep children and pets away from the appliance door when it is open.
- If the appliance has a child safety device, we recommend you activate it.
- Cleaning and user maintenance shall not be made by children without supervision.

GENERAL SAFETY

- Do not change the specification of this appliance.
- If the tumble dryer is put on top of a washing machine, use the stacking kit. The stacking kit, available from your authorized vendor, can be used only with the appliance specified in the instructions, supplied with the accessory. Read it carefully before installation (Refer to the Installation leaflet).

- The appliance can be installed as freestanding or below the kitchen counter with correct space (Refer to the Installation leaflet).
- Do not install the appliance behind a lockable door, a sliding door or a door with a hinge on the opposite side, where the appliance door can not be fully opened.
- The ventilation openings in the base (if applicable) must not be obstructed by a carpet.
- Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation.
- Ensure you have good ventilation in the installation room to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.
- Exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels. (if applicable)
- If the supply cord is damaged, it must be replaced by the manufacturer, its Authorised Service Centre or similarly qualified persons in order to avoid a hazard.
- Obey the maximum load volume of 7kg (refer to the “Programme chart” chapter).
- Do not use the appliance if industrial chemicals have been used for cleaning.
- Wipe away lint that has accumulated around the appliance.
- Do not run the appliance without a filter. Clean the lint filter before or after each use.
- Do not dry unwashed items in the tumble dryer.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.

- Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
- Remove all objects from pockets such as lighters and matches.
- Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.
- Before maintenance, deactivate the appliance and disconnect the mains plug from the mains socket.

SAFETY INSTRUCTIONS

INSTALLATION

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Obey the installation instruction supplied with the appliance.
- Always be careful when you move the appliance because it is heavy. Always wear safety gloves.
- Do not install or use the appliance where the temperature is less than 5°C or higher than 35°C.
- Make sure that the floor where you install the appliance is flat, stable, heat resistant and clean.
- Make sure that there is air circulation between the appliance and the floor.
- Always move the appliance vertically.
- The rear surface of the appliance must be put against the wall.
- When the appliance is put in its permanent position, check if it is fully level with the aid of a spirit level. If it is not, adjust the feet until it is.

ELECTRICAL CONNECTION



WARNING! Risk of fire and electrical shock.

- The appliance must be earthed.
- Make sure that the electrical information on the rating plate agrees with the power supply. If not, contact an electrician.
- Always use a correctly installed shockproof socket.
- Do not use multi-plug adapters and extension cables.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.

- Do not touch the mains cable or the mains plug with wet hands.
- Only for UK and Ireland. The appliance has a 13 amp mains plug. If it is necessary to change the fuse in the mains plug, use a 13 amp ASTA (BS 1362) fuse.
- This appliance complies with the E.E.C. Directives.

USE



WARNING! Risk of injury, electrical shock, fire, burns or damage to the appliance.

- Use this appliance in a household only.
- Do not dry the damaged items which contain padding or fillings.
- Only dry fabrics which are applicable to dry in the tumble dryer. Follow the instructions on the fabric label.
- If you have washed your laundry with a stain remover start an extra rinse cycle before you start the dryer.
- Do not drink or prepare food with the condensed water/distilled water. It can cause health problems to people and pets.
- Do not sit or stand on the open door.
- Do not dry dripping wet clothes in the tumble dryer.

CARE AND CLEANING



WARNING! Risk of injury or damage to the appliance.

- Do not use water spray and steam to clean the appliance.
- Clean the appliance with a moist soft cloth. Only use neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.
- Disconnect the appliance from the mains supply.
- Cut off the mains cable and discard it.
- Remove the door catch to prevent children and pets to get closed in the appliance.

DISPOSAL




WARNING! Risk of injury or suffocation.

INSTALLATION


UNPACKING



CAUTION! Before use all parts of the transport packaging must be removed.

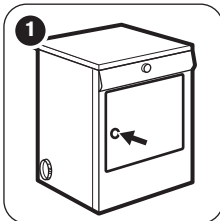

1 Open loading door.

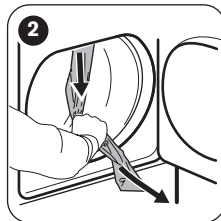

2 Pull off adhesive strips from inside machine on top of drum.



3 Remove foil hose and polystyrene padding from the machine.

VENT HOSE




As to the outlet itself, if you have decided on a install wall/window grille, a good local builder's merchant can supply you with the necessary fittings and installation advice.



Make sure that the vent hose length is less than 2 m, and that it contains no more than 2 bends.




WARNING! It is important not to connect the vent hose to, for example, a cooker hood, or a chimney or flue pipe designed to transmit the exhaust from a fuel burning appliance.

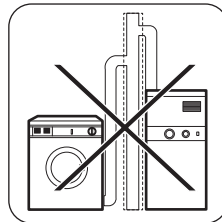



Note that to prevent condensation problems, it is essential that the dryer be installed with the flexible hose to transmit its "exhaust" at least beyond the kitchen units; preferable outside the kitchen. In order to prevent the appliance from overheating, it is important that the steam exhaust is unobstructed. Thus, if a permanent hose installed to an external wall or ceiling, it must be ensured an exhaust capacity of minimum 150 m³/h. If the dryer is installed adjacent to kitchen units, make sure that the vent hose is not squashed. If the hose is not fully squashed, drying efficiency will be decreased ,

resulting in longer drying times and higher energy consumption. If the hose is fully squashed, the automatic cut-outs with which the appliance is fitted can operate. When operating the tumble dryer, the room temperature must not be lower than +5°C and higher than +35°C, as it can affect the performance of the appliance.

- i** If the hose is long and the room temperature low, the moisture might condense to water inside the hose. This is an usual occurrence. To prevent this water from the hose, it is recommend to drill a small hole (via. 3 mm) in the lowest point of the hose and to put a small container below it. (See picture, point **B**).

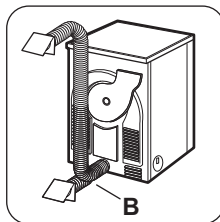

- i** There are 3 vent outlets: on the left, right side and at the rear.

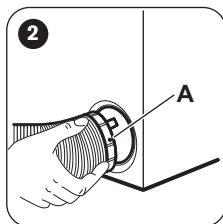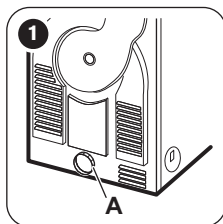

- 1** Pull the ring nut **A** from the vent outlet at the rear.
- 2** Screw on the ring nut to the hose and push it into position.
- 3** The not used vents must be sealed with supplied covers.

DOOR REVERSAL

To make it easier to load or unload the laundry, the door can be reversed.

- !** **WARNING!** The door must only be reversed by an authorised service engineer.

Please contact your Authorised Service Centre. The engineer will carry out the door reversal at your cost.

SPECIAL ACCESSORIES


▪ stack kit

- i** Available from your Authorised Service Centre or your specialist dealer

To enable the mounting of the dryer on top of a front loading washing machine with cover's depth between 48 and 60 cm. Read carefully the instructions supplied with the kit.

EASY START


PRODUCT DESCRIPTION

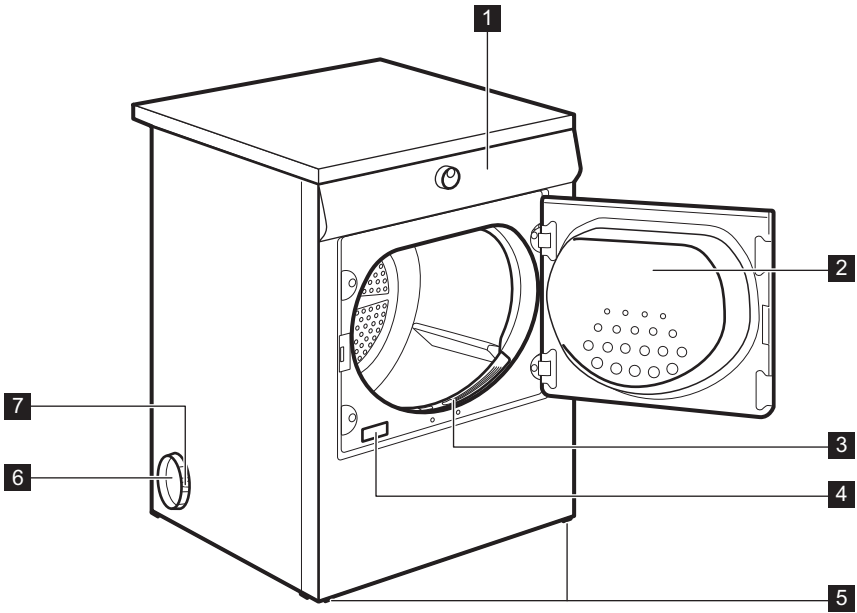

- 1** Control panel
- 2** Appliance door
- 3** Fluff filter
- 4** Rating plate

- 5** Adjustable feet
- 6** Sideways vent outlets / back vent outlet
- 7** Ring nut

CONTROL PANEL

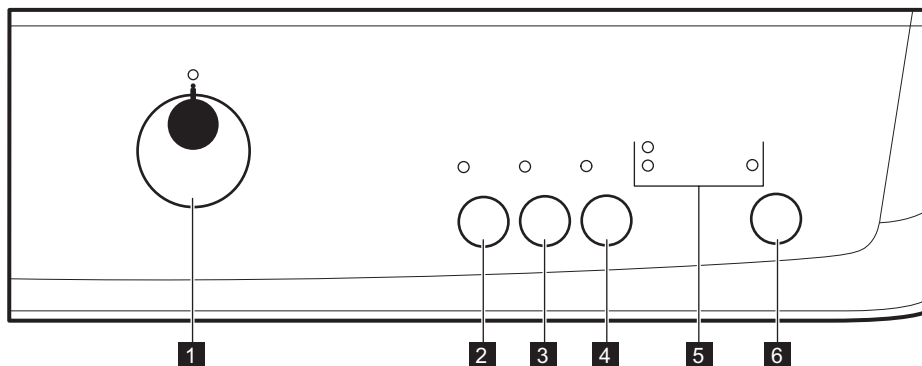
 



1 Programme knob and ⓐ OFF switch

2 Delicates button


















3 Anti-crease button



4 Alarm button

5 Indicators: Drying , End/Anti-crease , Filter 


6 Start/Pause button

PROGRAMME TABLE

Programmes	Type of load	Load (max.) ¹⁾ / Fabric mark
Cottons		
Extra Dry	Drying level: extra dry.	7kg/  
Strong Dry	Drying level: strong dry.	7kg/  
 Cupboard Dry ²⁾³⁾	Drying level: cupboard dry.	7kg/  
Damp	Drying level: textiles which are still to be ironed.	7kg/  
Iron Dry ³⁾	Drying level: applicable for iron.	7kg/  
Synthetics		
Extra Dry	Drying level: extra dry.	3kg/   
Cupboard Dry ³⁾	Drying level: cupboard dry.	3kg/   

Programmes	Type of load	Load (max.) ¹⁾ / Fabric mark
Iron Dry	Drying level: applicable for iron.	3kg/ ☺☺☺
Specials		
30'	Time programme to dry individual items of laundry.	1kg/ ☺☺☺
 Easy Iron	Easy care fabrics for which a minimum of ironing is necessary. The drying results can be different from one type of fabric to the other. Shake the items before you put them in the appliance. When the programme is completed, immediately remove the items and put them on a hanger.	1kg (or 5 shirts)/ ☺☺☺
Mixed	Cotton and synthetic fabrics. Low temperature programme. Delicate programme with warm air.	3kg/ ☺☺☺
 Baby	Baby cycle is a special programme for jumpers to be dried "ready to wear".	2kg/ ☺☺☺
Jeans	Leisure clothing such as jeans, sweat-shirts of different material thicknesses (e.g. at the neck, cuffs and seams).	7kg/ ☺☺☺
Cooling	Refreshing a textiles that were in storage.	1kg

 
1) The maximum weight refers to dry items.

2) The  Cottons Cupboard Dry programme is the "Standard cotton programme" and it is suitable to dry normal wet cotton laundry and it is the most efficient programme in terms of energy consumption for drying wet cotton laundry.

3) **For test institutes only:** Standard programmes for tests are specified in the EN 61121 document.

OPTIONS

DELICATES

With this option you can set a delicate drying programme that has a low temperature. Use this option with a fabrics that have the symbol  on the fabric label (e.g. acrylic, viscose).

ANTI-CREASE

Extends of 60 minutes the standard antcrease phase (30 minutes) at the end of the drying cycle. This function prevents the laundry from creases. The laundry can be removed during the antcrease phase.

ALARM

you can hear the buzzer at the:

 


- cycle end
- start and end of crease guard phase
- cycle interruption

The buzzer function is by default always on. You can use this function to activate or deactivate the sound.




You can activate the Alarm option with all programmes.

OPTIONS TABLE

Programmes ¹⁾	Delicates	Anti-crease	Alarm
Cottons			
Extra Dry	■	■	■
Strong Dry	■	■	■
 Cupboard Dry	■	■	■
Damp	■	■	■
Iron Dry	■	■	■
Synthetics			
Extra Dry	■	■	■
Cupboard Dry	■	■	■
Iron Dry	■	■	■
Specials			
30'	■	■	■
 Easy Iron	■	■	■
Mixed	■	■	■
 Baby	■	■	■
Jeans	■	■	■
Cooling			■

1) Together with the programme you can set 1 or more options. To activate or deactivate them, press the related touchpad.

SETTINGS

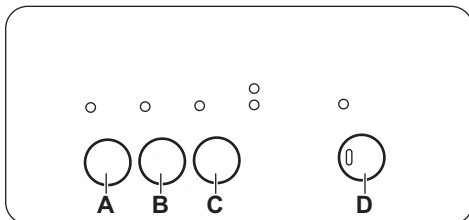

- A)** Delicates button
- B)** Anti-crease button
- C)** Alarm button
- D)** Start/Pause button

BUZZER ON/OFF



To deactivate or activate the acoustic signals, press and hold for approximately 2 seconds touchpads **(A)** and **(B)** at the same time.

ADJUSTMENT OF THE REMAINING LAUNDRY MOISTURE DEGREE

To change the default degree of the remaining moisture of the laundry:

1. Use the programme knob to set any programme.
2. Wait approximately 8 seconds.
3. Press and hold buttons **(B)** and **(D)** at the same time.

One of these indicators comes on:

- →| **End/Anti-crease** - the maximum dry laundry
-  **Drying** - the more dry laundry
- →| **End/Anti-crease** and  **Drying** the standard dry laundry

4. Press the button (**D**) again and again until the indicator of the correct level comes on.
5. To confirm the adjustment, press and hold buttons (**B**) and (**D**) at the same time for approximately 2 seconds.

BEFORE FIRST USE

Before you use the appliance for the first time do these operations:

- Clean the tumble dryer drum with a moist cloth.

- Start a short programme (e.g. 30 minutes) with moist laundry.

DAILY USE

START A PROGRAMME

1. Prepare the laundry and load the appliance.




CAUTION! Make sure that when you close the door, the laundry does not catch between the appliance door and the rubber seal.

2. Set the correct programme and options for the type of load.
3. Press the Start/Pause touchpad. The programme starts.

better results, that you remove the laundry when the phase is almost completed or completed.


When the crease guard phase is completed:

- Start/Pause indicator goes off.
1. Turn the Programme knob to  OFF
 2. Open the appliance door.
 3. Remove the laundry.
 4. Close the appliance door.




Always clean the filter when a programme is completed.

CHANGE A PROGRAMME

1. Turn the Programme knob to  OFF
2. Set the programme.

AT THE END OF THE PROGRAMME

When the programme is completed:

- An intermittent acoustic signal operates (If the Buzzer function is on).
- The indicators →| End/Anti-crease and  Filter comes on.
- The Start/Pause indicator is on.

The appliance continues to operate with the crease guard phase for approximately other 30 minutes.

The crease guard phase removes creases from your laundry.

You can remove the laundry before the crease guard phase is completed. We recommend, for



STAND-BY FUNCTION

To decrease the energy consumption, this function automatically deactivates the appliance:

- After 5 minutes if you do not start the programme.
- After 5 minutes from the end of the programme.

INDICATOR LIGHTS

These lights indicate the following functions:

- Drying : This light indicates that the appliance is in the drying phase.
- End/Anti-crease →|: This light is on at the end of the cooling phase, during the anticreasing phase and at the end of the programme.
- Filter : This light illuminates at the end of the programme to remind you that the filters must be cleaned.

HINTS AND TIPS

PREPARING THE LAUNDRY

- Close the zippers.
- Close the fasteners of the duvet covers.

- Do not keep ties or ribbons loose (e.g. apron ribbons). Tie them before you start a programme.
- Remove all items from the pockets.

- If an item has the internal layer made of cotton, turn it inside out. Make sure that the cotton layer is always external
- We recommend that you set the correct programme applicable for the type of fabrics that are in the appliance.
- Do not put fabrics with strong colours together with fabrics with light colours. Strong colours can bleed.
- Use an applicable programme for cotton jersey and knitwear to prevent the items to shrink.
- Make sure that the laundry weight is not more than the maximum weight that is in the programme table.
- Dry only the laundry that is applicable for tumble dryer. Refer to the fabric label on the items.

Fabric label	Description
☐	Laundry that is applicable for tumble drying.
☺	Laundry that is applicable for tumble drying and resists higher drying temperature.
☐	Laundry that is applicable for tumble drying but only with low drying temperature.
☒	Laundry that is not applicable for tumble drying.




CARE AND CLEANING

CLEANING THE FILTER

At the end of each cycle the filter indicator is on to tell you that the filter must be cleaned.



The filter collects the fluff. The fluff occurs while the cloths are dried in the tumble dryer.

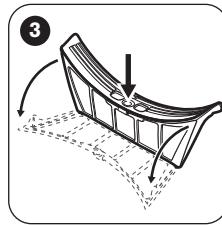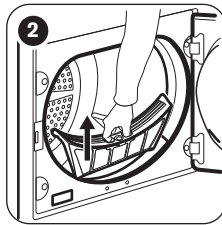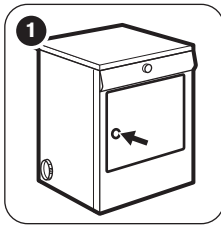

- 1 Open the door.
- 2 Pull the filter.
- 3 Open the filter
- 4 Use a moist hand to clean the filter.
- 5 If necessary clean the filter with warm water using a brush.
- 6 Close the filter.
- 7 Remove fluff from the filter socket. For this a vacuum cleaner can be used.
- 8 Put the filter inside the filter socket.

CLEANING THE DRUM



WARNING! Disconnect the appliance before you clean it.

Use a standard neutral soap detergent to clean the inner surface of the drum and drum ribs. Dry the cleaned surfaces with a soft cloth.



CAUTION! Do not use abrasive materials or steel wool to clean the drum.

CLEANING THE CONTROL PANEL AND HOUSING

Use a standard neutral soap detergent to clean the control panel and housing.

Use a moist cloth to clean. Dry the cleaned surfaces with a soft cloth.



CAUTION! Do not use furniture cleaning agents or cleaning agents which can cause corrosion to clean the appliance.

TROUBLESHOOTING

Problem	Possible solution
You cannot activate the appliance.	Make sure that the mains plug is connected to the mains socket.
	Check fuse in fuse box (domestic installation).
The programme does not start.	Press Start/Pause.
	Make sure that the appliance door is closed.
The appliance door does not close.	Make sure that the installation of the filter is correct.
	Make sure that the laundry does not catch between the appliance door and the rubber seal.
The display shows a long programme duration. ¹⁾	Make sure that the weight of the laundry is applicable to the duration of the programme.
	Make sure that the filter is clean.
	The laundry is too wet. Spin the laundry in the washing machine again.
	Make sure that the room temperature is not too warm.
The display shows a short programme duration.	Set the Time Drying or the Extra Dry programme.
The display shows Err ²⁾ .	If you want to set a new programme, deactivate and activate the appliance.
	Make sure that the options are applicable to the programme.
The display shows (e.g. E51) ²⁾ .	Deactivate and activate the appliance. Start a new programme. If the problem occurs again, contact the Service.

1) After maximum 5 hours, the programme ends automatically

2) only dryers with the display.

If the drying results are not satisfactory

- The set programme was incorrect.
- The filter is clogged.

- There was too much laundry in the appliance.
- The drum is dirty.
- Incorrect setting of the conductivity sensor.
- The airflow slots are clogged.

TECHNICAL DATA

Height x Width x Depth	850 x 600 x 600 mm (maximal 630 mm)
Max. depth with the appliance door open	1090 mm
Max. width with the appliance door open	950 mm
Adjustable height	850 mm (+ 15 mm - feet regulation)
Drum volume	108 l
Maximum load volume	7 kg
Voltage	230-240 V
Frequency	50 Hz
Necessary fuse	13 A
Total power	2600 W
Energy efficiency class	C
Energy consumption ¹⁾	4,25 kWh
Annual energy consumption ²⁾	512 kWh
Left—on mode power absorption	0,50 W
Off mode power absorption	0,50 W
Type of use	Household
Permitted ambient temperature	+ 5°C to + 35°C
Level of protection against ingress of solid particles and moisture ensured by the protective cover, except where the low voltage equipment has no protection against moisture	IPX4

1) With reference to EN 61121. 7kg of cotton centrifuged at 1000 rpm.


2) Energy consumption per year in kWh, based on 160 drying cycles of the standard cotton programme at full and partial load, and the consumption of the low-power modes. Actual energy consumption per cycle will depend on how the appliance is used (REGULATION (EU) No 392/2012).


CONSUMPTION DATA

Programme	Spun at / residual humidity	Drying time	Energy consumption
Cottons 7 kg			
Cupboard Dry	1400 rpm / 50%	110 min.	3,70 kWh
	1000 rpm / 60%	125 min.	4,25 kWh

Programme	Spun at / residual humidity	Drying time	Energy consumption
Iron Dry	1400 rpm / 50%	85 min.	2,55 kWh
	1000 rpm / 60%	97 min.	3,20 kWh
Synthetics 3 kg			
Cupboard Dry	1200 rpm / 40%	44 min.	1,20 kWh
	800 rpm / 50%	49 min.	1,47 kWh

ENVIRONMENT CONCERNS

Recycle the materials with the symbol . Put the packaging in applicable containers to recycle it. Help protect the environment and human health and to recycle waste of electrical and electronic appliances. Do not dispose appliances marked with

the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.

WWW.ZANUSSI.COM/SHOP



CE

136937200-A-042015

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>