

Make sure you have the following package contents:



Wireless USB Hub Wireless USB Adapter Adapter Stand (optional) Power Supply



 
Mini-USB Cable (A to Mini-B) Installation CD Quick Installation Guide

Setup for XP Users

1. Insert the Belkin driver-installation CD into your CD-ROM drive. After a few moments, the setup application should appear on your computer screen.

Note: If the setup application does not appear, double-click “My Computer”, and then click your CD-drive icon. This will load the setup-applications main page.


2. Click “Install driver” and follow the prompts to complete the software-install process.
3. a. Connect the power supply to the Hub.
b. Attach the mini-USB cable to the mini-USB port on the side of the Hub and the other end to your computer’s built-in USB port (**Fig. 1**). This will allow your computer to recognize the Hub.

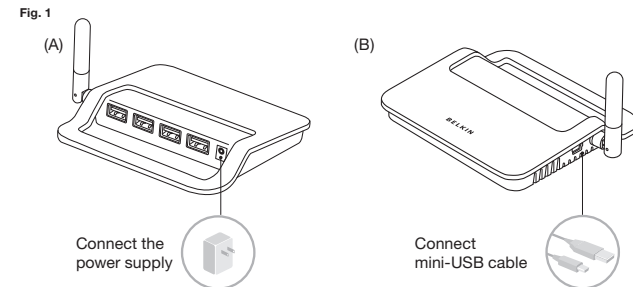


4. Wait approximately one minute for security to become enabled. A prompt will indicate that the security setup is complete (**Fig. 2**).



 5. Once this process is complete, unplug and remove the mini-USB cable from the Hub and computer. This cable is needed only on the first installation. Store the USB cable for another computer installation if desired.
6. Connect the Wireless USB Adapter to your computer’s USB port. Windows will automatically find and load drivers to complete installation (**Fig. 3**).

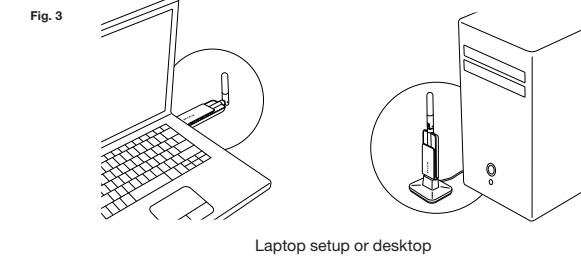

 7. Plug your USB devices into the Hub and access them wirelessly (**Fig. 4**).

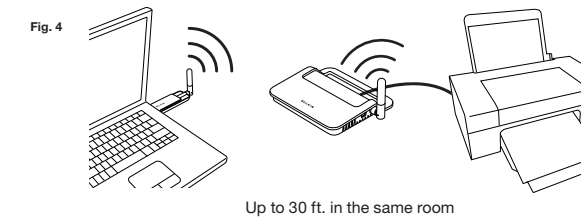

Now you can print, play music, scan, download photos and burn CDs from anywhere in the same room, up to 30 feet away, without the hassle of connecting cables. With the Belkin Wireless USB Hub, you have the freedom to roam and stay connected.

Setup for Windows Vista™ Users

 
1. Insert the Belkin driver-installation CD into your CD-ROM drive. After a few moments, the setup application should appear on your computer screen.

Note: If the setup application does not appear, double-click “My Computer”, and then click your CD-drive icon. This will load the setup-applications main page.

2. Click “Install driver” and follow the prompts to complete the software-install process.

3. Double-click the “Wireless USB Control Center” icon found in the Windows system tray, found at the bottom-right corner of the Windows desktop.


4. a. Connect the power supply to the Hub.
b. Attach the mini-USB cable to the mini-USB port on the side of the Hub and the other end to your computer’s built-in USB port (**Fig. 1**). This will allow your computer to recognize the Hub.

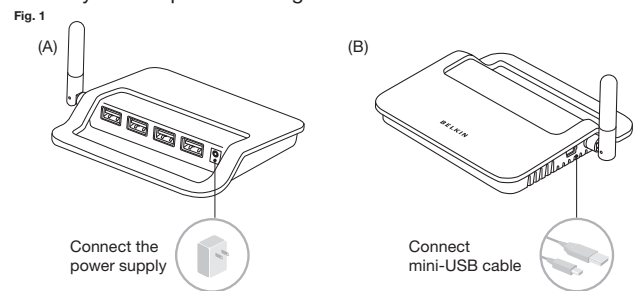


5. Wait approximately one minute for security to become enabled. A prompt will indicate that the security setup is complete (**Fig. 2**).



 6. Once this process is complete, connect the Wireless USB Adapter to your computer’s USB port. Windows will automatically find and load drivers to complete installation (**Fig. 3**).

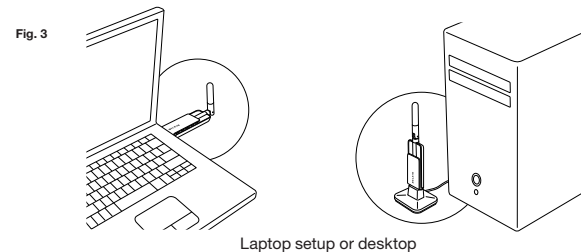

 7. You can now plug your USB devices into the Hub and access them wirelessly (**Fig. 4**).

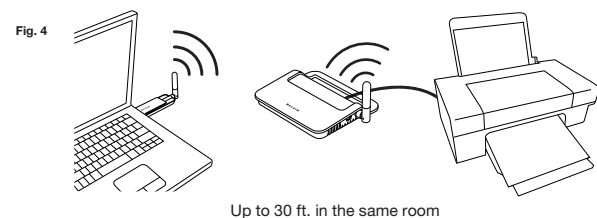

BELKIN®

Wireless USB Hub

BELKIN®

Wireless USB Hub

BELKIN®

www.belkin.com

Belkin Tech Support

US: 800-223-5546, ext. 2263

310-898-1100, ext. 2263

UK: 0845 607 77 87

Australia: 1800 235 546

New Zealand: 0800 235 546

Singapore: 65 64857620

Europe: www.belkin.com/support

Start Here →

This guide will lead you through the basic steps needed to install the Belkin Wireless USB Hub. For further information or greater detail regarding installation, please refer to the Belkin User Manual for this product.

Quick Installation Guide

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>