


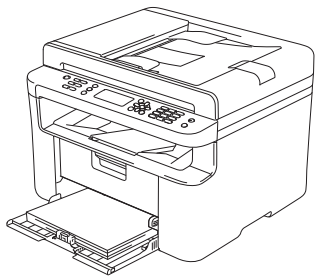

# Setting up the DocuPrint M115 w printer on a wireless network




## 1 WPS-PBC (WPS Button)

Wi-Fi Protected Setup (WPS) is a network security standard that allow users to easily secure a wireless home network, and connect wireless client devices (iPad's etc.) to it, without accessing the router's configuration screens, and without even knowing the wireless network's security key/passphrase.


NOTE: A WPS-PBC enabled wireless access point is required. Please refer to the manual provided with the router.

Before starting WPS-PBC, confirm the position of the WPS button on the wireless access point or router. Please refer to the manual provided with the router.

- 1 Press the [Wi-Fi/WPS] button on the printer control panel.

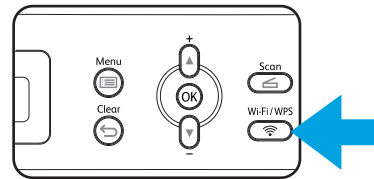

- 2 Press the [Up] button to confirm 'Setup Wi-Fi'.

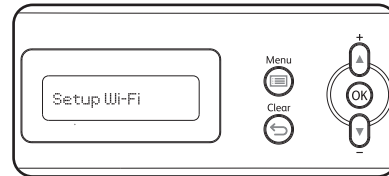

- 3 Connecting WLAN is displayed whilst the connection is established.

NOTE: There is a 2 minute time-out to complete the setup procedure


- 4 Complete the WPS-PBC procedure on the wireless access point.

- 5 'Connected' is displayed when the wireless connection is successfully established and a 'WLAN Report' will be printed. The [Wi-Fi/WPS] button will also be lit solid green.


## 2 WPS-PIN

NOTE: A WPS-PIN enabled wireless access point is required.


- 1 Press the [Menu] button on the printer control panel.

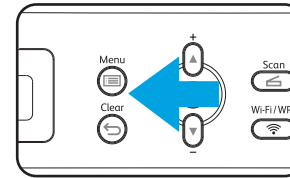


- 2 Press the [Up] or [Down] arrow buttons to select [Network], and then press the [OK] button.

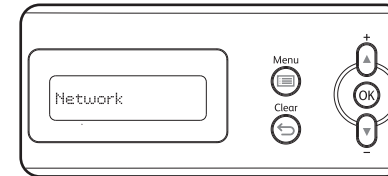


- 3 Press the [Up] or [Down] arrow buttons to select [WLAN], and then press the [OK] button.

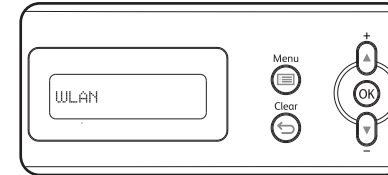

- 4 Press the [Up] or [Down] arrow buttons to select [WPS w/PIN Code], and then press the [OK] button.

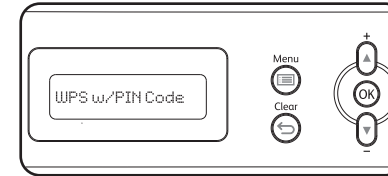

- 5 Press the [Up] arrow to confirm 'WLAN Enable'.

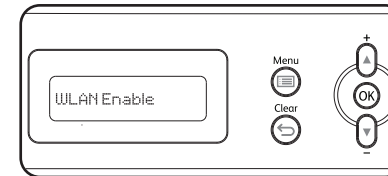

- 6 'Connecting WPS' and the PIN is displayed. Please note down the PIN.


NOTE: There is a 2 minute time-out to complete the setup procedure

- 7 Complete the WPS-PIN procedure on the wireless access point. Please refer to the manual provided with the router.


- 8 'Connected' is displayed when the wireless connection is successfully established and a 'WLAN Report' will be printed. The [Wi-Fi/WPS] button will also be lit solid green.

## 3 Auto SSID


- 1 Press the [Menu] button on the printer control panel.

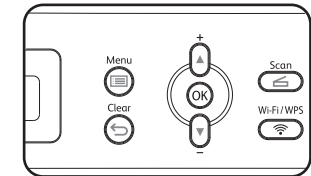


- 2 Press the [Up] or [Down] arrow buttons to select [Network], and then press the [OK] button.

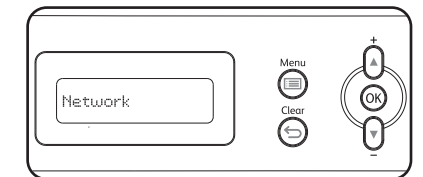

- 3 Press the [Up] or [Down] arrow buttons to select [WLAN], and then press the [OK] button.

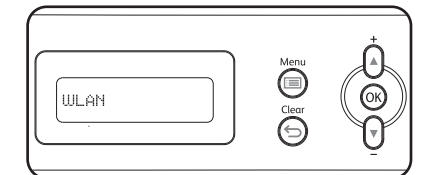

- 4 Press the [Up] or [Down] arrow buttons to select [Setup Wizard], and then press the [OK] button.

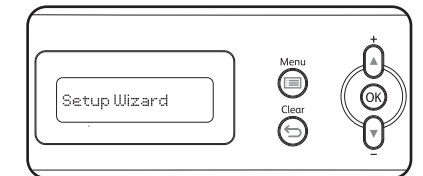

### Before you begin


Ensure you have the name of your wireless network (SSID), wireless network password, security and encryption types.

To find the name and type of security encryption of your wireless network on your computer (example Windows 7):

- a) Go to the Start Menu. Select **Control Panel** and click on **Network and Sharing Centre**.
- b) Click on **Manage Wireless Networks**. Double click on your preferred wireless network. Note the SSID. Click on the security tab. Note the security and encryption types.



5 Press the [Up] arrow to confirm 'WLAN Enable'.

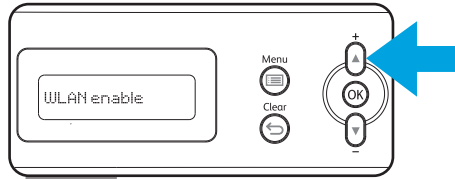

6 'Searching SSID' is displayed whilst the printer searches for available wireless networks.

7 Press the [Up] or [Down] arrow buttons to select the correct SSID and then press the [OK] button. 'Network Key' is displayed.

8 Use the [Up] or [Down] arrow buttons to enter the Network Key (Password). Use the [OK] button to move to the next character position.

9 When the Network Key (Password) is entered, press the [OK] button.


10 Use the [Up] or [Down] arrow buttons to select [Yes], and then press the [OK] button.

11 Connecting WLAN is displayed whilst the connection is established.


12 'Connected' is displayed when the wireless connection is successfully established and a 'WLAN Report' will be printed. The [Wi-Fi/WPS] button will also be lit solid green.

## 4 Manual SSID


1 Press the [Menu] button on the printer control panel.

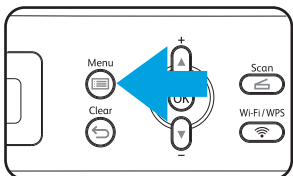


2 Press the [Up] or [Down] arrow buttons to select [Network], and then press the [OK] button.

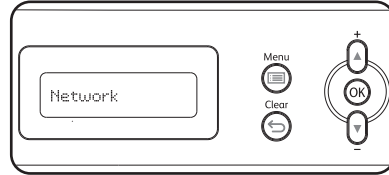


3 Press the [Up] or [Down] arrow buttons to select [WLAN], and then press the [OK] button.

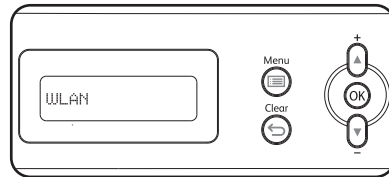

4 Press the [Up] or [Down] arrow buttons to select [Setup Wizard], and then press the [OK] button.

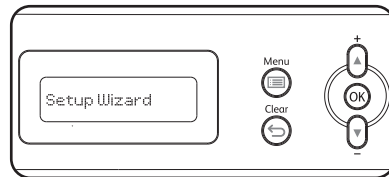


5 Press the [Up] arrow to confirm 'WLAN Enable'.

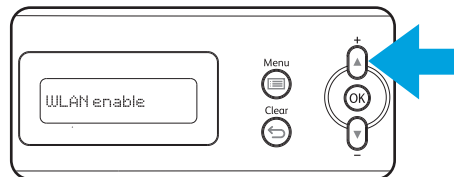

6 'Searching SSID' is displayed whilst the printer searches for available wireless networks.

7 Use the [Up] or [Down] arrow buttons to select [<New SSID>], and then press the [OK] button.

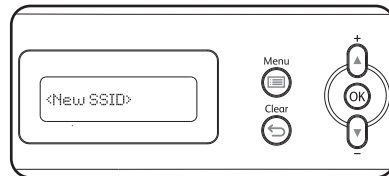

8 Use the [Up] or [Down] arrow buttons to enter the Wireless Network SSID. Use the [OK] button to move to the next character position. When the Wireless Network SSID is entered, press the [OK] button.

9 Use the [Up] or [Down] arrow buttons to select 'Network Mode', and then press the [OK] button.

Choose from: Infrastructure or Ad-Hoc

10 Use the [Up] or [Down] arrow buttons to select 'Authentication Mode', and then press the [OK] button.

Choose from: Open System, Shared Key, WPA/WPA2-PSK, LEAP, EAP-FAST, PEAP, EAP-TTLS.

11 Use the [Up] or [Down] arrow buttons to select 'Encryption Type', and then press the [OK] button.

Choose from: AES, TKIP + AES.

12 Use the [Up] or [Down] arrow buttons to select 'Network Key' (Password), use the [OK] button to move to the next character position. When the Wireless Network SSID is entered, press the [OK] button.


13 Use the [Up] or [Down] arrow buttons to select [Yes], and then press the [OK] button.

14 Connecting WLAN is displayed whilst the connection is established.


15 'Connected' is displayed when the wireless connection is successfully established and a 'WLAN Report' will be printed. The [Wi-Fi/WPS] button will also be lit solid green.

## 5 Reset Wireless Network Settings


1 Press the [Menu] button on the printer control panel.

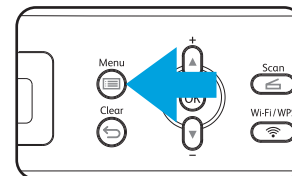


2 Press the [Up] or [Down] arrow buttons to select [Network], and then press the [OK] button.

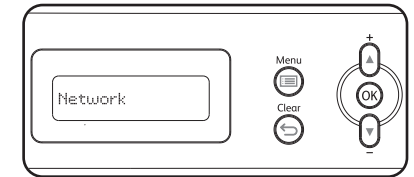

3 Press the [Up] or [Down] arrow buttons to select [Network Reset], and then press the [OK] button.

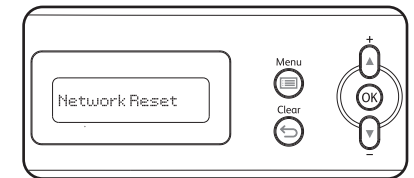

4 Press the [Up] arrow button to confirm 'Network Reset'.

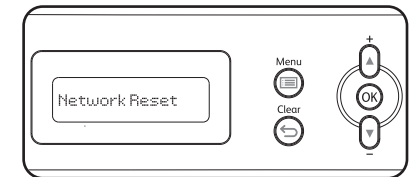

5 Press the [Up] arrow button to confirm 'Reboot'.

6 'Accepted' will temporarily be displayed, then 'Please Wait' will be displayed while the printer reboots.

Find more support for your printer by visiting our comprehensive support website at:

<http://onlinesupport.fujixerox.com/>

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>