 


AGE 4+
06618

TO ORDER AND REPLACE LIGHT BULB

Order light bulb by contacting HASBRO at 1-800-327-8264. (Bulb is not available in stores.)

Use a Phillips screwdriver to remove 2 screws from bulb unit. Remove unit from toy. Turn unit over, remove screw from bulb cover and remove cover. Pull out old light bulb and replace with new bulb. Refasten bulb cover and bulb unit.

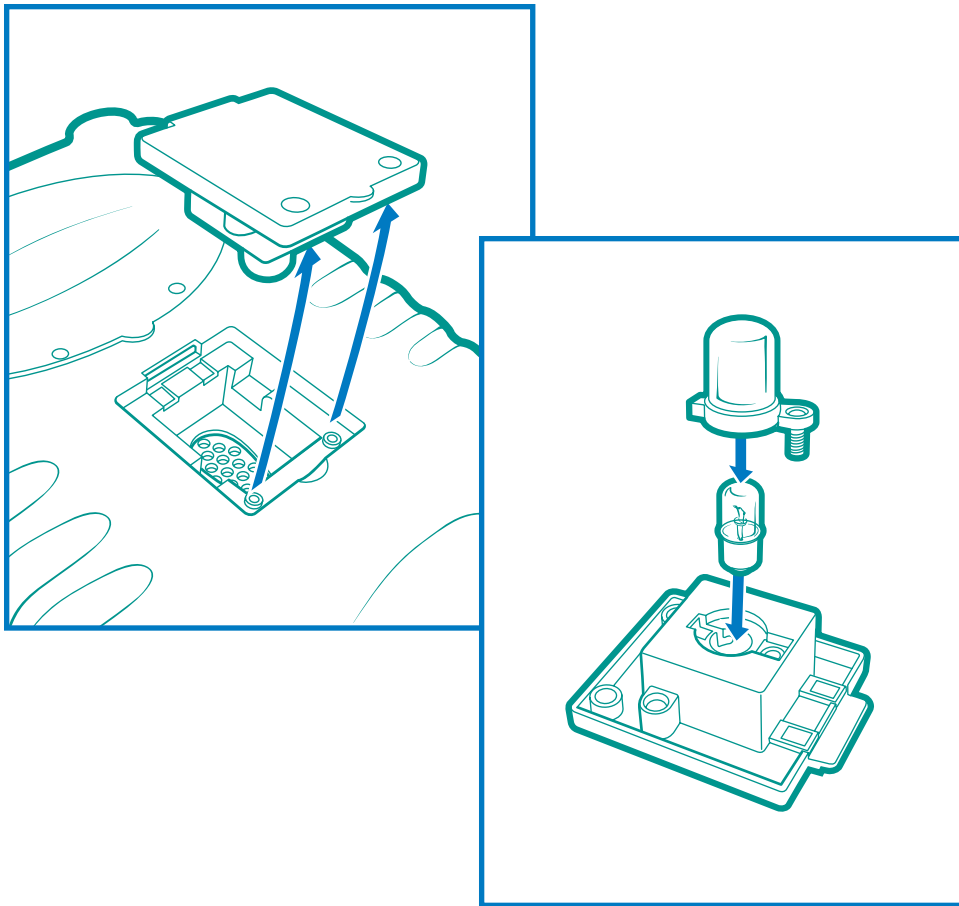

 
Lite Brite®

FLAT SCREEN

Thank you for purchasing this LITE-BRITE brand toy!

This set includes LITE-BRITE flat-screen console, over 200 pegs, 10 picture sheets (8 classic, 2 free-form), and instructions.

Requires 3 "D" alkaline batteries (not included). Phillips screwdriver (not included) required for battery installation.

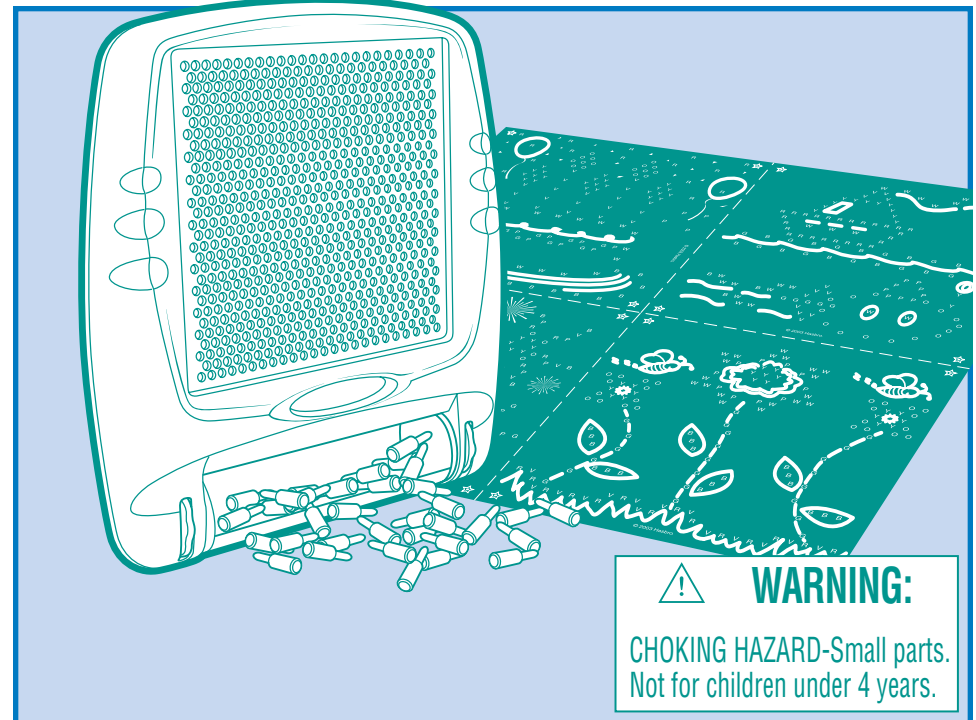


WARNING:

CHOKING HAZARD—Small parts.
Not for children under 4 years.

TO INSTALL BATTERIES

 Using Phillips screwdriver, loosen screws in battery compartment cover (screws stay attached to cover). Remove cover. Insert 3 "D" alkaline batteries as indicated. Replace cover and tighten screws.

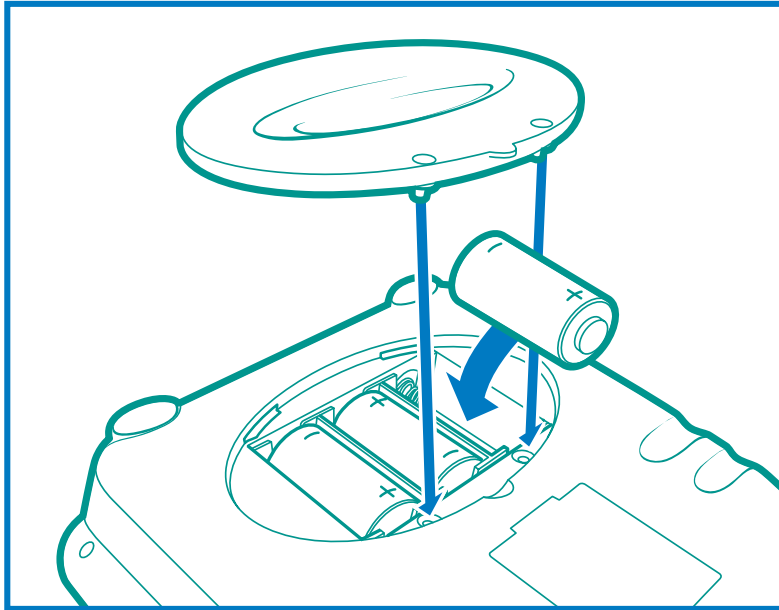


CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
2. Do not mix old batteries and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
3. Always remove weak or dead batteries from the product.

TO CREATE LITE-BRITE PICTURES

The LITE-BRITE Flat Screen toy comes with over 200 pegs and 10 design pictures to make colorful, light-up creations!

 - 1 Tear the picture sheets along the perforated lines and remove.
- 2 Place a picture sheet flat and straight on the peg screen. Position the sheet so that the star on each corner is next to a corner on the peg screen. Push a peg through the hole in each star to secure the picture to the screen.
- 3 When creating a picture, follow the printed letters on the sheet to tell which colored pegs to use (see chart). If you are making a free-form picture, simply insert the pegs through the holes wherever you want for your own unique designs.
- 4 Insert the colored pegs through the paper and into the peg screen as far as they will go.
- 5 Press the button to make your creations shine! Each time you press the button, the light will at first be bright, then fade out within 3 minutes to conserve battery life.

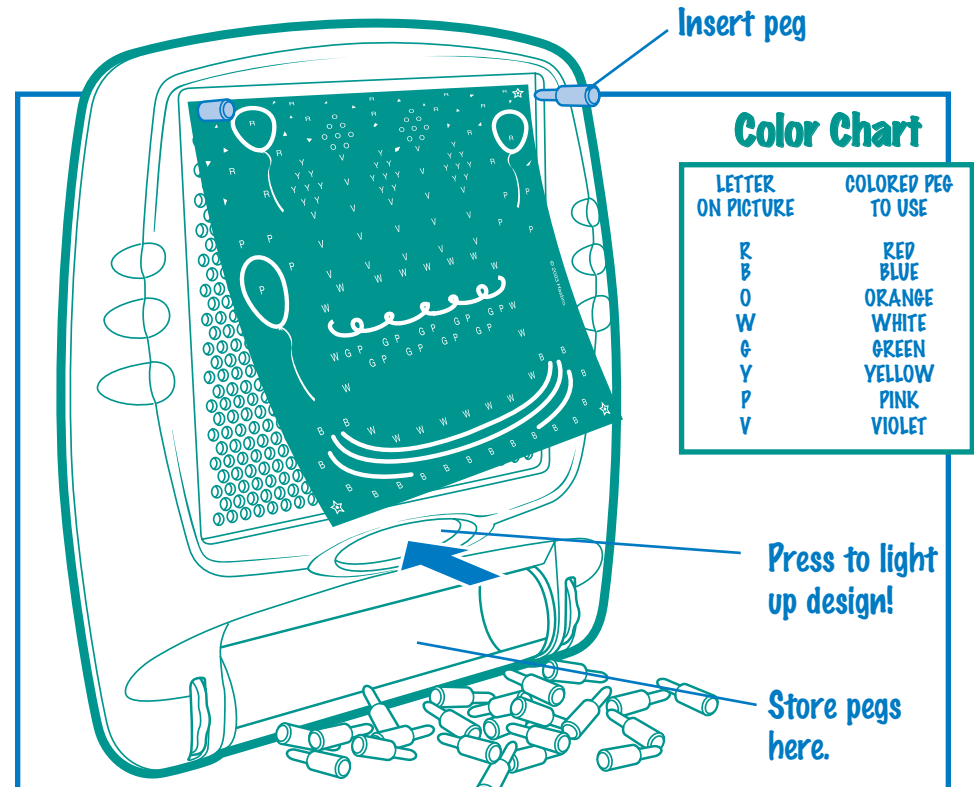

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>