



WARNING Young children can be killed or seriously injured when furniture tips over. Before installing your ION EDUCATIONAL GAMING SYSTEM, please read and follow the enclosed Consumer Product Safety Alert.


SETTING UP YOUR ION EDUCATIONAL GAMING SYSTEM™

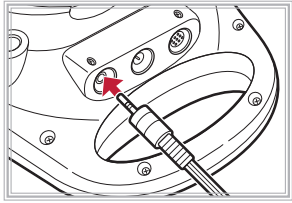

1. Plug AV jack into "AV Out" port on Console.

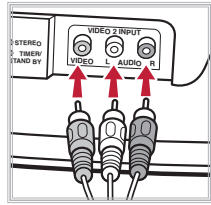


2. Plug RCA-type connectors into TV. Match colors of connectors to the colors of ports on your TV.

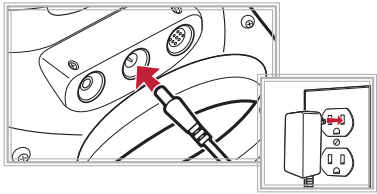


3. Plug Power Adaptor into socket on console.
4. Plug Power Adaptor into wall socket.
5. Place Console with built-in camera on flat surface.
6. Position camera towards child and his/her play space.
7. Always ensure TV is securely placed on lower furniture or TV stand as per enclosed Consumer Product Safety Alert.


GETTING READY TO PLAY

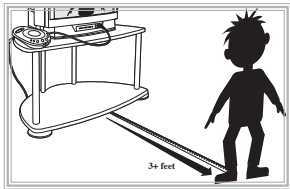


1. Unroll measuring strip 3 feet from base of TV. Make sure to stand behind the strip while playing. Clear the play area in front of the TV of any obstructions.

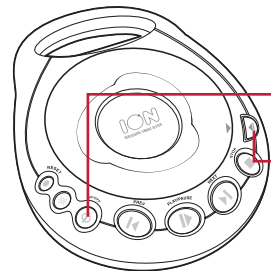

2. Press On button to turn Console on.
3. Press Open button.

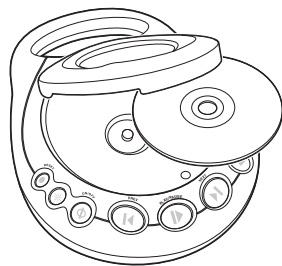

4. Insert Active Learning Disc.
5. Close lid of player.
6. Align child with player outline on the TV screen.
7. As a safety precaution, advise children to never touch TV. Always supervise children while using the system.

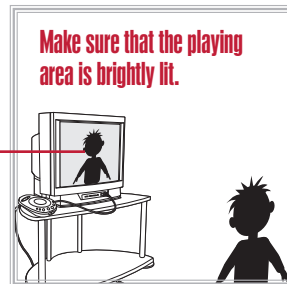

Make sure that the playing area is brightly lit.

ADULT SUPERVISION REQUIRED.

Product works on units with RCA-type audio/video input jacks only.

AGES 4-7


73085

PLAYSKOOL

QUICK START GUIDE


ION
EDUCATIONAL GAMING SYSTEM™

To start playing with your ION EDUCATIONAL GAMING SYSTEM™, follow these simple steps. See the enclosed instruction book for more detailed information and game instructions.

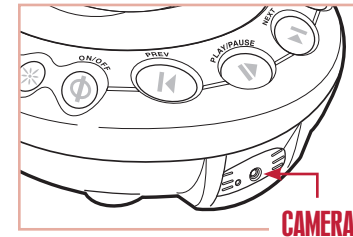

CAMERA


CONSOLE

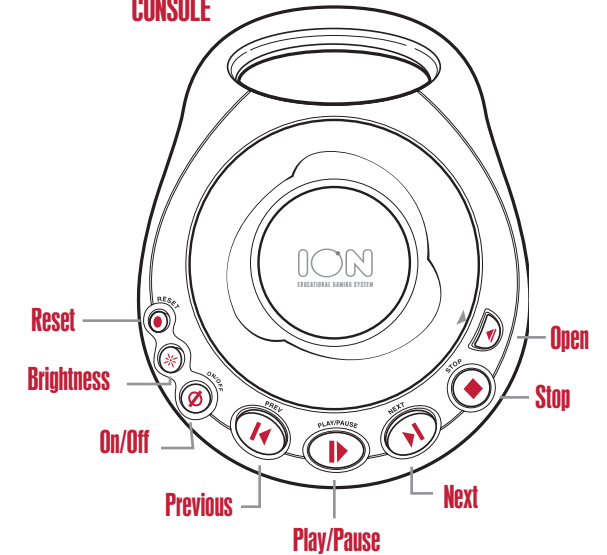


MEASURING STRIP




TV CONNECTOR CORD

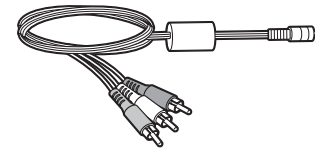

ACTIVE LEARNING DISC

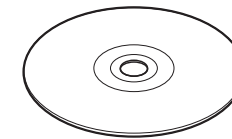

POWER ADAPTOR
(ADS-7515PC)

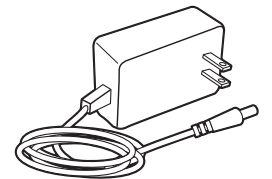

TIPS

Make sure that the playing area is brightly lit.

Make sure there is no movement behind the player, as background motion may hinder game play.

For children of various heights, an adult should tilt the angle of the camera to adjust it to the child's height.

Make sure you have enough room to play. Consider the space around you and clear the area of any obstructions.

For ideal camera performance, your child should wear clothing that contrasts with the predominant color appearing in the background.



Product and colors may vary. © 2006 Hasbro. All Rights Reserved. TM & © denote U.S. Trademarks. The products described herein are covered by U.S. Patent No. 5,534,917 which has been licensed by GestureTek, Inc. ("GestureTek") to Hasbro, Inc. ("Hasbro"). GestureTek is not affiliated with, nor does GestureTek endorse the operability of, the products described herein. U.S. Pat. No. 5,534,917. PN 6591690000

Visit us at
playskool.com
Questions? Call 1-800-PLAYSKL

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>