

# ACCUSPLIT®

## 605XE EVENT STOPWATCH OPERATING INSTRUCTIONS



### EVENT STOPWATCH

- A or C → Start
- A or C → Stop (time out)
- A or C → Restart (time in)
- A or C → Stop
- B → Reset

### SPECIFICATIONS

#### Operating Temperature


14°F to 138°F (-10°C to 59°C)

#### Quartz Crystal Accuracy

±0.002% (accuracy may vary with shock, temperature, or aging of crystal).

#### Batteries

Batteries should last for 3 years. If display becomes dim, open back and replace with Duracell D357, Eveready D357, or Ray-O-Vac RW42.

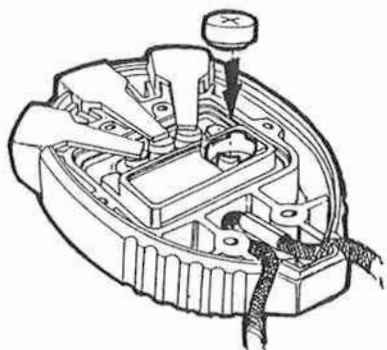

**NO-PROOF-OF-PURCHASE LIMITED WARRANTY**

See label on back of unit for details, or check

<http://support.ACCUSPLIT.com>

ACCUSPLIT, Inc

3090 Independence Drive, Suite 148

Livermore, CA 94551 USA

800-935-1996 • 925-290-1900

FAX 925-290-1930

[www.ACCUSPLIT.com](http://www.ACCUSPLIT.com) • [support@ACCUSPLIT.com](mailto:support@ACCUSPLIT.com)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>