




## 625XCL CUM/LAP SPLIT STOPWATCH OPERATING INSTRUCTIONS

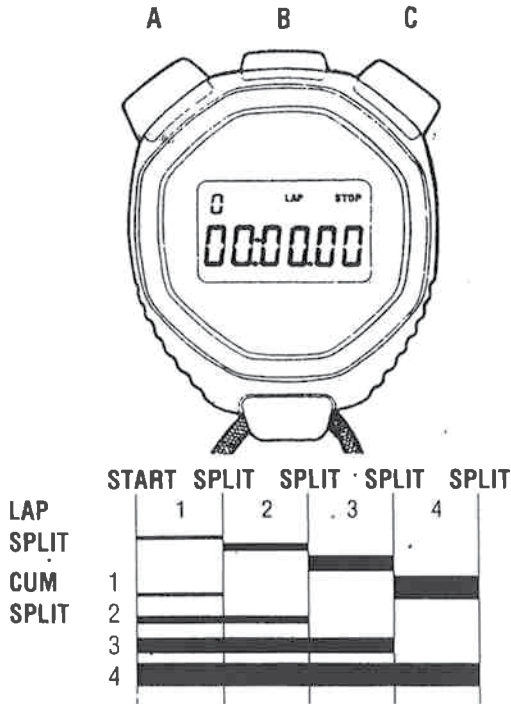

- Event**
- C → Start
  - C → Stop
  - C → Restart (time out)
  - C → Stop
  - A → Reset
- Split (CUM or LAP)**
- B → LAP or CUM appears
  - C → Start
  - A → Split
  - A → Return to running time
  - C → Stop
  - A → Reset
- 1-2 Fast Split**
- C → Start
  - A → Split Display shows first split
  - C → Stop
  - A → Display shows second split
  - A → Reset

**NO-PROOF-OF-PURCHASE LIMITED WARRANTY**  
See label on back of unit for details, or check  
<http://support.ACCUSPLIT.com>

### SPECIFICATIONS

#### Operating Temperature


14°F to 138°F (-10°C to 59°C)

#### Quartz Crystal Accuracy

±0.002% (accuracy may vary with shock, temperature, or aging of crystal).

#### Batteries

Batteries should last for 3 years. If display becomes dim, open back and replace with Duracell D357, Eveready D357, or Ray-O-Vac RW42.

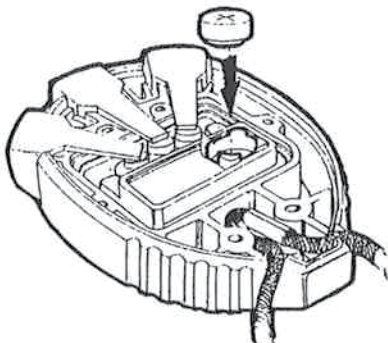

ACCUSPLIT, Inc  
3090 Independence Drive, Suite 148  
Livermore, CA 94551 USA  
800-935-1996 • 925-290-1900  
FAX 925-290-1930  
[www.ACCUSPLIT.com](http://www.ACCUSPLIT.com) • [support@ACCUSPLIT.com](mailto:support@ACCUSPLIT.com)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>