



ACCUSPLIT 725MX TURBO OPERATING INSTRUCTIONS

BASIC STOPWATCH OPERATIONS

Master Reset

R+L (2sec) – Reset**
All segments go blank, then come on briefly.

Event

R – Start
R – Stop (Display shows "SPLIT")
R(2sec) – Reset**



Dual Split Memory with Split Counter

R – Start (Shows Running DUAL Time)
R – Split* (Top shows CUM 1, Bottom shows LAP 1)
R – Split* (shows CUM 2, Bottom shows LAP 2)
R – Split* (Top shows CUM 3, Bottom shows LAP 3)
R – Split* (Top shows CUM 4, Bottom shows LAP 4)
R(2sec) – Reset**
*Split Counter always shows Current Split
Push C to return to Running Time

Memory Review (before Resetting)

L – Review* (Bottom shows AVE LAP Split, Top shows TOTAL ELAPSED TIME)
L – Review (Shows last DUAL Split)
L – Review (Shows next DUAL Split, in reverse order)
*Reviews at any time in reverse numerical order. Hold down for Rapid Review.

STOPWATCH AND SPEED/RATE (Rate = Units/Time)

Speed/Rate Function Setting

S1(2sec) Enter Turbo (Speed/Rate) Set Function or S1(4sec) – Enters and Reset fields to zero (as for DUAL SPLIT timing)

S2 – Select field to be Set
S3 – Set field to Desired Setting
S4 – Exit Setting Function
Digit is Distance or Sample Count for Speed or Rate Computation – /Hr(P-HR) and /Min(P-Mn). Computes in "per Hour" or "per Minute" rate.
Note: Computes in "per Sec" rate if the Distance or Sample Count (Strokes, Strides, Units, etc.) is divided by 60, then entered. (Since the "input" is divided by 60, so is the output.)

Speed/Rate Function Operation


R – Start (Shows Running LAP Time)
R – Split* (Top and Bottom show SPEED/RATE 1/LAP 1)
R – Split* (Top and Bottom show SPEED/RATE 2/LAP 2)
R – Split* (Top and Bottom show SPEED/RATE 3/LAP 3)
R(2sec) – Reset LAP and SPEED/RATE to zero**
*For only chance to view Total Average Speed/Rate, push L.

Memory Review (before Resetting)

L – Review* (Bottom shows AVE TOTAL SPEED/RATE, Top shows TOTAL ELAPSED TIME)
L – Review* (Bottom shows AVE LAP Split, Top shows TOTAL ELAPSED TIME)
L – Review (Shows last SPEED/RATE and LAP Split)
L – Review (Shows next SPEED/RATE and LAP Split, in reverse order)
*Reviews at any time in reverse numerical order. Hold down for Rapid Review.

BATTERY CHANGING

See specifications panel and drawing to right.

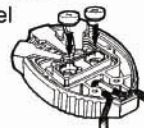

**Reset before 30 hrs. (end of range) and rollover. After rollover, use Master Reset.

ACCUSPLIT, Inc.

3090 Independence Drive

Suite 148

Livermore, CA 94551 USA

800-935-1996 • 925-290-1900

FAX 925-290-1930

www.ACCUSPLIT.com

support@ACCUSPLIT.com

REGISTER NOW Please return your A725MXT Registration to the Repair Center address in the warranty, & we will let you know about future products.

Email (preferred)

User

SPECIFICATIONS

Batteries: Batteries should last for 3 years. If display becomes dim, open back and replace with SR44 or equivalent.
Operating Temperature: 14°F to 138°F (-10°C to 59°C).
Quartz Crystal Accuracy: 0.01 sec/hr (accuracy may vary with shock, temperature or aging of crystal).

NO-PROOF-OF-PURCHASE LIMITED WARRANTY

See label on back of unit for details, or check <http://support.ACCUSPLIT.com>

support@accusplit.com
www.accusplit.com

ASSEMBLED IN HONG KONG
© 2005 ACCUSPLIT

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>