 


TIME TIMER

Wrist Timer™

"the difference is the disk"

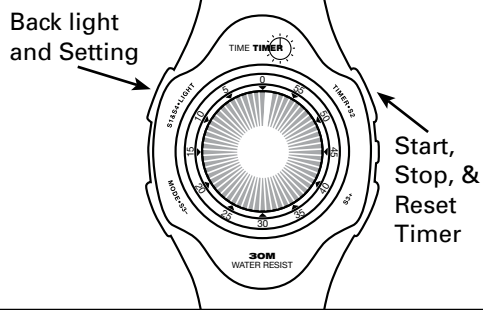 


Introduction

Congratulations on your purchase of the Time Timer Wrist Timer! No other tool communicates the concept of elapsed time as well as the Time Timer. Time Timer reinforces the sense of elapsed time with a graphic depiction of the time remaining.

Understanding the Timer

The Time Timer Wrist Timer™ provides a graphical count down timer, using the patented Time Timer technology. Red represents the time remaining. The disk diminishes as time elapses until the display is blank and no red is visible on the timer face. Time elapses in a clockwise direction. When active, the Alarm sounds to let you know that time has run out.

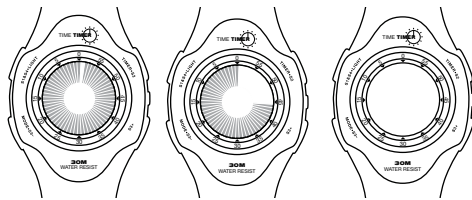

59 minutes remaining

45 minutes remaining

Time's up

 
The timer also comes with a convenient back light, to help you see the display in low light conditions. Press the LIGHT button (upper left) to turn on the back light.

Using the Timer

The timer can be set anywhere from one minute up to one hour. There is an audible alarm to let you know when time has expired.

The timer comes from the factory set to one hour, and the audible alarm set to OFF.

To change the settings, see the following instructions.

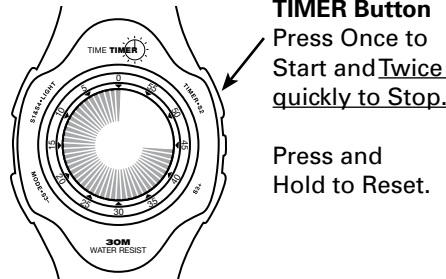

- To Start the timer, press the TIMER button (upper right).
- To Stop the timer, press the TIMER button TWICE, in rapid succession (press the button twice within 1/2 second).
- To Reset the timer, press and hold the TIMER button for at least 2 seconds.

 
If turned ON, the Alarm will sound when time expires. The alarm sounds for 5 seconds, or until cancelled by pressing any button.

Setting the Timer

The timer must be stopped before changing settings. The timer uses a standard setting procedure:

- Press and hold "S1" to enter setting mode
- Press "S2" to change the field to set
- Press "S3" to change the value of the field being set
- Press "S4" to exit setting mode

To set the timer, press and hold the S1 button (upper left) for about three seconds, until the numbers in the middle begin to flash, indicating that you have entered setting mode.

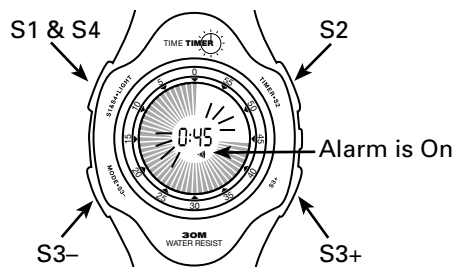

Press S2 (upper right) to cycle through the fields you can set. The fields are: Time setting → Alarm On/Off → Time setting. Press S2 until you see digits in the center of the display. Now you can set the timer. Press S3+ (lower right) to increase the timer set point, and press S3- (lower left) to decrease the set point. You will see both the digits and also the dial size increase or decrease. For a setting of 60 minutes, the dial will show completely red.

Once you have set the desired time, press S2 once to change Alarm On/Off Setting. You will see the word "ON" or "OFF" plus an alarm symbol, both flashing. Press S3+ or S3- to turn the Alarm on or off.

Pressing S2 again will return you to the Timer setting. Press S4 once (upper left) to exit setting mode. Leaving the timer unattended for 30 seconds in set mode causes it to save any changes and then exit set mode.

Setting Notes:

1. You can either press and release S3+ and S3- to change field values, or "press and hold" either of the S3 buttons to rapidly change the field value.
2. You can return to the default timer setting of 60 minutes by simultaneously pressing S3+ and S3-.

Changing the Battery

When the display grows dim or goes out entirely, it is time for a new battery. Using a small Phillip's head jeweler's screwdriver, remove the four screws holding back of timer onto case. Gently slide the old battery from its slot, and replace with new CR2025 Lithium battery. Make sure that the positive ("+") terminal side is facing up.

Power Reset

You can reset the timer to original factory settings by pressing S3+ and S3- (the two lower buttons) together, and holding for at least five seconds.

Manufactured for

Time Timer, Inc.
7707 Camargo Road
Cincinnati, OH 45243

(513) 561-4199
Fax (513) 561-4699

www.timetimer.com

1-877-771-TIME
(1-877-771-8463)

U. S. PATENT NO. D369, 619 & 5,662,479

REGISTER NOW. Please return your AX810T registration to the Repair Center address in the warranty, and we will let you know about future products.

Email _____

User _____

5 YEAR NO-PROOF-OF-PURCHASE LIMITED WARRANTY

Free service for first year (see back of watch for date). \$15 fee applies thereafter. Return unit with daytime phone number to: AST Repair Center, 3090 Independence Drive, Suite 148, Livermore, CA 94551 USA 800-935-1996 925-290-1900 www.ACCUSPLIT.com • support@ACCUSPLIT.com

www.timetimer.com



Developed by Time Timer LLC, in cooperation with Abilitations,
"improving the lives of children with special needs"

www.abilitations.com



#998-311A

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>