 


# TIME TIMER

## Watch Plus™

*"the difference is the disk"*

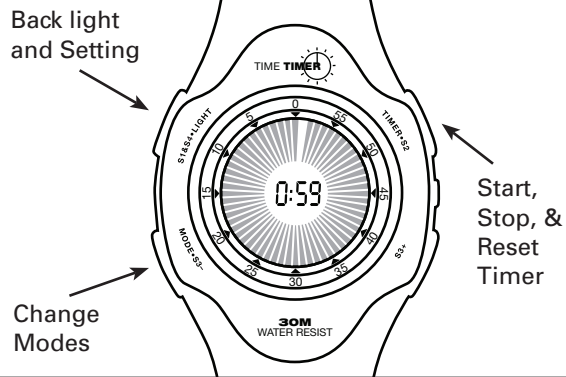

## Introduction

 
Congratulations on your purchase of the Time Timer Watch Plus™! No other tool communicates the concept of elapsed time as well as the Time Timer. Time Timer reinforces the sense of elapsed time with a graphic depiction of the time remaining.

For years, Time Timer desktop timers have been used effectively to help teachers, business people, and students of all ability levels manage their time more effectively. With the new Time Timer Watch Plus, you can have more flexibility and portability in time management than ever before.

## Understanding the Watch

The Time Timer Watch Plus has two modes of operation – Timer and Time of Day. To change between modes, press the MODE button (lower left).

**The Timer mode** provides a graphical count down timer, using the patented Time Timer technology. A red disk surrounds digits – both represent the time remaining. The disk and digital display both diminish as time elapses until no red is visible on the timer face, and the digits read "0:00". Time elapses in a clockwise direction. When active, the Pre-Alarm and Alarm sound to let you know that time is running out or has expired.

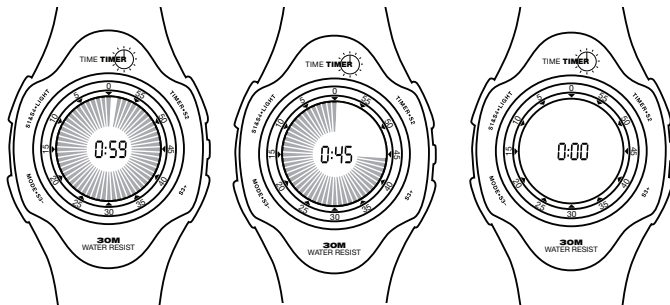

59 minutes remaining

45 minutes remaining

Time's up

**Time of Day** uses a traditional "analog" watch face to show the current time, along with a digital display of time. The watch also includes a Time of Day Alarm.

The watch also comes with a convenient back light, to help you see the display in low light conditions. Press the LIGHT button (upper left) to turn on the back light.

## Using the Timer

Press the MODE button (lower left) until you see the Time Timer's red dial.

The timer can be set anywhere from one minute up to 12 hours. There is both an audible alarm and also a pre-alarm to let you know when time is running out or has expired.

The watch comes from the factory with the timer set to one hour (indicated by 1:00 in the middle of display), and the audible alarms set to OFF.

To change the settings, see instructions below.

- To Start the timer, press the TIMER button (upper right).
- To Stop the timer, press the TIMER button TWICE, in rapid succession (press the button twice within ½ second).
- To Reset the timer, press and hold the TIMER button for at least 2 seconds.

If turned ON, the Alarm will sound when time expires. The alarm sounds for 5 seconds, or until cancelled by pressing any button.

If turned ON, the Pre-Alarm will sound according to the schedule shown below (note that Pre-Alarm can be used only if Alarm is also being used).

Table of Pre-Alarm vs Time Setting

Time Set	Pre-Alarm at last:
≤ 3 min	10 sec
3 - 10 min	30 sec
10 - 30 min	1 min
> 30 min	5 min

## Suggested Applications

In the workplace, Time Timers can be used to:

 
- Time seminars, meetings, panel discussions and presentations
- Quantify time left before appointments and deadlines
- Monitor break time
- Manage progress toward goals and agenda items
- Oversee skills tests
- Regulate study time, computer time and play time
- Measure "time out"

In the classroom, the Time Timer can be used to set time limits, measure the duration of activities and train students to make better use of available time. Use the Time Timer products to:

- Time standardized tests
- Monitor math and writing speed tests
- Measure study periods and lunch periods
- Regulate computer time
- Administer duration drills
- Show time left to play, get ready or clean up

## Using Time of Day and Alarm

Press MODE (lower left) button until the watch shows the Time, displayed both in traditional "analog" form, and also in digital format in center. Notice that the Hour hand is continuously lit, while the minute hand flashes slowly. There is also a second hand sweeping around.

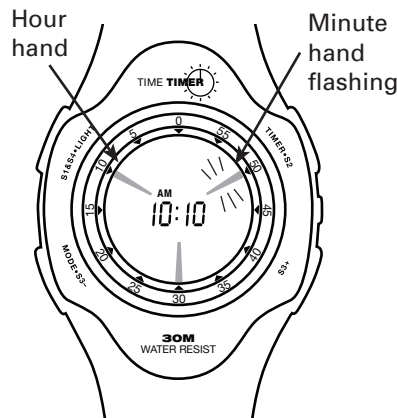

Press TIMER (upper right) button to see the Time of Day alarm setting. The watch returns to current time after a few seconds. Or, press MODE twice to see current time immediately.

When the Time of Day alarm sounds, press any button to silence it.

To change the settings for Time of Day or Time of Day Alarm, see the instructions below.

## Setting the Watch

 
The watch uses a standard setting procedure to set all modes. It works as follows:

- Press and hold "S1" to enter setting mode
- Press "S2" to change the field to set
- Press "S3" to change the value of the field being set
- Press "S4" to exit setting mode

## Setting the Timer

The timer must be stopped before changing settings.

To set the timer, first press the MODE button until you see the Time Timer's red dial display appear. Press and hold the S1 button (upper left) for about three seconds, until the numbers in the middle begin to flash, indicating that you have entered setting mode.

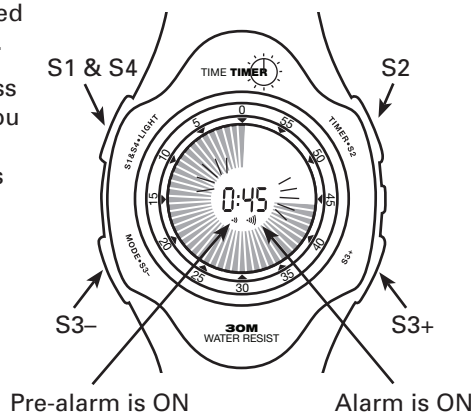

Press S2 (upper right) to cycle through the fields you can set. The fields are: Time setting → Alarm On/Off → Pre Alarm On/Off → Time setting (Note that the Pre Alarm can only be set if the Alarm is turned On).

Press S2 until you see digits in the center of the display. Now you can set the timer. Press S3+ (lower right) to increase the timer set point, and press S3- (lower left) to decrease the set point. You will see both the digits and also the dial size increase or decrease.

## Setting Notes:

1. You can either press and release S3+ and S3- to change field values, or "press and hold" either of the S3 buttons to rapidly change the field value.
2. As you pass through each hour while setting, rapid advance stops. This helps avoid overshooting your desired set point.
3. The timer can be set to a minimum of 1 minute and a maximum of 12 hrs.
4. You can return to the default timer setting of 60 minutes by simultaneously pressing S3+ and S3-.

Once you have set the desired time, press S2 once to change Alarm On/Off Setting. You will see the word "ON" or "OFF," plus an alarm symbol, both flashing. Press S3+ or S3- to turn the Alarm on or off.

If you have turned the Alarm ON, you can now change the Pre-Alarm settings by pressing S2 again. Again, the Pre-Alarm can only be set if the Alarm is ON. If the Alarm is OFF, pressing S2 will return you to the Time setting field. In Pre-Alarm set, you will see the word "ON" or "OFF," plus TWO alarm symbols. The Pre-Alarm symbol (smaller and on the left) will be flashing, along with ON or OFF. Press S3+ or S3- to turn the Pre-Alarm on or off.

Pressing S2 again will return you to the Timer setting. Press S4 once (upper left) to exit setting mode. Leaving the watch unattended for 30 seconds in set mode causes it to save any changes and then exit set mode.

## Setting the Current Time of Day and Time of Day Alarm

Press MODE (lower left) to change to Time of Day mode. Press and hold S1 (upper left) until the Hour "hand" and digits begin to flash, indicating that you have entered set mode.

Press S2 (upper right) to cycle through the fields you can set. The fields are: Hour → Minute → Second → (Time of Day) Alarm On/Off → Alarm Hour → Alarm Minute → Hour

Press S2 until the Hour hand and digits are flashing. Set the current Hour by pressing S3+ (lower right) to increase the Hour setting, or pressing S3- (lower left) to decrease the setting. Note that the watch has "AM" and "PM" indicators.

*Note:* You can either press and release S3+ and S3- to change field values, or "press and hold" either of the S3 buttons to rapidly change the field value.

From Hour setting mode, press S2 once to enter Minute setting. Minute hand and digits will be flashing. Set current Minutes using the S3 buttons.

From Minute set, press S2 once to enter Second setting. The second hand will be flashing. Press either S3 button to reset seconds to zero.

From Seconds set, press S2 once to enter Alarm setting. The letters "AL" will be flashing, and you will also notice that the watch hands have disappeared. You can turn the Time of Day alarm On or Off by pressing either S3 button. When On, you will see a small Alarm Bell ▲ next to the AL indicator.

From Alarm On/Off, press S2 once to enter Alarm Hours setting. The "AL" indicator and the Hours digits will be flashing, and the clock hands will not be visible. Use the S3 buttons to set the desired Alarm Hour setting.

From Alarm Hours, press S2 once to enter Alarm Minutes setting. The "AL" indicator and the Minutes digits will be flashing, and the clock hands will not be visible. Use the S3 buttons to set the desired Alarm Minutes setting.

From any of the setting fields, press S4 once (upper left) to exit setting mode. Leaving the watch unattended for 30 seconds in set mode causes it to save any changes and then exit set mode.

## Changing the Battery

When the display grows dim or goes out entirely, it is time for a new battery. Using a small Phillip's head jeweler's screwdriver, remove the four screws holding back of watch onto case. Gently slide the old battery from its slot, and replace with new CR2025 Lithium battery. Make sure that the positive ("+") terminal side is facing up.

## Power Reset

You can reset the watch to original factory settings by pressing S3+ and S3- (the two lower buttons) together, and holding for at least five seconds.

## Manufactured for

Time Timer, Inc.  
7707 Camargo Road  
Cincinnati, OH 45243

(513) 561-4199  
Fax (513) 561-4699

[www.timetimer.com](http://www.timetimer.com)

1-877-771-TIME  
(1-877-771-8463)

U. S. PATENT NO. D369, 619 & 5,662,479

### REGISTER NOW.

Please return your AX810TT registration to the Repair Center address in the warranty, and we will let you know about future products.

Email \_\_\_\_\_

User \_\_\_\_\_

\_\_\_\_\_  
\_\_\_\_\_

### 5 YEAR NO-PROOF-OF-PURCHASE LIMITED WARRANTY

Free service for first year (see back of watch for date).  
\$15 fee applies thereafter. Return unit with daytime phone number to:  
AST Repair Center, 3090 Independence Drive, Suite 148  
Livermore, CA 94551 USA 800-935-1996 • 925-290-1900  
[www.ACCUSPLIT.com](http://www.ACCUSPLIT.com) • [support@ACCUSPLIT.com](mailto:support@ACCUSPLIT.com)



[www.timetimer.com](http://www.timetimer.com)

Developed by Time Timer LLC, in cooperation with Abilitations.



[www.abilitations.com](http://www.abilitations.com)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>