

**MODEL NO:**

**ZENES14**

**1-DIN DVD-NAVICEIVER WITH  
MOTORIZED 17.8CM /7" LCD DISPLAY**

**USER MANUAL**

ENGLISH · FRENCH · GERMAN



# CONTENTS

## BEFORE USING

START CODE .....	06
FRONT PANEL .....	06
AUXILIARY LCD .....	07
REMOTE CONTROL .....	08

## BASIC OPERATIONS

POWER ON/OFF .....	10
NAV .....	10
VOLUME ADJUSTMENT .....	10
OPEN SOURCE MENU .....	10
PLAYING SOURCE SELECTION .....	10
DISPLAY SYSTEM TIME .....	11
USING THE TFT MONITOR .....	11
RESET THE UNIT .....	11

## RADIO MODE

SELECT RADIO AS PLAYING SOURCE .....	12
SELECT ONE RADIO BAND .....	12
AUTO TUNING .....	12
MANUAL TUNING .....	12
AUTO SAVE .....	12
MANUAL SAVE .....	13
PREVIEW SCAN .....	13
RECALL THE STORED STATIONS .....	13
LOCAL SEEKING .....	13

## RDS OPERATIONS

AF FUNCTION .....	14
TA FUNCTION .....	14
PTY FUNCTION .....	15
PROGRAM SERVICE (PS) .....	15
CT (CLOCK TIME) .....	15
RT (RADIO TEXT) .....	15


## DISC MODE

INSERT A DISC .....	16
EJECT THE DISC .....	16
TOUCH SCREEN CONTROLS .....	16
ONSCREEN CONTROL BUTTONS .....	17
SUSPEND PLAYBACK .....	18
STOP PLAYBACK .....	18
DISPLAY FILE LIST .....	18
FAST PLAYBACK .....	18
PREVIOUS/NEXT .....	18
CHANGE FOLDER .....	18
REPEAT PLAYBACK .....	19
REPEAT A-B .....	19
RANDOM PLAYBACK .....	19
INTRO PLAYBACK .....	20
DIRECT SEARCH .....	20
GOTO SEARCH .....	20
DVD MENU AND TITLE .....	21
SELECT SUBTITLE LANGUAGE .....	21
SELECT MULTI-ANGLE VIEWS .....	21
SELECT AUDIO CHANNEL .....	21
PBC FUNCTION .....	21
ZOOM IN/OUT .....	22
ROTATE PICTURE .....	22
PLAYBACK INFORMATION .....	22


<b>USB MODE</b>	
SELECT USB AS PLAYING SOURCE .....	24
TOUCH SCREEN CONTROLS .....	24
ONSCREEN CONTROL BUTTONS .....	24
SUSPEND PLAYBACK .....	24
STOP PLAYBACK .....	24
DISPLAY FILE LIST .....	24
FAST PLAYBACK .....	24
PREVIOUS/NEXT .....	24
CHANGE FOLDER .....	25
REPEAT PLAYBACK .....	25
RANDOM PLAYBACK .....	25
INTRO PLAYBACK .....	25
DIRECT SEARCH .....	25
GOTO SEARCH .....	25
ZOOM IN/OUT .....	25
ROTATE PICTURE .....	25
PLAYBACK INFORMATION .....	25
<b>IPOD MODE</b>	
SELECT IPOD AS PLAYING SOURCE .....	26
MUSIC PLAYBACK .....	26
PHOTO PLAYBACK .....	26
VIDEO PLAYBACK .....	27
FAST PLAYBACK .....	27
DIRECT SEARCH .....	27
<b>OTHER MODES</b>	
AV-IN .....	29
CAMERA .....	29
NAV .....	29
<b>SETUP</b>	
SETUP PROCEDURES .....	30
GENERAL .....	31
LANGUAGE .....	31
AUDIO .....	32
RDS .....	32
RATING .....	32
HARDWARE .....	34
P.VOL .....	34
METHOD OF CHANGING PASSWORT .....	35
TS CAL .....	35
<b>EQ .....</b>	<b>36</b>
<b>TROUBLESHOOTING .....</b>	<b>37</b>
<b>DEVICE CONNECTION</b>	
NOTES OF CONNECTION .....	39
CONTROL CABLES .....	40
PARKING BRAKE CABLE CONNECTIONS .....	41
REVERSE DRIVE CABLE CONNECTIONS .....	41
<b>INSTALLATION AND UNINSTALL</b>	
NOTES OF INSTALLATION .....	42
UNIT INSTALLATION .....	42
TRIM RING INSTALLATION .....	44
UNINSTALL .....	44
SPECIFICATIONS .....	45
<b>APPENDIX</b>	
REGION CODE .....	47
CAUTIONS OF DISC USING .....	47
WIRING CONNECTIONS .....	48
<b>WARRANTY .....</b>	<b>49</b>

## WARNINGS

1. Only connect this unit to a 12V DC power supply with negative grounding.

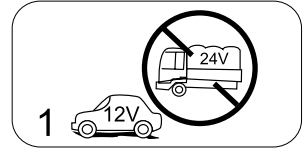


2. Never install this unit where the operation for safe driving is restrained.

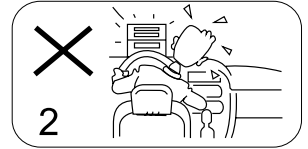

3. Never use the video display function in the front when driving to prevent the violation of laws & regulations and also to reduce the risk of traffic accident, except when using the rear view video camera.




4. Never expose this unit, amplifier, speakers to moisture or water to prevent electronic sparks or fires.

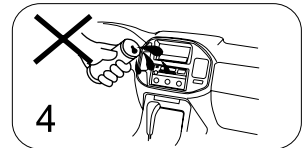


6. Please power off this unit at once and send it back to the after-sales service center or the dealer/distributor you purchased from if one of the following symptoms is found:


- (a) No audio output;
- (b) No image output;
- (c) Water or other obstacle entered the unit;
- (d) Smoke;
- (e) Peculiar smell.

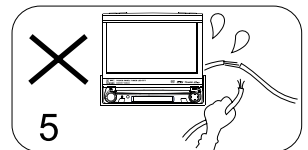

7. To ensure safe driving, please adjust the volume to a safe and comfort level in case of emergency situations.

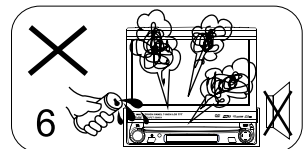

## PRECAUTIONS

1. Never disassemble or adjust the unit without any professional guide. For details, please consult an authorized ZENEC dealer for inquiry.
2. If the front panel or TFT monitor is squalid, please use a clean silicone cloth and neutral detergent to wipe off the spot. Using a rough cloth and non-neutral detergent such as alcohol for cleaning may result in scratching or discoloration.
3. If any abnormal behavior of the unit is found, please refer to trouble shooting guide of this manual. If no relevant information is found, please press the [RESET] key on the front panel to resume factory default.
4. If you have parked the car in hot or cold weather for a long time, please wait until the temperature in the car becomes normal before operating the unit.
5. Using in-car heater in low temperature environment may result in condensation inside the unit. DO NOT use the unit in this situation, eject the disc and wipe off the condensation on the disc. If the unit still doesn't work after a few hours, please contact with after-sales service center.
6. No fierce mechanical impact to the LCD monitor when it is in open position for preventing the damage to any mechanisms inside.
7. To prevent damage to the screen, avoid touching it with sharp objects.
8. The monitor employs auto motorizing mechanism, please don't push, pull, or swivel the monitor manually to prevent damage to the core mechanism.
9. To provide a clear demonstration and an alternative for easy understanding to the operation of this unit, graphic illustrations are used. However, these illustrations may be different from the actual images displayed on the screen.
10. During operating the unit, "  " will display if the current operation is not available or illegal.
11. Operate the unit correctly according to this manual to prevent unnecessary problems. The guarantee won't be valid if the problem is caused by inappropriate operation.

## DECLARATION


This product incorporates copyright protection technology that is protected by U.S patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision.

Reverse engineering or disassembly is prohibited.

## BEFORE USING

**START CODE:** 012345 (Description: Page 35)


### FRONT PANEL

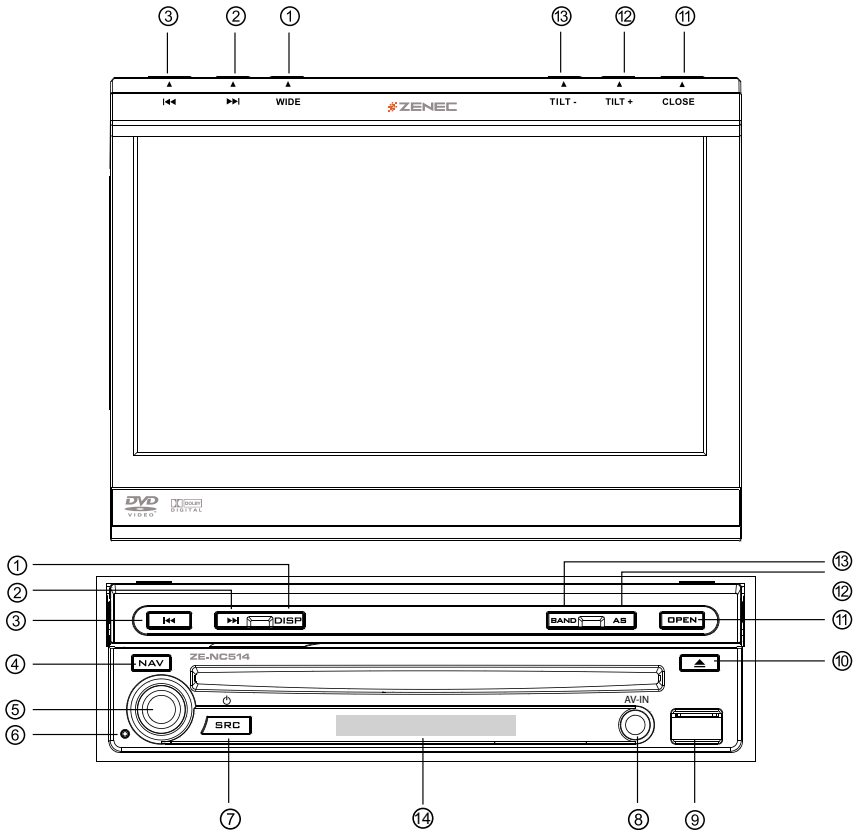

1. **[WIDE] Key:** Change display mode
2. **[>>] Key:** Next/Move cursor to the right
3. **[<<] Key:** Previous/Move cursor to the left
4. **[NAV] Key:** Enter/exit NAV source
5. **[VOL] Knob:** Adjust volume/active/deactive mute function
6. **[Reset] Button:** Reset the unit
7. **[⏻/SRC] Key:** Unit power/Change operating mode/Open source menu
8. **AV-IN jack**
9. **USB Slot**

## BEFORE USING

10. [**▲**] Key: Eject disc
11. [**OPEN/CLOSE**] Key: Open/Close the TFT monitor
12. [**AS/TILT+**] Key: Auto save/Preview scan/Increase display angle
13. [**BAND/TILT-**] Key: Change radio band/Decrease display angle
14. **AUXILIARY LCD**

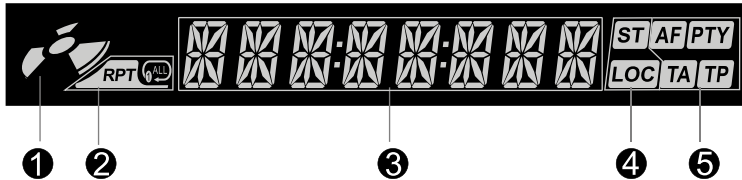

### 1. Disc indicator

- Light up when one disc is inside; Light off when no disc is inside.

### 2. Repeat mode indicator

- Light up when repeat mode is on; Light off when repeat mode is off.

### 3. Main display area

- Display characters, playback time, tuning frequency, clock and other text information.

### 4. Radio status indicators

- Stereo indicator lights up when the radio broadcast is in stereo. Local indicator lights up when the local seeking function is activated.

### 5. RDS function indicators

- AF: Alternative Frequency
- PTY: Program Type
- TA: Traffic Announcement
- TP: Traffic Program


### ⚠ NOTES:

- Most information can be displayed on this LCD only when the TFT monitor is closed.
- Only English font support on this LCD.

## BEFORE USING

### REMOTE CONTROL

Introduce of key functions

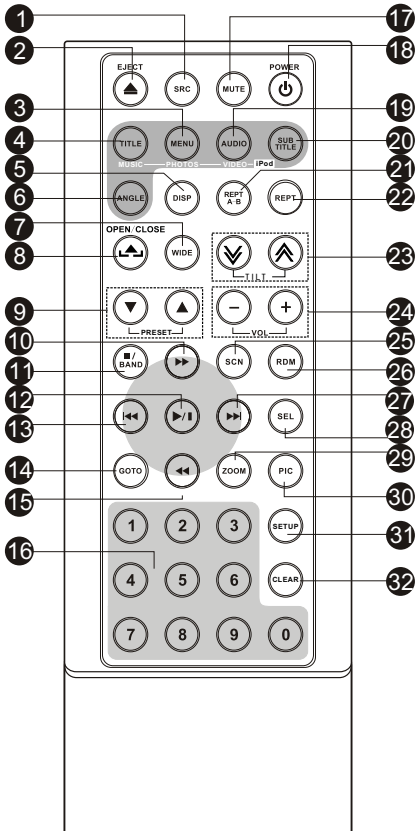

#### **NOTE:**

■ Your remote control may differ slightly from the one pictured here. The above diagram is for illustrative purpose only.

1. [SRC] Key: Select playing source
2. [EJECT] Key: Eject disc
3. [MENU] Key: DVD MENU/PBC
4. [TITLE] Key: DVD TITLE
5. [DISP] Key: Display information
6. [ANGLE] Key: Select view angle
7. [WIDE] Key: Change display mode
8. [OPEN/CLOSE] Key: Open/Close the TFT monitor
9. [PRESET ▼ / ▲] Key: Select preset radio station
10. [▶▶] Key: Fast forward/Move cursor up
11. [■ / BAND] Key: Select radio band/ stop playback
12. [▶ / ||] Key: Play/Pause/Enter
13. [◀◀] Key: Auto search/Previous/Move cursor to the left
14. [GOTO] Key: GOTO search
15. [◀◀] Key: Fast reverse/Move cursor down
16. [0-9] Key: Numeric keys
17. [MUTE] Key: Mute audio outputs
18. [POWER] Key: Unit power
19. [AUDIO] Key: Select DVD dialogue language
20. [SUBTITLE] Key: Select DVD subtitle language
21. [REPT A-B] Key: A-B repeat
22. [REPT] Key: Repeat playback
23. [TILT ▲ / ▼] Key: Adjusting display tilting angle
24. [VOL+/-] Key: Adjust volume
25. [SCN] Key: Scan playback
26. [RDM] Key: Random playback
27. [▶▶] Key: Auto search/Next/Move cursor to the right
28. [SEL] Key: (EQ)
29. [ZOOM] Key: Image zoom in/out
30. [PIC] Key: Image setting
31. [SETUP] Key: Setup menu
32. [CLEAR] Key: Clear information



## BEFORE USING

### NOTES FOR REMOTE CONTROL USE


1. Aim the remote control at the remote sensor on the unit.
2. Remove the battery from the remote control or insert a battery insulator if the battery has not been used for a month or longer.
3. DO NOT store the remote control under direct sunlight or in high temperature environment, or it may not function properly.
4. The battery can work for 6 months under normal conditions. If the remote control does not work, please change the battery.
5. Use "button shaped" lithium battery "CR2025" (3 V) only.
6. DO NOT recharge, disassemble, heat or expose the battery in fire.
7. Insert the battery in proper direction according to the (+) and (-) poles.
8. Store the battery in a place where children cannot reach it to avoid the risk of accident.

### Uninstall Battery


- Slide out the battery compartment tray at the bottom on the back of the remote control.

### Install Battery

- Use button-shaped lithium battery "CR2025" (3V) only. Insert the battery to the battery tray with proper direction according to the (+) and (-) poles.

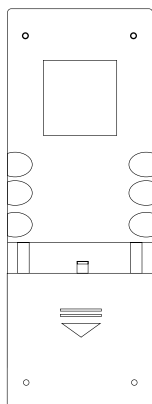

PULL OUT

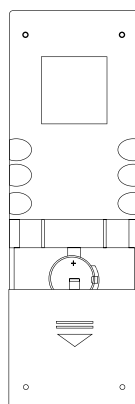

PULL IN

## BASIC OPERATIONS

### POWER ON/OFF

- Press any key on the front panel or the [POWER] key on the remote control to turn on the power under standby mode. The unit goes back to the last status after power on.
- Press and hold the [SRC] key on the front panel or press the [POWER] key on the the remote control to turn off the power under work mode.

### NAV

- Press the [NAV] key on the front panel to enter or exit navigation source. The current audio channel will keep playing, except the navigation voice comes up when navigation source is active.

### VOLUME ADJUSTMENT

- Turn the volume knob on the front panel or press the [VOL] key on the remote control.
- The adjustable range of volume is 0 to 40.
- Press [VOL] key or mute key on remote to active or deactivate [MUTE] function.

#### NOTES:

- Doing the operation above again or adjusting volume will release muting.
- Mute icon blinks on the TFT during muting.

### OPEN SOURCE MENU

- Press the [SRC] key on the front panel or remote control or touch the top left corner of the screen to open the SOURCE MENU. Do the above operation again to return to the original source.

### PLAYING SOURCE SELECTION

- Open the SOURCE MENU, and then touch the source you desired or select one source by moving the cursor and then confirm.

#### NOTES:

- Playing source selection means selecting work mode, such as DVD mode, Radio mode, Camera mode, etc.
- When some devices are not ready or connected, they cannot be selected.

## BASIC OPERATIONS

### DISPLAY SYSTEM TIME

- Press and hold the [DISP] key on the front panel to switch the display information between system time and playing source when the TFT monitor is closed.

### USING THE TFT MONITOR

#### Open/Close monitor

- Press the [OPEN/CLOSE] key on the front panel or remote control to push the display panel out or in.

#### Change the monitor tilt angle

- Due to the inherent character of LCD panels, you will get different vision impressions when you watch it from different angles. The display angle of this unit can be changed; hence you can select the best angle where you can get the best vision impression.
- Press the [TILT] key on the display panel or the remote control to adjust the tilt angle one step at a time.
- Press and hold the [TILT] key on the display panel or the remote control to adjust the tilt angle continuously.

#### Change aspect ratio

- Press the [WIDE] key on the display panel or remote control to adjust the aspect ratio.

#### Image setting

1. Enter image setting mode
  - Press the [PIC] key on the remote control.
2. Select one item to adjust
  - Press the [▶]/[◀] keys on the remote control.
3. Adjust the value
  - Press the [▶]/[◀] keys on the remote control.
4. Exit image setting mode
  - To exit image setting mode, repeat the first step or stop operation for some seconds.

### RESET THE UNIT

- If the unit can not work correctly, you should reset the unit by pressing the [RESET] button on the front panel.

## RADIO MODE

### SELECT RADIO AS PLAYING SOURCE

- Open the SOURCE MENU and then touch the RADIO icon.

### SELECT ONE RADIO BAND

- Press the [BAND] key on the display panel or on the remote control or touch the [BAND] icon on the user interface to select one radio band among FM1, FM2, FM3, AM1 and AM2.


### AUTO TUNING

- Press the [▶▶]/[◀◀] key on the display panel or on the remote control or touch the [▶▶]/[◀◀] icon on the user interface to seek a higher/lower station. To stop searching, repeat the operation above or press other keys having radio functions.

#### NOTE:

- When a station is received, searching stops and the station is played. If the unit receives a stereo broadcasting, the indicator light of stereo 'ST' on the TFT or on the LCD display will be lighted.

### MANUAL TUNING

- During manual tuning, the frequency will be changed in steps. Press the [▶▶]/[◀◀] key on remote control or touch the [▶▶]/[◀◀] icon on the user interface to tune in a higher/lower station.
- Touch the numeric keypad icon [

### AUTO SAVE

- Only stations with sufficient signal strength will be detected and stored in the memory. When the monitor is closed, press and hold the [AS/PS] key on the display panel.
- When the monitor is opened, touch the [AS] icon on the user interface.
- To stop auto save, press other keys having radio functions.

#### NOTES:

- After auto save, the previous saved stations will be overwritten.
- The unit has 5 bands, such as FM1, FM2, FM3, AM1, AM2, and each band can store 6 stations; hence the unit can store 30 stations in total.

## RADIO MODE

### MANUAL SAVE

When one expected radio station has been detected ...

1. Press the [MEM] icon on the user interface and the preset menu will be opened.
2. Press one preset button among P1~P6.
3. If you want to abort, press the [Exit] button.

### PREVIEW SCAN

- Preview scan searching is such a process that the searching pauses when a station is received and then played for 5–10 seconds. After being played, the unit continues the process until the whole band is detected.
- When the monitor is closed, press the [AS/PS] key on the display panel.
- When the monitor is opened, touch the [PS] icon on the user interface. To stop the process, press other keys having radio functions.

### RECALL THE STORED STATIONS

- Press one numeric key among 1 to 6 on the remote control or touch an onscreen station button to select the corresponding stored station.

### LOCAL SEEKING

- When LOCAL seeking is on, only those radio stations with strong radio signal could be received.
- To open or close LOCAL function, press and hold the [NAV] key on the front panel.

#### NOTES:

- When the local radio station searching is on, the indicator light 'LOC' lights up; where as the light goes off.
- The number of radio stations that can be received will decrease after the local seeking mode is on.

## RDS OPERATIONS

The unit provides basic functions of RDS, including PI (Program Identification), radio station name, RT (Radio Text), CT (Clock Time), AF (Alternative Frequency), TA (Traffic Announcement) and PTY (Program Type) selection.

### AF FUNCTION

- Alternative frequencies lists are used for the same program service and used in conjunction with the PI code (Program Identification code) to assist automatic tuning. Using this information, a radio can automatically search another station that is playing the same material. This is useful when the station you are listening to is fading out.
- To activate AF function, touch the [AF] button on the user interface.
- To cancel this function, do the operation above again.

#### NOTE:

- During auto switching radio frequency, some interference may be heard. Turning off AF function can settle this issue at the expense of AF switching.

### TA FUNCTION

- The TA (Traffic Announcement flag) function lets the unit receive traffic announcements automatically no matter what media source is playing back. The TA function can be activated by a TP (Traffic Program) station broadcasting traffic information.
- When TA is activated and a traffic announcement is received, the current playing source will be overridden by the traffic announcement if the current radio band is FM and the 'TA' indicator lights up, indicating that the unit is waiting for traffic announcements.
- The unit returns to the original source after the traffic announcement has ended.
- To activate TA function, touch the [TA] button on the user interface.
- To cancel this function, do the operation above again.

## RDS OPERATIONS

### PTY FUNCTION

- PTY is the abbreviation for Program Type which is a code defining the type of program being broadcasted (e.g. News or Rock).
- Six PTY options will display on the screen. To view more PTY options, touch the scroll bar and arrows on the screen.
- When one PTY option is touched (e.g. News), auto search for next available PTY by increasing tuning frequency will take place, until the PTY of the next station matches the current. If no matched PTY has been found, the unit will return to the original radio frequency.

### PROGRAM SERVICE (PS)

- Used for receiver displays of an 8 character alpha numeric Program Service name which may use Upper or Lower case characters, e.g {BBC\_4\_FM}, {Classic\_}.

### CT (CLOCK TIME)

- Some stations broadcast the time and date within the encoded RDS signal. The clock time is automatically adjusted when 'CT' is set to 'On'.

### RT (RADIO TEXT)

- When this function is activated, the unit will display short message data transmitted from the provider, such as station information, the name of the current broadcasting song and the artist name.

## DISC MODE

### INSERT A DISC

- Upon inserting a disc, the unit will switch to disc mode automatically.

#### ⚠ NOTES:


- Please confirm whether there is a disc in the unit before you insert another one.
- Some recorded discs, such as CD-R, CD-RW, DVD-R, DVD+R, DVD-RW, DVD+RW cannot be played back because of different recording status. Otherwise, the discs without being "finalized" can not be played back.
- About the cautions of disc using, please refer to the appendix.

### EJECT THE DISC

- Press the [EJECT] key on the front panel or remote control to eject the disc.
- You can eject a disc after the unit has been powered off. The unit remains off after the disc is ejected.

### TOUCH SCREEN CONTROLS

- The touch key areas for DVD playback are outlined below.

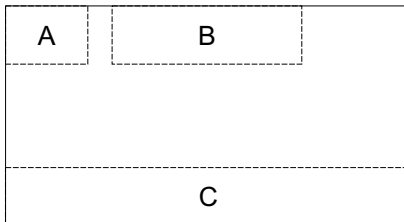














 - A – Open SOURCE MENU
- B – Display playback information
- C – Display onscreen control menu



## DISC MODE

## ONSCREEN CONTROL BUTTONS

Disc type/ Icon	MP3/WMA	CD	VCD	DVD	MPEG	Picture
	Numeric keypad	Numeric keypad	Numeric keypad	Numeric keypad	Numeric keypad	Numeric keypad
	Setup menu	Setup menu	Setup menu	Setup menu	Setup menu	Setup menu
	/	Fast forward	Fast forward	Fast forward	Fast forward	/
	/	Fast rewind	Fast rewind	Fast rewind	Fast rewind	/
	Previous	Previous	Previous	Previous	Previous	Previous
	Next	Next	Next	Next	Next	Next
	Play/ Pause	Play/ Pause	Play/ Pause	Play/ Pause	Play/ Pause	Play/ Pause
	Stop	Stop	Stop	Stop	Stop	Stop
	/	/	A second menu	A second menu	A second menu	/
	Repeat	Repeat	Repeat	Repeat	Repeat	Repeat
	Random	Random	Random	Random	Random	/
	/	/	/	/	/	Rotate
	/	/	Zoom	/	/	Zoom
EQ	EQ setup	EQ setup	EQ setup	EQ setup	EQ setup	EQ setup
PBC	/	/	PBC	/	/	/
A-B	/	/	A-B repeat	A-B repeat	/	/
Back	/	/	Exit menu	Exit menu	Exit menu	Exit menu
AUDIO	/	/	Channel switching	Dialog language	Dialog language	/
SUBTITLE	/	/	/	Subtitle language	Subtitle language	/
DISP	/	/	Display information	Display information	Display information	Display information
MENU	/	/	/	DVD menu	/	/
TITLE	/	/	/	DVD title	/	/
DIR+	Next folder	/	/	/	/	Next folder
DIR-	Previous folder	/	/	/	/	Previous folder

## DISC MODE

### SUSPEND PLAYBACK

- Press the [▶/||] key on the front panel or remote control or open the onscreen control buttons menu and then touch the [▶/||] button. To resume normal playback, repeat the above operation.

### STOP PLAYBACK

- To stop playback, press the [■] key on the remote control or open the onscreen control buttons menu and then touch the [■] button. When the above operation is executed for the first time, the current playback is paused and the break point is memorized and the playback will resume when you start playback again or switch back from other playing sources. The current playback will cancel if the above operation is executed twice and the playback will start over when you start playback again.

### DISPLAY FILE LIST

- To display the file list of a recorded disc, stop current playback.

### FAST PLAYBACK

- Press the [▶▶]/[◀◀] key on the remote control repeatedly or open the onscreen control buttons menu and then touch the [▶▶]/[◀◀] button repeatedly, to change the rate of fast forward/fast reverse.

### PREVIOUS/NEXT

- Press the [◀◀]/[▶▶] key on the display panel or remote control or open the onscreen control buttons menu and then touch the [◀◀]/[▶▶] button to play the next or previous file.

### CHANGE FOLDER

- Press the [DIR+]/[DIR-] icon on the user interface (you should stop playback first if a video or picture file is played back) to change folder during the playback of a recorded disc containing more than one folder.

## DISC MODE

### REPEAT PLAYBACK

- Press the [RPT] key on the remote control repeatedly or open the onscreen control buttons menu and then touch the [↺] button repeatedly to alter repeat mode according to the following table.

Disc type	Repeat mode
DVD	Repeat Chapter → Repeat Title → Repeat Off
VCD (PBC off)	Repeat Single → Repeat All → Repeat Off
CD	Repeat Single → Repeat Off
MP3/WMA	Repeat Single → Repeat Folder → Repeat Off
MPEG	Repeat Single → Repeat Folder → Repeat Off
Picture	Repeat Single → Repeat Folder → Repeat Off

### ⚠ NOTES:

- When a VCD is played back, this function is prohibited if the PBC function is active.
- Turning off the power or switching playing source to other modes and back will cancel this function.

### REPEAT A-B

- When a DVD, VCD or CD disc is played back, you can play back the contents between the time points from A to B repeatedly.
- Press the [RPT A-B] key on the remote control or open the onscreen control buttons menu and then touch the [A-B] button to set the start point (A) of the repeated section. Do the above operation again to set the end point of the repeated section. The selected portion will repeat continuously.
- Do the above operation for the third time to cancel this function.

### RANDOM PLAYBACK

- When this function is on, the contents in the disc will be played back randomly.
- Press the [RDM] key on the remote control repeatedly or open the onscreen control buttons menu and then touch the [ⓧ] button repeatedly to alter random playback mode among 'Random', 'Random repeat', 'Repeat Off'.

### INTRO PLAYBACK

- When this function is on, the unit will play back the first 10 seconds of each track of a VCD or CD disc. You can search the file you desired using this function.
- Press the [SCN] key on the remote control to activate this function. Do the above operation again to cancel this function.

### DIRECT SEARCH

- When a DVD, VCD or CD disc is played back, you can search for a particular chapter/track by pressing the numeric keys of the remote control. For example, if you want to select the 15<sup>th</sup> track, you should press numerical key [1] and [5].

### GOTO SEARCH

#### 1. Enter [GOTO] search mode

- Press the [GOTO] key on the remote control to open search menu.
- For DVD, you can search according to title, chapter and time.
- For VCD, if PBC function is off, you can search according to time; if PBC function is on, you can search according to track, time and disc time.
- For CD, you can search according to track.
- For MPEG files, you can search according to track and time.
- For record discs containing MP3 and/or JPG files, you can search according to track (file number).

#### 2. Enter search information

- Select items by pressing the direction keys on the remote control and enter search information by pressing the numeric keys, such as title, chapter and time.

#### 3. Confirm

- Press the [Enter] key on the remote control to confirm.

#### 4. Exit GOTO search mode

- Repeat the above operation until the search menu disappeared or touch the [Exit] button on the menu.

## DISC MODE

### DVD MENU AND TITLE

- This function is only available for the DVD discs having "MENU/TITLE". Press the [MENU] key on the remote control or open the onscreen control buttons menu and then touch the [MENU] button to open DVD MENU. You can select audio language, subtitle language and so on for playback. Press the [TITLE] key on the remote control or open the onscreen control buttons menu and then touch the [TITLE] button to open DVD TITLE. You can select a different title for playback.

### SELECT SUBTITLE LANGUAGE

- Press the [SUBTITLE] key on the remote control repeatedly or open the onscreen control buttons menu and then touch the [SUBTITLE] button repeatedly to choose a subtitle language.

### SELECT MULTI-ANGLE VIEWS

- Press the [ANGLE] key on the remote control repeatedly to choose a shooting angle during the playback of a DVD disc or video file containing multi-angle views.

### SELECT AUDIO CHANNEL

- For DVD containing multi-language audio files, press the [AUDIO] key on the remote control repeatedly or open the onscreen control buttons menu and then touch the [AUDIO] button repeatedly to change dialogue language.
- For VCD and CD, press the [AUDIO] key on the remote control repeatedly or open the onscreen control buttons menu and then touch the [AUDIO] button repeatedly to alter audio channel modes among Left vocal, Right vocal, Mono left, Mono right, Stereo.

#### NOTE:

- Left channel and right channel cannot work properly if the audio files are not recorded correctly.

### PBC FUNCTION

- This function is available for the VCD discs with PBC function (Ver 2.0 or higher).
- Press the [MENU] key on the remote control to activate this function.
- Press again to cancel.

## DISC MODE

### ⚠ NOTES:

- When PBC is on, playback goes back to the track list and starts from the first track.
- When PBC is on, fast motion playback, slow motion playback or skip search is available but repeat playback and searching for a particular chapter or track is prohibited.
- If you do the operation of random playback, scan playback or searching playback when PBC is on, PBC will be turned off automatically.

### ZOOM IN/OUT

- To zoom in/out the image being played, press the [ZOOM] key on the remote control or open the onscreen control buttons and then touch the [Q] icon.

 
### ROTATE PICTURE

- When one picture file is played back, you can rotate the picture to get proper view angle by pressing the [R] icon on the onscreen control buttons.

### PLAYBACK INFORMATION

- Touch the top center area of TFT LCD when playing back DVD and VCD discs and the playback information will be displayed on the top area of the TFT.

#### For DVD



1. Disc type.
2. DVD Title information. "5/8" indicates that this DVD has 8 titles and the title playing back now is the fifth title.
3. DVD Chapter information. "2/18" indicates that current title has 18 chapters and the chapter playing back now is the second chapter.
4. Elapsed time of the current title.
5. "... 2/6 Eng" indicates that the subtitle of this DVD has been recorded in 6 languages and the language displayed now is the second, that is English.

**DISC MODE****For VCD**

VCD2.0    PBC On    Track:6/18    00:02:18

①

②

③

④

1. Disc type.
2. PBC function indicator. "PBC On" indicates that PBC function has been activated.
3. VCD Track information. "6/18" indicates that this VCD has 18 tracks and the track playing back now is the sixth title.
4. Elapsed time of the current track.

## USB MODE

### SELECT USB AS PLAYING SOURCE

- Open the SOURCE MENU and then touch the USB icon.

#### NOTES:

- The unit switches to USB mode once an USB device has been inserted.
- The unit supports hot swap.
- USB storage devices formatted with FAT 16/32 are supported by this player, but not NTFS format.

### TOUCH SCREEN CONTROLS

- The operation is the same as disc mode.

### ONSCREEN CONTROL BUTTONS

- Onscreen control buttons under SD/USB mode are the same as disc mode.

### SUSPEND PLAYBACK

- The operation is the same as disc mode.

### STOP PLAYBACK

- The operation is the same as disc mode.

### DISPLAY FILE LIST

- The operation is the same as disc mode.

### FAST PLAYBACK

- The operation is the same as disc mode.

### PREVIOUS/NEXT

- The operation is the same as disc mode.



## USB MODE

### CHANGE FOLDER

- The operation is the same as disc mode.

### REPEAT PLAYBACK

- The operation is the same as disc mode.

### RANDOM PLAYBACK

- The operation is the same as disc mode.

### INTRO PLAYBACK

- The operation is the same as disc mode.

### DIRECT SEARCH

- The operation is the same as disc mode.

### GOTO SEARCH

- The operation is the same as disc mode.

### ZOOM IN/OUT

- The operation is the same as disc mode.

### ROTATE PICTURE

- The operation is the same as disc mode.

### PLAYBACK INFORMATION

- The operation is the same as disc mode.

### SELECT IPOD AS PLAYING SOURCE

- The unit will switch to iPod mode automatically when an iPod player is plugged into the unit.
- To return to the iPod mode from any other sources, open the SOURCE MENU and then touch iPod.

### MUSIC PLAYBACK

1. Enter iPod music mode
  - Press the [TITLE] key on the remote control or touch the music icon on the user interface.
2. Select one music file
  - Press the [Left]/[Right] key on the remote control.
3. Play back the music file
  - Press the [Down] key on the remote control or touch the ►|| button on the user interface.
4. Return to the previous menu
  - Press the [UP] key on the remote control or touch the button [MENU] on the user interface.

#### NOTE:

- In the Music mode, the buttons on the iPod are disabled.

### PHOTO PLAYBACK

1. Enter iPod photo mode
  - Press the [MENU] key on the remote control or touch the picture icon on the user interface.
2. Control photo files playback
  - Use the keys on the iPod to control playback.

#### NOTES:

- To exit PHOTO mode, press the [MENU] button on the iPod.
- Pictures can be displayed on the screen just when the picture playback mode of iPod player is set to "slide show".

## IPOD MODE

### VIDEO PLAYBACK

1. Enter iPod video mode
  - Press the [AUDIO] key on the remote control or touch the video icon on the user interface.
2. Control video files playback
  - Use the keys on your iPod player to control playback.

#### NOTES:

- To exit VIDEO mode, press the [MENU] button on the iPod.
- To transmit the images (including videos and pictures) from your iPod to the TFT screen, you must set the following options through the iPod video settings menu:  
TV Out = On, TV Signal = NTSC.

### FAST PLAYBACK

- To access fast forward or fast reverse playback, you should press and hold the [Left]/[Right] key on the remote control or the [◀]/[▶] button on the user interface for 1 second and continue to hold the corresponding key. To resume normal play, release them.


### DIRECT SEARCH

- To select a file directly, touch the numeric button on the user interface to open the direct entry menu. Enter the desired file using the number pad of this menu. Touch the [Enter] button to confirm. To exit this menu, touch the [Exit] button.
- To clear the numbers you have entered, touch the [Clear] button.
- You can also use the numeric keys on the remote control to select files directly.

## DVB-T MODE


### SELECT DVB-T AS PLAYING SOURCE

- Open the SOURCE MENU and then select DVB-T, and touch the screen to POP UP control menu.
- Press the [ ] button to increase volume or press the [ ] button to decrease volume.

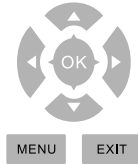

### TOUCH SCREEN CONTROLS


- The touch key areas for DVB-T mode are outlined below:

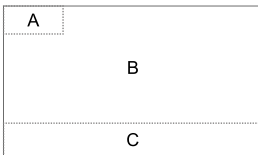

- A – Open the SOURCE MENU
- B – POP UP control menu
- C – POP UP SETUP and EQ


### QUICK SELECT

- Press the [OK] button to POP UP the [QUICKSELECT] menu and press the [ ] or [ ] buttons, to shift cursor to select channel, or press the [ ] or [ ] buttons to select source mode.

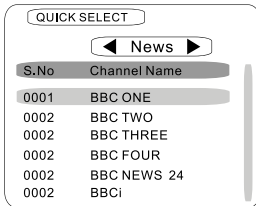

### SEARCH CHANNEL

- Press MENU to POP UP [MAIN MENU], and press [ ] and [ ] buttons to shift cursor to select source and press the [OK] button to get in the sub menu. Press [EXIT] to exit.

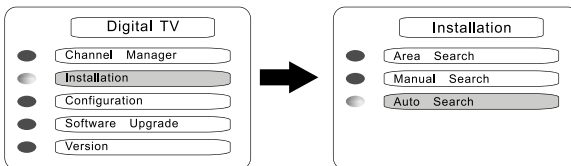

## OTHER MODES

### AV-IN

- External peripheral devices with RCA audio and video outputs can be connected with the unit.
- To enter AV-IN mode, open the SOURCE MENU and then touch AV-IN.

### CAMERA

- This player is "camera ready". Before accessing any camera features, you must purchase and install a rear video camera. Once the rear camera is connected and operating properly, the CAMERA source mode will become active. While the camera is not installed, the CAMERA option appears gray, indicating the function is not available.

The playing source will change to 'CAMERA' mode automatically when you reverse your car.

### NAV

- This player is equipped with an internal navigation system. Before accessing any navigation feature, you must insert the micro-SD card containing the nav data first. The micro-SD card slot is located on the backside of the TFT panel. Operating instructions covering the navigation features are contained in a separate owner's manual that is also part of the set content.

## SETUP PROCEDURES

### 1. Enter setup mode

- Press the [SETUP] key on the remote control or touch the setup icon [⚙️] on the user interface.
- The following menu appears after entering the setup mode.
- The GENERAL sub-menu is highlighted by default.

SETUP MENU				
RDS	General	Language	Audio	Back
Rating	Clock Mode	12Hr		
Hardware	Clock	11:18 AM		
P.VOL	Tuner Region	Europe		
TS Cal	Beep	On		

### 2. Select one sub-menu

- Press the direction keys on the remote control.

### 3. Select one item

- Press the [▶▶]/[◀◀] key on the remote control to select one item and then press the [▶/◻] key to confirm.

### 4. Select one value

- Press the [▶▶]/[◀◀] key on the remote control to select one suitable value and then press the [▶/◻] key to confirm.

### ⚠️ NOTE:

- All following settings can be done by touching the option directly.

## SETUP

### GENERAL

#### ■ Clock mode

12 Hr: the clock displays in the type of 12 hours such as 11:18 AM.

24 Hr: the clock displays in the type of 24 hours such as 20:18.

#### ■ Clock

Adjust the clock displayed on the top right corner of the TFT screen.

#### ■ Tuner Region

The unit supports several radio systems and you can select a correct radio system according to your country.

#### ■ Beep

On: Background sound of key-press is on.

Off: Background sound of key-press is off.

### LANGUAGE

#### ■ OSD

Select one language of system menu display.

#### ■ DVD Audio

Select one dialogue language of DVD disc.

#### ⚠ NOTE:

- If the DVD disc does not contain the selected language, the dialogues you listening to will be in default language.

#### ■ DVD Subtitle

Select one subtitle language of DVD disc.

#### ⚠ NOTE:

- If the DVD disc does not contain the selected language, the subtitle will be displayed in default language.

#### ■ Disc Menu

Select one language of DVD MENU display.

#### ⚠ NOTE:

- If the DVD disc does not contain the selected language, the DVD MENU will be displayed in default language.

## SETUP

### AUDIO

#### ■ DRC

Set the dynamic range of Dolby digital DVD discs.

On: Playback more dynamic audio with Bass.

Off: Normal output.

#### ■ Loudness

On: Loud mode is on.

Off: Loud mode is off.

#### ■ Subwoofer

On: Open the subwoofer speaker.

Off: Close the subwoofer speaker.

#### ■ Sub Filter

You can get different bass effect when you set different cut off frequency of subfilter.

According to the acoustics surroundings of your car, select a proper frequency.

80Hz, 120Hz, 160Hz are available.

### RDS

#### ■ RDS

On: RDS function is active.

Off: RDS function is inactive.

#### ■ CT

On: The clock time is on.

Off: The clock time is off.

#### ■ TA VOL

Set the relative volume of Traffic Announcements.

### RATING

- Some DVD discs have built-in parental lock which prevents children to watch some scenes containing violence or adult content especially.

#### ■ Set Password

The original password of the unit is "0000".



## SETUP

You should set a new password ASAP.

### METHOD OF CHANGING PASSWORD:

1. Locate the cursor on the 'password' option, press the numeric keys on the remote control or touch the 'Password' option directly to open the onscreen keypad, touch the numeric buttons to enter your password (original password for the first time) and then confirm.
2. Repeat the operation above to enter a new 6-digit password and then confirm. The new password becomes effective and the parental lock is closed.

### RATING

The unit has some watching level as followings:

1. Kid safe: A movie rating that is condign to children.
2. G: A movie rating that allows admission to persons of all ages.
3. PG: A movie rating that allows admission of persons of all ages but suggests parental guidance in the case of children.
4. PG-13: A movie rating that allows admission of persons of all ages but suggests parental guidance in the case of children under the age of 13.
5. PG-R: PG-related.
6. R: A movie rating that allows admission only to persons of a certain age, usually 17, unless accompanied by a parent or guardian.
7. NC-17: A movie rating that allows admission to no one under the age of 17.
8. Adult: A movie rating that is suitable to adult audiences only.

### PROCEDURES OF CHANGING THE RATING:

1. Enter password to unlock the parental lock
  - Locate the cursor on the 'password' option, press the numeric keys on the remote control or touch the 'Password' option directly to open the onscreen keypad, touch the numeric buttons to enter your password and then confirm.
2. Change the rating
  - Select an appropriate rating from the 'rating' list.

## SETUP

### 3. Close the parental lock

- Repeat the operation of the first step to enter a 6-digit password (old or new) and then confirm.
- The parental lock is closed.
- **Load Factory**

To restore the default settings relating with DVD playback (e.g.: DVD Audio, DVD Subtitle), press the [RESET] option.

## HARDWARE

### ■ Camera In

Normal: Actual scenes shot by the camera display on the TFT monitor while reverse driving (just like what you are watching).

Mirror: The mirror images of actual scenes display on the TFT monitor while reverse driving (just like observing things over the rearview mirror).

### ■ TFT Auto Open

Auto: The TFT panel automatically opens when the unit is turned on.

Manual: When the ignition is turned off, the TFT panel remains open if it was opened previously.

Off: The TFT panel opens only by pressing OPEN button when the unit is turned on.

### ■ Video input

NTSC: Set the color system of the TFT screen to NTSC.

PAL: Set the color system of the TFT screen to PAL.

AUTO: Set the color system of the TFT screen automatically by the unit according to the input video formats.

### ■ Parking

On: Image displays only after your car has been parked.

Off: Image displays at all times.

## P.VOL

- P.VOL means Programmable Volume.

You can balance the volume among different audio sources using this function.

## SETUP

### ■ Source

Select one playing source that you want to set relative volume.

### ■ Level

You can set relative volume level from 0 to 6.

## METHOD OF CHANGING PASSWORT

1. Locate the cursor on the “Anti-PSW” option, press the numeric keys on the remote control or touch the “Anti-PSW” option directly to open the onscreen keypad. Touch the numeric buttons to enter the factory default code “012345” to deactivate the anti theft function.
2. Repeat the operation above to enter a new 6 digit password and confirm by pressing the enter button. Your new personal password becomes effective and the unit will be locked when disconnected from power.

### PLEASE NOTE:

- Do use a code you can easily remember. Unlock the unit is not free of charge and can only be done by an authorized ZENEC service center.


## TS CAL

- When the touch function is not sensitive or valid, you should calibrate the touch screen by this function.
- Calibrate the touch screen just following the screen introductions after entering the TS CAL mode.

- Audio control allows you to easily adjust the audio system to get the best possible sound effect.

### 1. Enter the EQ setup mode

- Press the [SEL] key on the remote control or touch the EQ icon in the user interface and the following interface will display on the screen.

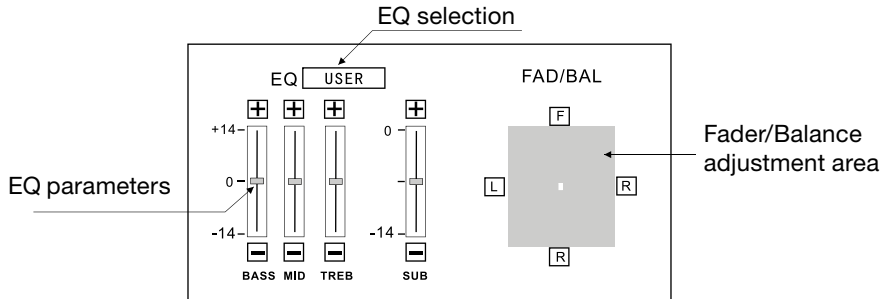

### 2. Select EQ mode

- Touch the EQ selection bar repeatedly and the EQ mode will change.

### 3. Adjust EQ parameters

- To adjust EQ parameters, touch and drag the EQ parameters adjustment bar.

### 4. Adjust Front/Rear/Left/Right fader and balance

- You can adjust front/back/left/right balance of the speaker to a desirable listening effect according to the surroundings and your preference.
- To adjust Front/Rear/Left/Right fader and balance, touch and drag the small white point in the Fader/Balance adjustment area.

### ⚠ NOTES:

- The unit provides some EQ modes: User, Rock, Hip Hop, Dance, Latin, Rave, Urban, Acoustic.
- Different EQ reflects in different Bass, Treble and Mid level. The parameters of the EQ modes has been preset and you can not change them besides 'User'.
- The EQ mode will change to 'User' automatically when you adjust the value of BASS, TREB or MID under the modes besides 'User'.
- The value of SUB is independent of EQ mode and can be adjusted solely.

## TROUBLESHOOTING

- What appears to be trouble is not always serious. Please check the following points before calling a service center.

Problem	Cause	Corrective action
General		
Unit can not power on.	Unit fuse blown.	Install new fuse with correct rating.
	Car battery fuse blown.	Install new fuse with correct rating.
	Illegal operation.	Reset the unit.
Remote control does not work.	Battery depleted.	Change the Battery.
	Battery installed incorrectly.	Install the battery correctly.
No/low audio output.	Improper audio output connection.	Check wiring and correct.
	Volume set too low.	Increase volume level.
	Speakers damaged.	Replace speakers.
	Heavily biased volume balance.	Adjust the channel balance to center position.
	Speaker wiring is in contact with metal part of car.	Insulate all speaker wiring connections.
Poor sound quality or distortion.	Pirated disc is in use.	Use original disc.
	Speaker.	Replace speakers.
	Wrong connections.	Check wiring and correct.
	Speaker is shorted.	Check wiring and correct.
Tel-Mute malfunction.	MUTE wire is grounded.	Check the 'MUTE' wiring and correct.
Unit resets itself when engine is off.	Incorrect connection between ACC and BATT.	Check wiring and correct.
TFT monitor		
Monitor does not open automatically.	TFT Auto Open is turned off.	Turn TFT Auto Open on.
Warning information is shown at all times.	Parking break wiring is not correct.	Check wiring and correct.
Flashing image or interference appears on screen.	The color system of DVD disc does not match the monitor.	Adjust the color system of the DVD disc playing back or the monitor in us.
	Pirated disc is in use.	Use original disc.
	Video cable damaged.	Replace cables.
	Improper video signal connections.	Check wiring and correct.

## TROUBLESHOOTING

(Continued)

Problem	Cause	Corrective action
Disc playback		
Cannot insert disc.	A disc inside the unit already.	Eject current disc and insert new one.
Disc does not play back.	Disc is warped or scratched.	Use disc in good condition.
	Disc is dirty or wet.	Clean disc with soft cloth.
	Incompatible disc is used.	Use compatible disc.
	Disc is inserted upside down.	Insert disc with label side up.
	Disc region code is not compatible with unit.	Use disc with proper region code.
PBC cannot be used during VCD playback.	PBC is not available on the disc.	Use disc with PBC available.
Repeat or search function is invalid during VCD playback.	PBC is on.	Turn PBC off.
Error messages		
No disc.	Disc is dirty.	Clean disc with soft cloth.
	Disc is upside down.	Insert disc with label side up.
	No disc inside.	Insert disc.
Bad disc.	Disc is dirty.	Clean disc with soft cloth.
	Disc is upside down.	Insert disc with label side up.
Unknown disc.	Disc format is not compatible.	Use disc with compatible format.
Region Error.	DVD region code is not compatible with this unit.	Use disc with compatible region code.

## DEVICE CONNECTIONS

### NOTES OF CONNECTION

- This unit is designed to be used in a vehicle with a 12-volt battery and negative grounding. Before installing this unit to a mobile home, a bus, or a truck, make sure the battery voltage is appropriate for this unit to be used, otherwise, install a transformer to convert the output voltage to 12 V.
- To avoid short circuit in the electrical system, ensure that the negative battery cable is disconnected before installation.
- To prevent short circuit in the wiring and damaging to this unit, secure all wirings with cable ties or adhesive tape. Route the wirings in a secured, out of heating place without touching any moving parts such as gear shift, handbrake, and seat rails to prevent the wiring insulation being melted/wore off.
- Never pass the yellow power cord through the installation hole into the engine compartment and connect to the car battery. Otherwise, a high possibility of serious short circuit to the electrical system may occur.
- Replacing a new fuse with 10 A rating when the old one is broken, using no fuse or fuse with improper rating may cause damage to this unit or even fires. If a proper fuse is installed and electrical problems still occur, please contact with any professional car shops for inquiry.
- Please make sure all the wiring connections and the cables of the speakers are well-insulated. Otherwise, this unit may be damaged by short circuit.
- If there is no ACC available, please connect ACC lead to the power supply with a switch.
- If an external power amplifier is connected, please don't connect P.CONT lead to the power lead of the external power amplifier, otherwise, electric spark or other damage may be resulted.
- Never ground the speaker output to prevent the damage to the built-in power amplifier.
- The minimum rating of the speakers connected to this unit is 50 W with 4 to 8  $\Omega$  impedance.

## DEVICE CONNECTIONS

### CONTROL CABLES

#### Auto Brightness Control

- To avoid the display being too bright at night time, if the headlight cable is connected to ILLUMI, turning on the head light will dim the backlight of the TFT LCD and vice versa.

### TELEPHONE MUTE

- If the MUTE cable is connected to a car phone, other audio outputs mute when one call is received by the car phone.

### REVERSE DRIVING

- If a rear view camera is connected with the unit, the playing source switches to CAMERA automatically when you start reverse driving. With the reverse driving over, the playing source switches to the previous source.



### PARKING BRAKE

1. If "PRK SW" cable is connected to hand brake switch, video display on the TFT monitor will be controlled by this function. Parking cable function ceases when the playing source is CAMERA.
2. The monitor displays the blue screen with warning information to prevent the driver watching video contents during driving, but the passengers at the rear seat can watch video content normally, when headrest monitors are installed.




## DEVICE CONNECTIONS

### PARKING BRAKE CABLE CONNECTIONS

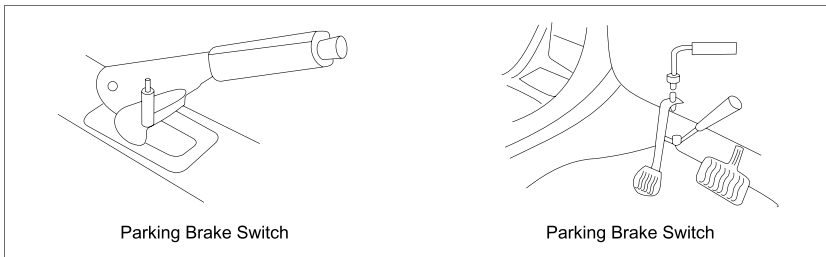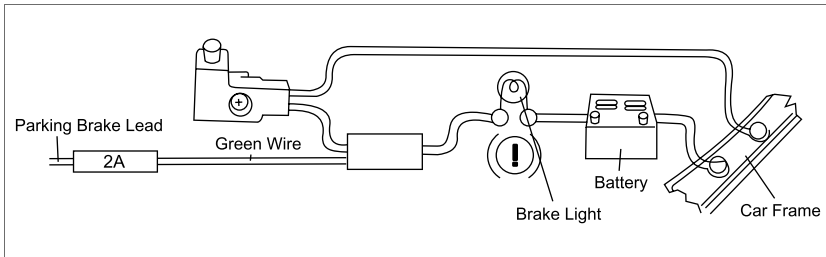

### REVERSE DRIVING CABLE CONNECTIONS

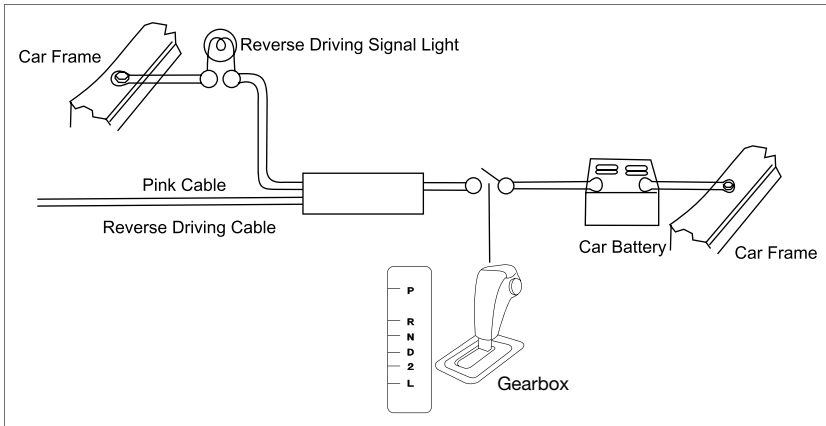

## INSTALLATION AND UNINSTALLATION


### NOTES OF INSTALLATION

1. Before installation, please make sure proper connections are conducted and the unit operates normally. Improper connection may result in damage to the unit.
2. Use only accessories designed and manufactured for this unit and other unauthorized accessories may result in damage to the unit.
3. Before installation, please fasten all power cables.
4. DO NOT install the unit in the place where close to hot area to prevent damage to electrical components such as the laser head.
5. Install the unit horizontally. Installing the unit more than 30 degree inclined may result in worse performance.
6. To prevent electric spark, connect the positive pole first and then the negative pole.
7. DO NOT block the cooling fan exit to ensure sufficient heat dissipation of this unit, or it may result in damage to this unit.

### UNIT INSTALLATION

#### Method A


1. Insert mounting bracket into dash board, choose appropriate mounting tab according to the gap width, bending the mounting tab outwards with a screw driver to fix the mounting bracket in place.
2. Use 2 pieces of M5 x 5 cone shaped screw to fix two assemble bars on both sides of the unit (see picture 1).

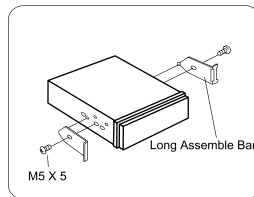

(Picture 1)

3. Screw in 1 piece of M5 x 24 to the hole of the unit back and put on a rubber sheath over the screw (see picture 2).

## INSTALLATION AND UNINSTALLATION

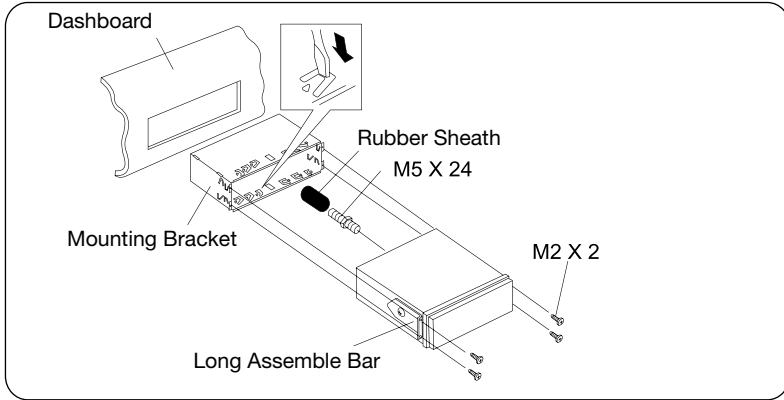



(Picture 2)

4. Insert the unit into the bracket, fasten the M4 x 6 screw to the fireproofing board available at the back of the dashboard, and use 4 pieces of M2 x 2 screw to lock the assemble bars and the mounting bracket in position.

### ⚠ NOTE:

- According to the depth of the opening, use different length of assemblebar accordingly. If the opening is too shallow, the monitor may be extended out 10 mm from the dashboard.

### METHOD B

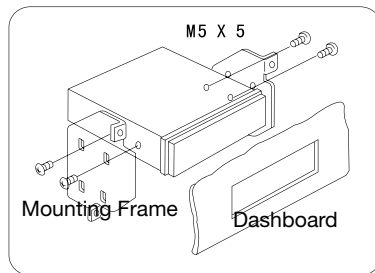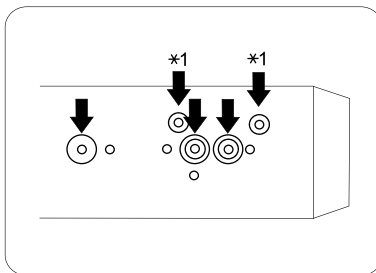


1. Insert this unit directly to the opening of the dash board.
2. Place M4 x 3, M5 x 5 cylindrical screw or M5 x 5 cone shaped screw through the holes of the mounting frame located inside the opening to holes of the unit and fasten the screws to left & right.

## INSTALLATION AND UNINSTALLATION

### TRIM RING INSTALLATION


- Attach the trim ring around the front panel with two indentions on one side facing upwards.

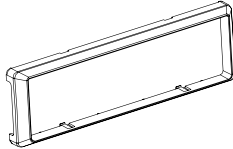


### UNINSTALL

#### Disassemble trim ring

1. Push the trim ring upward and pull out the upper part.

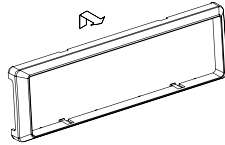


2. Push the trim ring downward and pull out the lower part.

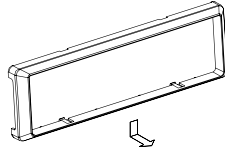

### DISASSEMBLE THE UNIT

1. Unscrew the 4 pieces M2 x 2 screws.
2. Use a screw driver to bend straight the bended mounting tab and tip out the unit from the mounting bracket.

Remove the rubber sheath

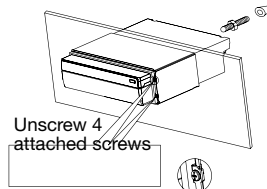

3. Pull out the unit from the mounting bracket with both hands.

## SPECIFICATIONS

### General

Reference Supply Voltage .....	12V (DC)
Operating Voltage Range .....	10.5~15.8V (DC)
Max Operation Current.....	10A
Grounding System.....	Car Battery Negative Pole
Installation Dimension (WxHxD) .....	178mm x 50mm x (165+25) mm
Installation Angle .....	0°~30°
Net Weight.....	2.3kg

### FM

Signal Noise Ratio .....	55dB
Residual Noise Sensitivity (S/N=30dB) .....	20dB $\mu$ V
Frequency Response ( $\pm$ 3dB).....	40Hz~12.5KHz
Station Seeking Level.....	20~30dB $\mu$ V
Distortion .....	1.5%
Stereo Separation (1 KHz).....	20dB
Antenna Impedance .....	75 $\Omega$

### AM

Residual Noise Sensitivity (S/N=20dB) .....	40dB $\mu$ V
Selectivity ( $\pm$ 9KHz) .....	50dB

### DVD Player

Signal/Noise Ratio.....	90dB
Dynamic Range .....	90dB
Distortion (line out) .....	0.1%
Frequency Response ( $\pm$ 3dB).....	20Hz~20KHz
Max Output Power .....	4x40W
Load Impedance .....	4 $\Omega$

### AV-IN

Distortion .....	0.5%
Frequency Response ( $\pm$ 3dB).....	20Hz~20KHz
Audio Input Level.....	0.4Vrms
Video Input Level.....	1Vp-p

### Audio

Audio Output Impedance .....	200 $\Omega$
Audio Output Level.....	2Vrms (Max)

(Under normal audio input level and maximum volume)

## SPECIFICATIONS

### Video

Normal Video Input Level (CVBS).....	1.0±0.2V
Video Input Impedance .....	75Ω
Video Output Impedance .....	75Ω
Video Output Level.....	1.0±0.2V

### TFT Monitor

Screen Diagonal .....	17.8cm/ 7 inches
Usable Display Area .....	154.1(W) x 87.0 (H)
Resolution .....	1440 (W) x 234 (H)
Brightness .....	400cd/m <sup>2</sup> (Measure the centre brightness after 30 minutes)
Contrast.....	300(TYP.)
Response Time	
Rise.....	12ms
Fall .....	18ms
Viewing Angle	
From Top.....	40°
From bottom .....	65°
Horizontally .....	±65°
LCD Life Cycle.....	10000 hours (at 25°C)

### Navigation

Integrated navigation System	
Built-in SD card reader .....	4GB micro-SD
GPS receiver included in set content	

### Environment

Operating Temperature.....	-10°C~ + 60°C
Storing Temperature .....	-20°C~ + 70°C
Operating Humidity .....	45%~80%RH
Storing Humidity.....	30%~90%RH

- Specifications are subject to possible modifications for improvement without further notice.



- If at any time in the future you should need to dispose this product please note that waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice (Waste Electrical and Electronic Equipment Directive).

This unit is manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

## APPENDIX

### REGION CODE

According to DVD sale region, the whole world is divided into six regions. A DVD disc can be played back only when its region code is compatible with that of the player in use.

Region 1:	USA, Canada, East Pacific Ocean Islands;
Region 2:	Japan, West Europe, North Europe, Egypt, South Africa, Middle East;
Region 3:	Taiwan of China, Hong Kong of China, South Korea, Thailand, Indonesia, South East Asia;
Region 4:	Australia, New Zealand, Mid & South America, South Pacific, Ocean Islands/Oceania;
Region 5:	Russia, Mongolia, India, Middle Asia, East Europe, North Korea, North Africa, North West Asia;
Region 6:	Chinese Mainland.

### CAUTIONS OF DISC USING

#### 1. DO NOT use irregular shaped disc


#### 2. Disc Cleaning

Use a dry, soft cloth to wipe the disc from center to edge, only neutral detergent can be used.

#### 3. When playing a new disc

New disc may have some rough spots around the inner and outer edges. If such a disc is used, remove these rough spots with a pencil or ball-point pen, etc.

WIRING CONNECTIONS

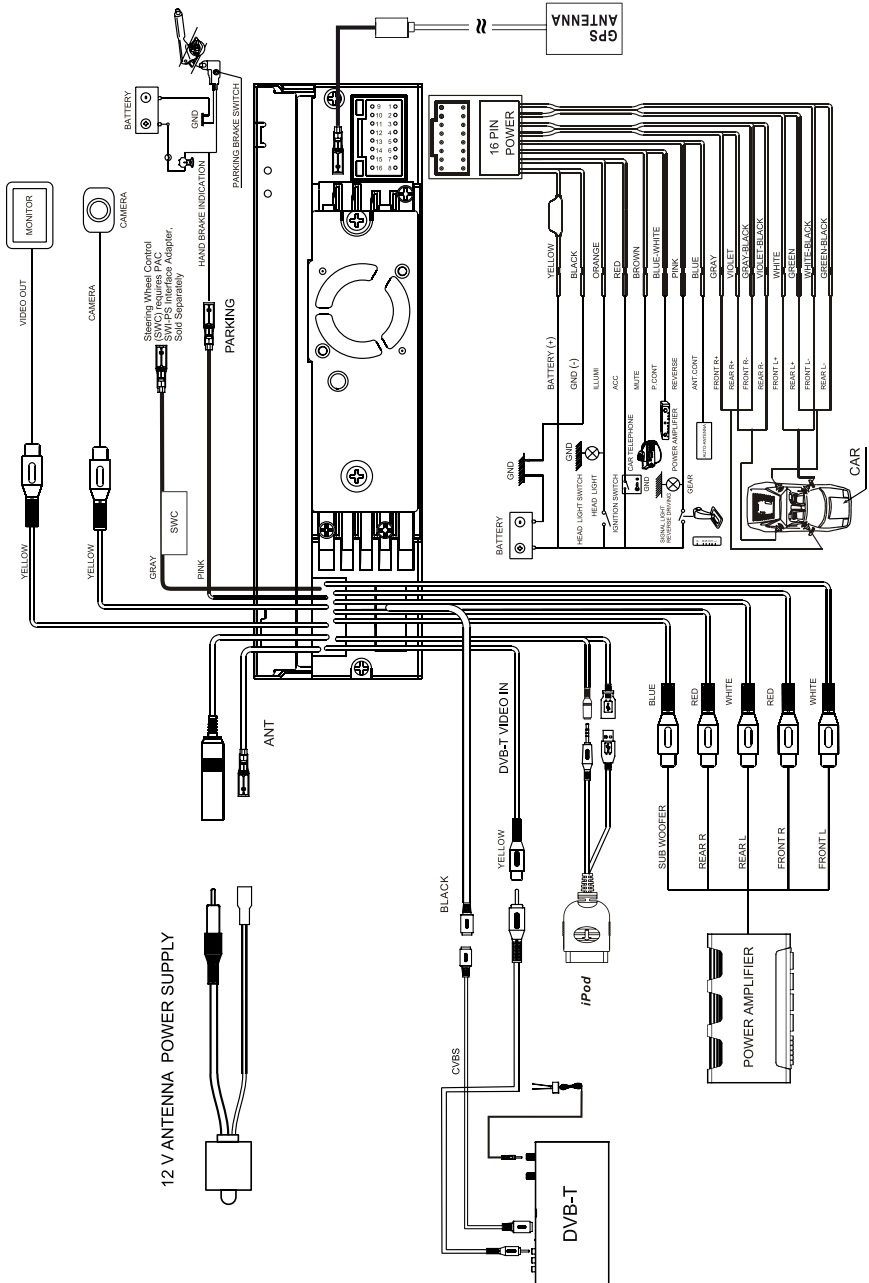



## 2 YEARS LIMITED WARRANTY

Dear customer

Thank you for purchasing this ZENEC product. It is advisable to keep the original packing material for any future transporting of the product.

Should your ZENEC product require warranty service, please return it to the retailer from whom it was purchased or the distributor in your country.

This ZENEC product is warranted against defective materials or workmanship for a period of TWO years from date of purchase at retail.

### Warranty Limitations

This warranty does not cover any damage due to:

1. Improper installation, incorrect audio or mains connection(s).
2. Exposure to excessive humidity, fluids, heat sun rays or excessive dirt or dust.
3. Accidents or abuse, unauthorized repair attempts and modifications not explicitly authorized by the manufacturer.

This warranty is limited to the repair or the replacement of the defective product at the manufacturer's option and does not include any other form of damage, whether incidental, consequential or otherwise. The warranty does not cover any transport costs or damages caused by transport or shipment of the product. Warranty work will not be carried out unless this warranty certificate is presented fully completed with model, serial number, purchaser's address, purchasing date and dealer stamp together with the original sales slip!

### ZENEC MODEL: ZE-NC514

Serial number: .....

Date of purchase: .....

Your name: .....

Your address: .....

City: .....

State: ..... ZIP or postal code .....

Country: .....

Dealer's address & stamp



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>