



myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX EL4040A. You'll find the answers to all your questions on the AEG-ELECTROLUX EL4040A in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX EL4040A
User guide AEG-ELECTROLUX EL4040A
Operating instructions AEG-ELECTROLUX EL4040A
Instructions for use AEG-ELECTROLUX EL4040A
Instruction manual AEG-ELECTROLUX EL4040A

Thinking of you
Electrolux

High Speed.
From Floor to Bag
in.06 Seconds.

High Performance.
Air Basket
Technology.

Higher Standards.
Made from 55%
Recycled Plastic.

JETmaxx™ GREEN™



[Your user manual](#)
[AEG-ELECTROLUX EL4040A](#)

Manual abstract:

4) Note: Be sure to replace the S-Bag® each time after vacuuming carpet-cleaning powder. Be sure to use only Genuine Electrolux S-Bag®. CAUTION: To reduce the risk of injury, unplug before servicing the brushroll could suddenly restart. THERMAL CUT OFF The vacuum cleaner may automatically stop if there is a blockage in the nozzle, wands or hose and/or if the filter has become blocked. Disconnect the cord from the outlet and allow the vacuum cleaner to cool down for 2030 minutes. Remove the blockage, and/or replace the dirty filter. Then restart the vacuum cleaner. cLEANING THE WANDS AND HOSES 1. Use a suitable blunt implement to clear the wands and hose (Fig. However, be careful in case the obstruction is caused by glass, needles, or sharp plastic caught in the hose assembly.

NOTE: The warranty does not cover any damage to the hose caused by cleaning it. ENGLISH CAUTION: Unplug the unit before servicing. For service not described in this manual, take to an Electrolux Authorized Service Center for repair. rEPLACEMENT OF THE MOTOR FILTER(REF. 2197012-01) The motor filter should be cleaned and replaced with every 3rd replacement of the S-Bag®.

Never operate the vacuum cleaner without the filter. The dust bag must never be overfilled. 1. Open the front lid and lift out the Air Basket. Remove the filter, replace, and close the lid.

Hold the container over the waste bin and empty it completely. cLEANING THE WASHABLE HEPA FILTER (EL012) 1. Remove the filter cover by lifting the 2 tabs on the bottom of the filter cover. Rinse the Washable HEPA filter with lukewarm water, and tap to remove excess water. let filter dry completely (Fig.

4), and replace filter and filter cover onto unit (Fig. 5). Note: Never use cleaning agents to clean filter, and never put filters into dishwasher or washing machine. cHANGING A NON-WASHABLE HEPA FILTER (S-filter) 1. Replace the HEPA filter every-3-4 months or when it's visibly dirty.

Remove the filter cover by lifting the 2 tabs on the bottom of the filter cover. Replace new filter and filter cover onto unit (Fig. 5). REPLACEMENT OF THE BELT (155555) AND CLEANING THE BRUSHROLL CAUTION: Unplug the cleaner before replacing belt. Belt pulleys can become hot during normal use. To prevent burns, avoid touching the belt pulley when servicing the drive belt. allow it to cool. Flip power head on to hood, and remove brushroll cover by pulling up on the finger tabs (Fig. 6A , 6B , 6C) 2. Lift out brushroll and remove any debris, and remove old belt (Fig.

Place new belt around brushroll motor pulley. Place other end of belt around brushroll, insert belt end of brushroll back into case, followed by the other end.

Replace brushroll cover, and snap tabs into place Note: Use only GENUINE ELECTROLUX belt 155555. Quite el cepillo motorizado, quite cualquier resto de suciedad y retire la correa usada (Fig. 13 13 ENGLISH TROUBLESHOOTING AND CONSUMER INFORMATION FRANÇAIS DÉPANNAGE ET INFORMATION DES CONSOMMATEURS ESPAÑOL SOLUCIÓN DE PROBLEMAS E INFORMACIÓN PARA EL CONSUMIDOR CAUTION: To reduce the risk of injury, unplug before servicing.

TROUBLESHOOTING The vacuum cleaner does not start 1 Check that the cord is connected to the outlet. 2 Check that the plug and cord are not damaged. 3 Check for a blown fuse or tripped circuit breaker. The brushroll stops spinning 1 Turn off power. 2 Remove any obstructing objects from the brushroll.

3 Turn power back on. The vacuum suddenly stops working 1 Turn off power. 2 Unplug power cord from wall. 6 Allow 30 minutes for motor to cool before powering on. Water has entered the vacuum cleaner It will be necessary to replace the motor at an authorized Electrolux service center. Damage to the motor caused by the penetration of water is not covered by the warranty. If you can't find accessories for your Electrolux vacuum cleaner, please visit our website at www. ENGLISH THE ELECTROLUX LIMITED WARRANTY Your Electrolux cleaner is warranted to be free from all defects in material and workmanship in normal household use for a period of five years. The warranty is granted only to the original purchaser and members of his or her immediate household. The warranty is subject to the following provisions.

This warranty does not cover parts of the cleaner that require replacement under normal use, such as disposable dust bags, fans, filters, drive belts, light bulbs, brushroll bristles, impellers and cleaning..



[Your user manual](#)
[AEG-ELECTROLUX EL4040A](#)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>