



AIPTEK[®]

PENCAM 1.3M SD

Installation Guide

Contents

Specifications	1	Bundled Software	17
Notice	2	PenCam SD Manager Installation	18
Bundled Accessories	3	Software Installation	19
		Hardware Installation	20
<hr/>		<hr/>	
Your Camera	4	Launching PenCam SD Manager	21
Battery Installation	5	Mode Selecting	22
Using a SD Card	6	DSC Mode	23
Strap and Tripod Use	7	LIVE Mode	28
<hr/>		<hr/>	
Using your Camera	8	TWAIN Manager	31
LCD Display	9	Troubleshooting	32
Focus	10	AIPTEK Service	35
<hr/>		<hr/>	
Taking Pictures	11		
Still pictures	12		
Taking AVI Movies	14		
Erase	15		
For Best Results	16		
<hr/>			



Specifications



System Requirements

- Microsoft Windows 98SE / 2000 / ME / XP
- Pentium II 266MHz (or equivalent)
- 32MB RAM (64MB RAM recommended)
- Video Card with 4 MB of RAM
- 4 X speed CD-ROM
- An available USB port
- Direct X 8.0 or above



Specifications

- Sensor Type 1.3M CMOS
- Memory 64 Mbits Built-in SDRAM
- Effective pixels 1.3M (1280 x 960 pixels)
- External SD Card Slot / Support SD Card up to 128 MB/ compatible with MMC

Main Functions

- Digital Camera :

SXGA (1280 x 960 pixels): 10 ± 3 pictures

VGA (640 x 480 pixels): 40 ± 10 pictures

- Digital Camcorder :

High resolution (640 x 480 pixels) / 6-8fps

Normal resolution (320 x 240 pixels) / 8-10fps

- PC Camera :


High resolution (640 x 480 pixels) / 20fps

Normal resolution (320 x 240 pixels) / 20fps

- Focus Macro : 12"(30cm) / Normal : 39"(100cm) to infinity
- Auto Exposure Auto White-Balance
- Self Timer 10 - second Self Timer
- Power Saving Auto power off if idle over 60 seconds
- Battery: AAA x 2 (Alkaline)
- USB port
- Dimension : 3.9" x 1.7" x 1.4"
- Weight: 51.2 g
- This package doesn't include SD Card/MMC.

Notice

1. Do not drop, puncture or disassemble the camera.
2. Remove batteries during long periods between use.
3. Avoid using batteries of different brands at the same time.
4. Avoid using leaking or distorted batteries.
5. Avoid all contact with water and dry hands before using.
6. Do not expose the camera to high temperature or leave it in direct sunlight.
7. Avoid pressing hard on the camera body.

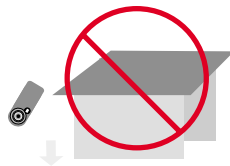

Bundled Accessories



Camera



 
CD driver



User guide




Tripod



USB cable



 2 x AAA Alkaline batteries




Strap

Your Camera

Camera Parts


- (1) Shutter
- (2) View finder
- (3) Lens
- (4) Focus
- (5) LCD display
- (6) Mode button
- (7) Strap-holder
- (8) Battery cover
- (9) SD Card slot
- (10) USB port
- (11) Tripod port

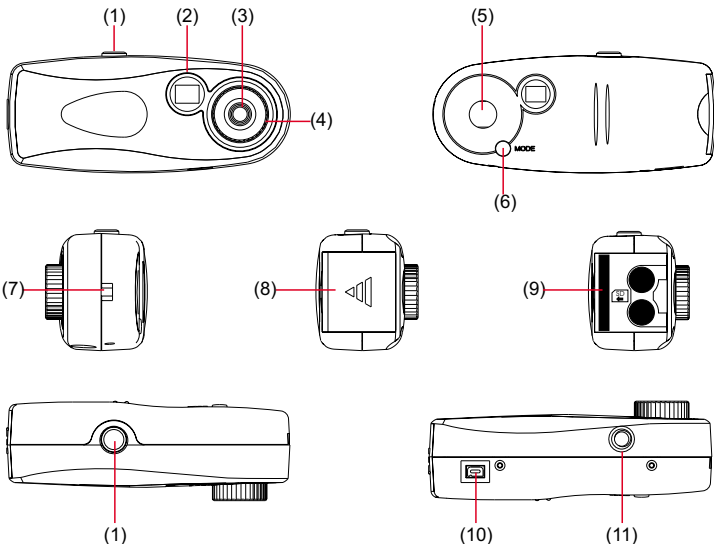

Battery Installation

Battery Installation

Your camera runs on two AAA alkaline batteries. High performance batteries are for this camera.

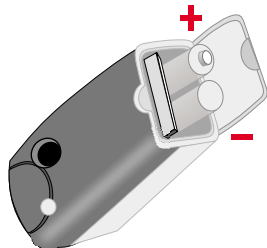

Battery Indicators




Full



Low



-  on the LCD display indicates low battery. Transfer data from SDRAM to your PC immediately to avoid data loss. All SDRAM data will be lost when the camera loses power from battery exhaustion or removal.
- When not using your camera for extended periods, we suggest you remove the batteries.
- Make sure that you've downloaded data to PC before removing the battery cover.

Using a SD Card/ MMC

External Memory/ SD Card (Secure Digital Memory Card) / MMC Card (MultiMediaCard)

In addition to 64Mbits SDRAM, your camera can store data on SD Cards /MMC. Data will be automatically stored on the SD card/ MMC until it is full, with additional data stored on SDRAM. Insert your card as shown.


Format SD Card / MMC


"Err" message appears on LCD display as you confront the following two conditions:

- (1) The camera can't read FAT 32 or NTFS format. If your card is already designated as FAT 32 or NTFS format by your card reader, please format your card by the camera.
- (2) When the memory card is full of data from other devices: Please transfer data to your card reader or format your card.

● Format Steps

1. Press and hold the mode button for five seconds until the LCD shows the "FDR" icon.
2. Then press the shutter button to format SD Card/ MMC.

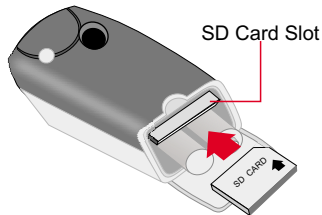


- This package doesn't include SD card or MMC.
- To store data on the built-in memory, please take out SD Card or MMC.
- NOTE: Formatting SD card or MMC will erase all of your images
-  (AVI Movies) functions only when SD Card/ MMC is inserted.
- If you have any problems with your memory card, please refer to the user guide of your SD Card/MMC.

Strap and Tripod Use


Strap

Attach the carrying strap for convenience and safety.

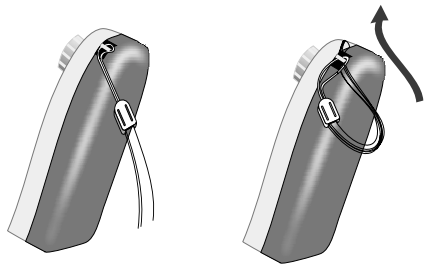

Tripod


Use a tripod to minimize camera movement and ensure optimal image quality, especially while shooting longer movies, self-portraits or video conferencing.

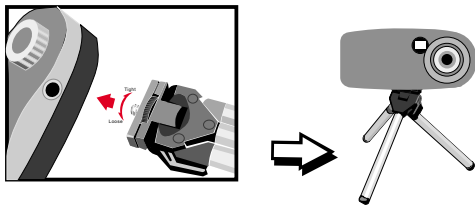



Using your Camera

Turning on your camera

Press the Mode button for 2 seconds to turn on your camera.

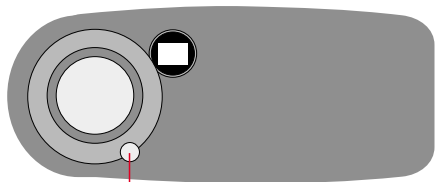

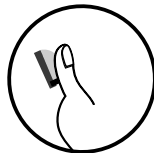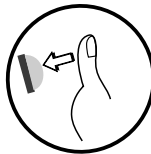

- Manual shut-off: press the mode button and shutter button simultaneously for 2 seconds.
- Auto shut-off: your camera will automatically shut off after 60 seconds of inactivity.




LCD Display

LCD Display


- | | | |
|-------------------|-----------------------|-----------------------|
| (1) Still picture | (5) Resolution | (9) Plug-in USB Cable |
| (2) AVI-Movies | (6) Counter | |
| (3) Self-Timer | (7) SD card inserted | |
| (4) Erase | (8) Battery indicator | |


Note: The  icon signifies delete last image or video.
The  signifies erase all.

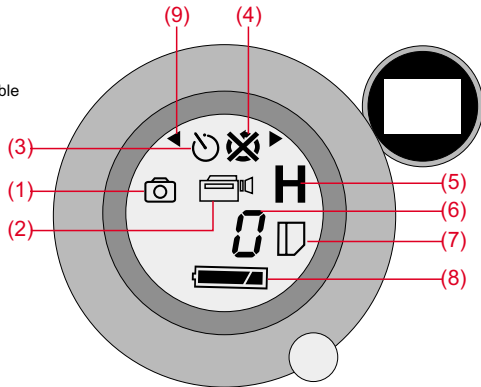

Mode Selecting

 Press Mode button to shift between functions on the LCD display. Press the Shutter button to select a function.




●  functions only when SD Card/ MMC is inserted.

Focus

Focus

Set focus before taking pictures.

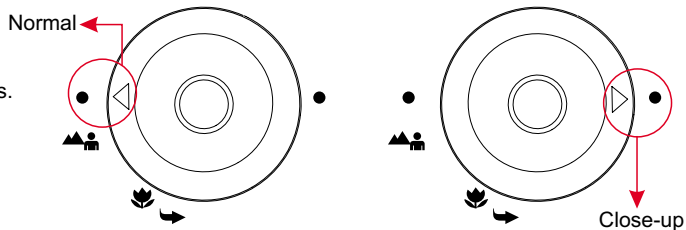

Normal



39"~∞ (100cm~∞)

Close-up



12"~39" (30cm~100cm)



Taking Pictures

Set flicker setting

Your camera has default flicker setting. The default setting usually corresponds to the flicker setting standard of each nation. If you use the camera outside your country or you find pictures appear unnatural flickering noise, please select 50Hz or 60Hz until flickering noise stops.

Country	England	Germany	France	Italy	Spain	Netherlands
Setting	50Hz	50Hz	60Hz	50Hz	50Hz	50Hz
Country	Portugal	America	Taiwan	China	Japan	Korea
Setting	50Hz	60Hz	60Hz	50Hz	50/ 60Hz	60Hz

● Steps:


- (1) Use Mode button to select **H** .
- (2) Press Mode button for 5 seconds.
- (3) Press the shutter to select 50 Hz or 60 Hz.
- (4) Press Mode button to leave flicker setting mode.

Still Pictures

Still pictures

Images taken in Still picture mode are stored as JPEG files.

- Steps:

- (1) Use Mode button to select .
- (2) Select image resolution (see below)
- (3) Center the target in the viewfinder.
- (4) Press the shutter button.


H / L Image resolution

Two kinds of resolution are available for still image:

H (1.3 mega pixels) and **L** (VGA) .

- Steps

- (1) Press Mode button to select **H** .
- (2) **H** flashes.
- (3) Press Shutter button to switch to **H** or **L** .
- (4) Press Mode button again to confirm resolution.

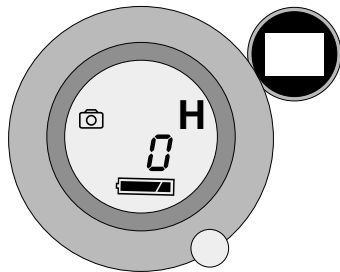

Icon	H	L
Resolution & Quality	1.3 Mega Pixels (1280x960)	VGA (640x480)

Still Pictures


Pictures Storage Capacity


Pictures storage capacity depends on SD Card storage capacity and your SDRAM memory. See the table to your right for more information

Icon	H	L
Resolution	1280x1024 pixels (1.3M pixels)	640x480 pixels VGA
Quality	High quality	Normal
32MB Memory (Example)	100 pictures ± 30%	200 pictures ± 30%
Note This table is for your reference. Actual number of pictures taken by different resolution and quality will vary, depending on color saturation.		

Self-timer

- Steps:


- (1) Press Mode button to select  .
- (2) Press shutter button.
- (3) The counter will count down from ten and automatically release the shutter.

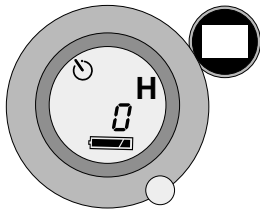


Recording AVI Movies

Your movies are stored as AVI files. Image size is 640x480 pixels (high resolution) and 320x240 pixels (low resolution), with frame rate 6-10 fps. Maximum recording time is determined by the capacity of your SD Card.

● To Record:

- (1) Press Mode button to select .
- (2) Center the target in the viewfinder
- (3) Press the shutter button.
- (4) Length of movie is recorded in counter.
- (5) Press the shutter button again to stop recording.

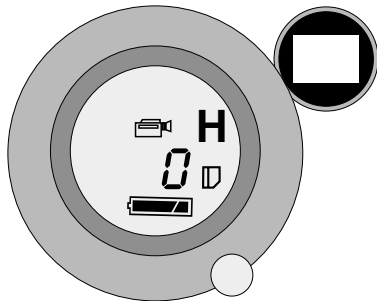

SD Card Storage Capacity	Movie (640x480)	Movie (320x240)
32MB	about 80 seconds	about 320 seconds



(AVI Movies) functions only when SD Card/ MMC is inserted.




Erase

Erase Last

The last saved file (AVI or JPEG) will be deleted.


● Steps:


- (1) Use Mode button to select .
- (2) Press the shutter button twice to erase last pictures or AVI Movie.
- (3) Use Mode button to leave Erase mode.

Erase All


All files(AVI or JPEG) saved in both SD Card and internal memory will be deleted.




● Steps:

- (1) Use Mode button to select .
- (2) Press the shutter button twice to erase all pictures or AVI Movie.
- (3) Use Mode button to leave Erase mode.

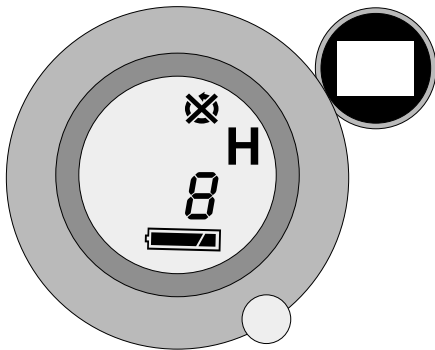

For Best Results

- 1 Keep the focus set to  except for extreme close-ups.
- 2 Make sure your subject is well lit from the front.
- 3 Keep the camera level and steady when releasing the shutter.
- 4 Make sure you have adequate light when taking still pictures or movies, especially indoors.
- 5 For best quality video, move the camera slowly during filming.

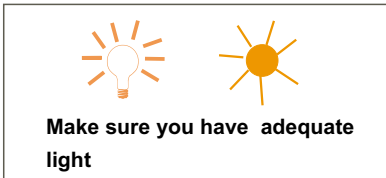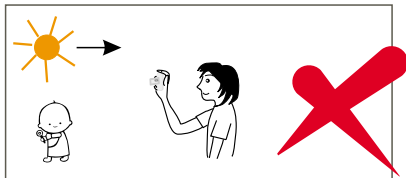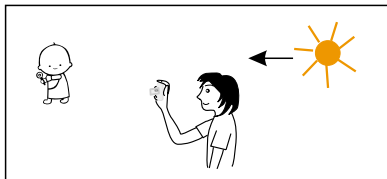

Bundled Software



PenCam SD Manager and other bundled software packages

PenCam SD Manager is your camera's driver as well as basic operating software. Your camera also comes bundled with the following video and image processing software. For more information, see each application's help file or visit the supplier's website.

NetMeeting

[Http://www.microsoft.com/windows/netmeeting/default.asp](http://www.microsoft.com/windows/netmeeting/default.asp)

VideoLive Mail

[Http://www.goCyberlink.com](http://www.goCyberlink.com)

Photo Explorer

[Http://www.ulead.com/pex/runme.htm](http://www.ulead.com/pex/runme.htm)

Photo Express SE

[Http://www.ulead.com/pe/](http://www.ulead.com/pe/)

Acrobat Reader

[Http://www.adobe.com/products/acrobat/readstep2.html](http://www.adobe.com/products/acrobat/readstep2.html)

Cool 360

[Http://www.ulead.com/cool360/runme.htm](http://www.ulead.com/cool360/runme.htm)


Applications	Main Feature
(1) PenCam SD Manager	PenCam SD Manager configuration software
(2) NetMeeting	Video & Audio Conferencing
(3) VideoLive Mail	Desktop videomail software
(4) Photo Explorer	Visual file management software
(5) Photo Express SE	Edit and create exciting illustrations & photos
(6) Acrobat Reader	Lets you view and print Adobe Portable Document Format (PDF) files
(7) Cool 360	Photo Panorama Software

PenCam SD Manager Installation

PenCam SD Manager features

The PenCam SD Manager allows you to:


- Download pictures and AVI movies to your PC.
- View pictures and AVI movies on screen.
- Transfer pictures and AVI movies to customized albums.

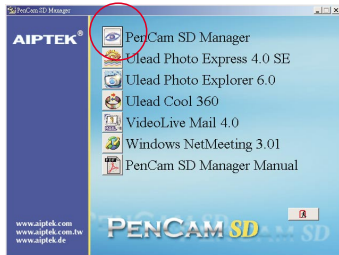

Software Installation

 
Installing the PenCam SD Manager


(1) Insert the CD-ROM in your CD drive. The installation menu should open automatically.




(2) Click  to start PenCam SD Manager installation.

(3) Follow the onscreen instructions to complete Installation.

(4) Click "Yes" to install Direct X 8.1. This will restart your PC.




(5)  icon will appear on PC desktop after installation.

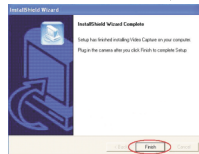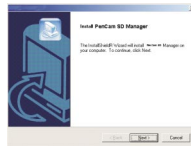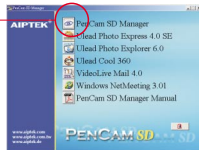


Click on " Finish" to complete installation.

Hardware Installation

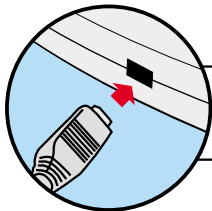

1 Connect the smaller end of the USB cable to the USB port of your camera.


2 Plug the larger end of the USB cable to the USB port of your PC.

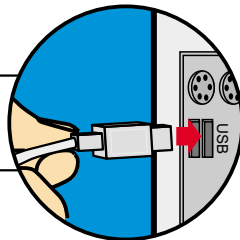


- Software installation must be completed before hardware installation.

Launching PenCam SD Manager

Follow the following two ways to launch PenCam SD Manager :


- 1 Click the " " icon on the Desktop to execute the program where you can begin to use your camera. **OR**
- 2 Click on the "Start" menu and go up to "Programs". Then go to the folder named "PenCam SD Manager" and select it.

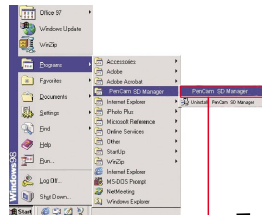

- To uninstall PenCam SD Manager, select "Uninstall PenCam SD Manager "


OR

Reinstall PenCam SD Manager to
uninstall PenCam SD Manager.

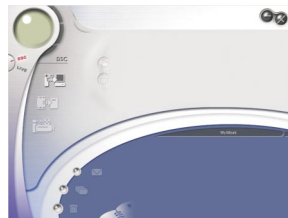


Mode Selecting

- › Press the "Live View" button to change the camera to PC Camera mode.
- › Press the "DSC Function" button to change the camera to DSC mode.

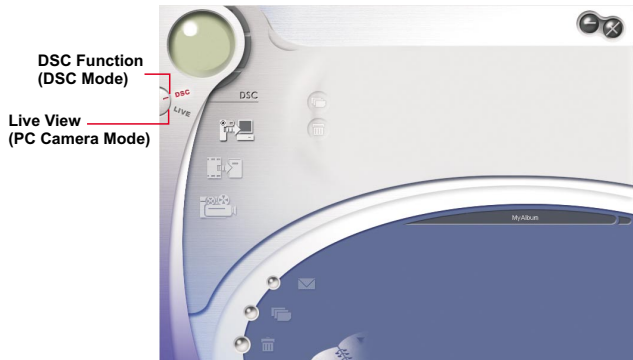


DSC Mode

- (1) DSC Function (DSC Mode)
- (2) Transfer images to the work area
- (3) Transfer images to the album
- (4) Create AVI file
- (5) Send Mail
- (6) Select All
- (7) Delete
- (8) Album Manager
- (9) Album
- (10) Delete
- (11) Select All
- (12) Image
- (13) Work area
- (14) Minimize
- (15) Exit

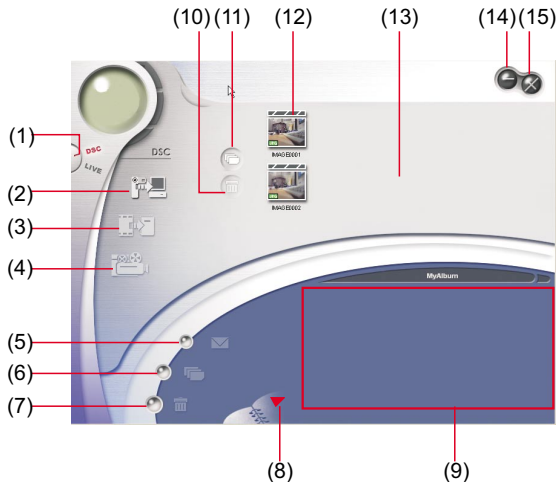


DSC Mode

Downloading pictures and movies

1. Make sure your camera is connected to your PC via the USB cable.
2. Set the PenCam SD Manager to DSC mode. (Note: This is the default mode when you open the PenCam SD Manager).
3. Click  to download your pictures to the work area.
4. Highlight the images you want to transfer.
5. Apply format to choose high(1280x960) or normal (640x480) resolution.
6. Check " Enhanced " to enhance your images to 2.1 Mega pixels. This enhanced format offers higher quality images, but also require more disk space.

Download pictures in 2.1
Mega pixel format

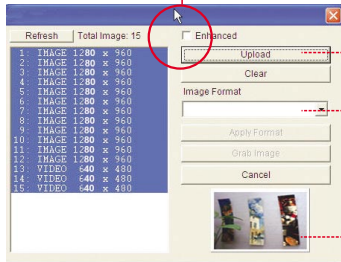

Download images


Select resolution

Preview images

DSC Mode

Viewing pictures


Double-click any picture or movie to launch the viewer.

Next picture →
Previous picture ←
Slide Show 
Exit ×





Viewing movies


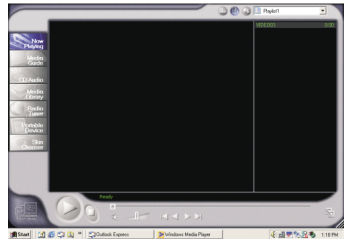
Double-click any AVI movie to automatically launch the movie in your default media player.



DSC Mode


Album Manager


1. Highlight a picture on the work area and click  to transfer to the Photo Album.
2. Click the Album Manager  to create a new Photo Album.
3. Key in a new album name.
4. Click **4** to designate a path where the album will be stored.
5. Click "Update" **5** to confirm the new album is created.
6. Click **6** to enter the new created album.

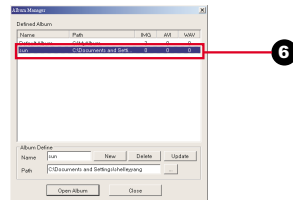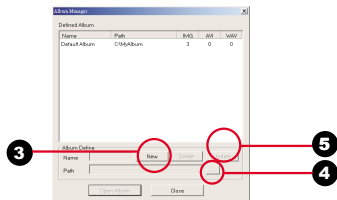






DSC Mode

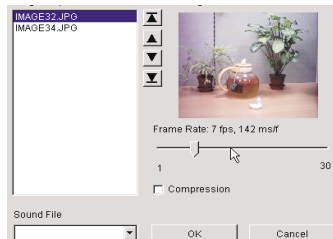
Creating AVI files

1. Select jpg / bmp images from the work area.
2. Click  to load the images to the AVI File Manager.
3. Order the image sequence, and adjust the frame rate.




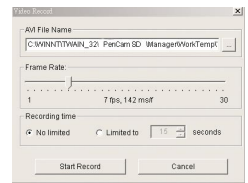
LIVE Mode

-  Record live video
-  Capture live still image
-  Set image size
-  Advanced settings (default settings recommended)
-  Select video source (if you have more than one image import device installed)

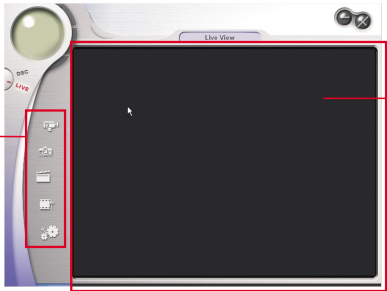

Preview Window

- Steps
1. Press 
 2. Adjust recording speed and time.
 3. Press " Start to Record "



LIVE Mode



Set Image Size

- **Color Space**


Select one of the following functions when you have different needs.

- RGB 24: better image quality
- I420: faster speed

- **Output Size**

Setting output size can change the size of the preview window. The default size is 320x240. Choose larger pixels when you need a larger preview window.

160 x 120
320 x 240
640 x 480

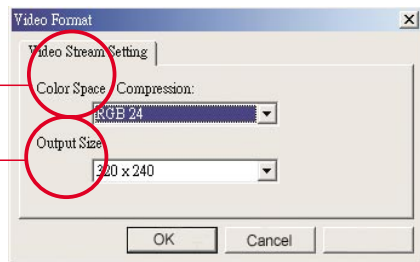

LIVE Mode




Advanced settings

- **Video Setting**


- Banding Filter:

When your PC screen flickers, please change the banding filter in Video Setting. The refresh rate (the number of times the screen is redrawn per second) is the most likely cause of flicker. Select 50Hz or 60Hz until your PC screen stops flickering.

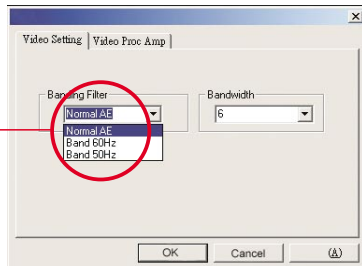

- **Custom Video Pro Amp**

You can use the default setting or change settings (brightness, contrast, saturation, sharpness, and hue) on your own.

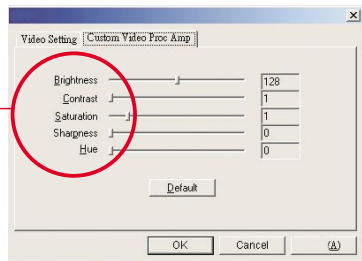

TWAIN Manager

The Manager allows you to directly download your photos to any image editing software.

● Steps:

1. Under " File", Select Device".
2. Choose "Data Source " and click "OK".
3. Under " File ", select " Acquire Image " .

(1) DSC Mode

(5) Save AVI


(2) Live View

(6) Snapshot

(3) Transfer

(7) Setting

(4) Transfer All

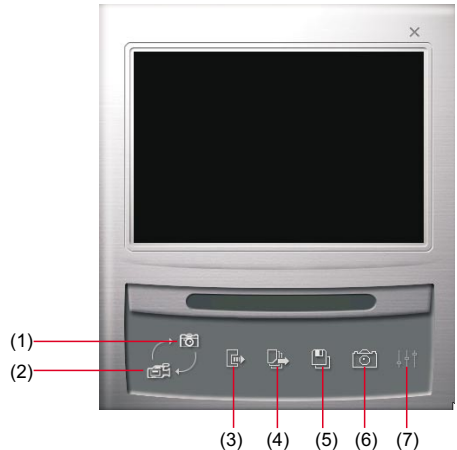

Troubleshooting

Symptom	Actions
1. When installation step missed:	<ul style="list-style-type: none">● Please remove the camera driver and other related software and follow each installation step to reinstall the camera.
2. When conflict with another camera driver capture device:	<ul style="list-style-type: none">● If you have any other camera installed on your computer, completely remove the camera and it's driver from your system to avoid a driver conflict with another camera or capture device.
3. When unable to install driver:	<ul style="list-style-type: none">● When installing camera driver under Windows 98SE, you'll be asked to insert a 98SE CD-ROM. Please follow the command to complete the installation.

Troubleshooting

Symptom	Actions
4. When unable to download images :	<ul style="list-style-type: none">● Please re-plug the camera to download images.
5. Adjust VGA card when image color is not fully saturated:	<ul style="list-style-type: none">● Please follow the operation steps : Go to control panel → Double - click " Display " → Click on " Settings " → Click on " Colors " → Choose " High Color " or " True Color ".
6. Please adjust the acceleration function of VGA card when unable to play images in Video Conferencing mode or in AVI mode.	<ul style="list-style-type: none">● Please follow the operation steps : Go to control panel → Double - click " Display " → Click on " Settings " → Click on " Advanced " → Click on " Performance " or " Troubleshooting " → Set the " Hardware acceleration " from " Full " to " None ".



Troubleshooting

Symptom	Actions
7. Noise appears on PC screen while camera used as a video conferencing camera.	<ul style="list-style-type: none">● Change Band Filter to 50 Hz or 60 Hz.
8. Images are blurred.	<ul style="list-style-type: none">● Adjust focus.
9. Images are too dark.	<ul style="list-style-type: none">● Take pictures while there is adequate light.● Use editing tools such as Photoshop or PhotoImpact to adjust image brightness.
10. AVI files can't be played back	<ul style="list-style-type: none">● Install Direct X 8.0 or above.

AIPTEK Service

If you have any problems, please contact AIPTEK office to which your country is assigned. Please note: If you reside outside of the United States or Germany, please contact AIPTEK Intl Inc.

AIPTEK, Inc.

51 Discovery, Suite 100

Irvine, CA 92618, USA

TEL: 949-585-9600

FAX: 949-585-9345

<http://www.aiptek.com>

Hours: 8 a.m. to 5 p.m. Pacific Time

Online registration website:

<http://www.com/registration/registration.htm>

(Online registration entitles you to special services, downloads and promotions.)

AIPTEK International GmbH

HalskestraBe 6

47877 Willich, Germany

TEL +49 21 54 - 92 35 50

Fax +49 21 54 - 92 35 68

<http://www.aiptek.de>

AIPTEK Int'l., Inc.

No. 5-1 Innovation Road I

Science-Based Industrial Park

Hsin-Chu 300

Taiwan, R.O.C.

Tel: 886-3-5678138

Fax: 886-3-5678569

<http://www.aiptek.com.tw>



82-152-90010v1.1

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>