



TV/WB/FM/AM Portable CD Player

Operating Instructions




XP-ER800N

Sony Corporation ©2003 Printed in China

For assistance and information
visit us on the internet at
www.us.aiwa.com
call toll free 1-800-BUY-AIWA
(United States only)


<http://www.aiwa.com/>

CD player (front)

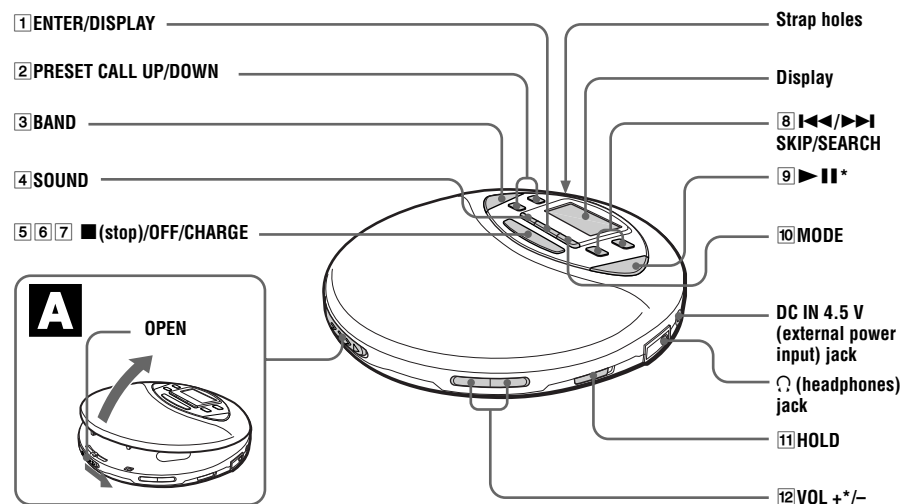


*The button has a tactile dot.


Display

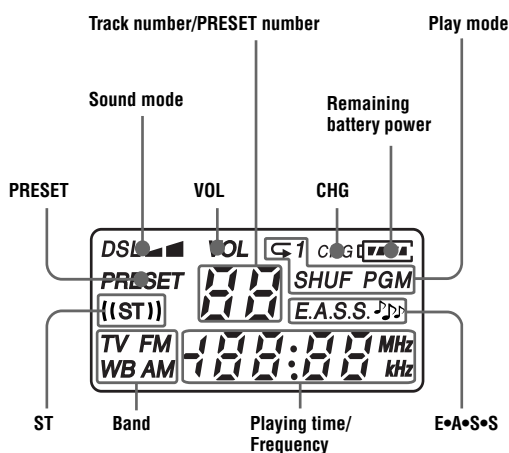

B

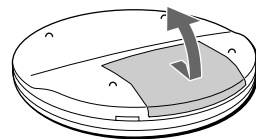


Open the battery compartment lid.

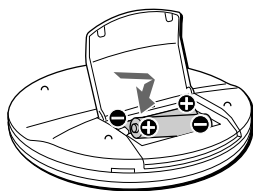


Insert the ⊕ end first (for both batteries).

C

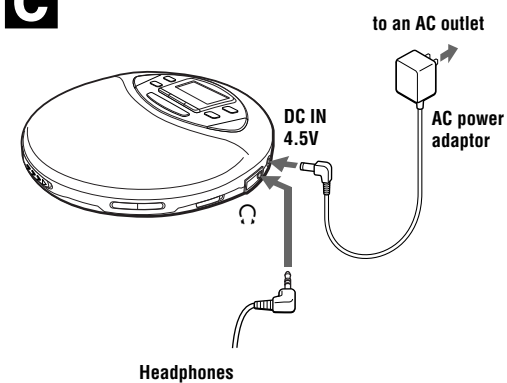

Headphones

D

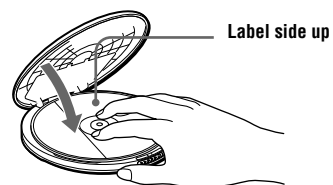

Label side up

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

To prevent fire, do not cover the ventilation of the apparatus with newspapers, tablecloths, curtains, etc. And don't place lighted candles on the apparatus.

To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.

CAUTION

The use of optical instruments with this product will increase eye hazard.

Certain countries may regulate disposal of the battery used to power this product. Please consult with your local authority.

CAUTION

- INVISIBLE LASER RADIATION WHEN OPEN
- DO NOT STARE INTO BEAM OR VIEW DIRECTLY WITH OPTICAL INSTRUMENT

The validity of the CE marking is restricted to only those countries where it is legally enforced, mainly in the countries EEA (European Economic Area).

Owner's Record

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

Declaration of Conformity

Trade Name: AIWA
Model No.: XP-ER800N
Responsible Party: Sony Electronics Inc.
Address: 680 Kinderkamack Road,
Oradell, NJ 07649
USA
Telephone No.: 201-930-6973

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Power Sources

To use the batteries (B)

Use only the following batteries for your CD player:

Dry batteries

- LR6 (size AA) alkaline batteries (not supplied)

Rechargeable batteries

- Charge the rechargeable batteries before using them for the first time.
- Commercially-available size AA Ni-MH rechargeable batteries of 1.2 V DC, 700 mAh

To insert the batteries

- 1 Open the battery compartment lid on the rear of your CD player.
- 2 Insert two batteries by matching the ⊕ to the diagram in the battery compartment and close the lid until it clicks into place.
- 3 When using the rechargeable batteries, connect the commercially-available AC power adaptor to the DC IN 4.5V jack of your CD player and an AC outlet, then press ■/OFF/CHARGE while the CD player is turned off to start charging. The CD player charges the batteries. The "CHG" indicator turns on in the display and the indicator sections of light up in succession. When the batteries are completely charged, the "CHG" and indicators get turned off. If you press ■/OFF/CHARGE after the charge has already been completed, the indicator flashes and "Full" appears in the display.
- 4 Disconnect the AC power adaptor.

Battery life* (approx. hours)

(When the CD player is used on a flat and stable place.)
Playing time varies depending on how the CD player is used.

	E•A•S•S	E•A•S•S	Radio ON
Two Sony alkaline batteries LR6 (SG) (produced in Japan)	38	32	58

* Measured value by the standard of JEITA (Japan Electronics and Information Technology Industries Association).

To check the remaining power of the batteries

You can check it in the display.

Replace the batteries when flashes.



Lo batt*

* Beep sounds.

Notes

- The indicator sections of roughly shows the remaining battery power. One section does not always indicate one-fourth of the battery power.
- Depending on operating conditions, the indicator sections of may increase or decrease.

Notes on using the dry batteries

- Be sure to remove the AC power adaptor.
- When the batteries are depleted, replace both batteries with new ones.

Notes on the rechargeable batteries

- To keep the original battery capacity for a long time, charge the batteries only when they are completely depleted.
- If the battery is new or has not been used for a long time, it may not be charged completely until you charge and discharge it several times.
- When carrying the rechargeable batteries, use the battery carrying case supplied with the rechargeable batteries to prevent unexpected heat. If the rechargeable batteries and the metallic objects get contacted, heat or fire may occur due to a short circuit.

When to replace the rechargeable batteries

If the battery life becomes shorter by about half, replace the batteries with new rechargeable batteries.

To use the AC power adaptor (C)

- 1 Connect the commercially-available AC power adaptor whose rated output is 4.5 V DC, 500 mA, to an AC outlet.

Playing a CD

To insert a CD

- 1 Slide OPEN to open the lid (A).
- 2 Fit the CD to the pivot, then close the lid (B).

Notes

- This CD player can play discs recorded in the Compact Disc Digital Audio (Audio CD) format.
- This CD player can play CD-Rs/CD-RWs recorded in the Compact Disc Digital Audio (Audio CD) format, but playback capability may vary depending on the quality of the disc and the condition of the recording device.
- This product is designed to play back discs that conform to the Compact Disc (CD) standard. Recently, various music discs encoded with copyright protection technologies are marketed by some record companies. Please be aware that among those discs, there are some that do not conform to the CD standard and may not be playable by this product.

To operate the CD player

Button/Switch and its Function/Operation

- 1 ENTER/DISPLAY
Press to check the remaining time on the CD and the number of tracks left. Also press to enter the selected track for the PGM play.
- 2 PRESET CALL UP/DOWN
Press to select the preset station you want.
- 3 BAND
Press to turn on the radio. Press also to change the band.
- 4 SOUND
Use to emphasize the bass-boosted sound. Press repeatedly to select *DSL* or *DSL*. *DSL* enhances more than *DSL*.*
- 5 (stop)
Press to stop playing.
- 6 OFF
Press to turn off the radio.
- 7 CHARGE
Press to start charging.
- 8 I<<</>I>>> (skip/search)
For CD player: Press I<<< or I>>> once to find the beginning of the current/next track. Press I<<< or I>>> repeatedly to find the beginning of the previous/succeeding tracks. Press and hold I<<< or I>>> to go backward/forward quickly.
For radio: Press to tune in the station you want.
- 9 II (play/pause)
Press to start play. Press again to pause play. To play from the first track, press for 2 seconds or more while the CD player is stopped.

Button/Switch and its Function/Operation

- 10 MODE
For CD player: Press repeatedly until the play mode you want appears in the display.
No indication: Normal play
"1": Single play
"SHUF": Shuffle play
"PGM": PGM (program) play
To repeat the play mode you selected, press and hold until appears.
For radio: Press until "ST" disappears from the display to improve the receiving condition on FM.

- 11 HOLD
Use to lock the controls to prevent accidental button presses.

- 12 VOL +/-
Press to adjust the volume.

* If the sound is distorted when using the SOUND function, turn down the volume.

To protect against sound skipping

The E•A•S•S function has been developed to provide excellent protection against sound skipping during many active uses.

- 1 Insert a disc and wait until the display goes off.

- 2 While holding MODE, press II.

- 3 Press MODE to select the E•A•S•S mode.

When you select "E•A•S•S", the E•A•S•S function is enhanced compared to "E•A•S•S ".

To walk with the CD player and enjoy high quality CD sound using the E•A•S•S function, select "E•A•S•S ". While taking harder exercises, it is recommended that you set it to "E•A•S•S."

- 4 Press ENTER/DISPLAY.

Note

Sound may skip:


- if the CD player receives stronger continuous shock than expected,
- if a dirty or scratched CD is played or
- when using poor-quality CD-Rs/CD-RWs or if there is a problem with the recording device or application software.

Checking the remaining time on the CD and the number of tracks left

You can check the remaining time on the CD and the number of tracks left using ENTER/DISPLAY.

- 1 Press ENTER/DISPLAY.


Each time you press the button, the display changes as follows:

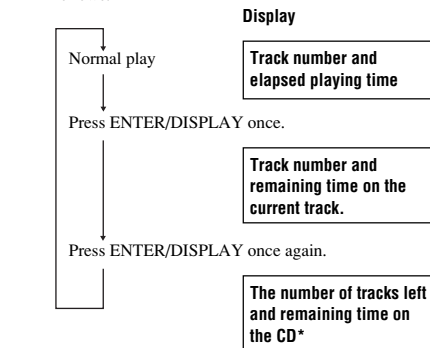

*Not displayed during the Single play and Shuffle play.

To remove the CD

Remove the CD while pressing the pivot.

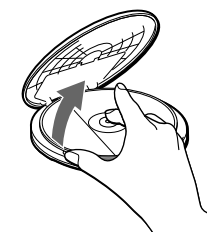

To turn off the operation beep sound

You can turn off the beep sound that is heard from your headphones when you operate your CD player.

- 1 Remove the power source (AC power adaptor, dry batteries) from the CD player, and wait for about 3 seconds.
- 2 Connect the power source while pressing ■/OFF/CHARGE.

To turn on the beep sound

Remove the power source, wait for about 3 seconds, and then connect the power source without pressing ■/OFF/CHARGE.

Playing tracks in your favorite order (PGM play)

You can program the CD player to play up to 24 tracks in your favorite order.

- 1 During playback, press MODE repeatedly until "PGM" flashes.
- 2 Press I<<< or I>>> to select a track.
- 3 Press ENTER/DISPLAY to enter the selected track. "00" appears and the playing order increases by one.
- 4 Repeat steps 2 and 3 to select the tracks in your favorite order.
- 5 Press and hold ENTER/DISPLAY until the PGM play starts.

(Continue to the reverse side)

Listening to the radio

- 1 Press BAND to turn on the radio.
- 2 Press BAND until the band you want appears.
Each time you press the button, the display changes as follows:

→ FM → AM → TV → WB →

- 3 Press ◀◀ or ▶▶ on the CD player to tune in the station you want and adjust the volume.

Tuning mode and Preset mode

When the preset number appears in the display, the CD player is in the preset mode and you can use PRESET CALL UP/DOWN to select the preset number.

To enter the tuning mode, press ◀◀ or ▶▶ to make the preset number disappear from the display and to tune in the station.

To turn off the radio

Press ■/OFF/CHARGE.

Note

During radio reception, the power is turned off automatically if no operation is made for about 2.5 hours since the last operation.

To tune in the station quickly

Press and hold ◀◀ or ▶▶ on the CD player in step 3 until the frequency digits begin to change in the display. The CD player automatically scans the radio frequencies and stops when it finds a clear station.

 
To improve broadcast reception

For TV/WB/FM, extend the headphones cord.



Headphones

For AM, reorient the CD player itself.



Note

Keep the headphones connected to the ⏏ jack of the CD player. The headphones cord works as the FM/TV/WB antenna.

If it is hard to hear the FM broadcast

Press MODE until “ST” disappears from the display. Under the normal conditions, press MODE until “ST” appears in the display.

Presetting radio stations automatically

You can preset up to 30 stations in total for FM and AM.

- 1 Press BAND to turn on the radio.
- 2 Press and hold ENTER/DISPLAY until searching starts.
The CD player starts to scan the radio frequencies on FM and AM, and the received stations are memorized. “bUSy” appears for about 4 seconds when all the received stations are memorized or when 30 stations are memorized.

Skipping the tuned station while the scanning is paused

When a station is tuned in, scanning pauses and the tuned station is heard for 5 seconds. Press ▶▶ to skip the station while the scanning is paused.

Note

- Stations cannot be stored on TV and WB.
- When broadcast signals are very weak, stations cannot be preset automatically. Preset them manually.

Presetting radio stations manually

You can preset up to 30 stations in total for FM and AM.

- 1 Press BAND to turn on the radio.
- 2 Press BAND to select the band.
- 3 Press ◀◀ or ▶▶ on the CD player to tune in the station you want.
- 4 Press ENTER/DISPLAY. “PRESET” appears in the display.
To preset another station, repeat steps 3 and 4.

Changing the presetting

- 1 Press PRESET CALL UP or DOWN to select the preset number you want to change.
- 2 Press and hold down ENTER/DISPLAY until the preset number flashes.
- 3 While the preset number is flashing, press ◀◀ or ▶▶ to tune in the station you want to memorized on that preset number.
- 4 Press ENTER/DISPLAY.

If the flashing stops, repeat from step 2.

Erasing a preset station

Press ■/OFF/CHARGE after step 2 in “Changing the presetting” above. “bUSy” appears for about 4 seconds, and the selected preset station is erased from the memory. The preset number decreased by one for the stored stations whose preset number are larger than that of the just-erased station.

Note

- Stations cannot be stored on TV and WB.
- When “P-Full” appears during presetting, you cannot preset any more stations.

Playing preset radio stations

- 1 Press BAND to select the band.
- 2 Press PRESET CALL UP/DOWN to tune in a stored station.

Changing the tuning interval

When using the CD player abroad, change the AM tuning interval, if necessary.

- 1 Press ■/OFF/CHARGE to turn off the CD player, if it is turned on.
- 2 While holding MODE, hold BAND for about 3 seconds.
- 3 Press MODE to select the AM tuning interval.
9 kHz area: Asia and Europe
10 kHz area: the U.S.A., Canada and South America
- 4 Press ENTER/DISPLAY. “bUSy” appears for about 4 seconds, and the tuning interval is changed.

Notes

After changing the tuning interval, you need to preset radio stations again.

Precautions

On safety

- Should any solid objects or liquid fall into the CD player, unplug it and have it checked by qualified personnel before operating it any further.
- Do not put any foreign objects in the DC IN 4.5 V (external power input) jack.

On power sources

- When you are not using the CD player for a long time, disconnect all power sources from the CD player.

On AC power adaptor

- Use the commercially-available AC power adaptor whose rated output is 4.5 V DC, 500 mA.
Do not use any other AC power adaptor. It may cause a malfunction.

Polarity of the plug



- Do not touch the AC power adaptor with wet hands.
- Connect the AC power adaptor to an easily accessible AC outlet. Should you notice an abnormality in the AC power adaptor, disconnect it from the AC outlet immediately.
- Do not install the AC power adaptor in a confined space, such as a bookcase or built-in cabinet.
- To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the AC power adaptor.

On rechargeable batteries and dry batteries

- Do not charge the dry batteries.
- Do not throw the batteries into fire.
- Do not carry the batteries with coins or other metallic objects. It can generate heat if the positive and negative terminals of the battery are accidentally contacted by a metallic object.
- Do not mix rechargeable batteries with dry batteries.
- Do not mix new batteries with old ones.
- Do not use different types of batteries together.
- When the batteries are not to be used for a long time, remove them.
- If battery leakage occurs, wipe off any deposit in the battery compartment, and install new batteries. In case the deposit adheres to you, wash it off thoroughly.

On the CD player

- Keep the lens on the CD player clean and do not touch it. If you do so, the lens may be damaged and the CD player will not operate properly.
- Do not put any heavy object on top of the CD player. The CD player and the CD may be damaged.
- Do not leave the CD player in a location near heat sources, or in a place subject to direct sunlight, excessive dust or sand, moisture, rain, mechanical shock, unlevelled surface, or in a car with its windows closed.
- If the CD player causes interference to the radio or television reception, turn off the CD player or move it away from the radio or television.
- Discs with non-standard shapes (e.g., heart, square, star) cannot be played on this CD player. Attempting to do so may damage the CD player. Do not use such discs.

Note on moisture condensation

If the CD player is suddenly moved from a cold place to a warm place, it may result in moisture condensation on the pickup lens and malfunction or playback difficulties. Should this occur, leave the CD player for a few hours, then try playback again.

On headphones/earphones

Road safety

Do not use headphones/earphones while driving, cycling, or operating any motorized vehicle. It may create a traffic hazard and is illegal in some areas. It can also be potentially dangerous to play your headsets at high volume while walking, especially at pedestrian crossings. You should exercise extreme caution or discontinue use in potentially hazardous situations.

Preventing hearing damage

Avoid using headphones/earphones at high volume. Hearing experts advise against continuous, loud and extended play. If you experience a ringing in your ears, reduce volume or discontinue use.

Consideration for others

Keep the volume at a moderate level. This will allow you to hear outside sounds and to be considerate to the people around you.

Maintenance

To clean the casing

Use a soft cloth slightly moistened in water or a mild detergent solution. Do not use alcohol, benzine or thinner.

To clean the plugs

If the plugs become dirty, there is no audio or noise is heard. Clean them with a dry soft cloth periodically.

Troubleshooting


Should any problem persist after you have made these checks, consult your nearest Aiwa dealer.

“Hold” appears in the display when you press a button, and the CD does not play.

→ The buttons are locked. Slide HOLD back.

The battery compartment lid is detached by an accidental drop, excessive force, etc.

→ Attach it as illustrated below.

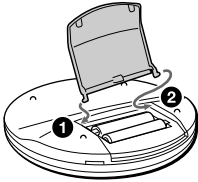

Specifications

System

Compact disc digital audio system

Laser diode properties

Material: GaAlAs
Wavelength: λ = 780 nm
Emission duration: Continuous
Laser output: Less than 44.6 μW (This output is the value measured at a distance of 200 mm from the objective lens surface on the optical pick-up block with 7 mm aperture.)

Frequency range

10 kHz step:
TV: 2 - 13 ch
WB (weather band): 1 - 7 ch
FM: 87.5 - 108.0 MHz
AM: 530 - 1 710 kHz
9 kHz step:
TV: 2 - 13 ch
WB (weather band): 1 - 7 ch
FM: 87.5 - 108.0 MHz
AM: 531 - 1 602 kHz

Power requirements

- Two LR6 (size AA) batteries (not supplied): 3 V DC
- AC power adaptor (DC IN 4.5 V jack): 120 V, 60 Hz
- Two Ni-MH rechargeable batteries (size AA, 700 mAh): 2.4 V DC

Dimensions (w/h/d) (without projecting parts and controls)

Approx. 136.0 × 20.4 × 139.0 mm (5 ¼ × ⅜ × 5 ½ in.)

Mass (excluding accessories)

Approx. 200 g (7 oz)

Operating temperature

5°C – 35°C (41°F – 95°F)

Design and specifications are subject to change without notice.

Supplied Accessories

Headphones (1)

This warranty is valid only in the United States.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>