

# aiwa

## XP-SR311

COMPACT DISC PLAYER

### OPERATING INSTRUCTIONS

AIWA CO.,LTD.

8A-HCD-901-01  
000317AYO-OX  
Printed in China

#### NOTE FOR USE IN THE U.S.A.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### CAUTION

Modifications or adjustments to this product, which are not expressly approved by the manufacturer, may void the user's right or authority to operate this product.

#### OWNER'S RECORD

For your convenience, record the model number and the serial number (you will find it on the bottom of your set) in the space provided below. Please refer to them when you contact your Aiwa dealer in case of difficulty.

Model No. XP-SR311

Serial No.

Highlighted letters in the text of this manual correspond to the illustrations.

### PRECAUTIONS

#### To maintain good performance

- Do not use the unit in places which are extremely hot, cold, dusty or humid. In particular, do not use or keep the unit in following places.
  - in a high humidity area such as a bathroom
  - near a heater
  - in an area exposed to direct sunlight (e.g., inside a parked car, where it can become extremely hot)
  - near sources of strong magnetism, such as televisions, speakers, or magnets
  - where there is a lot of movement or vibration, such as on a car dashboard or an unstable shelf
- Do not open the battery compartment with wet hands.
- Wipe the unit thoroughly before inserting batteries and after use.
- Do not soak the unit in water.

#### For safety

- Do not attempt to disassemble the unit. Laser rays from the optical pickup are dangerous to the eyes.
- Make sure that pins or other foreign object do not get inside the player.
- Take care not to drop the unit or subject it to strong shocks.
- To keep dust from the pickup lens, keep the disc compartment lid closed after use. Never touch the lens.
- If you hear no sound when playing a disc, DO NOT turn the volume up high because music could suddenly start at high volume. Turn the volume control to the lowest level before starting playback and slowly turn it up to the desired level.

#### Note on listening with the headphones

- Listen at moderate volumes to avoid hearing damage.
- Do not wear the headphones while driving or cycling. It may create a traffic hazard.
- You should use extreme caution or temporarily discontinue use in potentially hazardous situations, such as walking, jogging, etc.
- Wear them properly; L is left, R is right.

#### Note on condensation

If the unit is suddenly moved from a cold place to a warm one, it may result in condensation on the pickup lens and malfunction or playback difficulties. Should this occur, leave the unit for a few hours, then try to playback again.

#### If an erroneous operation occurs

Press ■STOP/OFF/CHARGE twice to turn off the power. Then turn the power back on to reset the unit.

### USING ON DRY CELL BATTERIES → **A**

- 1** Set the dial to the OPEN position to open the disc compartment, then open the battery compartment.
- 2** Insert two size AA (LR6) alkaline batteries with the ⊕ and ⊖ marks correctly aligned. After battery insertion, close the battery compartment firmly.
- 3** Close the disc compartment tightly and set the dial to the LOCK position.

#### Battery replacement

The battery indicator in the display changes from to to according to the remaining power of the batteries. Replace the batteries when lights. If the unit remains in use after lights, "Lo-bAtt" is displayed and the operation will stop.

#### Battery life (using alkaline batteries LR6)

The mode of the E•A•S•S	Battery life
48	Approx. 20 hours
12 or OFF	Approx. 15 hours

 
 
Battery life may vary depending on conditions of use.

If the cover of the battery compartment comes off → **B**

#### Note

Close the battery compartment firmly, or the compact disc may be damaged.

#### Note on dry cell batteries

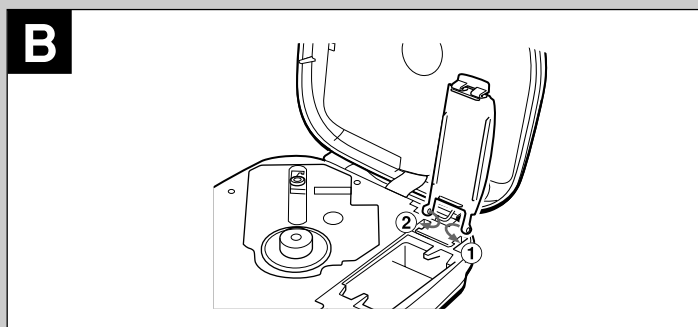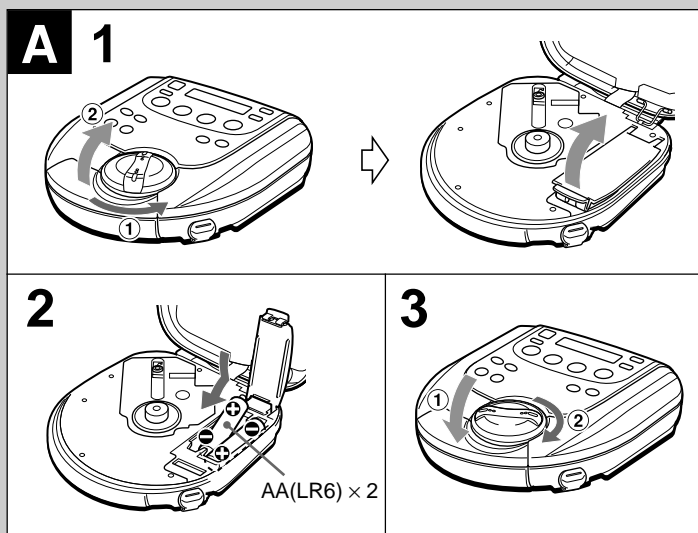

 
 
**Note**

**Close the battery compartment firmly, or the compact disc may be damaged.**


**Note on dry cell batteries**

 
- Make sure that the **+** and **-** marks are correctly aligned.
- Do not mix the different types of batteries, or an old battery with a new one.
- To prevent the risk of electrolyte leakage or explosions, never recharge the batteries, apply heat to them, or take them apart.
- When not using the batteries, remove them to prevent needless battery wear.
- If liquid leaks from the batteries, wipe thoroughly to remove.

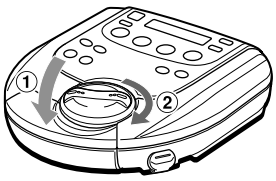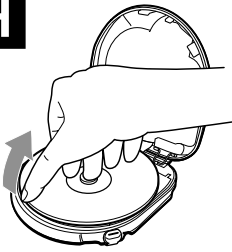


**3****H****DSL**

Press DSL for more powerful sound and deeper bass.

DSL  : Deep bass is emphasized.

DSL  : Deep bass is strongly emphasized.

DSL  : Normal sound

**Connecting the headphones → F**

Pull out the rubber cap and connect the supplied headphones to the PHONES/LINE OUT jack.

**Inserting a disc → G**

**1 Set the dial to the OPEN position to open the disc compartment.**

**2 Place a disc in the center with the label side facing up.**

**3 Close the disc compartment tightly and set the dial to the LOCK position.**

**To remove the disc → I**

Pick up the disc, holding its edge, while pressing the pivot gently.

**Note**

- The unit may not play a CD-R/RW disc that is recorded on personal computers or some kinds of CD-R/RW recorders because of differences in recording platforms.
- Do not attach any seal or label to either side (the recordable side or the labeled side) of a CD-R/RW disc. It may cause malfunction.

 
 
 
 
 
 


■ STOP/OFF/  
CHARGE



PHONES/  
LINE OUT

HOLD  
RESUME ● OFF

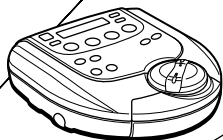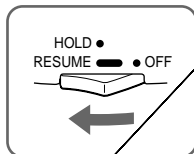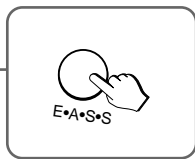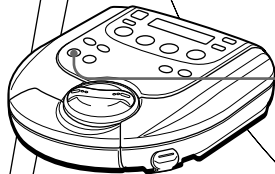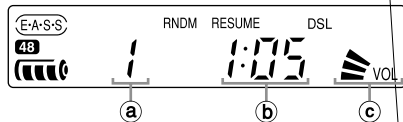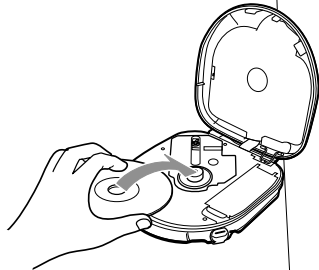

 
display changes to RNDM. PLAY MODE in standby mode.

**Note**

- You cannot back to previous track by pressing **⏮** during random play.
- You cannot select one-track repeat during random play.

**Repeat play** → **L**

 
Press PLAY MODE during playback to select repeat play as follows.

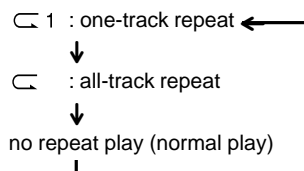 


**Note**

When the unit is set to E•A•S•S-12 or -48 second mode, if PLAY MODE is pressed at the end of the track to select the other play mode, the unit may not change to the other mode properly.

**L**

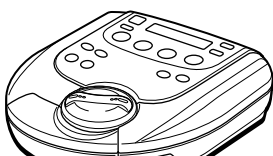

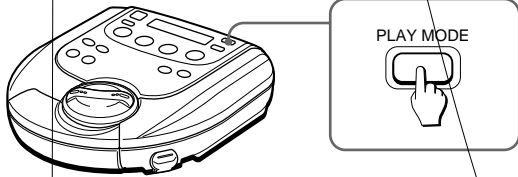

**Note**

When the unit is set to E•A•S•S-12 or -48 second mode, if PLAY MODE is pressed at the end of the track to select the other play mode, the unit may not change to the other mode properly.

**RADIO RECEPTION**

**Tuning in to a station → M**

- 1 Press TUNER ON/BAND repeatedly to select AM or FM.
- 2 Press TUNING + (▶▶) or - (◀◀) to tune in to a station.

After listening, press ■ STOP/OFF/CHARGE to turn off the radio.

**For quick tuning**

Keep either TUNING + (▶▶) or - (◀◀) pressed for about 1 second. When a station is tuned in to, the frequency stops automatically. However, it does not stop if the broadcast signal is weak.

**For better reception → N**

 
 
 
 
FM: The headphone cord functions as the FM antenna. Keep it extended.  
 AM: Turn the unit to find the position which gives the best reception.

 
**To listen to an FM stereo broadcasting**

When a tuned in station is in stereo, ST changes to (ST). When the FM stereo signal is weak and distorted, press MONO/ST. ST goes out and the sound will be heard in monaural but distortion will be reduced.

**Note**

- Do not open the disc compartment during radio reception. The buttons will be deactivated.
- The power is turned off automatically if no operation is made after 180 minutes from the last operation during radio reception.

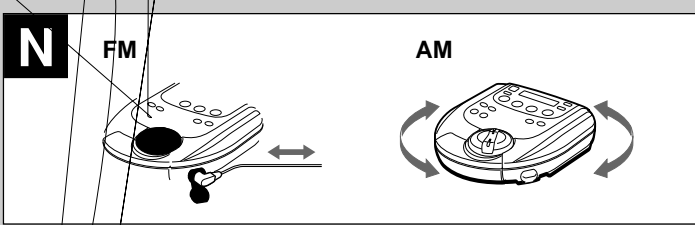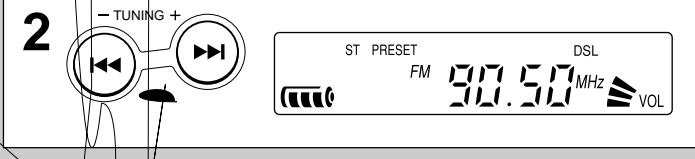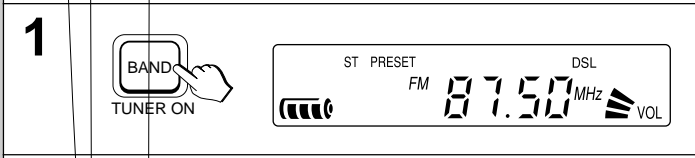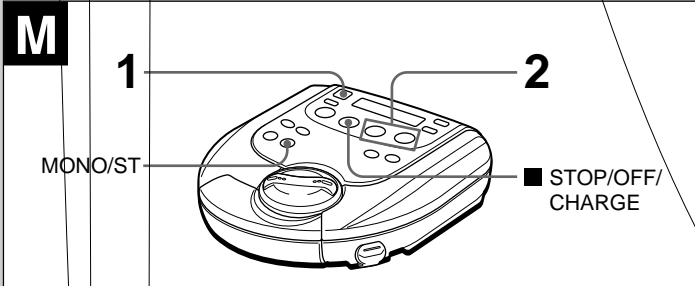 


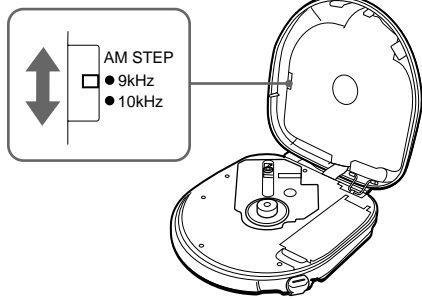**O****AM steps → O**

Radio broadcasts have different frequency ranges and changes in different steps in different countries.

This unit is factory-set to 10 kHz steps on AM. When using the unit where the AM step changes to 9 kHz, set the AM STEP switch on the inner side of the disc compartment to 9 kHz.

- When the AM step is changed, stations that you preset are erased.

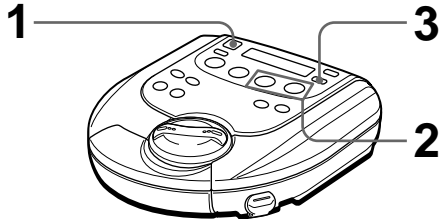**P****Presetting stations → P**

You can preset up to total of 30 stations on AM and FM.

- 1 Press **TUNER ON/BAND** repeatedly to select AM or FM.
- 2 Press **TUNING + (▶▶)** or **- (◀◀)** to tune in to a station.
- 3 Press **ENTER** to preset the station.

Ⓐ Preset number

To preset more stations, repeat steps 2 and 3.

**Listening to preset stations → Q**

- 1 Press **TUNER ON/BAND** repeatedly to select AM or FM.
- 2 Press **PRESET CALL ^/∨** repeatedly to select the preset number.

After listening, press **■ STOP/OFF/CHARGE** to turn off the radio.

**Changing the presetting**

- 1 Press **PRESET CALL ^/∨** repeatedly to select the preset number you wish to change.
- 2 Keep **ENTER** pressed for 1 or more seconds until the preset number and the frequency flash.
- 3 While the preset number is flashing, press **TUNING + (▶▶)** or **- (◀◀)** to tune in to a station.
- 4 Press **ENTER** to preset the station on the selected preset number.

 
 
 
 
 
If the flashing stops, repeat the procedure from step 2.

**Erasing the presettings one by one**

Press **■ STOP/OFF/CHARGE** after step 2 in "Changing the presetting" above. Each preset station is erased. All the settings move up by one and the preset numbers are refreshed.

**Erasing all of the presetting**

Keep **ENTER** pressed, then press **TUNER ON/BAND** when the frequency and preset number starts flashing.

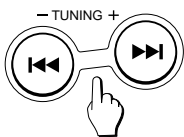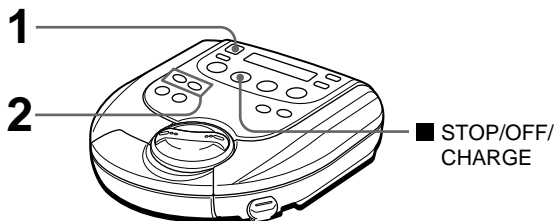 
**1****2****3****Q****CONNECTING TO AN EXTERNAL UNIT → R**

Use a commercially available connection cord which has a 3.5ø stereo mini-plug at one end and two phono plugs at the other end.

Connect the stereo mini-plug to the PHONES/LINE OUT jack of the unit and connect the phono plugs to the analog input terminals of the external unit.

**Note**

- Turn off the power of both units before connection.
- DO NOT connect to the PHONO inputs of an amplifier (with a built-in phonoequalizer-amplifier).
- Adjust the volume and DSL on this unit.

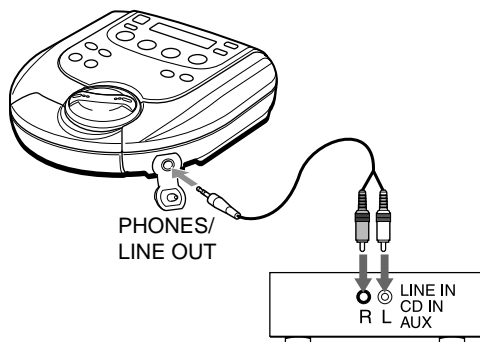**R****MAINTENANCE****To clean the lens → S**

If the lens becomes dirty, the player will skip or not play. If this occurs, clean the lens in the following manner.

To remove dust or dry particles, first use a camera lens blower/brush Ⓐ to blow a few times to loosen particles, then gently brush the lens Ⓑ clean. Finish by blowing the lens again.

 
To remove fingerprints, use a cotton swab dipped in lens cleaning solution. Wipe gently from the center to the edge. Lens cleaning solution is commercially available.

 
 
**Note**

Take care not to get too much solution on the swab, which could flow into the unit and cause damage. Pressing too strongly with the swab could scratch or break the lens.

**To clean the discs → T**

Before playing, wipe the disc from the center outward with a cleaning cloth. After playing, store the disc in its case.

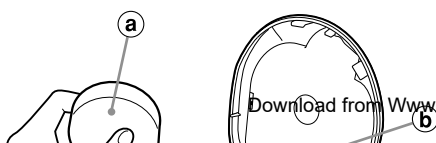**S****SPECIFICATIONS**

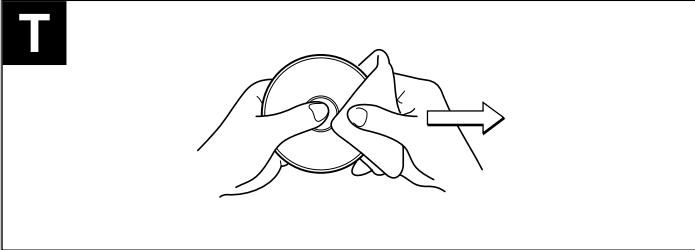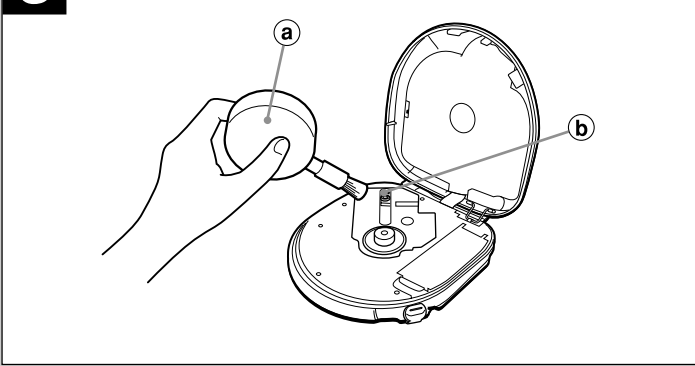

## SPECIFICATIONS

<b>Tracking system</b>	3-beam laser
<b>Laser pickup</b>	Semiconductor laser
<b>D/A conversion</b>	4-times oversampling digital filter + 1-bit DAC
<b>Frequency response</b>	20 – 20,000 Hz (47 k ohms)
<b>Output</b>	PHONES/LINE OUT jack (stereo mini-jack)
<b>Frequency range</b>	AM: 530/531 kHz – 1,710/1,602 kHz (10 kHz/9 kHz steps) FM: 87.5 – 108 MHz
<b>Maximum output</b>	12 mW + 12 mW (16 ohms at 1 kHz) 500 mV (47 k ohms at 1 kHz)
<b>Power supply</b>	DC 3 V using two size AA (LR6) alkaline batteries DC 2.4 V using commercially available rechargeable batteries AC house current using the supplied AC adaptor
<b>Maximum outside dimensions</b>	132 (W) × 32.5 (H) × 141 (D) mm, 5 1/4 × 1 5/16 × 5 5/8 in. (excluding projecting parts and controls)
<b>Weight</b>	Approx. 280 g (9.8 oz.) excluding batteries
<b>Accessories</b>	AC adaptor AC-D603 (1) Stereo headphones (1) Carrying case (1)
<b>AC adaptor AC-D603</b>	Rated input: AC 120 V, 60 Hz

The specifications and external appearance of this unit are subject to change without notice.



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>