

# Washer-Extractor Quick Start Guide

This document is to be used with the appropriate Installation/Operation and Programming Manuals on the enclosed CD.

To access additional safety information, installation instructions, maintenance and other product information, insert the enclosed CD into a computer CD drive and follow the on-screen instructions.

## Safety Information



### **WARNING**

To reduce the risk of fire, electric shock, serious injury or death to persons when using your washer, follow these basic precautions:

W023

### **IMPORTANT SAFETY INSTRUCTIONS**

**NOTE: Refer to Installation/Operation Instructions, located on enclosed CD, for additional warnings.**

1. Read all instructions before using the washer.
2. Refer to the GROUNDING INSTRUCTIONS in the INSTALLATION manual for the proper grounding of the washer.
3. Do not wash textiles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, kerosene, waxes, cooking oils, dry-cleaning solvents, or other flammable or explosive substances as they give off vapors that could ignite or explode.
4. Do not add gasoline, dry-cleaning solvents, or other flammable or explosive substances to the wash water. These substances give off vapors that could ignite or explode.
5. Under certain conditions, hydrogen gas may be produced in a hot water system that has not been used for two weeks or more. HYDROGEN GAS IS EXPLOSIVE. If the hot water system has not been used for such a period, before using a washing machine or combination washer-dryer, turn on all hot water faucets and let the water flow from each for several minutes. This will release any accumulated hydrogen gas. THE GAS IS FLAMMABLE, DO NOT SMOKE OR USE AN OPEN FLAME DURING THIS TIME.
6. Do not allow children to play on or in the washer. Close supervision of children is necessary when the washer is used near children. This is a safety rule for all appliances.
7. Before the washer is removed from service or discarded, remove the door to the washing compartment.
8. Do not reach into the tub if the agitator is moving. Do not reach into the extractor if the basket is moving.
9. Do not install or store the washer where it will be exposed to weather.
10. Do not tamper with the controls.
11. Do not repair or replace any part of the washer, or attempt any servicing unless specifically recommended in the user-maintenance instructions or in published user-repair instructions that you understand and have the skills to carry out.
12. To reduce the risk of an electric shock or fire, DO NOT use an extension cord or an adapter to connect the washer to the electrical power source.
13. Never operate the washer with any guards and/or panels removed.
14. DO NOT operate the washer with missing or broken parts.

## Operating Washer

- 1** Close drain of wash compartment to be used.
- 2** Select desired temperature and water level.
- 3** Add detergent and liquid bleach, if desired, to water.
- 4** Set wash timer for 30 seconds to begin filling tub and allow detergent/liquid bleach to mix.
- 5** Place washables in compartment. Distribute evenly around agitator.
- 6** Set wash timer to desired time. Agitation will begin when selected water level is reached.
- 7** When cycle is finished, place washables in extract-rinse compartment. Distribute evenly around basket.
- 8** Close lid, making sure lid is locked.
- 9** Set extract timer and rinse timer to desired cycle times.
- 10** When cycle is complete, wait until basket stops, then press LID RELEASE button to open lid.
- 11** Remove washables.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>