



Altec Lansing inMotion Digital Speaker System
for Zune™

iM414v2

User Guide

Safety Information



The lightning flash with arrowhead, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



Caution: To prevent the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION

To prevent electric shock do not use this (polarized) plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.

WARNING


To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water. This apparatus shall not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, shall be placed on the apparatus.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for the replacement of the obsolete outlet.

10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

11. Only use attachments/accessories specified by the manufacturer.

12.  Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

13. Unplug this apparatus during lightning storms or when unused for long periods of time.

14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

15. Do not install in an area which impedes the access to the power plug. Disconnecting the power plug is the only way to completely remove power to the product and must be readily accessible at all times

Spread Your Sound Around

Congratulations on your purchase of the inMotion iM414 speaker system—the portable system with an advanced Class D amplifier, surround effect technology and crystal-clear speakers. Its sleek design cradles your Zune player securely and attractively as it pumps out full-range, full-bodied sound that fills the room. The inMotion system's twin, bass-enhanced speakers blend power and clarity. The built-in FM radio expands your listening options while the wireless remote increases your freedom. You can plug in the inMotion system for AC power, or use batteries to take the music with you. So let the music out!

Box Contents

- inMotion digital speaker system
- Wireless remote
- Power supply
- User's guide and quick connect instructions

iM414v2 model made for:

- Zune™ 30GB, 80GB, 8GB, 4GB, Zune HD

Connecting Your Zune Player

Dock your Zune player by sliding it on top of the inMotion system docking station. If provided, first install the docking adapter that came with the inMotion system. While the docking adapter is not required for proper functioning of your Zune player and inMotion system, it may provide a better fit.

Power

Use one of the following two options to power your inMotion system:




AC Power (wall outlet)

Insert the barrel connector from the power supply into the DC connector on the rear of the inMotion system. After this connection is made, insert the power supply into a wall outlet.

DC Power (battery)


Install 3 AA batteries (not included) into the battery compartments in the rear of the inMotion system. Make sure the batteries are installed as illustrated in the battery compartment.

Start Playing

- 1. Turn on your Zune player.**
- 2. Turn on the inMotion system by pushing the  button for about 2 seconds. The LCD screen turns on.**
- 3. Press the "SOURCE" button until "Zune" is selected on the LCD screen.**
- 4. Use the  and  buttons to navigate through your playlist.**

NOTE: To avoid hearing a popping sound when you turn on your inMotion system, always turn on your Zune player or other audio source first.

Power Off

Turn off the inMotion system by pushing the  button. The LCD screen turns off.

FM Radio

The inMotion system features a built-in FM radio.

Activate the FM radio mode:

Press the "SOURCE" button until "FM" is selected on the LCD screen.

Scanning FM radio stations:

Press and hold the **▶▶** or **◀◀** buttons to scan radio stations in an incremental manner.

Programming FM radio stations:

To program FM radio stations into the wireless remote, follow the steps below:

- 1. Press the "SOURCE" button until "FM" is selected on the LCD screen.**
- 2. Use the **▶▶** and **◀◀** buttons to tune in the station to be preset.**
- 3. To program the station in the inMotion system memory, press and hold one of the preset buttons (P1, P2, P3) on the wireless remote for approximately 3 seconds. The LCD screen will display the preset number when a station has been successfully programmed.**

Once an FM radio station has been programmed, simply press the appropriate preset button (P1, P2, P3) on the wireless remote to select it.

NOTE: To re-program a station in the inMotion system memory, simply repeat steps 1-3.

Connecting to an Alternate Audio Source


The inMotion system includes an auxiliary input jack (AUX) that allows you to connect to alternate audio sources, such as other MP3 player models, CD players, portable DVD players, and PCs and laptops. To connect the inMotion system to an alternate audio source, follow the steps below.

- 1. Locate a 3.5 mm stereo cable (not included).**
- 2. Connect one end of the 3.5 mm stereo cable into the auxiliary input jack (AUX) located on the back of the inMotion system, and the other end to the headphone or line out jack on your alternate audio device.**
- 3. Press the "SOURCE" button until "AUX" is selected on the LCD screen.**
- 4. Set the volume on the audio source at mid-level.**
- 5. Set the volume on the inMotion system at the minimum level and adjust to a comfortable listening level.**

Adjusting the Volume

- 1. Press the "+" button to increase the volume to the desired level.**
- 2. Press the "-" button to reduce the volume to the desired level.**

Surround Effect

The inMotion system features surround effect technology that widens the stereo image. Activate this feature by pushing the  button on the wireless remote.

Bass Enhancement Technology

The inMotion system features bass enhancement technology that delivers quality bass without a subwoofer. Activate this feature by pushing the "BASS" button on the wireless remote.

Symptom	Possible Problem	Solution
The Power LED is not lit (AC Operation)	The power supply cord isn't connected to a wall outlet and/or the power supply connector is not plugged into the power supply jack on the back of the inMotion system.	Insert the barrel connector from the power supply into the DC connector on the back of the inMotion system. After this connection is made, insert the power supply into a wall outlet.
	The surge protector (if used) isn't powered on.	If the power supply cord is plugged into a surge protector, make sure the surge protector is switched on.
	The wall outlet is not functioning.	Plug another device into the same wall outlet to confirm the outlet is working.
	The power isn't turned on.	Turn on the inMotion system by pushing the power button located to the left of the docking station. The LCD screen will turn on.
No sound is coming from speakers	The volume is set too low.	Press the "+" button to increase the volume to the desired level. Check the volume level on alternate audio source device and set at mid-level.
	The Zune player is not correctly seated into the docking station.	Turn off the Zune player, remove it from the docking station, reseal it, and turn it on again.
	If using an alternate audio source, the audio source is not properly connected to the inMotion system or there is a problem with the alternate audio source.	Follow the instructions in <i>Connecting to an Alternate Audio Source</i> . If necessary, try connecting another audio source.

Troubleshooting

Symptom	Possible Problem	Solution
	The Zune player is not correctly seated into the docking station.	Turn off the Zune player, remove it from the docking station, reseal it, and turn it on again.
There is a crackling sound coming from speakers	If using an alternate audio source, the audio source is not properly connected to the inMotion system or there is a problem with the alternate audio source.	Follow the instructions in <i>Connecting to an Alternate Audio Source</i> . If necessary, try connecting another audio source.
	If using a PC or laptop, the operating system's volume level is set too high.	Check the operating system volume level and decrease it if necessary.
Sound is distorted	The inMotion system's volume level is set too high.	Press the “–” button to reduce the volume to the desired level.
There is radio interference	The unit is too close to a radio tower.	Move the unit to see if the interference goes away.
Intermittent buzzing	The unit is located too close to a GSM cell phone.	Move the GSM cell phone away from the unit.

ALTEC LANSING ONE-YEAR LIMITED WARRANTY

What Does the Warranty Cover?

Altec Lansing warrants that its products shall be free from defects in materials or workmanship, with the exceptions stated below.

What Is the Period of Coverage?

This warranty runs for one year from the date of purchase. The term of any warranties implied by law shall expire when your limited warranty expires. Some states and/or Member States in the European Union do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

What Does the Warranty Not Cover?

This warranty does not cover any defect, malfunction or failure that occurs as a result of: improper installation; misuse or failure to follow the product directions; abuse; or use with improper, unintended or faulty equipment. (For information on proper installation, operation and use consult the manual supplied with the product. If you require a replacement manual, you may download a manual from www.alteclansing.com.) Also, consequential and incidental damages are not recoverable under this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

What Will Altec Lansing Do to Correct the Problem?

Altec Lansing will, at its option, repair or replace any product that proves to be defective in material or workmanship. If your product is no longer being manufactured, or is out of stock, at its option, Altec Lansing may replace your product with a similar or better Altec Lansing product.

How to Get Warranty Service

To get a covered product repaired or replaced, you must contact Altec Lansing during the warranty period by email (csupport@alteclansing.com). You must include in your email, your name, address, email address, telephone number, date of purchase and a complete description of the problem you are experiencing. In the United States, you may alternatively contact Altec Lansing by telephone at 1-800-ALTEC88 – please be prepared to provide the same information. If the problem appears to be related to a defect in material or workmanship, Altec Lansing will provide you a return authorization and instructions for return shipment. Return shipments shall be at the customer's expense, and the return must be accompanied by the original proof of purchase. You should insure the shipment as appropriate because you are responsible for the product until it arrives at Altec Lansing.

How Will State Law Affect Your Rights?

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Please note that in the European Union, you as a consumer might have other legal rights under national legislation of European Union Member States governing the sale of Altec Lansing's goods. Those rights are not affected by this guarantee.

The above limited warranties and remedies are sole warranties and remedies available to purchaser, if, and to the extent, valid and enforceable under the applicable law.

DISPOSAL OF OLD ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local city office or your household waste disposal service.



www.alteclansing.com

HEADQUARTERS 535 Rte. 6 & 209, Milford, PA 18337-0277 • 800-ALTEC-88. 570-296-4434. • Fax 570-296-6887

EUROPE Scorpius 140, 2132 LR Hoofddorp, The Netherlands

ASIA/PACIFIC 23/F, Office Tower, Shun Hing Square Diwang Commercial Centre, 5002 Shen Nan Dong Road, Shenzhen, China 518008

*Sansa and 3 AAA batteries not included.

*Zune digital media player and 3 AAA batteries not included.

Specifications subject to change without notice.

1-year limited warranty (2 years in Europe; see inside for details).

© 2009 Plantronics, Inc. All rights reserved.

ALTEC, ALTEC LANSING, the Altec Lansing logo, the horn design, Altec Lansing Hear What's Next, inMotion, Audio Alignment, iM413 and iM414 are trademarks or registered trademarks of Altec Lansing, a division of Plantronics, Inc.

Plantronics, the logo design and Sound Innovation are trademarks or registered trademarks of Plantronics, Inc.

All other trademarks appearing herein are the property of their respective owners.

Designed by Altec Lansing in the USA. Made in China.



A13846 R01

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>