



Operating Instructions for the International AC Adapter/Recharger
Model S1460

For use with AmpliVox Multimedia Stereo Amplifiers

The Model S1460 is for use with AmpliVox models that incorporate the S/SW805A Stereo Multimedia Amplifier. Models with the S/SW805A may be operated on (10) D-cell flash-light batteries or using the S1460 AC adapter. Either alkaline D size batteries or rechargeable nickel cadmium (NiCad) battery pack (S1465) may be used.

CAUTION: DO NOT ATTEMPT TO RECHARGE ALKALINE BATTERIES. ATTEMPTING TO RECHARGE ALKALINE BATTERIES MAY CAUSE DAMAGE TO THE AMPLIFIER AND WILL VOID ITS WARRANTY.

NOTE: The S/SW805A recharging system is designed for use with the AmpliVox S1465 NiCad battery pack only. When charging for the first time or from a complete discharge, allow a minimum of 24 hours for recharge. The charger automatically protects from overcharging and may be left on continually to keep the batteries in a ready state. NOTE: The S/SW805A does not recharge while in use.

CAUTION: MAKE SURE THE S1460 IS CONNECTED TO THE DC IN NOT LAMP ON THE S/SW805A FRONT PANEL.



Operating Instructions for the International AC Adapter/Recharger
Model S1460

For use with the AmpliVox Multimedia Stereo Amplifiers

The Model S1460 is for use with AmpliVox models that incorporate the S/SW805A Stereo Multimedia Amplifier. Models with the S/SW805A may be operated on (10) D-cell flash-light batteries or using the S1460 AC adapter. Either alkaline D size batteries or rechargeable nickel cadmium (NiCad) battery pack (S1465) may be used.

CAUTION: DO NOT ATTEMPT TO RECHARGE ALKALINE BATTERIES. ATTEMPTING TO RECHARGE ALKALINE BATTERIES MAY CAUSE DAMAGE TO THE AMPLIFIER AND WILL VOID ITS WARRANTY.

NOTE: The S/SW805A recharging system is designed for use with the AmpliVox S1465 NiCad battery pack only. When charging for the first time or from a complete discharge, allow a minimum of 24 hours for recharge. The charger automatically protects from overcharging and may be left on continually to keep the batteries in a ready state. NOTE: The S/SW805A does not recharge while in use.

CAUTION: MAKE SURE THE S1460 IS CONNECTED TO THE DC IN NOT LAMP ON THE S/SW805A FRONT PANEL.



Operating Instructions for the International AC Adapter/Recharger
Model S1460

For use with AmpliVox Multimedia Stereo Amplifiers

The Model S1460 is for use with AmpliVox models that incorporate the S/SW805A Stereo Multimedia Amplifier. Models with the S/SW805A may be operated on (10) D-cell flash-light batteries or using the S1460 AC adapter. Either alkaline D size batteries or rechargeable nickel cadmium (NiCad) battery pack (S1465) may be used.

CAUTION: DO NOT ATTEMPT TO RECHARGE ALKALINE BATTERIES. ATTEMPTING TO RECHARGE ALKALINE BATTERIES MAY CAUSE DAMAGE TO THE AMPLIFIER AND WILL VOID ITS WARRANTY.

NOTE: The S/SW805A recharging system is designed for use with the AmpliVox S1465 NiCad battery pack only. When charging for the first time or from a complete discharge, allow a minimum of 24 hours for recharge. The charger automatically protects from overcharging and may be left on continually to keep the batteries in a ready state. NOTE: The S/SW805A does not recharge while in use.

CAUTION: MAKE SURE THE S1460 IS CONNECTED TO THE DC IN NOT LAMP ON THE S/SW805A FRONT PANEL.



Operating Instructions for the International AC Adapter/Recharger
Model S1460

For use with AmpliVox Multimedia Stereo Amplifiers

The Model S1460 is for use with AmpliVox models that incorporate the S/SW805A Stereo Multimedia Amplifier. Models with the S/SW805A may be operated on (10) D-cell flash-light batteries or using the S1460 AC adapter. Either alkaline D size batteries or rechargeable nickel cadmium (NiCad) battery pack (S1465) may be used.

CAUTION: DO NOT ATTEMPT TO RECHARGE ALKALINE BATTERIES. ATTEMPTING TO RECHARGE ALKALINE BATTERIES MAY CAUSE DAMAGE TO THE AMPLIFIER AND WILL VOID ITS WARRANTY.


NOTE: The S/SW805A recharging system is designed for use with the AmpliVox S1465 NiCad battery pack only. When charging for the first time or from a complete discharge, allow a minimum of 24 hours for recharge. The charger automatically protects from overcharging and may be left on continually to keep the batteries in a ready state. NOTE: The S/SW805A does not recharge while in use.

CAUTION: MAKE SURE THE S1460 IS CONNECTED TO THE DC IN NOT LAMP ON THE S/SW805A FRONT PANEL.

Model S1460 is a product of:




Model S1460 is a product of:

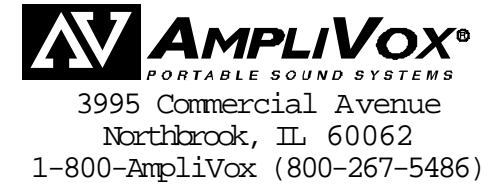

Model S1460 is a product of:



Model S1460 is a product of:

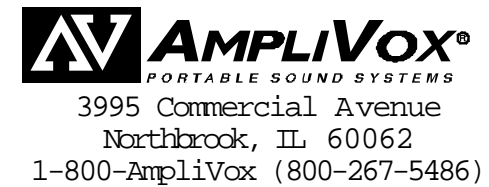

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>