



## Audi A4 Cabriolet • S4 Cabriolet

### Quick reference guide



### Fuel tank flap

#### To open:

Press the right side of the flap.

#### To close:

Press the tank flap until you hear it click into place.

 


### Fuel

(see sticker)

### Tyre pressures

(see sticker on door pillar on driver side)

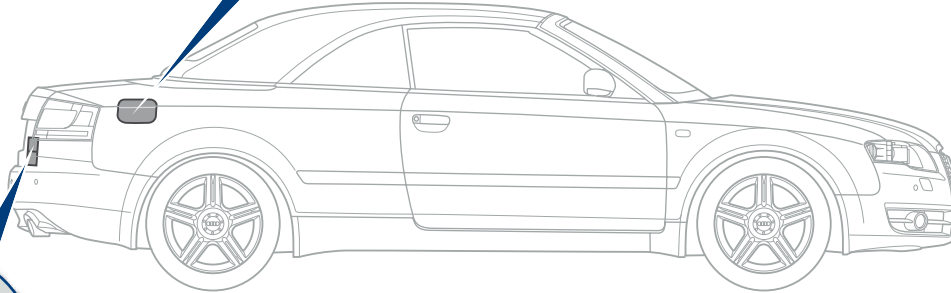


### Warning triangle

The compartment for the warning triangle is located inside the boot lid.



### Engine oil

 The correct oil specifications and engine oil capacity are listed in the Performance, weights and dimensions section of the Owner's Manual.

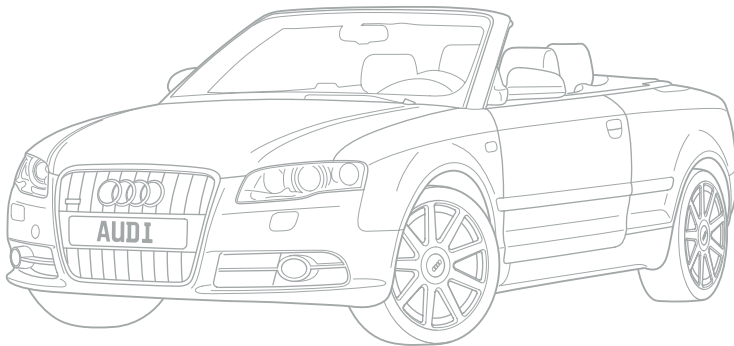

***Dear Audi Driver,***

*This quick reference guide gives you an overview of the main features and controls of your vehicle. However, it cannot replace the detailed Owner's Manual which contains important information and safety warnings.*

*Please refer to your Owner's Manual for detailed information on your vehicle. You will find everything you need to know about the radio, CD, navigation, TV and telephone functions in the Operating Manual for your sound system or navigation system.*

*We wish you safe and enjoyable motoring with your new Audi.*

**AUDI AG**

## Controls and displays

### 1 Buttons for seat memory

### 2 Electric windows

To set the desired position:  
Press/pull to the first stop  
and hold.

„One-touch“ function:  
Press/pull briefly to the  
second stop.

### 3 Bonnet lock release





### 4 Steering wheel position adjuster

### 5 Door handle and central locking switch

 
-  Unlock
-  Lock

### 6 Adjuster for exterior mirrors

Turn the adjuster for:




-  Left exterior mirror
-  Exterior mirror heating
-  Right exterior mirror
-  Exterior mirror retraction

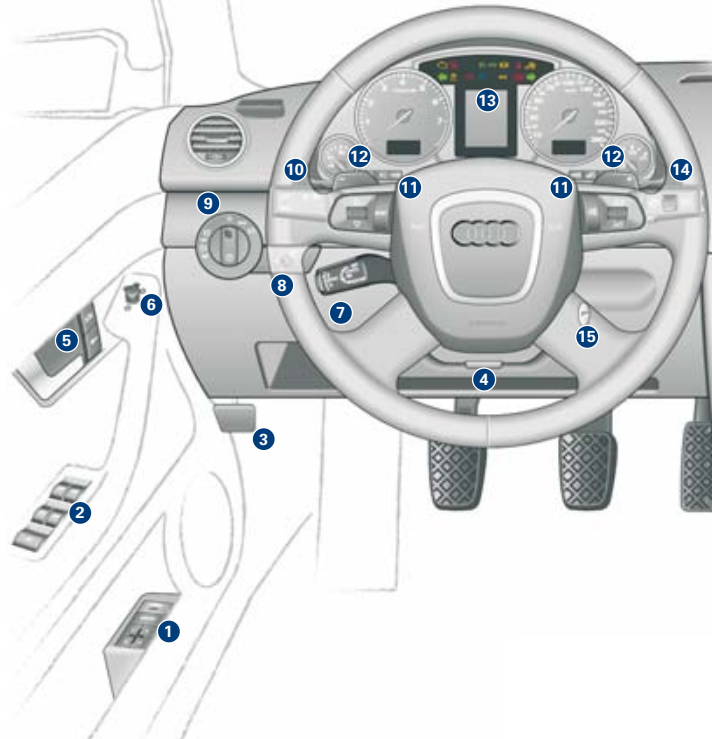Press the adjuster to move  
the mirror glass in the  
desired direction.





- 7 Cruise control system
- 8 Headlight range control and coming home/leaving home function
- 9 Light switch
- 10 Turn signal and main beam lever
- 11 Controls on multi-function steering wheel
- 12 tiptronic paddle levers
- 13 Instruments and warning/indicator lamps

- 14 Windscreen wipers/washer and buttons for on-board computer
- 15 Ignition lock
- 16 Switches and warning lamps for:
  -  Electronic stabilisation program
  -  Passenger airbag off
  -  Hazard warning lights
- 17 Storage tray
- 18 Sound system or navigation system

- 19 Air conditioner
- 20 Driver's seat heating
- 21 Front passenger's seat heating
- 22 Gear lever or selector lever for automatic gearbox
- 23 Handbrake
- 24 Power-operated soft top
- 25 Cigarette lighter/electrical socket

### Sitting position

Sit in a normal upright position and do not sit too close to the steering wheel. If necessary, also adjust the position of the steering wheel.



## Seat adjustment

### Electric seat adjustment

#### 1 To adjust seat height and move seat backwards or forwards:

 
- Front of seat cushion up/down
- Rear of seat cushion up/down
- Seat up/down
- Seat forwards/backwards

#### 2 To adjust backrest:

- Backrest further upright/  
further reclined
- Head restraint up/down

#### 3 To adjust lumbar support:

Press the appropriate part of the switch.

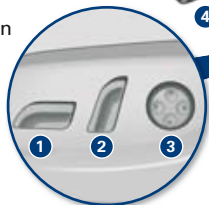

### Manual seat adjustment

#### 4 To move seat backwards or forwards:

Lift the lever and move the seat. Then release the lever and move the seat further until the catch engages.

#### 5 To adjust angle of seat cushion:

Lift the lever and adjust the seat angle.

#### 6 To adjust seat height:

Pull up or press down the lever repeatedly.

#### 7 To adjust lumbar support:

Press the appropriate part of the switch.

#### 8 To adjust backrest:

Take your weight off the backrest and turn the knob.

#### 9 Easy entry function:

Pull the lever upwards and fold the backrest forwards; then release the lever and move the seat forwards.

#### 10 To adjust head restraint:

Press the button on the side of the head restraint and move the head restraint up or down. The top of the head restraint should be at eye level or higher.

## Starting the engine

### Switching on the ignition/starting the engine

 
Insert the key into the ignition lock.

**To switch on the ignition:** Turn the key to position **1**. The glow plugs on diesel engines start preheating in this position.

**To start the engine (on vehicles with manual gearbox):** Press the clutch and turn the key to position **2** until the engine starts.

**To start the engine (on vehicles with automatic gearbox):** Move the selector lever to position **P** or **N**, press the brake pedal, and turn the key to position **2** until the engine starts.

**To switch off the engine:** Turn the key to position **0**.

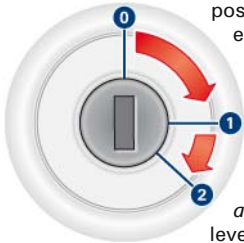

## Automatic gearbox

### Selector lever positions

- P** Parking lock
- R** Reverse gear
- N** Neutral
- D** Drive (*forwards*)
- S** Sport position

**To release the selector lever and engage a gear:** Switch on the ignition, press the brake pedal, and press the interlock button on the selector lever. Move the selector lever to **D** or **S** to start driving forwards.

**tiptronic:** To switch to manual gear selection mode, push the selector lever from position **D** to the right. The gears are shown on the driver information system.







**To shift up or down a gear:**





Briefly push the selector lever forwards or backwards.

 




### Switches for air conditioner


-  **Buttons on left:** Temperature selection for left side
-  **Buttons on right:** Temperature selection for right side
-  **Buttons in centre:** Blower speed
-  **Automatic mode**  
Set the desired temperature and press the button
-  **Air recirculation**  
Circulates and filters the air in the interior of the vehicle
-  **ECON mode**  
Activates/deactivates air cooling


-  **To deactivate the air conditioner**
-  **Air to the windows**
-  **Air from the dashboard outlets**
-  **Air to the footwells**

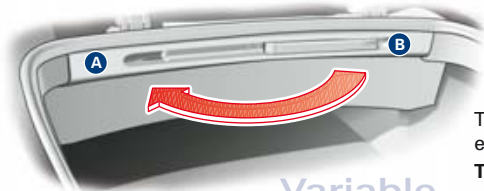

### Variable soft top storage box

## Power-operated soft top

**To open the soft top:**  
Switch on the ignition.  
Pull and hold the  switch until the soft top is fully open.

**To close the soft top:**  
Switch on the ignition.  
Press and hold the  switch until the soft top is fully closed.



 
The storage box can be raised in order to extend the luggage compartment.

**The soft top must be closed!**

**To raise:** Slide the lever to position **A**.

**To lower:** Slide the lever to position **B**.



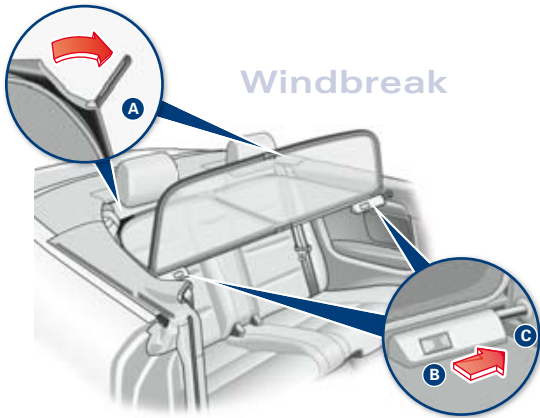

## Windbreak

### Setting up:

- Take the windbreak out of the storage bag (luggage compartment).
- Fold the two side sections outwards.
- Pull out the retainer pegs **A** (left/right) and hold the windbreak in a horizontal position against the backrest upholstery.
- Slide the retainer pegs **A** (left/right) all the way into the mountings.


- Press the release catches **B** (left/right) and slide the locking pins into the mounting holes **C** at the sides.
- Fold the vertical section of the windbreak into the fully upright position.

### Removing:

Follow the instructions in reverse order.



## Cruise control system

When the system is switched on, the indicator lamp  appears in the instrument cluster.

**To switch on/off:** Pull/press lever **2**.

**To set speed:** Press button **1**.

**To adjust stored speed:** Press lever up (*faster*) or down (*slower*).

## Audi Navigation System plus

### Components

- 1 Driver information system
- 2 Multi-function steering wheel

Scroll the **left thumbwheel** to select a menu item in the driver information system. Press the thumbwheel to confirm the selection.

Press the **MODE button** to switch between the active audio source and the navigation and telephone functions.

Scroll the **right thumbwheel** to adjust the volume. If you press the right thumbwheel, the last navigation cue will be repeated.





### 3 Display

### 4 Function selector buttons

Press one of the buttons (e.g. RADIO) to activate the desired mode.

### 5 ON/OFF button

**To switch on:** Press briefly.

**To adjust volume:** Turn.

**To mute:** Press briefly.

**To switch off:** Press and hold.

### 6 Control buttons

To activate one of the functions shown in the four corners of the display, press the control button for that corner of the display.

### 7 Rotary pushbutton

**To select a menu item on display 3:** Turn the rotary pushbutton.

**To confirm selection:**

Press the rotary pushbutton.

## Operating logic

 
The operating logic for accessing the functions is always the same.



**A To call up the menu in a corner of the display:** Press the corresponding button.

**B To select:** Turn the rotary pushbutton.

**C To confirm:** Press the rotary pushbutton.

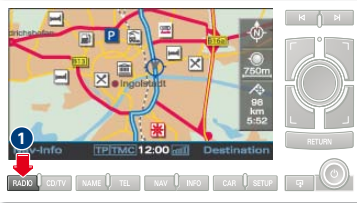

- 1** Press the RADIO function selector button.



- 2** Turn the rotary pushbutton and select the desired station.



- 3** Press the rotary pushbutton to confirm.



 
- 4** Press the control button for "Memory".  
**5** Turn the rotary pushbutton and, if desired, select "Store <station name>".



- 6** Press the rotary pushbutton. The next free position in the memory list will be highlighted.



- 7** Turn the rotary pushbutton and select the desired memory position.  
**8** Press the rotary pushbutton to confirm.

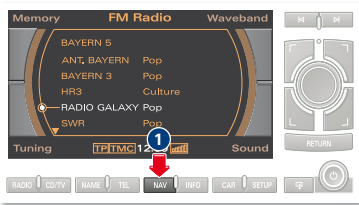

- 1 Press the NAV function selector button.



- 2 Turn the rotary pushbutton and select "Town/ZIP".
- 3 Press the rotary pushbutton to confirm.



- 4 Turn the rotary pushbutton and select the first letter of the destination town.
- 5 Press the rotary pushbutton to confirm.



- 6 Repeat the above step to enter the remaining letters of the destination town until the name of the desired town appears on the display.



- 7 When you have entered the town, turn the rotary pushbutton and select "OK".
- 8 Press the rotary pushbutton to confirm.



- 9 Select "Start route guidance" from the menu.
- 10 Press the rotary pushbutton to confirm. The route will be calculated.

## Functions

### Establishing a Bluetooth™ connection for a mobile phone


You can quickly connect a Bluetooth mobile phone to the onboard phone system on your navigation system:

- Switch on the ignition, navigation system and mobile phone.
- On your mobile phone, select the menu that looks for Bluetooth devices (e.g. "Hands-free").
- On the mobile phone, select "Audi UHV" and confirm.
- Enter the PIN "1234" on your mobile phone.




### Memory cards















#### Loading:

- Press the  button to open the display.
- Insert the memory card into the reader slot as shown in the illustration and press in the memory card until you feel it click into place.

#### Removing:





- Press the  button to open the display.
- Press in the memory card. The card will be released and can then be removed from the reader slot.

## Warning and indicator lamps

	Emission control system		Turn signals/ hazard warning lights
	Airbag system <sup>1)</sup>		Electronic stabilisation program (ESP)
	Cruise control system		Alternator <sup>1)</sup>
	Trailer turn signals		Main beam headlights
	Anti-lock brake system <sup>1)</sup>		Engine management <sup>1)</sup> or EPC
	Seat belt warning lamp		Glow plug system <sup>1)</sup>
	Power-operated soft top		Fault in brake system or handbrake is applied

<sup>1)</sup> If this warning lamp lights up when driving, please contact a qualified workshop without delay.

## Warning symbols

	Fault in the brake system
	Fault in the cooling system
	Engine oil pressure too low
	Tyre pressure too low

If one of these red symbols lights up in the display while you are driving, stop the car immediately, switch off the engine and refer to the Owner's Manual.

© 2007 AUDI AG

AUDI AG reserves the right to alter any part of the vehicle, its equipment and technical specifications. No legal commitment can be implied by the information, illustrations or descriptions in this publication. No part of this publication may be reprinted, reproduced or translated without the written permission of AUDI AG. All rights under the laws of copyright are expressly reserved by AUDI AG. Subject to alteration and amendment. Concept and layout: Pfriemer GmbH. Printed in Germany.

[www.audi.com](http://www.audi.com)

**Audi A4 Cabriolet • S4 Cabriolet**  
**Kurzanleitung**  
**englisch 11.07**  
**282.562.684.20**

Download from [Www.Somanuals.com](http://Www.Somanuals.com). All Manuals Search And Download.



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>