


instructions for

M-27 NOISE LOGGING DOSIMETER

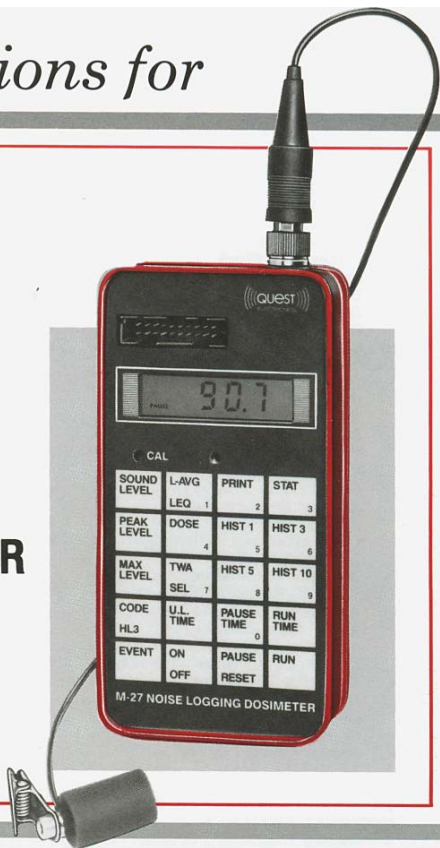

QUESTTM
TECHNOLOGIES



TABLE OF CONTENTS

INTRODUCTION.....	3
M-27 SIMPLIFIED OPERATING INSTRUCTIONS.....	5
Control Keys.....	5
Sound Level Meter Keys.....	6
Dosimeter Keys.....	6
Time Keys.....	7
Event Keys.....	7
Procedure to Accumulate Event Data.....	7
Setting the Clock.....	8
Recording the Calibration Level.....	8
Using a Printer.....	9
Dumping Raw Data.....	11
Changing Printer Parameters.....	11
SPECIFICATIONS.....	11
GENERAL DESCRIPTION.....	12
PRINCIPLES OF OPERATION.....	13
General.....	13
Weighting Characteristics.....	13
Microcomputer Modes.....	14
Formulas and Definitions.....	16
TESTING AND CALIBRATION.....	17
Battery Test.....	17
Battery Replacement.....	17
Microphone Replacement.....	18
Calibration and Maintenance.....	18
Daily Calibration.....	18
Altitude Corrections.....	19
OPERATING PROCEDURE.....	19
As a Personal Noise Dosimeter.....	19
As an Area Monitor.....	20
As a Survey or Event Monitor.....	21
Effects of Operator's Presence.....	22
Use with Windscreen.....	22
Using a Printer.....	23
Connections to Printer.....	24
Sample Printouts.....	24
Memory Map.....	30
Editing Printout.....	31
Printer Setup.....	32
EXTENDING BATTERY LIFE.....	33
INTERNAL SWITCHES.....	34
Switch Positions.....	36
Setting Internal Switches.....	38
Code Decoding.....	41
TROUBLESHOOTING.....	42
INTERPRETING RESULTS.....	43
Use of Lavg and TWA.....	43
Estimating TWA from Lavg.....	44
Accuracy of Readings.....	44
Hints and Good Practices.....	44
Considerations of Measurement and Accuracy.....	46
ACCESSORIES.....	47
QUEST SERVICE AND WARRANTY POLICY.....	48

FCC COMPLIANCE AND CAUTIONARY NOTE:

User is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

INTRODUCTION

The QUEST M-27 Noise Logging Dosimeter is a microcomputer-based sound analyzing instrument for accumulating, displaying, and sending data to serial or parallel printers or computers. The M-27 functions as a personal noise dosimeter, an area monitor or as a survey events monitor (see Figure 1).

Personal Noise Dosimeter:

Accumulates noise data for OSHA hearing conservation, OSHA engineering controls, and equal energy noise dosimetry. Accumulates peak and maximum levels. Accumulates 1-minute histograms and 1 dB statistical distributions. Is housed in a secure dust-proof case. May be clipped on belt or shirt pocket.

Area Monitor:

Accumulates 40 hours of 1-minute histograms and statistical distributions. May be tripod-mounted.



Figure 1. M-27 Noise Logging Dosimeter

Events Monitor:

Accumulates the following data for up to 16 separate events: 3 separate integrated sound levels. 3 separate noise doses.
2 time weighted averages and a sound exposure level. Peak level, maximum level, start time, and run time.

The M-27 as an overall unit accumulates data for:

3 separate dosimeters.
3 separate 1 minute time histograms.
2 separate percent time statistical distributions.
2 separate percent dose distributions.
16 separate events.
Sound levels, peaks and maximum levels.
Run time, pause time, and elapsed or real time.

The unit displays:

Sound level, peak level, maximum level.
2 integrated average levels. An equivalent sound level.
3 percent doses.
2 time weighted averages. A sound exposure level. 16 separate events.
Run time, pause time, and upper limit time (the time greater than preset level).
Elapsed or real time clock (12 or 24 hour). Calibration level. Code of 24 internal switch settings.

The unit prints out:

A heading.
Summary of accumulated data and setup parameters. Up to 16 separate events.
3 separate 1-, 3-, 5-, or 10-minute time histograms. 2 percent time statistical distributions.
2 percent dose statistical distributions.
Raw data for computer storage and manipulations.
Includes editing capability to print out only required data.

The M-27 internal switches select:

Exchange rates of 3, 4, 5, or 6 dB.
Criterion levels of 80, 84, 85, or 90 dB.
2 thresholds of none, 70, 75, 80, 85, or 90 dB.
2 ranges of 35-126 or 50-146 dB.
"A" or "C" frequency weighting.

Fast or slow time constant.

Upper limits of 90, 115, or 140 dB.

12 or 24 hour clocks.

8 different unit numbers.

Text, graph, or both printouts.

Serial or parallel printers.

Baud rates of 300, 600, 1200, or 2400.

Line feed, carriage return, or both.

The above features, packaged in a compact, rugged, hand-size, easy-to-use instrument, make the QUEST M-27 Noise Logging Dosimeter the "Ultimate" dosimeter.

M-27 SIMPLIFIED OPERATING INSTRUCTIONS

When using the unit gently press key until light click is felt. Hold down until unit responds.

Generally this will be immediately, unless the unit is calculating data such as sound level, in which case it may take up to a second.

Control Keys

RUN	Starts or continues accumulating data. Display shows run time. Also used to start Events.
PAUSE	Stops accumulation of data. Display counts down from P-5 to P-1. If key is not released in 5 seconds, unit will reset, and old data will be lost. Key is also used to reset Clock, Calibrator, Events, and pause the Printout.
RESET	
ON	If OFF, press to turn on. If ON, hold key down; display counts down from 0-5 to 0-1 and then blank. When off, data is retained. Key also turns off Print and Events.
OFF	

NOTE

Data is not lost when the unit is off. Data will be retained for the life of the battery. The only ways to erase data are to hold down PAUSE/RESET for 5 seconds or to remove the battery.

CODE	Cycles through 7 steps. Press the key for each step.
HL3	Allows the M-27 to display and print data 7 ways. Also displays a code of internal switch settings.

Cycle Step	Display Example	Function Shows	Can Display and Print
1	10EE ^{HTL}	Internal switch setup	High Threshold Level data
2	10EE ^{LTL}	Internal switch setup	Low Threshold Level data
3	10EE _{3dB}	Internal switch setup	3 dB data
4	IFE	Internal print switches	Prints all data
5	CPU	Computer mode	Prints raw data
6	1:59	Clock or elapsed time	Sets clock
7	110.0	Calibrator level	Sets calibration level

In steps 1 to 3 only data for the HTL (High Threshold Level), LTL (Low Threshold Level), or 3 dB (No Thresh-old) will be displayed or printed. In step 4 data for HTL, LTL, and 3 dB will be printed. Step 5 dumps raw data to the Computer. Step 6 reads or resets the Clock. Step 7 reads or stores the Calibrator level.

Sound Level Meter Keys

SOUND LEVEL Sound Level in decibels. Will repeat each second until another key is pressed. To conserve power, press RUN, PAUSE or any other key to exit sound level when it is not needed.

PEAK LEVEL The highest unweighted Peak Level in decibels during Run Time or an Event. In 30 dB range lowest peak

MAX LEVEL measurable is 78 dB; in 50 dB range the lowest measurable is 98 dB. The Maximum Level in decibels after the filter and Slow or Fast time constant circuit.

Dosimeter Keys

L-AVG LEQ The average integrated sound level in decibels for the HTL (High Threshold Level), LTL (Low Threshold Level), or the equivalent level for 3 dB. It is the accumulated sound averaged during the Run Time.

DOSE The accumulated Dose in percent for HTL, LTL, or 3 dB.

TWA SEL Time Weighted Average in decibels for HTL and LTL. It is the accumulated sound averaged over 8 hours. For 3 dB it is the Sound Exposure Level of the accumulated sound averaged over 1 second.

Time Keys

RUN TIME The total time the unit was running and accumulating data. If the total time is less than 30 minutes, the colon will blink if the key is held down and the time shown is in minutes and seconds. If the colon stays on, the time shown is in hours and minutes.

PAUSE TIME The time the unit was on but not accumulating data. The colon blinks as in Run Time

U.L. TIME The time exposure was above the Upper Limit. The colon blinks as in Run Time.

Event Keys

The event feature accumulates Lavg/Leq, Dose, TWA/SEL for 3 dosimeters, Peak Level, Max Level, Run Time, and Start Time for up to 15 different events. Each time a key is pressed in the Event mode, the display will show the event number and the data.

EVENT Enters Events and cycles through the Events with data. The display shows the event number, a "CE" if it is the Current Event or else a "-E" for a previous Event. As an example: 12CE means 12 is the Current Event, 3-E means 3 was a previous Event. Only previous events with data will be displayed.

RUN Starts accumulating data for the Current Event.

PAUSE RESET Stops accumulating data and cycles to the next Event.

ON/OFF Exits the Event mode.

Procedure to Accumulate Event Data

To enter the Event mode, press EVENT. To accumulate data, press RUN. To stop, press PAUSE/RESET. Press RUN and PAUSE/RESET again to accumulate another event. Press ON/OFF to exit events. The following keys can be used to read data in the current event or in any previous event.
CODE HL3 Cycles through HTL, LTL, and 3 dB. Displays the current time or elapsed time for the current event and the start time for any previous event.

L-AVG LEQ	The average or equivalent level for the HTL, LTL, or 3 dB for the event.
DOSE	The percent Dose for the HTL, LTL, or 3 dB for the event.
TWA SEL	The Time Weighted Average for HTL or LTL or the Sound Exposure Level for the event.
PEAK LEVEL	The Peak Level for the event.
MAX LEVEL	The Maximum Level for the event.
RUN TIME	The Run Time of the event.

Setting the Clock

If the clock is not set, it functions as an elapsed time clock from the time the unit is reset.

The clock can be either a 12- or 24-hour clock depending on an internal switch.

When the clock is set to the current time, it will record the actual time for Events and Histograms.

CODE HL3	Press until the display includes a colon. The display is in hours and minutes. To set clock, press 0 and numbers for the current time. The time will move in from the right. The clock is not set until PAUSE/RESET is pressed.
PAUSE RESET	Resets the current time to the number in the display. The display then shows CLo.

Recording the Calibration Level

The procedure does not calibrate the unit. It stores the CAL level to assure the unit was calibrated.

CODE HL3	Press the key until CAL and the current calibration level is displayed. To recalibrate the unit, press SOUND LEVEL with the microphone inserted in a calibrator.
SOUND LEVEL	The display will show SPL (the calibrator level). Wait until the level is steady and press PAUSE/RESET. If the unit is slightly out of calibration, gently adjust

the CAL screw. If the unit is more than a few decibels out of calibration, it should be rechecked.

PAUSE RESET	Resets the calibration level. Hold key down until the display shows CAL.
----------------	--

Using a Printer

The printout (Figure 2) can include a heading, a summary of the data, event data, 1 to 3 histograms, 1 or 2 percent time statistical distributions, and 1 or 2 percent dose statistical distributions. The histograms can be of 1, 3, 5, or 10-minute duration. The histograms and statistical distributions can be text, graphical or both. The printout can be changed and edited before or during printing to print only desired data. Data is not lost during a printout.

CODE HL3	To print only HTL, LTL, or 3 dB histograms and statistical distributions, hold key down until the one desired is displayed. To print all 3, hold key down until all 3 are displayed.
PRINT	Prints heading, summary, events, and desired histograms and distributions.
HIST 1	Prints 1-minute Histograms or 5 minutes per line. If HTL, LTL, and 3 dB are displayed all 3 will be printed.
HIST 3	Prints 3-minute Histograms or 15 minutes per line.
HIST 5	Prints 5-minute Histograms or 30 minutes per line.
HIST 10	Prints 10-minute Histograms or 1 hour per line.

If HIST 1,3,5, or 10 is pressed during a printout, the next line will print with the new time base for a clearer report.

STAT	Prints a % Time and a % Dose statistical distribution.
PAUSE RESET	Pauses the printer to edit printout or adjust printer. The display shows PSE. To continue printing, press PAUSE again. Other print keys will alter the printout. To conserve power do not leave PSE on the display. ON/OFF will also exit print mode.
ON OFF	Stops the printout. If the printer buffer contains data the printer may run for several seconds after O-5 is displayed; however, the printout has stopped.

QUEST M-27 NOISE LOGGING DOSIMETER

NAME

I D #

WORK STATION

COMMENTS

CAL LEVEL--110.0dB UNIT-----3
START TIME--08:15H M END TIME--09:25H M RUN TIME--1:00.01 PAUSE-----10.40
PEAK LEVEL--138.70dB MAX LEVEL--118.80dB MIN LEVEL--67.10dB UPPER LIMIT--115.0dB
PEAK TIME--09:19H M MAX TIME--08:15H M MIN TIME--08:59H M U.L.-----00.00

EXCHANGE RATE--5dB --90dB THRESHOLD --80dB THRESHOLD 3dB EXCHANGE RATE
CRITERION-----90dB LAVG-----87.8dB LAVG-----90.3dB LEO-----93.0dB
RANGE-----50dB TWA-----72.8dB TWA-----75.3dB SEL-----128.60B
TIME CONSTANT--SLOW DOSE-----0.25% DOSE-----13.05% DOSE-----25.30%
WEIGHTING-----A 8HF DOSE-----74.0% 8HF DOSE-----104.4% 8HF DOSE-----202.3%

EVENT-----1
START TIME--08:21H M --90dB THRESHOLD --80dB THRESHOLD 3dB EXCHANGE RATE
RUN TIME-----:02:27 LAVG-----91.9dB LAVG-----93.3dB LEO-----93.0dB
PEAK LEVEL--125.60dB DOSE-----67% DOSE-----81% DOSE-----1.25%
MAX-----96.0dB 8HF DOSE-----131.3% 8HF DOSE-----159.2% SEL-----115.50B

EVENT-----2
START TIME--08:25H M --90dB THRESHOLD --80dB THRESHOLD 3dB EXCHANGE RATE
RUN TIME-----:11:52 LAVG-----93.3dB LAVG-----93.9dB LEO-----96.50B
PEAK LEVEL--138.70dB DOSE-----3.96% DOSE-----4.27% DOSE-----11.17%
MAX-----107.6dB 8HF DOSE-----160.4% 8HF DOSE-----172.9% SEL-----125.0dB

--90dB THRESHOLD 5dB EXCHANGE RATE
1 MIN HISTOGRAM
08:15 98 87 00 99 00dB +-----+----- 92dB
08:20 00 91 95 00 00dB +-----+----- 86dB
08:25 102 90 74 90 92dB +-----+----- 94dB
08:30 99 100 91 00 00dB +-----+----- 94dB
08:35 00 00 00 84 00dB +-----+----- 72dB
08:40 00 00 00 86 90 00dB +-----+----- 82dB
08:45 00 00 00 100 102dB +-----+----- 94dB
08:50 88 00 00 00 00dB +-----+----- 76dB
08:55 00 00 75 84 76dB +-----+----- 76dB
09:00 65 65 84 67 83dB +-----+----- 78dB
09:05 64 00 00 57 00dB +-----+----- 55dB
09:10 00 00 00 00 00dB dB
09:15 00 00 00 00 00dB dB
09:20 00 00 00 00 00dB dB

--90dB THRESHOLD 5dB EXCHANGE RATE
% TIME STATISTICAL DISTRIBUTION
50dB -- 00 -- 00 -- 00 -- 00 -- 00% + 0%
55dB -- 00 -- 00 -- 00 -- 00 -- 00% + 0%
60dB -- 00 -- 00 -- 00 -- 00 -- 00% + 0%
65dB -- 00 -- 00 -- 00 -- 21 -- 32% + 5%
70dB -1.64 -4.02 -- 97 -- 93 -1.69% +----- 9.2%
75dB -1.43 -1.23 -4.40 -- 62 -- 31% +----- 3.9%
80dB -1.98 19.16 -5.65 -3.33 -1.40% +-----+----- 31.5%
85dB 13.65 -4.85 -1.14 -8.29 -2.81% +-----+----- 30.7%
90dB -2.23 -- 38 -2.24 -1.02 -1.67% +----- 7.5%
95dB -2.29 -4.22 -- 13 -- 13 -- 22% +----- 6.9%
100dB -3.56 -3.02 -- 71 -1.00 -- 01% +----- 8.3%
105dB -- 02 -- 02 -- 18 -- 52 -- 00% + 7%
110dB -- 00 -- 00 -- 00 -- 00 -- 00% + 0%
% DOSE STATISTICAL DISTRIBUTION
50dB -- 00 -- 00 -- 00 -- 00 -- 00% + 0%
55dB -- 00 -- 00 -- 00 -- 00 -- 00% + 0%
60dB -- 00 -- 00 -- 00 -- 00 -- 00% + 0%
65dB -- 00 -- 00 -- 00 -- 00 -- 00% + 0%
70dB -- 01 -- 03 -- 01 -- 01 -- 02% + 0%
75dB -- 02 -- 02 -- 00 -- 01 -- 00% + 0%
80dB -- 06 -- 68 -- 23 -- 15 -- 07% + 1.1%
85dB -- 85 -- 34 -- 09 -- 78 -- 30% + 2.3%
90dB -- 28 -- 05 -- 37 -- 19 -- 36% + 1.3%
95dB -- 57 -- 1.21 1.04 -- 05 09% + 1.9%
100dB -1.78 -1.73 -- 47 -- 76 -- 01% + 4.7%
105dB -- 02 -- 02 -- 24 -- 79 -- 00% + 1.0%
110dB -- 01 -- 01 -- 01 -- 02 -- 02% + 0%

Figure 2. Sample Printout

Dumping Raw Data

The data stored in the unit may be transferred to a computer or printer for reprocessing. This data is useful only with additional computer programs. Consult Quest for programs.
CODE Press key until CPU is displayed.
HL3

PRINT Prints raw data to computer.

ON Stops printout.
OFF

Changing Printer Parameters

Internal switch 3 contains the printer parameters. This switch may be changed without erasing stored data. This allows switching printers or computers without destroying data (See Printer Setup, page 32).

NOTE

Internal switches 1 and 2 are read only when the unit is RESET.

SPECIFICATIONS

Standards: ANSI S1.4-1983 type 2
ANSI S1.25-1978
IEC 651 type 2

UL Intrinsic Safety:

Class I Group C, D
Class II Group E, F
Class III

Detector: True RMS; 63 dB pulse range

Display: Liquid crystal display
Range: .01 to 2999
Annunciators: HTL, LTL, 3 dB, LOBAT, RUN, and PAUSE

Printout: RS-232 serial at 300, 600, 1200, or 2400 baud
or Centronics parallel Connector: 20 pin shrouded header

Microphone: 8 mm PZT ceramic, 36-inch cable, field replaceable

Battery: Single 9-volt alkaline, 80-hour battery life

Battery Indicator: 8-hour battery life, 1 week data retention

Calibrator: External calibrator

Temperature: -15° to 50°C operating; -40° to 60°C storage (battery removed).

Humidity: 0 to 95% non-condensing

Magnetic Field Effects:

Negligible below 50 Oersteds at 50 to 60 Hz

Size: 5 1/2 x 2 3/4 x 1 3/8 inches
(140 x 70 x 40 mm)

Weight: 14 ounces (400 grams)

Construction: Cast aluminum housing with tamper-, water-, and dust-resistant security cover.

GENERAL DESCRIPTION

The microprocessor based M-27 Noise Logging Dosimeter can be used as a personal noise dosimeter, an area monitor, and as a noise survey instrument. It can be used to check compliance with the requirement of the Occupational Safety and Health Administration (OSHA), or as a community or Department of Defense noise logging dosimeter.

The M-27 simultaneously monitors multiple noise functions for 3 separate dosimeters as well as sound, peak, and maximum levels, and run, pause, upper limit, and real or elapsed times. It also stores, displays, and prints out data for 16 different events.

The readings can be taken at any time without destroying or resetting the data. Even turning the unit off will not destroy the internal memory.

A water- and dust-resistant cover protects the unit from the elements and against tampering.

The unit is small enough to be placed in a shirt pocket or on a belt with the microphone clipped to the shirt collar or on the shoulder. The microphone can be attached to a bracket for use as a sound level meter. Or the unit can be mounted on a tripod for area surveys.

The M-27 is powered by a single 9-volt transistor battery with an 80-hour battery life. A low battery indication is displayed 8 hours before the end of life of an alkaline battery.

PRINCIPLES OF OPERATION

General

The M-27 Noise Logging Dosimeter uses an 8 mm omnidirectional ceramic microphone buffered by a high impedance FET input stage.

The electronics utilizes low power circuitry for long battery life, maximum stability, and high reliability over a wide range of environmental conditions. A block diagram of the M-27 is shown in Figure 3.

Weighting Characteristics

The M-27 has both "A" and "C" weighting characteristics as shown in Figure 4. For OSHA and most noise measurement requirements, the "A" weighting should be used. The "A" weighting has a response similar to the human ear. The "C" weighting is used for measuring noise reduction in hearing protectors and for other scientific purposes.

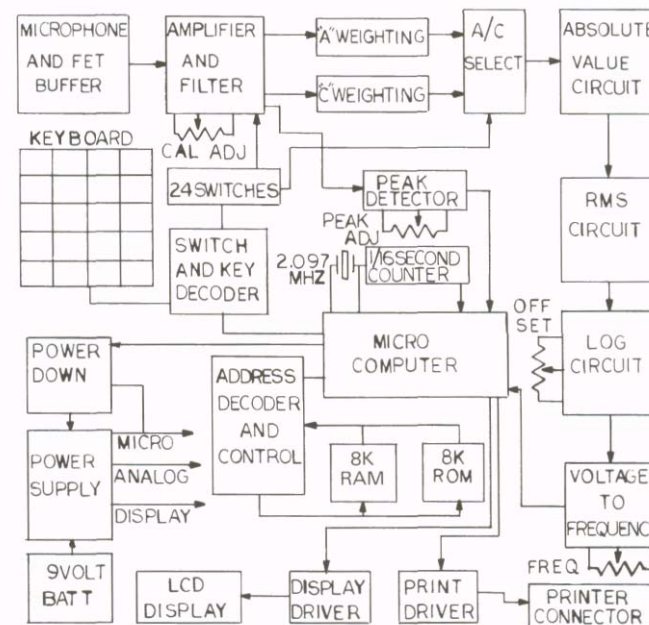


Figure 3. Block Diagram, M-27 Dosimeter

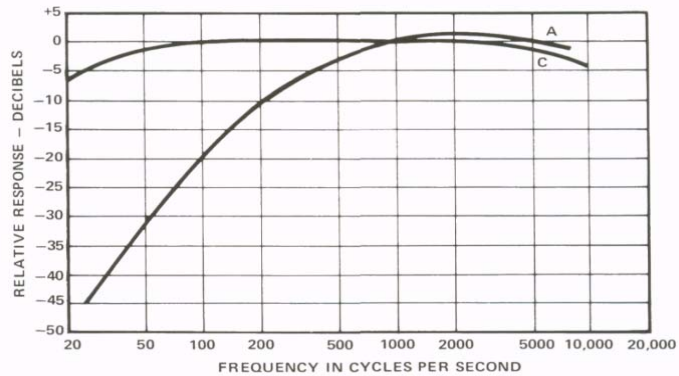


Figure 4. Frequency Response Characteristics for A and C Scale Weighting

It also has a 1 second Slow and a .125 second Fast time constant circuit. Present OSHA requirements specify Slow.

Microcomputer Modes

The M-27 is controlled by a MC146805 CMOS Microcomputer. The system has 8192 bytes of RAM, 6144 bytes of ROM, a 33-segment LCD, 24 programming switches, serial and parallel printer outputs, a V/F converter for continuous dose integration, and power down circuits to retain data when off.

The M-27 operates in one of the following 6 modes.

Reset Mode

The M-27 enters the reset mode when the unit is reset or a battery is installed. In this mode power is applied to the unit, all previous data is cleared, the internal switches are read, the counter is cleared, the pause register is set, three dashes are placed on the display, and the unit enters the wait mode.

Wait Mode

The microcomputer waits for an interrupt to occur. During the wait mode it continues to gather data from the voltage to frequency converter. Otherwise the microcomputer is in a low power state. When the 1/16 second interrupt occurs the unit enters the pause or run mode.

Pause Mode

In this mode, the Slow or Fast time constant sound level is computed and pause time and the elapsed or real time clocks are incremented. At every interrupt the keyboard is checked to see if any key is pressed - unless it is doing a previous calculation such as sound level when it may delay for up to 1 second. If a key is pressed the computer enters the compute mode. Otherwise it returns to the wait mode.

Run Mode

The same as the pause mode except the data necessary to compute L_{avg} , L_{eq} , Dose, TWA, SEL, Peak, Max, Run Time, Upper Limit, as well as Event data is accumulated.

Compute Mode

If a key has been pressed in the pause or run modes, the M-27 will compute and display the desired function. If the key is held down it will recompute it one second later using the data accumulated during that second. If the data will not compute (as an example, L_{avg} will not compute if the sound level never exceeds the threshold level) the display will either show three dashes or display LO. If the print key has been pressed, the processor will compute one line of print and send the data to the printer output. The printer output may be terminated by pressing the ON/OFF key until 0-5 is displayed. Pressing PAUSE will cause the printer to stop. Press PAUSE to continue. When PSE is displayed, the unit draws extra current and should not be left in this state. ON/OFF will exit PSE. The computer continues to accumulate data during a printout. For best results the computer should be placed in the pause mode during a printout.

When computing is completed, the processor returns to the wait mode.

Stop Mode

If the ON/OFF key has been depressed for 5 seconds, the M-27 enters the stop mode. In the stop mode the processor stops accumulating, but does not erase, data. Power is removed from the analog circuitry and the display circuitry. The oscillator is stopped. Only a few microamps of current are drawn from the battery to maintain the microcomputer's memory and to power the ON/OFF key.

When the ON/OFF key is then pressed the computer returns to where it was before it was turned off except it will be in the pause mode.

Formulas and Definitions

The M-27 uses the following formulas to calculate the accumulated data:

$$DOSE = \frac{100}{TC} \left[\int_0^{RTIME} 2^{(LS-CRIT)/ER} dt \right]$$

$$3DOSE = \frac{100}{TC} \left[\int_0^{RTIME} 2^{(L3-CRIT)/3.01} dt \right]$$

$$LAVG = ER \left[LOG_2 \int_0^{RTIME} 2^{LS \cdot ER} dt - LOG_2 (RTIME) \right]$$

$$LEQ = 3.01 \left[LOG_2 \int_0^{RTIME} 2^{L3 \cdot 3.01} dt - LOG_2 (RTIME) \right]$$

$$TWA = ER \left[LOG_2 \int_0^{RTIME} 2^{LS \cdot ER} dt - LOG_2 (TC) \right]$$

$$SEL = 3.01 \left[LOG_2 \int_0^{RTIME} 2^{L3 \cdot 3.01} dt \right]$$

$$LHIST = ER \left[LOG_2 \int_0^{1 \text{ MIN}} 2^{LS \cdot ER} dt - LOG_2 (1 \text{ MIN}) \right]$$

$$LMIN = ER \left[LOG_2 \sum_{i=1}^{\# \text{ MIN}} 2^{LHIST_i \cdot ER} - LOG_2 (\# \text{ MIN}) \right]$$

$$\% \text{ TIME} = 100 \times STAT \# / RTIME / 16$$

$$\% \text{ DOSE} = 100 \times STAT \# \left[2^{(LSTAT-CRIT)/ER} \right] / TC / 16$$

Where:

LS	= Sound level in dB with slow time constant if the sound level is greater than the threshold level and is $-\infty$ if the level is less than the threshold level.
L3	= Sound level in dB without slow time constant.
TC	= Criterion time in seconds or 28800 seconds.
RTIME	= Run time in seconds.
ER	= Exchange rate in dB.
CRIT	= Criterion level in dB.
HTL	= High threshold level.
LTL	= Low threshold level.
LHIST	= Level stored each minute for histogram.
LMIN	= Level of histogram printout.
#MIN	= Number of minutes used to compute histogram
% TIME	= The statistical distribution % Time number.
% DOSE	= The statistical distribution % Dose number.
STAT#	= The number of 1/16 second intervals at a level.
LSTAT	= The statistical distribution level.

TESTING AND CALIBRATION

Battery Test

Press any key. If the battery is low, LOB AT will be displayed in the upper left corner of the display. If the battery has at least 8 hours life, LOBAT will be off. If LOBAT is displayed after a day's use, but not at the start of the day, the readings are still good.

Battery Replacement

Loosen the 2 screws on the back of the unit and remove the back. Remove the battery from the cavity and carefully unclip the battery. Replace with a new battery. Take care to observe the polarity of battery and do not reverse the terminals. For best results use a 9 volt alkaline battery. Replace the battery in the compartment and check the display. If it displays 3 dashes replace the back cover. If not check the connections on the battery. The M-27 is now operating in the pause mode. Disconnecting the battery automatically erases stored data in memory. To save data during battery change, use the BX-9 Battery Change Adapter, see page 47.

NOTE

When the unit is off, the battery still powers the memory. If the unit is not going to be used for a few days, the battery should be removed.

Microphone Replacement

The microphone is field replaceable. To unscrew the microphone, grip the knurled nut on the top of the dosimeter and gently turn it counterclockwise. Do not twist or turn the cord or black strain relief. Replace with new microphone and recalibrated unit.

Calibration and Maintenance

The M-27 should maintain its accurate calibration for many months of use. However, to insure consistently accurate operation it is recommended that the unit be returned once a year for a complete checkout and calibration. The calibration standards for the equipment in Quest's laboratory are traceable to the N.I.S.T.

The M-27 should be checked each day before it is used. It is recommended that one of the Quest calibrators be used, with the proper 8 mm microphone adaptor.

Daily Calibration

1. Turn M-27 on and press any key. If LOBAT is displayed, the battery is low and should be changed.
2. Turn on the calibrator and check the battery indicator. Replace the battery if required. If the calibrator has multiple frequencies or levels, set it to 1000 Hz. Listen to see if the calibrator is producing a tone.
3. Remove the windscreen from the microphone. Carefully insert the microphone in the microphone adaptor and place the adaptor in the calibrator. Make sure the microphone is inserted all the way in the adaptor and the adaptor rests flush on the inner rim of the calibrator. Turn on the calibrator. If the calibration is done at high altitudes see Altitude Corrections below.
4. Press CODE/HL3 until CAL is displayed. Press SOUND LEVEL. If the level is correct, press PAUSE/RESET until CAL is displayed.

5. If the reading is off slightly, insert a small screwdriver in the hole above CAL and slowly turn the CAL screw until the display reads correctly. Press PAUSE/RESET until CAL is displayed.

6. The M-27 is now calibrated and ready for use.

7. If a calibrator is used at any frequency other than 1000 Hz, then the proper correction for that frequency weighting must be made (see Figure 4).

Altitude Corrections

The effects of atmospheric pressure on the M-27 are negligible. However, calibrator sound levels are affected by pressure and corrections must be made. For the Quest Calibrator the correction is -1 dB for each 2000 feet above sea level.

OPERATING PROCEDURE As a Personal Noise Dosimeter

1. If display is blank, press ON/OFF to turn unit on.
2. Clear the M-27 memory by pressing and holding down the PAUSE/RESET key until it counts down from P-5 to P-0 and ---.
3. If LOBAT is displayed, replace the battery and continue.
4. Check the calibration of the unit (see Calibration and Maintenance).
5. Check CODE to see if correct.


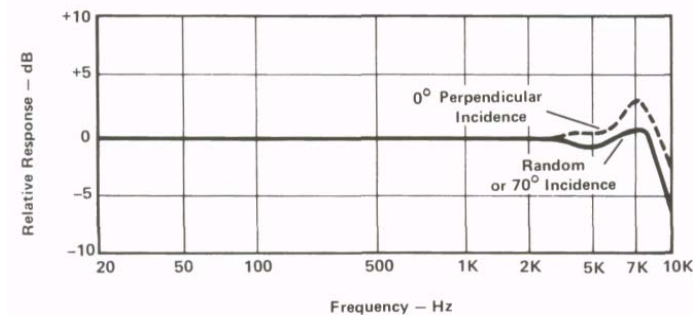


Figure 5. Model 1845 Microphone Response - Perpendicular and Random Incidence

6. Attach the microphone to the collar or shoulder of the operator (see Effects of Operator Presence and Figure 6).
7. Press the RUN key and hold until you see the unit count.
8. Install the security cover and attach the unit to the operator's belt or pocket.
9. At the end of the workday, remove the security cover and press PAUSE.
10. Remove the unit from the operator.
11. Press each function key and record the results or print the results on a printer.
12. Press the ON/OFF key until the display becomes blank. If the unit is not going to be used for several days, remove the battery.

As an Area Monitor

1. Turn on, clear memory, check battery and calibration as above.
2. Connect microphone bracket to back of unit and clip microphone to the microphone bracket. The microphone clip may be removed and the microphone screwed to the bracket before the bracket is mounted to the case (see Figure 7).

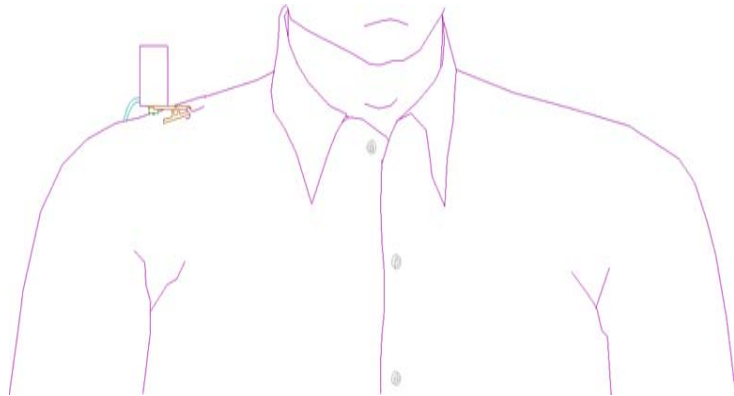

3. Mount the unit on a tripod (see Figure 8).
4. Aim the microphone up at a 70 degree angle to the noise source (see Figure 5).
5. Press RUN and install the security cover.
6. After data is accumulated, remove the cover, press PAUSE/ RESET, and record or print the data.

As a Survey or Event Monitor

1. Turn on, clear memory, check battery, check calibration, and secure microphone as above.
2. Hold the instrument near (not too near) the operator's head and aim it up at about a 70 degree angle to the noise source.
3. Press EVENT. The display should read 1CE.
4. Press RUN. Wait until a representative sample of the noise in the area has been accumulated.
5. Press PAUSE/RESET. The display will show the next current event number.

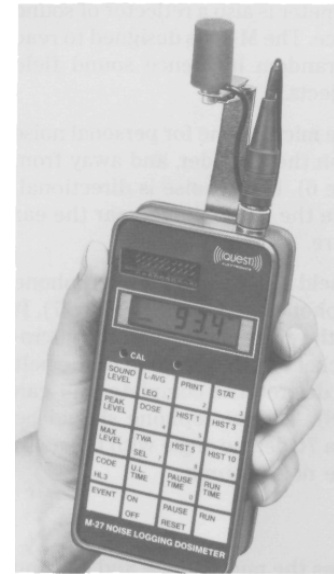


Figure 7. Microphone Mounted on Bracket



Figure 8. M-27 Mounted on Tripod

6. Move to the next area and repeat steps 4 and 5.

7. When finished with survey or when 16 events are accumulated, press ON/OFF to exit EVENTS.

At any time, even when accumulating data, the current or any previous event data may be displayed. Press EVENT key until the desired event is displayed. Press any other key to display data for that event.

If the CODE/HL3 key is pressed it will display the current time for the current event and the start time of previous events. It will also cycle through HTL, LTL, and 3 dB.

To determine when a representative sample has been taken, press Lavg/Leq for the current event. If the value does not change by more than a few tenths of a decibel over a few minutes, the data should be valid for that area.

Effects of Operator's Presence

Any object or surface can act as a reflector or absorber of sound. An operator or person wearing the dosimeter is also a reflector of sound and affects the microphone performance. The M-27 is designed to read correctly with the microphone in a random incidence sound field without the presence of reflecting objects.

The recommended placement of the microphone for personal noise monitoring is on the shirt collar, high on the shoulder, and away from the neck as far as practical (see Figure 6). If the noise is directional, it is generally the best practice to place the microphone near the ear which receives the most noise exposure.

If the M-27 is to be used as a hand-held instrument the microphone should be mounted on the MB-1 microphone bracket (see Figure 7). It may either be clipped to the bracket or the clip removed and the microphone screwed to the bracket. The bracket is then attached to the belt clip on the back of the instrument. If desired the complete unit can be mounted on a tripod (see Figure 8). The microphone should be pointed upward forming approximately a 70 degree angle with the noise source. It should not be pointed at the noise source.

Use with Windscreen

To prevent wind from blowing across the microphone and causing erroneous measurement of sound level, the model WS-5 Windscreen should be used. It is recommended that the windscreen be used at all

times. Insert the microphone in the windscreen and gently pull it over the Velcro strip.

Using a Printer

The M-27 can print out to Centronics compatible parallel or serial printers at 300, 600, 1200, or 2400 baud (see Figure 9). It can also send various line feed and carriage return combinations to accommodate different printers. It is necessary that the printer and M-27 agree on protocol and that the proper cable be selected for a printout.

Serial Printers

Check the printer manual to set printer to serial and desired baud rate. If switches in the printer are changed, make sure the printer has accepted these changes. This may require turning the printer off for a few seconds and turning back on.

Check printer interconnections to determine proper cable including male and female pins on the connector.

Set the internal switches in the M-27 to agree with the printer. It is not necessary to reset the M-27 when printer switches are changed.



Figure 9. M-27 Connected to 80-Column Printer

Parallel Printers

Check printer manual to set up printer. If switches are changed it may be necessary to reset the printer.

Check interconnecting cable to assure it is the proper cable.

Set the internal switches in the M-27 to agree with the printer. It is not necessary to reset the M-27 if switches are changed.

Connections to Printer

1. Make sure printer is set up to agree with M-27.
2. Connect printer cable to printer.
3. Turn on printer.
5. Connect printer cable to M-27. Cable goes toward top of M-27 with red strip in middle of unit.

After data is accumulated, a printer is connected to the M-27 and the stored data is printed (see Figure 9). The printer may be used while the M-27 is still gathering data to obtain intermediate results. No data is lost in either unit until the unit is reset.

All the data may be printed, or only selected data if desired. It is possible to change the printout in the middle to obtain, for instance, a 10-minute histogram for part of the time and a 1-minute histogram for another.

The M-27 remembers previous PRINT keystrokes and will print only that data unless the keystroke has been cleared.

Sample Printouts

Heading

A heading is printed when PRINT is pressed. It allows the user to write in identification data (see Figure 10).

```
QUEST M-27 NOISE LOGGING DOSIMETER
NAME
-----
I.D. #
-----
WORK STATION
-----
COMMENTS
-----
```

Figure 10. Sample Heading Printout

Summary

The summary data includes parameter data of how the M-27 is set up and a summary of all the M-27 functions (see Figure 11).

```
CAL LEVEL---110 0dB UNIT-----3
START TIME-08 15H M END TIME---09 24H M RUN TIME---1 00 01 PAUSE-----109.15
PEAK LEVEL---138 7dB MAX LEVEL---119 8dB MIN LEVEL---67 1dB UPPER LIMIT---115dB
PEAK TIME--09 19H M MAX TIME--08 15H M MIN TIME--08 59H M U L ----- 00 00

EXCHANGE RATE---5dB --90dB THRESHOLD --80dB THRESHOLD 3dB EXCHANGE RATE
CRITERION-----90dB LAVG-----87 8dB LAVG-----90 9dB LEQ-----93 0dB
RANGE-----50dB TWA-----72 8dB TWA-----75 9dB SEL-----128 6dB
TIME CONSTANT -SLOW DOSE-----9 26% DOSE-----13 05% DOSE-----25 30%
WEIGHTING-----A 8HF DOSE-----74 0% 8HF DOSE-----104 4% 8HF DOSE-----202 3%
```

Figure 11. Sample Summary Data Printout

Events

The event data is printed for events with data. It includes start time, run time, peak and max levels as well as accumulated data for all three dosimeters (see Figure 12).

```
EVENT-----1
START TIME-08 21H M --90dB THRESHOLD --80dB THRESHOLD 3dB EXCHANGE RATE
RUN TIME----- 02 27 LAVG-----91 9dB LAVG-----93 9dB LEQ-----93 9dB
PEAK LEVEL--125 6dB DOSE----- 67% DOSE----- 81% DOSE-----11 25%
MAX-----96 0dB 8HF DOSE-----131 3% 8HF DOSE-----159 2% SEL-----115 5dB

EVENT-----2
START TIME-08 25H M --90dB THRESHOLD --80dB THRESHOLD 3dB EXCHANGE RATE
RUN TIME----- 11 52 LAVG-----93 3dB LAVG-----92 9dB LEQ-----96 5dB
PEAK LEVEL--138 7dB DOSE----- 3 96% DOSE----- 4 27% DOSE-----11 17%
MAX-----107 6dB 8HF DOSE-----160 4% 8HF DOSE-----172 9% SEL-----125 0dB
```

Figure 12. Sample Event Data Printout

Histograms

Three separate histograms are computed as the data is accumulated with the appropriate exchange rate and excluding data less than the threshold. Each minute an integrated average level is computed and stored (see Figure 13).

For example, in the following histogram

```
--90dB THRESHOLD    5dB EXCHANGE RATE
1 MIN HISTOGRAM
10:15 103 97 110 96 107dB +---+---+---+---+---+---+ 105dB
10:20 98 98 99 00 71dB +---+---+---+---+---+---+ 95dB
```

10:15 is the start time of the program.

103 is the decibel level at 10:15.

97 is the decibel level at 10:16, etc.

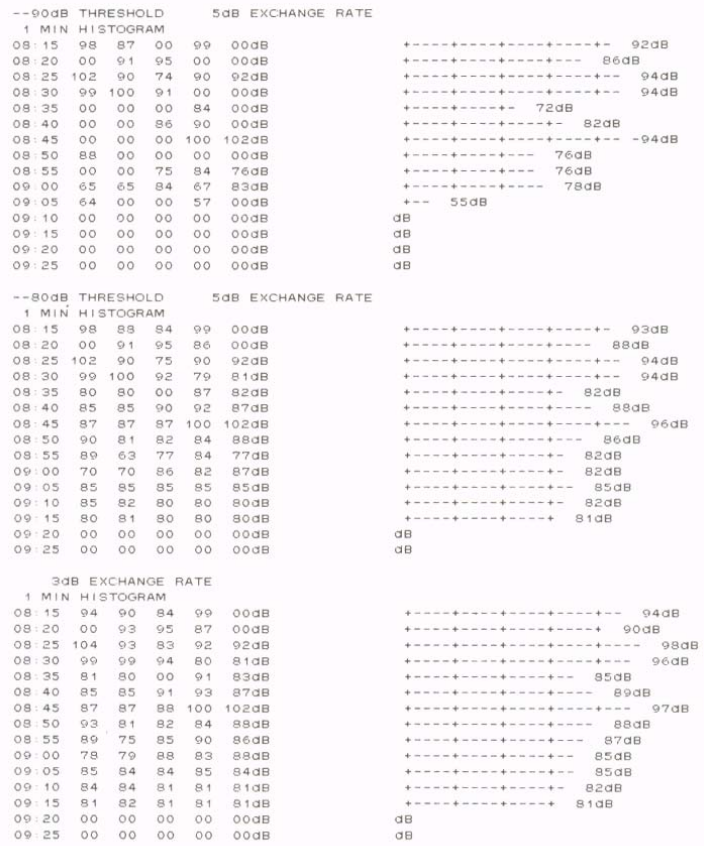


Figure 13. Sample Histogram Printouts

NOTE

If the level is less than the threshold for part of the minute the average can be less than the threshold.

If no levels above the threshold level are measured, the level is set to 00 dB.

The first + in the graph is 50 dB and the next is 60 dB, etc.

Each - is 2 dB.

105 dB is the average of the 5 levels combined with a 5 dB exchange rate.

Each line on a 1-minute histogram is 5 minutes of data.

If a 3-, 5-, or 10-minute histogram is selected each line would be 15, 30, or 60 minutes long with 5 or 6 levels per line.

It is possible to change the time base on the histogram in the middle of a printout (see Figure 14 for example and page 31 for details).

If only TEXT was selected on the internal switches, the graph portion would be omitted. If GRAPH is selected, the time and graph portion is printed. This is useful for 40-column printers.


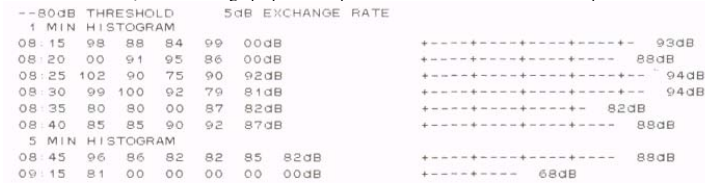


Figure 14. Sample of Changing Time Base of Histogram

Statistical Distributions

 Four separate statistical distributions are accumulated. The % TIME shows the percent time at each level. The % DOSE shows the accumulated dose at each level. Both of the percentages depend on the time constant and the exchange rate so two separated distributions are accumulated (see Figure 15).



.03 is the percent of run time at 50 dB.

2.58 is the percent time at 51 dB, etc.

Each + is 10% starting at 0%.

Each - is 2%.

```

--90dB THRESHOLD      5dB EXCHANGE RATE
% TIME STATISTICAL DISTRIBUTION
50dB -- 00 -- 00 -- 00 -- 00 -- 00% + .0%
55dB -- 00 -- 00 -- 00 -- 00 -- 00% + .0%
60dB -- 00 -- 00 -- 00 -- 00 -- 00% + .0%
65dB -- 00 -- 00 -- 00 -- 21 -- 32% + .5%
70dB -1.64 -4.02 -- 97 -- 93 -1.69% +----- 9.2%
75dB -1.43 -1.23 -- 40 -- 62 -- 31% +- 3.9%
80dB -1.98 19.16 -5.65 -3.33 -1.40% +-----+-----+-----+ 31.5%
85dB 13.65 -4.85 -1.14 -8.29 -2.81% +-----+-----+-----+ 30.7%
90dB -2.23 -- 38 -2.24 -1.02 -1.67% +---- 7.5%
95dB -2.29 -4.22 -- 13 -- 13 -- 22% +---- 6.9%
100dB -3.56 -3.02 -- 71 -1.00 -- 01% +----- 8.3%
105dB -- 02 -- 02 -- 18 -- 52 -- 00% + .7%
110dB -- 00 -- 00 -- 00 -- 00 -- 00% + .0%
% DOSE STATISTICAL DISTRIBUTION
50dB -- 00 -- 00 -- 00 -- 00 -- 00% + .0%
55dB -- 00 -- 00 -- 00 -- 00 -- 00% + .0%
60dB -- 00 -- 00 -- 00 -- 00 -- 00% + .0%
65dB -- 00 -- 00 -- 00 -- 00 -- 00% + .0%
70dB -- 01 -- 03 -- 01 -- 01 -- 02% + .0%
75dB -- 02 -- 02 -- 00 -- 01 -- 00% + .0%
80dB -- 06 -- 68 -- 23 -- 15 -- 07% + 1.1%
85dB -- 85 -- 34 -- 09 -- 78 -- 30% +- 2.3%
90dB -- 28 -- 05 -- 37 -- 19 -- 36% + 1.2%
95dB -- 57 -1.21 -- 04 -- 05 -- 09% + 1.9%
100dB -1.78 -1.73 -- 47 -- 76 -- 01% +-- 4.7%
105dB -- 02 -- 02 -- 24 -- 79 -- 00% + 1.0%
110dB -- 01 -- 01 -- 01 -- 02 -- 02% + .0%
3dB EXCHANGE RATE
% TIME STATISTICAL DISTRIBUTION
50dB -- 00 -- 00 -- 00 -- 00 -- 00% + .0%
55dB -- 00 -- 00 -- 00 -- 00 -- 00% + .0%
60dB -- 00 -- 00 -- 00 -- 00 -- 05% + .0%
65dB -- 18 -- 12 -- 07 -- 04 -1.73% +- 2.1%
70dB -3.76 -1.51 -- 92 -1.70 -1.28% +----- 9.1%
75dB -2.09 -- 74 -- 51 -- 40 -- 63% +- 4.3%
80dB -5.51 16.29 -4.86 -3.41 -3.30% +-----+-----+-----+ 33.3%
85dB 13.28 -2.83 -2.02 -6.91 -2.99% +-----+-----+-----+ 28.0%
90dB -1.69 -- 15 -2.27 -- 91 -1.77% +---- 6.7%
95dB -3.45 -3.06 -- 03 -- 03 -- 64% +---- 7.2%
100dB -3.86 -2.25 -1.07 -- 60 -- 01% +---- 7.7%
105dB -- 00 -- 00 -- 31 -- 38 -- 00% + .6%
110dB -- 00 -- 00 -- 00 -- 00 -- 00% + .0%
% DOSE STATISTICAL DISTRIBUTION
50dB -- 00 -- 00 -- 00 -- 00 -- 00% + .0%
55dB -- 00 -- 00 -- 00 -- 00 -- 00% + .0%
60dB -- 00 -- 00 -- 00 -- 00 -- 00% + .0%
65dB -- 00 -- 00 -- 00 -- 00 -- 00% + .0%
70dB -- 00 -- 00 -- 00 -- 00 -- 00% + .0%
75dB -- 00 -- 00 -- 00 -- 00 -- 00% + .0%
80dB -- 07 -- 26 -- 09 -- 08 -- 10% + .6%
85dB -- 54 -- 14 -- 13 -- 56 -- 30% + 1.6%
90dB -- 21 -- 02 -- 46 -- 23 -- 57% + 1.4%
95dB -1.41 -1.58 -- 02 -- 02 -- 66% +- 3.6%
100dB -5.03 -3.70 -2.21 -1.56 -- 03% +-----+ 12.5%
105dB -- 00 -- 02 -2.03 -3.16 -- 05% +-- 5.2%
110dB -- 06 -- 00 -- 10 -- 04 -- 00% + .2%

```

Figure 15. Sample Statistical Distributions

```

% DOSE STATISTICAL DISTRIBUTION
80dB ---.61--1.23--2.55--2.32--4.35% +----+ 11.0%
85dB --3.37--6.34--5.59--4.17--3.57% +-----+-----+ 23.0%
90dB --4.23--3.19--1.50---.35---.00% +----- 09.2%

```

.61 is the percent dose accumulated at 80 dB.

1.23 is the percent at 81 dB, etc.

The percent dose statistical distribution is accumulated without a threshold. Of course, the dose calculations in the summary exclude any dose accumulated below the threshold.

The graph is similar to the % TIME graph.

If the internal TEXT or GRAPH switch is off, that portion will not be printed.

3 dB Only Systems

The previous examples illustrated the M-27 when used with two different exchange rates. It can be used as a 3 dB only system with three different histograms, one with no threshold and two with thresholds. It will also print four statistical distributions, two with a Time constant and two without. If the M-27 is used for community or 3 dB industrial monitoring, the printout will contain much more information than would a data logger with a single printout.

NOTE

If the criterion level is set to 85 dB, then the dose reading can be easily converted to Pascal squared hours. For a 3 dB system with a 85 dB criterion level, a 100% dose is equal to 1 Pascal squared hour. To calculate the exposure in Pascal squared hours, divide the dose by 100.

Dump Data

If the CODE/HL3 is cycled until the display shows CPU, raw data may be dumped to a computer when PRINT is pressed. Each line contains an address and 16 bytes of memory starting at that address (see Figure 16).

See Memory Map section for a description of the data.

General

When printing, the M-27 remembers which keys have been pressed

```

0000 7F 20 00 FF F0 B5 00 00 F4 30 00 00 00 00 00
0010 8E 8F 2B 86 8F F3 8E AA 2C 9B ED A0 60 0E E3 FE
0020 AD 99 85 50 6B 16 19 00 1D 02 04 03 01 13 00 00
0030 00 00 00 00 00 00 00 00 00 00 00 00 00 FF 00
0040 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
0050 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
0060 00 00 13 4B 0B 7F 0B 7F 0B 7F 0B 7F 0B 7F E0 54
0070 00 19 98 13 06 12 E7 0B FF 0B 7F E2 18 00 08 D1
0080 00 BF F4 77 77 00 01 71 00 00 00 0A 83 46 02
0090 01 01 05 00 00 A3 A0 00 00 00 00 00 8F 00 02
00A0 09 B6 0D 0C 00 00 01 02 00 0E 00 0F 00 02 01 00
00B0 00 00 96 C5 00 00 4A 00 A3 A0 00 48 18 00 00 00
00C0 FF 10 11 12 03 0F 0E 00 FF 00 00 00 00 00 00 00
00D0 D0 CF 6A FF 00 FF 0F 00 00 00 00 43 FA 16 7F 00
00E0 00 00 00 00 D6 04 40 D7 00 C0 25 04 4F D7 04 40
00F0 5A 2A F1 81 C7 07 46 81 1F 01 C6 00 FC 1E 01 81
0100 00 00 1A 5A 5F 49 60 00 00 00 4D 9B 47 00 00 00
0110 00 3F A9 D9 00 00 00 00 00 00 00 00 00 00 00 00
0120 00 00 00 00 00 00 00 00 00 00 00 12 B1 10 1D
0130 40 00 00 00 33 4D 8D 40 00 00 00 2A 84 AE 00 20

```

Figure 16. Sample of Raw Data

and prints only that data. As an example, if HIST 5 has been pressed, pressing PRINT will print out a heading, a summary, a 5-minute histogram, and a statistical distribution. If HTL is annunciator, pressing HIST 10 will print a 10-minute histogram for the high threshold level only.

It is possible to change the printout while it is printing by pressing PAUSE, other keys, and PAUSE again. Or it can be changed by just pressing another key.

Memory Map

DUMP prints a memory dump of the M-27's random access memory or RAM. Consult the Quest factory if you need a complete description of each memory location.

Memory Location

Memory Location	Data
0000-000F	MC6805 ports and timer
0010-003F	Setup, dose, and time
0040-007F	Stack
0080-00FF	Scratch pad
0100-012F	Current event
0130-01BF	Print buffer

Memory Location Data

0100-01CF	3 dB stat overflow = address of stat store
0200-02BF	3 dB stat store. 2 bytes/level
02CO-02FF	Threshold stat overflow
0300-03BF	Threshold stat store
03CO-05BF	16 Events
03CO-1FFF	1 minute histogram. The last location is the HTL for the first minute, the next is the LTL, and next is for 3 dB. Each minute it repeats in blocks of 3.

Editing Printout

A complete printout of all the data stored in the M-27 may be more than 25 feet long and may be more than is needed.

If only the data for hearing conservation is required, press CODE/ HL3 until the LTL annunciator is displayed. Pressing PRINT will reduce the data by one-half to two-thirds.

If a 40-column printer is used, turning off TEXT or GRAPH will reduce length of histograms or statistical distribution.

Printing a 3-, 5-, or 10-minute histogram also reduces the printout.

Remember data is not erased in the M-27 by any printout. The only way data can be lost is by RESET, removing the battery, or having a dead battery. If a printout is not as desired, another printout may be made. (See page 47 for preserving data during battery change by using a BX-9 accessory.)

Other keys change the way data is printed. The keys can be pressed while the printer is printing, not printing, or in pause. As an example, if HIST 5 is pressed part way through the histogram, the rest of the histogram will be a 5-minute histogram.

PAUSE causes the printer to pause while other keys are pressed to redefine the printout. Pressing PAUSE a second time will continue the printout. PAUSE must always be pressed twice, once to stop the printer and once to continue.

ON/OFF will stop the printout.

If the printer continues to print after pressing PAUSE or ON/OFF, the printer has received an amount of data from the M-27 and stored it in a buffer. In most printers, the buffer can be turned off if desired. See printer manual for details.

Printer Setup

Serial Printer Output

The serial printer output is RS-232-C compatible. It sends data in ASCII code at 300, 600, 1200, or 2400 Baud.

The data is sent asynchronously. The Data Set Ready line is checked before sending a character.

Each character consists of 11 bits made up of a start bit, 8 ASCII character bits, and 2 stop bits.

Each line is terminated by a line feed and/or carriage return characters.

Printer Switch Setup

The internal switches must be set to agree with the printer.

Switch 3 controls the printer (see Internal Switch Settings).

Positions 1 and 2 should normally be off.

Positions 3 and 4 are normally on (graph and text).

Positions 5 and 6 control last 2 characters/line. Many printers work if both are on.

Positions 7 and 8 control baud rate.

7 on and 8 on = 300 baud
7 on and 8 off = 600 baud
7 off and 8 on = 1200 baud
7 off and 8 off = 2400 baud

Parallel Printer Setup

When set to parallel the M-27 is compatible with most Centronic compatible printers.

The M-27 sets up 8 data lines, if the Busy line is not high it sends a Strobe pulse.

If the Busy line stays high for more than a few seconds, the M-27 will cancel the printout.

Printer Switch Setup

See Internal Switch Settings.

Positions 1 and 2 are normally ON for parallel printers.

Positions 3 and 4 are normally ON (graph and text).

Positions 5 and 6 control the last 2 characters/line. Most printers work with both ON.

Positions 7 and 8 are undefined for parallel.

Computer Connections

The M-27 can send its data to personal computers over the RS-232 port. In general, the computer and M-27 are set up similar to a serial printer. The computer is programmed to be a data terminal and the data is read into the computer. If the data is saved in an ASCII file, it may be edited with a word processor program.

Consult the Quest factory for hints on using the M-27 with specific computers.

Printer Pinouts

The 20-pin connector is numbered from right to left starting with 1 in the upper right corner, 2 in the lower right corner, and 20 in the lower left corner when looking at the M-27.

	Serial	Parallel	
Pin 1	Data Signal	Strobe	+ 5 to +5 minus the battery voltage, 300 ohm impedance
Pin 3	--	Data 0	Output of HC CMOS driver
Pin 5	--	Data 1	Output of HC CMOS driver
Pin 7	--	Data 2	Output of HC CMOS driver
Pin 9	--	Data 3	Output of HC CMOS driver
Pin 11	--	Data 4	Output of HC CMOS driver
Pin 13	--	Data 5	Output of HC CMOS driver
Pin 15	--	Data 6	Output of HC CMOS driver
Pin 17	--	Data 7	Output of HC CMOS driver
Pin 20	DSR	Busy	Input > +3 volts = 1 Input < +1 volts = 0
Pins 2, 4, 6, 8, 10, 12		Ground	
Pin 14		External battery minus	
Pin 16		External battery plus	
Pin 18, 19		No connection	

EXTENDING BATTERY LIFE

Since the M-27 stores data even when it is turned off, the battery should be removed if it is not to be used for a few days.

he M-27 may draw additional current when connected to a printer. For best results connect the M-27 to a printer only when printing data.


INTERNAL SWITCHES

The M-27 is set at the factory to the current OSHA requirements unless otherwise specified. When the CODE key is pressed, the display shows a coded display of the current internal switch settings. As an example, if the display is a 4-digit display such as 10EE, then the unit is set to a criterion level of 90 dB for 8 hours, an exchange rate of 5 dB, a high threshold level of 90 dB, a low threshold level of 80 dB, 115 dB upper limit level, "A" frequency weighting, the 50 dB to 146 dB range, a SLOW time constant and a 12-hour clock.

If the display is a 3-digit code then the first number is the unit identification number. The next two digits are the printer setup. The printer setup may be changed at any time without erasing data. The other switches are only read when the unit is reset.


Some examples of common switch settings and codes are as follows:
OSHA Compliance and Hearing Conservation

"A" Weighting	90 dB High	Parallel Printer
50-146 dB Range	Threshold	Text and Graph
115 dB Upper Limit	80 dB Low Threshold	LF and CR
Slow Time Constant	12 Hour Clock	600 Baud
90 dB Criterion	Unit Unit #1	
5 dB Exchange Rate		

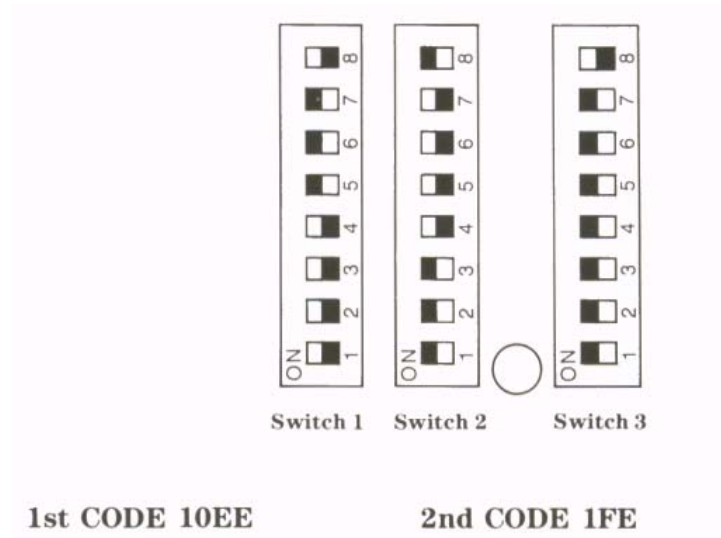

Department of Defense

"A" Weighting	80 dB High	Serial Printer
50-146 dB Range	Threshold	Text and Graph
140 Upper Limit	No Low Threshold	LF and CR
Slow Time Constant	12 Hour Clock	600 Baud
85 dB Criterion	Unit Unit #1	
4 dB Exchange Rate		

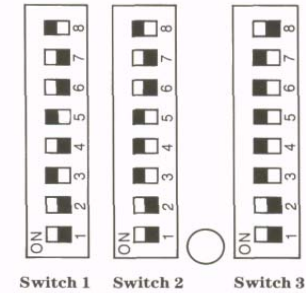


1st CODE 2293

2nd CODE 13E


3 dB Community Noise

"A" Weighting	80 dB High	Serial Printer
30-126 dB Range	Threshold	Text and Graph
90 dB Upper Limit	70 dB Low Threshold	NUL and CR
Fast Time Constant	24 Hour Clock	2400 Baud
85 dB Criterion	Unit Unit #7	
3 dB Exchange Rate		

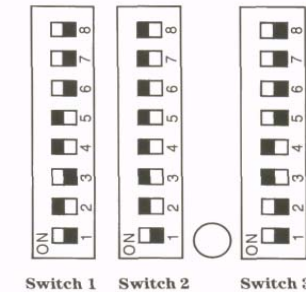

Canada Industrial Noise Monitoring

"A" Weighting	90 dB High	Parallel Printer
50-146 dB Range	Threshold	Text and Graph
115 dB Upper Limit	80 dB Low Threshold	LF and CR
Slow Time Constant	12 Hour Clock	600 Baud
90 dB Criterion	Unit Unit #1	
3 dB Exchange Rate		

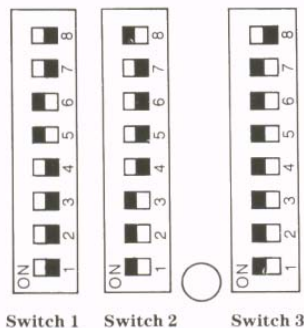

Switch Positions

Switch 1 and 2 select the M-27 functions.

Switch 1 and 2 are read only on RESET and when the battery is replaced.

Switch 3 selects printer options.

Switch 3 is read at the start of each printout and may be changed without destroying data.

SWITCH 1

Position 1	On = "C" weighting	Off = "A"
Position 2	On = 30 dB Range	Off = 50 dB Range
Position 3	In 30 dB Range	
	On = 115 dB U.L.	Off = 90 dB U.L.
In 50 dB Range		
	On = 140 dB U.L.	Off = 115 dB U.L.
Position 4	On = Fast	Off = Slow
Positions	5 6	Criterion Level
	Off Off	=80 dB
	Off On	=84 dB
	On Off	=85 dB
	On On	=90 dB

Positions	7 8	Exchange Rate
	Off Off	= 3 dB
	Off On	= 4 dB
	On Off	= 5 dB
	On On	= 6 dB

SWITCH 2

Positions	1	2	3	4	HTL	LTL
Off		Off	Off	Off	= 70	dB none
Off		Off	Off	On	= 70	dB none
Off		Off	On	Off	= 75	dB none
Off		Off	On	On	= 80	dB none
Off		On	Off	Off	= 85	dB none
Off		On	Off	On	= 90	dB none
Off		On	On	Off	= 75	dB 70 dB
Off		On	On	On	= 80	dB 70 dB
On		Off	Off	Off	= 85	dB 70 dB
On		Off	Off	On	= 90	dB 70 dB
On		Off	On	Off	= 80	dB 75 dB
On		Off	On	On	= 85	dB 75 dB
On		On	Off	Off	= 90	dB 75 dB
On		On	Off	On	= 85	dB 80 dB
On		On	On	Off	= 90	dB 80 dB
On		On	On	On	= 90	dB 85 dB
Position 5	On =	24 hour		Off	= 12	hour

Position	6	7	8	Unit
Off		Off	Off	= 0
Off		Off	On	= 1
Off		On	Off	= 2
Off		On	On	= 3
On		Off	Off	= 4
On		Off	On	= 5
On		On	Off	= 6
On		On	On	= 7

SWITCH 3

Position 1	On = Busy	Off = Data Set Ready handshake
Position 2	On = Parallel printer	Off = Serial printer

Normally positions 1 and 2 are set the same.

Position 3 On = Print Graphs Off = No Graphs
 Position 4 On = Print Text Off = No Text

If 3 and 4 are both off, Graphs will print.

Positions	5	6	2nd and Last print character in HEX
	On	On	= 0A 0D LF CR
	Off	On	= 0A 00 LF
	On	Off	= 0D 0A CR LF
	Off	Off	= 00 0D CR
Positions	7	8	Baud Rate
	On	On	= 300 baud
	On	Off	= 600 baud
	Off	On	= 1200 baud
	Off	Off	= 2400 baud

Setting Internal Switches

The M-27 has over 15 million unique setup options. The setup is determined by the position of the three 8-position switches located inside the battery compartment. Externally the setting of these switches can be determined by pressing the CODE key on the front panel and decoding the display by using Figure 17.

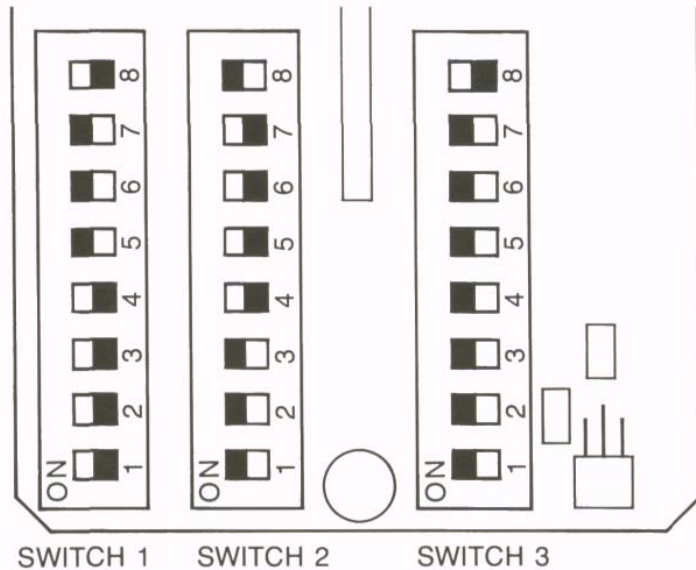


Figure 17. Internal Switches

If a 4-digit code and either HTL, LTL, or 3 dB is displayed . . .

The first digit is a 1 for a 12 hour clock and a 2 if it is set to 24 hours.

The second determines the weighting, range, upper limit, and the time constant.

The third determines the criterion and exchange rate. The last digit determines the two thresholds.

As an example, if the display reads 10EE,

Find the 1 code in the first digit column in Table 2. The clock is 12 hours.

The 0 means the time constant of weighting is "A", the range is 50-146, the upper limit is 115 dB, and the time constant is Slow.

The first E means the criterion is 90 dB and the exchange rate is 5 dB.

The second E means the high threshold level (HTL) is 90 dB and the low threshold level (LTL) is 80 dB.

If a 3-digit code is displayed with HTL, LTL, and 3 dB ...

The first digit is the unit identification number.

The second digit determines serial or parallel printers and if text, graph, or both will be printed.

The last digit determines the printer line feed and carriage return characters and the baud rate.

If the code is 53E,

5 is the unit identification number for this unit. It can be set to any number from 0 to 7. The number is for user use only and does not affect the operation of the M-27.

The 3 means it is set for serial printers with both text and graphs. The E means it is set for 600 baud.

To convert from decimal to hex or binary refer to Table 1.

To select different options, set the switches by filling in Tables 2 and 3.

As an example, if "A" weighting, 30 to 126 dB range, and a 90 dB upper limit is desired then set the left switch positions 1, 2, and 3 to down, up, and down.

Table 1. Decimal – Hex – Binary Conversion Chart

DECIMAL	HEX	BINARY
0	0	0000
1	1	0001
2	2	0010
3	3	0011
4	4	0100
5	5	0101
6	6	0110
7	7	0111
8	8	1000
9	9	1001
10	A	1010
11	B	1011
12	C	1100
13	D	1101
14	E	1110
15	F	1111

For example, an indication of 8E (HEX) converts to 1000 1110 (BINARY)

To set the criterion level to 80 dB and the exchange rate to 3 dB, set the next 4 positions down.

For a high threshold of 80 and a low threshold of 70 set the first 4 positions of the right switch to down, up, up, and up.

To identify this unit as unit 0 set the next three switches down. (If the unit number is set to zero the code will not show the leading zero.)

All the switch positions in a column must be set to get the correct settings. Notice, as an example, the 115 dB upper limit switch could be up or down depending on the range setting. Also the threshold settings are encoded.

The M-27 reads the switches 1 and 2 only when the unit is reset or a battery is reconnected. If the switch positions are changed when the unit is operating, the change will be ignored. Switch 3 is read at the start of a printout. It may be changed to allow printouts to different printers or computers without destroying the accumulated data.

Code Decoding

The M-27 displays two different codes; a 4-digit code can be decoded to show the position of 13 switch positions, and a 3-digit code shows the position of 11 switch positions.

For the 4-digit code:

1. Press CODE/HL3 until a 4-digit code appears.
2. Enter the code in the table.
3. Convert from hex to binary (see Table 1).
4. Subtract 1 from first digit (2 becomes 1 and 1 becomes 0).
5. Look up each position as described under Setting Internal Switches.

Table 2. 4-Digit Code Table

CODE				
BINARY				
MINUS 1				
POSITION				
SWITCH				

Example: Code = 10EE

CODE	1	0	E	E
BINARY	0001	0000	1110	1110
MINUS 1	0000	-----	-----	-----
POSITION	xxx5	1234	5678	1234
SWITCH	SW 2	SW 1	SW 1	SW 2

1 decodes to a 12-hour clock.

0 decodes to "A" weighting, 50 dB range, 115 dB U.L., and Slow time constant.

The first E decodes to a 90 dB Criterion Level and a 5 dB exchange rate.

The last E decodes to a 90 and 80 dB thresholds.

For the 3-digit code:

1. Press CODE/HL3 until 3 or less digits code are displayed. (Leading zeros are not displayed.)
2. Enter code in table.
3. Convert Hex to binary (see Table 1).
4. Look up each position in internal switch section.

Table 3. 3-Digit Code Table

CODE			
BINARY			
POSITION	x678	1234	5678
SWITCH	SW 2	SW 3	SW 3

Example: Code = 3FE

CODE	3	F	C
BINARY	0011	1111	1100
POSITION	x678	1234	5678
SWITCH	SW 2	SW 3	SW 3

3 decodes to unit 3.

F decodes to parallel printer with graph and text.

C decodes to 0A and 00 print ending and 2400 baud. (The baud rate is not used in parallel.)

TROUBLESHOOTING

Blank display.

Press ON/OFF key.

If still blank, change battery.

Unit will not start when battery changed. Try again.

Disconnect printer from unit and reconnect battery. Return for service.

Unit reads low.

Check that internal switches are in proper position.

Reset unit.

Change microphone and recalibrate unit.

Unit reads high.

Check position of internal switches.

Reset unit.

Unit is erratic.

Change microphone.

INTERPRETING RESULTS

When the M-27 is set up for OSHA compliance and for most other settings, the following are, in general, true.

The HTL Lavg is less than the LTL and Lavg is less than Leq. The HTL Dose and TWA are less than the LTL Dose and TWA.

If Run Time is less than eight hours, TWA is less than Lavg; if Run Time is more than eight hours, TWA is greater than Lavg.

The SEL is greater than Leq.

The 3 dB Dose is greater than the LTL Dose if Leq is greater than the Criterion Level; it is less than the LTL Dose if the Leq is less than the Criterion Level.

The above may not be true if the noise is below the threshold level.

If the noise is continuous or impulsive, then Lavg will be nearly equal to Leq.

If the noise is intermittent then Lavg will be several decibels less than Leq.

The time constant will cause the readings not taken with a 3 dB exchange rate to be greater than if there were no time constant. For 3 dB it makes little difference.

The Peak Level will be greater than Slow Max unless the peak occurred while the instrument was in PAUSE and was changed to RUN a few seconds later. Then Max Level might be greater than Peak Level.

U.L. Time will not count unless the level has exceeded the upper limit level for a total of one second.

In all of the above, "greater" and "less" include "almost equal."

Use of Lavg and TWA

Time Weighted Average (TWA) is measured in decibels. It is the accumulated noise dose integrated over eight hours. The only difference

between TWA and Dose is that TWA is expressed in decibels and Dose is expressed as a percent.

TWA is equal to a continuous level which if constant for eight hours would produce the same noise dose as the dose accumulated over the run time. The average integrated sound level (Lavg) will be equal to TWA at eight hours. If the time is less than eight hours, then TWA will be less than Lavg; TWA will be greater than Lavg if time is greater than eight hours.

The M-27 automatically computes the TWA of a worker if the unit is worn by the worker for a full workday. Even if the worker does not work exactly eight hours the TWA measurement will read the correct TWA for that worker.

Lavg can be used with short term sampling to estimate the worker's TWA. If the noise exposure during the sample period is representative of the noise throughout the workday and the workday is eight hours, then the TWA for that worker is equal to the Lavg measured with the short term sample.

Estimating TWA from Lavg

A short term sample can be used to estimate worker exposure even if the workday is other than eight hours by adding or subtracting a correction factor from the Lavg reading.

As an example, if a worker has a Lavg of 85.50 dB after a ten minute sample, and the sample is representative of the noise throughout the workday, and the workday at that position is 7:15 then from Table 4 under a 5 dB exchange rate find -.71 dB and subtract it from 85.50 to compute a TWA of 84.79 dB.

Accuracy of Readings

There is a tendency to overestimate the accuracy of digital readings. In the M-27, some values such as Lavg and TWA are computed to 0.1 dB. The absolute accuracy of the reading is not 0.1 dB. (See specifications for accuracy and tolerances.) However, the resolution of 0.1 dB is useful in determining the sample time required for a short term sample. As an example, if Lavg reading is increasing .3 dB every second then additional sample time may be required. If the Lavg reading remains stable within a few 0.1 dB's then the sample time may be long enough.

Hints and Good Practices

The M-27 is in the pause mode after the battery is replaced, when

Table 4. Corrections for Computing TWA from Lavg.
Values in this Table were computed from the formula:

$$\text{Correction} = \text{ER} \times \text{Log}_2 \frac{\text{Workday}}{8}$$

WORK-DAY HR:MIN	EXCHANGE RATES			
	3.01dB	4dB	5dB	6.02dB
0:30	-12.04	-16	-20	-24.08
1:00	-9.03	-12	-15	-18.06
1:30	-7.26	-9.66	-12.07	-14.53
2:00	-6.02	-8	-10	-12.04
2:30	-5.05	-6.71	-8.39	-10.1
3:00	-4.25	-5.66	-7.07	-8.51
3:30	-3.59	-4.77	-5.96	-7.18
4:00	-3.01	-4	-5	-6.02
4:15	-2.74	-3.65	-4.56	-5.49
4:30	-2.49	-3.32	-4.15	-4.99
4:45	-2.26	-3	-3.76	-4.52
5:00	-2.04	-2.71	-3.39	-4.08
5:15	-1.82	-2.43	-3.03	-3.65
5:30	-1.62	-2.16	-2.7	-3.25
5:45	-1.43	-1.9	-2.38	-2.86
6:00	-1.24	-1.66	-2.07	-2.49
6:15	-1.07	-1.42	-1.78	-2.14
6:30	-.9	-1.19	-1.49	-1.8
6:45	-.73	-.98	-1.22	-1.47
7:00	-.57	-.77	-.96	-1.15
7:15	-.42	-.56	-.71	-.85
7:30	-.28	-.37	-.46	-.56
7:45	-.13	-.18	-.22	-.27
8:00	0	0	0	0
8:15	.13	.17	.22	.26
8:30	.26	.34	.43	.52
8:45	.38	.51	.64	.77
9:00	.51	.67	.84	1.02
9:15	.63	.83	1.04	1.26
9:30	.74	.99	1.23	1.49
9:45	.85	1.14	1.42	1.71
10:00	.96	1.28	1.6	1.93
10:15	1.07	1.43	1.78	2.15
10:30	1.18	1.56	1.96	2.36
10:45	1.28	1.7	2.13	2.56
11:00	1.38	1.83	2.29	2.76
11:15	1.48	1.96	2.45	2.96
11:30	1.57	2.09	2.61	3.15
11:45	1.66	2.21	2.77	3.33
12:00	1.76	2.33	2.92	3.52
12:30	1.93	2.57	3.21	3.87
13:00	2.1	2.8	3.5	4.21
13:30	2.27	3.01	3.77	4.54
14:00	2.43	3.22	4.03	4.86
14:30	2.58	3.43	4.28	5.16
15:00	2.73	3.62	4.53	5.46
15:30	2.87	3.81	4.77	5.74
16:00	3.01	4	5	6.02

it is turned on, is reset, or the PAUSE key is pressed. Wait until the sound level has stabilized before entering the run mode.

Always remember to press RUN.

Press PAUSE before pressing PRINT. If in the run mode, the data printed at the beginning of the printout will not agree with the data at the end.

Considerations of Measurement and Accuracy

An integrating meter such as the M-27 Noise Dosimeter can integrate all continuous, intermittent and impulsive sound levels within the range of the instrument. This avoids many of the potential errors created by attempting to read and correctly interpolate sound level meter readings in fluctuating sound fields. However, it is important to use the M-27 correctly and to understand its limits (true of any instrument) to achieve its maximum accuracy.

Microphone location generally has the greatest effect on the accuracy of any noise measuring instrument. The correct placement of the M-27 microphone has been discussed under Effects of Operator Presence.

Threshold discontinuity can cause notable differences in readings on various meters if the noise level is near the threshold. Since the instrument assumes that noise even slightly below the threshold is absolute quiet, that noise level is not accumulated into the results while a noise level just slightly higher is accumulated. This is most noticeable in the readings of dose if the threshold is the same as the criterion level.

Peak noise levels greater than the range of the instrument are "clipped" and act as if they were at the maximum level of either 146 dB on the 50 dB range or 126 dB on the 30 dB range.

Minimum noise levels are either at the bottom of the range or at the noise floor of the instrument. For readings which do not have a lower threshold, the accumulated noise will be at these levels.

Crest factor is an almost meaningless term for instruments with crest factors in excess of 30 dB. The M-27 is capable of measuring pulses as short as 1 millisecond with a peak amplitude of 143 dB and a background level of 80 dB. This is a pulse range of 63 dB. The crest factor would depend on how often this pulse occurred but could be greater than 60 dB.

ACCESSORIES

Model WS-5 Windscreen

Refer to page 22 on how to use the windscreen with the M-27 microphone.

Model MB-1 Microphone Bracket

Refer to page 20.

Cables

- 59-818 36-pin Centronics parallel cable.
- 59-843 25-pin serial female connector cable.
- 59-874 25-pin serial male connector cable.
- 59-758 Computer booster cable.
- 59-879 9-pin serial female.

Tripods

Quest supplies two models of tripods for use with the M-27 as an area monitor. For use refer to page 21.

BX-9 Battery Change Adapter

To preserve stored data in the M-27 memory during a battery change, the BX-9 Battery Change Adapter may be used. The BX-9 allows you to remotely power the M-27 by plugging it into the printer output connector and therefore keeping the dosimeter powered while disconnecting the battery and replacing it with a fresh one. The BX-9 utilizes pins number 14 and 16 on the printer connector.

Service Policy

The Quest product you have purchased is one of the finest acoustic instruments available. It is backed by our full one year warranty which seeks complete customer satisfaction. This is your assurance that you can expect prompt courteous service for your equipment from the entire Quest service organization.

Should your Quest equipment need to be returned for repair or recalibration, please contact the Service Department at (800)245-0779 (USA) or Fax (262)567-4047 for a Return Authorization Number. The RA number is valid for 30 days, and must be shown on the shipping label and purchase order/cover letter. If you are unable to return instruments in that time call for a new RA number. Send it prepaid and properly packed in the original shipping carton directly to Quest Technologies, 1060 Corporate Center Drive, Oconomowoc, WI 53066 U.S.A.

Repair or replacement work done under warranty will be performed free of charge, and the instrument will be returned to you prepaid. Your copy or a photocopy of the Quest Registration Card will serve as proof of warranty should the factory require this information.

If for any reason you should find it necessary to contact the factory regarding service or shipping damage, please direct your calls or letters to the attention of the Service Manager, Quest Technologies, (262) 567-9157 or (800) 245-0779. Office hours are from 7 AM to 6 PM (Central Standard Time) Monday through Friday.

For service or recalibration outside the U.S.A., please contact your local Quest Dealer or fax Quest U.S.A. at 1-262-567-4047.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>