




**AUDIOVOX®**  
ELECTRONICS CORP.

# Operating Instructions

**Model No.: FPE1078**

**7.7" LCD TV/DVD Player**

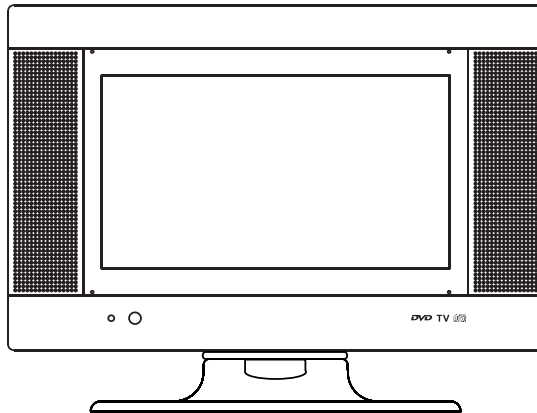

**For assistance, please call: 1-800-645-4994**

**Or Visit us at <http://www.audiovox.com>**



For Customer Service  
Visit Our Website At  
**[www.audiovox.com](http://www.audiovox.com)**  
Product Information, Prices,  
FAQs, Owner's Manuals

**1287367A**

*Thank you. . .*

*. . . for choosing this tablet DVD player. For your own safety and in order to learn all about the functions available, please read this manual and keep it for future reference.*

**Note:**

*An LCD panel and/or video monitor may be installed in a motor vehicle and visible to the driver if the LCD panel or video monitor is used for vehicle information, system control, rear or side observation or navigation. If the LCD panel or video monitor is used for television reception, video or DVD play, the LCD panel or video monitor must be installed so that these features will only function when the vehicle is in “park” or when the vehicle’s parking brake is applied.*

*An LCD panel or video monitor used for television reception, video or DVD play that operates when the vehicle is in gear or when the parking brake is not applied must be installed to the rear of the driver’s seat where it will not be visible, directly or indirectly, to the operator of the motor vehicle.*

**Note:**

*This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation , and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.*

# ***Table of Contents***

A. Cautions and Warnings.....	04
B. About This Manual.....	06
C. Desktop Base Installation.....	08
D. Prior to Operation.....	09
E. Remote Control.....	11
F. DVDPlayer.....	12
G. Applying Power to the Unit .....	13
H. Connections.....	14
I. Receiving TV Programs.....	15
J. Reading SD (Secure Digital) and MMC (Multimedia) Card .....	16
K. Playing DVDs .....	16
L. Playing CDs .....	21
M. Playing MP3-CDs.....	22
N. Playing JPEG Files.....	24
O. Initial Settings.....	26
P. Specifications.....	32
Warranty.....	33

## A. Cautions and Warnings

All operation and maintenance instructions must be followed and warnings adhered to.

- Do not expose the unit to excessive moisture.
- Do not place objects filled with liquids, such as vases, on the unit.
- Do not use the unit where there are temperature extremes (below 41°F, 5°C or exceeding 95°F, 35°C).
- Adjust the volume to prevent damage to speakers.
- Sudden changes in the ambient temperature may cause condensation to form on the optical lens inside the unit. If this happens, remove the disc, and allow about 2 hours to pass and then proceed with normal operation.
- To ensure proper ventilation and proper operation, never cover or block the slots and openings with a cloth or other material.
- Keep the unit away from strong magnets, heating sources, sunlight, and excessive dust.
- Never allow objects of any kind or liquids to be pushed/spilled into the unit openings as they may come into contact with dangerous voltages.
- Unplug the unit from the wall outlet before cleaning. Do not use liquid or aerosol cleaners.
- Do not use accessories not recommended in this manual as they may be hazardous.
- Power cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Pay particular attention to plugs and the point from which the cord exits the unit.
- Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage points or other hazards. Refer all servicing to qualified service personnel.

- When replacement parts are required, be sure the service technician has used replacement parts that are specified. Unauthorised substitutions may result in fire, electric shock or other hazards.
- Upon completion of any service or repairs to the unit, ask the service technician to perform operational checks to determine that the product is operating correctly.

## Handling the LCD panel

Do not press hard or jolt the LCD panel. It may cause the LCD panel glass to break and injury may occur.

If the LCD panel is broken, **do not** touch liquid in the panel.


If the liquid in the LCD panel is ingested, immediately gargle and consult with your doctor. Also, if the liquid gets in your eyes or touches your skin, consult with your doctor after rinsing for at least 15 minutes or longer with clean water.

## Contents

1. 1 x 7" LCD Monitor & DVD Player
2. 1 x RCA AV Cable
3. 1 x AC To DC Adapter
4. 1 x Vehicle DC Power Adapter
5. 1 x Remote Control

## B. About This Manual

The operations described mainly refers to the use of the remote control. Buttons with same or similar marking on the main unit have the same function as those on the remote control.

If the symbol  occurs on the screen during operation, the function requested is not supported by the media type inserted in the DVD player. The unit will play the following:

DVD-Video	<input checked="" type="checkbox"/>	DVD+RW	<input type="checkbox"/>
CD-R	<input checked="" type="checkbox"/>	DVD+R	<input type="checkbox"/>
CD-RW	<input checked="" type="checkbox"/>	DVD-ROM	<input type="checkbox"/>
CD Audio	<input checked="" type="checkbox"/>	MP3	<input checked="" type="checkbox"/>
Photo CD	<input checked="" type="checkbox"/>	DVD-RAM	<input type="checkbox"/>
DVD-RW	<input checked="" type="checkbox"/>	CD-G	<input type="checkbox"/>
DVD-R	<input checked="" type="checkbox"/>	HDCD	<input checked="" type="checkbox"/>

= YES     = NO

**Note:** Usually the unit plays CD-R, CD-RW and MP3 discs. But due to the variety of disc types, recording computers, operating systems and software for burning we cannot guarantee that every CD-R, CD-RW or DVD is playable within this unit.

### Please be aware of the following:

- This instruction manual explains the basic instruction of this unit.
- Some DVD discs have different functions that may not be explained in this instruction manual. You may need extra instructions. In this case, please follow the instructions displayed on the screen or jacket or case of the disc.
- The disc information takes priority in various settings.

- In this manual, the language in the on-screen display is English. If you change the language, please follow the selected language in the on-screen display.
- The screen shown as an example in this manual may be different from the actual screen.
- On-screen displays subject to change without notice.

Note: The types of functions and operations that can be used for a particular disc vary depending on the features of that disc. In some cases, these functions and operations may differ from the descriptions given in this Owner's Manual. In this event, follow the instructions given on the screen and on the sleeve of the disc.

## Region Management Information

 
This DVD player is designed and manufactured to respond to the region management information that is recorded on a DVD disc. If the region number described on the DVD disc does not correspond to the Region number of this DVD player, this DVD player cannot play this disc. The region number for this DVD player is '1'.



Please note that the program of a DVD may be divided into several 'titles' (e.g. main movie, bonus material, interviews etc.). Each of these titles can be divided into 'chapters'. The program of audio CD's is divided into "tracks".



Multiple languages



Multi-aspect



Multi-language subtitles




Multi-angle



Closed caption

## C. Desktop Base Installation

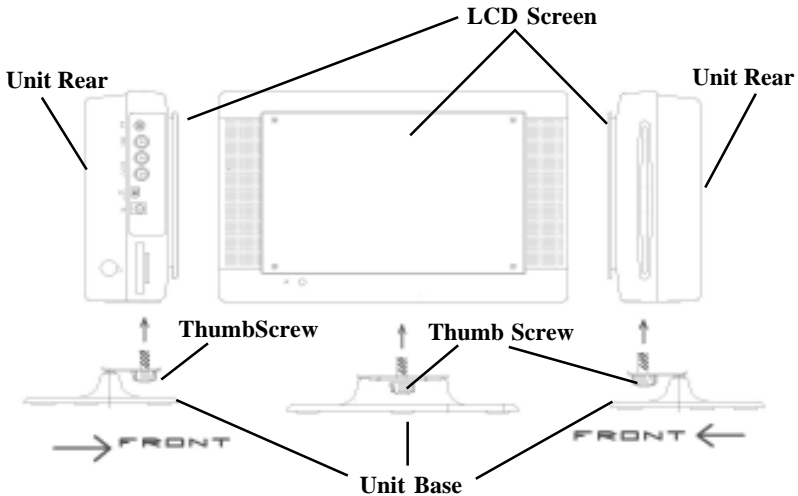

1. Place the tablet DVD player base on flat surface.
2. Align the thumb screw with the hole beneath the LCD Screen.
3. Thread the thumb screw into the hole beneath the LCD screen and turn the thumb screw counter-clockwise to tighten the base to the DVD player.

Note:

Referring to the illustration above, the thumb screw must be positioned facing the front of the DVD player or the unit will not be stable.

4. While holding the DVD player and the base, adjust the unit's swivel angle for a comfortable viewing position.





## D. Prior to Operation

- For setting up the unit please choose a location with sufficient air circulation to prevent overheating.
- The product must be positioned horizontally only. Do not place heavy objects on its housing.
- To protect the laser unit avoid dusty surroundings. If necessary, please use a cleaning disc carefully following its operating instructions.

- The unit was suddenly brought from a cold to a warm surrounding.  
=> Please take out the disc and wait for about an hour,  
until the unit has warmed up.
- The unit was operated in a very humid surrounding.  
=> Please choose a location with lower humidity.

- In order to keep the disc clean, never touch the shiny surface.
- Never place a sticker or adhesive label on the disc.

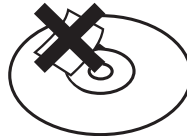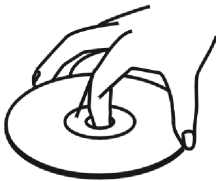

- Don't expose discs to direct sunlight or other heat sources.
- Please store the discs only in their sleeves.

## Cleaning a Disc

To clean a disc use a soft cloth without any cleaning agents. Only wipe from the center hole towards the outer edge, **never** in toward the center.




## Using the Remote Control Handset

1. The remote control uses a pre-installed Li-ion type battery. To prevent the battery from discharging, we've inserted an insulating strip. Please pull it out prior to first use.

If the remote control should begin to operate unreliably replace the battery with a new battery of the same type.

To replace the battery open the battery compartment. Push the retention clip in the direction of arrow and pull out the battery mounting.

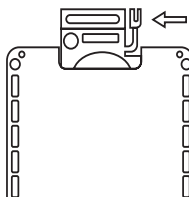


2. Before you remove the battery, remember the battery position. The '+' marking must face upwards, otherwise the remote control will not work and may be damaged. Replace the cover.



3. Please point the remote control towards the main unit when operating the buttons. The remote control works best with a distance less than 16 feet (5m) and in an angle of up to 45° center of the front of the unit. Obstacles between the remote control and infrared sensor will adversely affect operation of the remote control.


- **Batteries should disposed in an environmentally correct manner. . Never throw batteries into fire.**
- If the remote control is not to be used for an extended period of time, please remove the battery from the compartment to prevent damage by battery leakage.
- When replacing the battery, please observe the polarity. The '+' must face upwards.

# E. The Remote Control

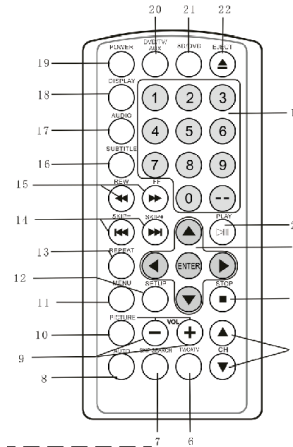

- |                  |   |
|------------------|---|
| 1. 0-9           | Numeric Buttons   |
| 2. PLAY/ PAUSE   | Starts play or pauses the playback  |
| 3. ◀▶▲▼ENTER     | Navigation keys to operate the menu. ENTER confirms the selection                                 |
| 4. STOP          | Stops DVD playback  |
| 5. CH+/-         | Selects previous or next channel while in TV mode   |
| 6. TV/CATV       | Selects the TV receiving mode (TV, IRC, HRC, STD)   |
| 7. SKIP SEARCH   | Skips channels that the user wishes not to view.  |
| 8. AUTO          | Automatically searches for TV channels  |
| 9. +/-           | Used with "PICTURE" function to increase or decrease the item you select or the volume up or down |
| 10. PICTURE      | Selects the picture adjust setting  |
| 11. MENU         | Provides access to On Screen Display (OSD)  |
| 12. SETUP        | Accesses the menus for basic setup  |
| 13. REPEAT       | Activates repeat mode   |
| 14. ◀▶▶▶SKIP +/- | Skips to previous/next chapter (DVD) or audio track (CD)  |
| 15. ◀◀▶▶REW, FF  | Speeds up playback backwards or forwards by 2x, 4x, 16x, up to 100 times normal speed             |
| 16. SUBTITLE     | Toggles the subtitle languages available  |
| 17. AUDIO        | Toggles DVD audio languages   |
| 18. DISPLAY      | Provides the elapsed playing time, subtitle, audio  |
| 19. POWER        | Turns the unit on or off  |
| 20. DVD/TV/AUX   | Selects signal from DVD/SD, TV and auxiliary equipment  |
| 21. SD/DVD       | Selects signal from DVD or SD card  |
| 22. EJECT        | Ejects the disk.  |

## F. DVD Player

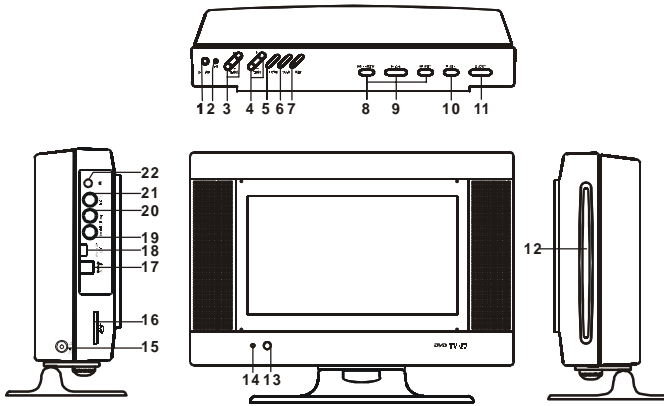

- |                          |                             |
|--------------------------|-----------------------------|
| 1. Power Button          | 12. Disk Slot               |
| 2. Program Button        | 13. IR Remote Sensor        |
| 3. Channel +/- Button    | 14. Power Indicated LED     |
| 4. Volume +/- Button     | 15. Cable Antenna Connector |
| 5. Picture Button        | 16. SD/MMC Slot (512 max)   |
| 6. TV/AV Button          | 17. DC 12V Input Jack       |
| 7. Wide Button           | 18. AV In/Out Switch        |
| 8. Previous/ Next Button | 19. Audio Right Jack        |
| 9. Play Button           | 20. Audio Left Jack         |
| 10. Stop Button          | 21. Video Jack              |
| 11. Eject Button         | 22. Headphone Jack          |

## G. Applying Power to the Unit


### a. Using AC adaptor

Connect the supplied AC adaptor.

AC adaptor

INPUT: AC 100 ~ 240V, 50/60Hz, 0.7A

OUTPUT: DC 12V, 1.5A

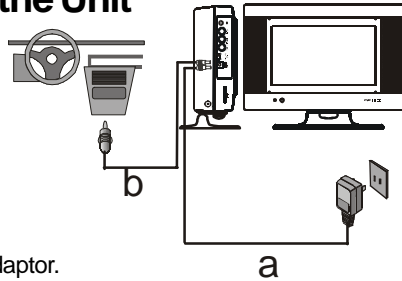

- Use the unit only the **supplied** AC adaptor.  
Use with non supplied AC adaptors may damage the unit.
- Do not touch the AC adaptor with wet hands. Doing so is dangerous which could result in an electric shock.
- Do not use with a voltage other than the voltages displayed. Improper voltage could cause fire, electrical shock, or damage.

### b. Using the vehicle DC power adaptor

Connect the supplied DC power adaptor to vehicle power outlet.

#### Vehicle DC Power Adaptor

INPUT: DC 12-16V

OUTPUT: DC 12-16V

#### Caution using the vehicle DC power adaptor:

- Use only the supplied DC power adaptor. Using other DC power adaptors could damage the unit.
- After use, disconnect the DC power adaptor plug from the unit and the vehicle power socket.
- The DC power adaptor may cause interference with reception from the car radio or another radio inside the vehicle. If this is the case, disconnect the DC power adaptor from the vehicle power socket, or use the radio located at a further distance from the vehicle power socket.



**After connecting the unit to power**, press the "POWER" button, and the logo picture will appear on the screen and the LED power indicator located on lower left front of the unit will be light.

## H. Connections


Although this unit has its own screen, the unit can also be connected to an external television set as well.

### 1. Playing a Video Game

- 1) Slide the AV in/out button to the "In" position.
- 2) Plug the AV output from your game system into the Audio L+ R and video input jack on the left side of the unit following the corresponding colors: (Audio Left = White, Audio Right = Red, Video = Yellow).
- 3) Press "DVD/TV/AUX" until the word "AUX" appears on the top right. Adjust the volume control and the brightness control on the top of the unit to your individual preference.

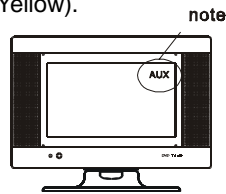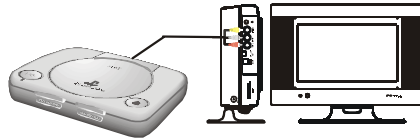

### 2. Connecting to a TV or another monitor

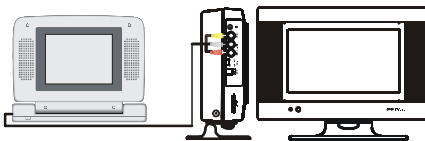

You can also connect the DVD player to a TV or monitor to enjoy high quality stereo.

- Insert each cable firmly into its designated jack.
- If your antenna uses 300-ohm twin lead cables, do not coil the cables. Also, keep the twin lead cables away from audio/video cables.

1) Connect the supplied AV (RCA) cables into the Audio L+ R and video input jack on the left side of the unit following the corresponding colors: (AudioLeft= White, Audio Right= Red, Video=yellow).


2) Connect the supplied AV cables on the other end to your TV. Match the cable by color code.

## I. Receiving TV Programs

1. Press “DVD/TV/AUX” until the word “TV” appears on the top right.

2. Press “AUTO”, the unit will search TV channels automatically.

3. After the channels are searched, you can use CH+/- to choose the channel you like.

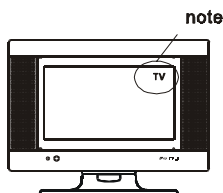

Note:

a. The picture and audio are not visible when searching channels.


b. If you don't like a channel, press “SKIP SEARCH”. The channel will not appear when you press “CH+/-”.

## J. Reading SD (Secure Digital) and MMC (Multimedia) Card

You can enjoy high-quality pictures, music and cinema stored in a SD card.

Note:

The maximum card size is 512Mb. A card size 1Gb or greater may result in abnormal operation.

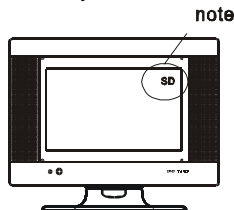

1. Press “DVD/TV/AUX” until the word “DVD” appears on the top right.

2. Press “SD/DVD” until the word “SD” appears on the screen display;

3. Insert the SD card into the SD slot on the left side of the unit and the unit will read it automatically.



4. Press the MENU button to switch between Music and Photos.

# K. Playing DVDs
 
## DVD Playback

1. Press “DVD/TV/AUX” until the word “DVD” appears on the top right of the screen.;

2. Insert the disk in the right side of the unit with label facing to you. Then the disk will be pulled into the unit and play will begin automatically.

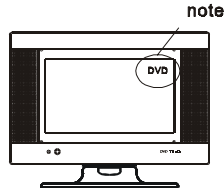


DVD discs will usually show a menu to choose from. Use the navigation buttons ◀▶▲▼ on the remote control.


Highlight the desired menu item and press the **ENTER** button to activate it. This starts the playback of the selected title.

To stop playback press the **STOP** button once. The screen shows “II”. The player will recall the location where playback was stopped.

Press the **PLAY** button to resume playback there. But if you press the STOP button again the unit will stop and not recall the last position of playback. The “resume play” is not supported by all discs.

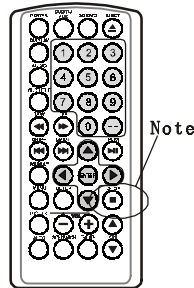

If this symbol appears on the screen during operation, the function requested is not supported by the media type inserted.

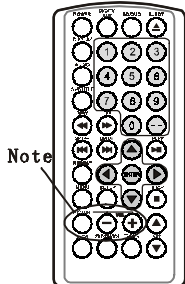









Volume: The Volume +/- is on the top of the unit. Press to adjust the volume.

Picture: the button is on the top of the unit. Press it to choose the item about picture you want to change. Then press Volume +/- to adjust it.



## Display


Press the "DISPLAY" button. The picture below will appear . You can change all the items (except ) in the table with ► ◀ and ENTER buttons if the functions are included in the disk.

Title Number		1/17
Chapter Number		2/32
Elapsed Time		0:01:45
Audio Language		1.ENG D 3/21
Subtitle Language		OFF
Angle		1/1
Audio Mode		Normal

## DVD Camera Angles

The movies on some DVDs have been recorded from various camera positions. This feature lets you enjoy the same scene from different perspectives. The function will be on the DVD case if it is available on the DVD .

When playing a DVD, that provides various camera angles, the different views are displayed simultaneously on the screen. Then press the **DISPLAY** button and choose the Angle. Press ENTER and press ► ◀ until the desired perspective is shown. The picture will be adjusted in 1 - 2 seconds. In the upper right corner you see the number of the current/maximum number of angles.

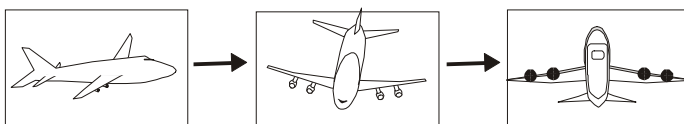


## Titles and Chapters

**During DVD playback** you can skip through the DVD to certain chapters. Press "DISPLAY" and enter



the desired chapter number directly. The playback will continue with that chapter. (Refer to the illustration to the right "Display Mode")

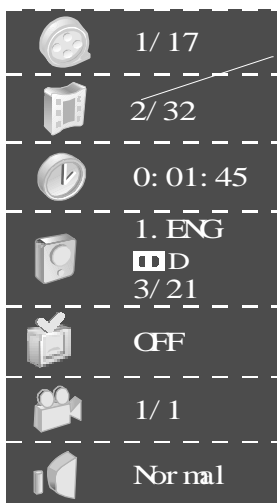


Enter the Chapter Number directly

## Skip & Search

Press **◀▶** to playback the beginning of the previous or next chapter (DVD) or audio track (CD).

To pause the DVD, press the **⏸** button. To protect the screen, a screen saver (a flying DVD symbol) appears after several minutes that picture is paused. Press this button again to resume normal playback.

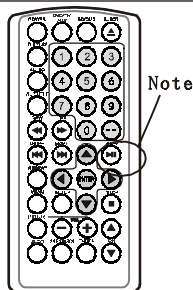


**Still Picture**

**◀▶** These buttons activate a backward and forward search mode. Depending on how often you press the button, playback speed increases to 2x, 4x, 16 or 100 times and the audio is muted. Press the PLAY button to resume playback at normal speed with audio.

## Playback Speeds [FF ►►][REW ◀◀]

 
Press the REW or FF (◀◀ ►►) buttons repeatedly to select the fast forward or reverse play speeds during playback. The display will change at the following speeds:



Press the PLAY button to return to normal play.



 Press the REPEAT button during playback. Each time the button is pressed, the repeat mode changes as per the illustration



## DVD

**Chapter:** Repeat of the chapter being played

**Title:** Repeat of the title being played

**All:** Repeat all

 
**Off:** Turn the repeat function off.

## CD

Track: Repeats the track being played

All: Repeat all tracks

Off: Turns the repeat function off.



## Change Soundtrack Language

During DVD playback press the **AUDIO** button to select a different audio language (if the DVD contains various audio languages).

## Change Subtitle Language

During DVD playback press the **SUBTITLE** button to select the language for subtitles (if the DVD contains subtitle languages) or to deactivate that function.

## DVD Menu

Pressing the **MENU** button of the remote control accesses the content menu of the DVD (if available). This may include various titles, bonus material and specials.

When playing other media, press the **ENTER** button, to access the content menu (if available). Press MENU again to resume playback in the same scene, where you first pressed MENU.

## Connecting Headphones


You can connect one set of headphones with a 3.5 mm jack to the earphone socket on the left side of unit. Plug the jack into the socket which will then disconnect the built in speakers.

### CAUTION:

When using headphones be **careful with your hearing**. Adjust the volume to comfortable levels before using the headphones. Using headphones with excessive volume may cause damage to your hearing.

## L. Playing CDs

During play back of an audio CD the following menu will appear:

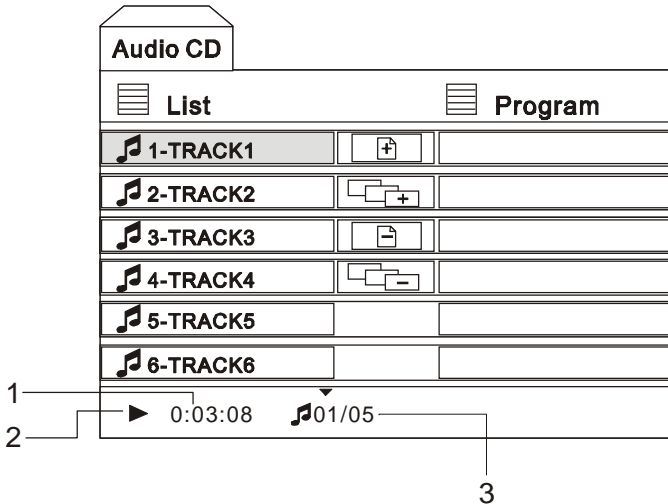

1. Current file elapsed playing time
2. Playing Mode: ▶, II, ■, ◀ and so on.
3. Current file/ Total number of files in the folder.

### USING THE REPEAT FEATURE


The default mode for the Repeat feature is OFF. Pressing REPEAT consecutively changes the repeat options:

- *Track-* repeats the track that is playing.
- *All-* repeats the disc that is playing.
- *Off*

The selected repeat option will play continuously until it is turned off.

## M. PLAYING MP3-CDs

MP3 is a format for storing digital audio. CD-quality songs are compressed into the MP3 format with very little loss of audio quality while taking up much less disc space. CD-R/RW discs that have been encoded in MP3 format are compatible with this system.

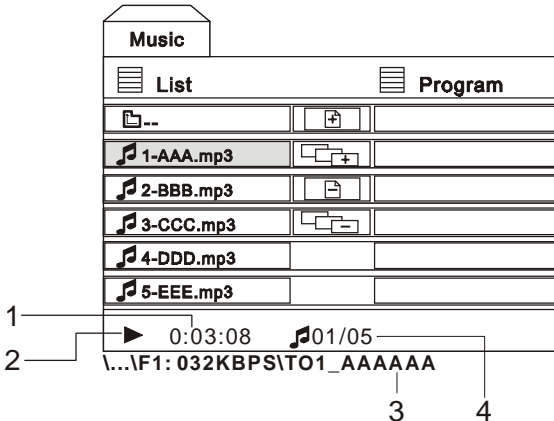

**MP3 Playback Display**

- 1. Current file elapsed playing time**
- 2. Playing Mode: ►, ||, ■, ◀ and so on.**
- 3. The current file's position.**
- 4. Current file/ Total number of files in the folder.**

- If the CD has both audio CD tracks and MP3 files, only the MP3 files will be played.
- MP3 files take at a minute to be read depending on its structure.
- The unit can recognize up to 256 files or folders per disc. A CD with 257 files or folders and over will function with this unit.
- MP3 CDs may not be played in their recorded order.
- Use MP3 software that can records data alphabetically or numerically.
- When composing MP3 files avoid creating subfolders when possible.

Note:

Some CD-R/RWs and MP3 CDs cannot be played back depending on how they were recorded.

## Limitations on display

- The following letters are available display: capital or small letters A through Z, “\_”(underscore), “-” (hyphen), and numbers 0 through 9.

Note:

- WMA files cannot be played back.

1. Load the MP3 CD with the label facing front.

A folder list appears on the screen.

2. Press the ▲ or ▼ button to select the desired folder.

- Press the ENTER button (or the ► button) to display a table of contents in the selected folder.

3. Press the ▲ or ▼ button to select the file to be played back.

4. Press the ENTER or PLAY ►|| button to start play.

5. To stop play, press the STOP ■ button.

6. Press the PAUSE ►|| button during play. “ || ” will appear on the screen.

7. Fast forwarding

Press the SKIP+ ►► button (or the NEXT ►► button on the unit) during playback to skip to the next file.

8. Skipping backward

Press the SKIP- ◀◀ button (or the PREVIOUS ◀◀ button on the unit) during playback to skip to the beginning of the previous file.

Note:

You can skip only within the selected folder.

9. Fast forwarding playback

Press the FF ►► or REW ◀◀ button repeatedly

to select the fast forward speed or reverse playback

speed. The display will change as per the following illustration:



Press ENTER or ►|| button to resume the normal play back.


## 10. USING THE REPEAT FEATURE

The default mode for the Repeat function is OFF. Pressing REPEAT consecutively will access the following repeat options:

- **Track**- repeats the track that is playing.
- **All**- repeats the disc that is playing.
- **Off**


*Program:*

You can edit the files in the “Program” Column with the items below:

“” means add the file in the original disk you select;

“” means add all files in present document of disk;

“” means delete the file in the “Program” Column you select;

“” means delete all files in “Program” Column;

## N. Playing JPEG Files

1. Load the JPEG CD with the label facing front.

A folder list appears on the screen.


2. Press the **▲** or **▼** button to select the desired folder.


• Press the ENTER button (or the **▶||** button) to display a table of contents of the selected folder.

• To return to the original folder from the sub-folder, press the **▲** button.


3. Press the **▲** or **▼** button to select the file to be played back.

4. **Play**

a. Press **▶** and choose “” using **▲** or **▼** button. Press ENTER to preview the picture you have selected.

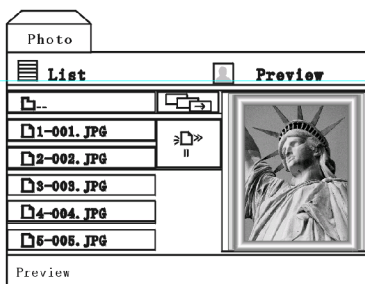



- b. Choose “  ” and press ◀ and ▶ to choose the speed of picture slide show.
- c. Press ENTER on the file you want to view and the unit will display the complete picture.



Note:

- a. “1/20” stands for the current file and total file number.
- b. Press “◀” one time to rotate the picture for 90 degrees counterclockwise and press “▶” to rotate the picture for 90 degrees clockwise.
- c. Press ▲ will return to the previous picture. Press ▼ will go to the next picture.
- d. Press ■ to stop playback.

## O. Initial Settings


Once the initial settings have been completed, the settings will be retained in the unit's memory until they are changed, even if the power to the unit is turned off.

### Setting "Language" page

1. Press the SETUP button. The setup screen and "LANGUAGE" appear. At the same time, "A" is highlighted.

Note:

To close the setup screen, press the SETUP button.

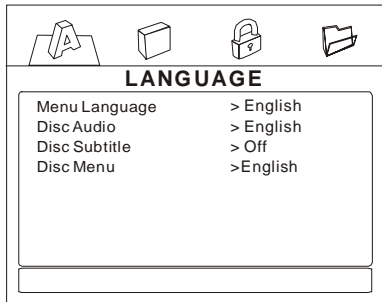

2. Press the ▼ button, "Menu Language" is highlighted.

3. Press the ▲ or ▼ button to select the other menus on language page.

4. Press ► to enter the sub menu.

5. Press the ▲ or ▼ button to select the sub menu and press the **ENTER** to confirm your selection.

6. Repeat steps 3 through 5 for other menus.

Note: Press ◀ to return the previous menu.

#### Menu Language:

Select the desired OSD/menu language.

#### Disc Audio:

Select the desired audio language.

**Disc Subtitle:**

Select the desired subtitle language.

Note: a. There are five languages to select from: English, French, Spanish, German and Japanese.

 
b. Not all disks have five languages for audio, subtitle and menu language.

**Disc Menu:**

Select the desired disk menu language.

**Setting "Display" page**

1. Press the SETUP button. The setup screen appears.



2. Press the ► button to select "▣". "DISPLAY" screen appears.

3. Press the ▼ button, "TV Aspect" is highlighted.


4. Press the ▲ or ▼ button to select the other menus in display page.

5. Press ► to enter the sub menu.

6. Press the ▲ or ▼ button to select the sub menu and press the ENTER to confirm your selection.

7. Repeat steps 4-6 for other menus.


Note: Press ◀ to return the previous menu.

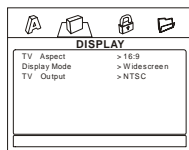**TV Aspect and Display Mode:**

Normal/PS (Panscan): 4:3

When the wide screen disc is played, the picture will be cropped to fill your TV screen. The left and right edges are cut off.

Cut off

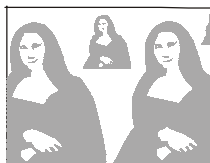

Normal/LB (Letterbox): 4:3

When the wide screen disc is played, black bands appear at the top and bottom of screen.



WIDE: 16:9

This setting is used with a wide screen TV set. Use "FULL" size.

(Setting the wide screen TV to "FULL" mode is also necessary.)




Note:

- The screen size may differ depending on the DVD discs.
- If you select "WIDE" to remove the black bands on screen when a wide screen disc is played, the picture may be slightly distorted.
- In some discs, even if "Normal/PS" is selected, the black bands may remain on the screen.

### Setting "Lock" page

 
1. Press the SETUP button. The setup screen appears.



2. Press the ► button to select "LOCK". "LOCK" screen appears.

3. Press the ▼ button, "Rating" is highlighted.

4. Press the ▲ or ▼ button to select the menu as follow.

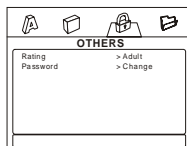

### DVD Ratings:

Some DVD discs contain a restriction level which enables parents to prevent playback of discs by children. This unit is equipped with a password designed to prevent children changing the level.

You cannot play DVD discs rated higher than the level you selected unless you change the level.

- 1 KID SAFE (Kid safe)
- 2 G (General audiences)
- 3 PG (Parental guidance suggested)
- 4 PG 13 (Parents strongly cautioned)
- 5 PGR (Parents very strongly cautioned)
- 6 R (Restricted)
- 7 NC-17 (No one 17 and under admitted)
- 8 ADULT (Adult)

When selecting the rating level, a message appears. Please follow the instructions displayed on the screen.

5. Press ► to enter “” page .

6. Enter the 4 digital password and press ENTER to confirm.

7. Press the ▲ or ▼ button to select the rating levels and press the ENTER to confirm your selection.

Note: a. If you forget your password, enter 3308.

b. DVD discs may or may not respond to the parental lock settings. Make sure this function works with your DVD discs.

 
### **Password:**


You can change the password according to the steps below

5. Press ► to enter “” page .

6. Enter the 4 digital old password and press ENTER to confirm.

Note: If you use this unit for the first time, enter “3308”.


7. Then enter new password input page “” and enter 4 other digital password you'd like.

8. Then enter “” window and enter the new password again. Press

ENTER to confirm and you have change the password successfully. Press the ▲ or ▼ button to select the rating levels and press the ENTER to confirm your selection.


### **Others:**

 1. Press the SETUP button. The setup screen appears.



2. Press the ► button to select “” . “OTHERS” screen appears.

3. Press the ▼ button, "Load Default" is highlighted.
  4. Press the ▲ or ▼ button to select the other menus in "OTHER" page.
  5. Press ► to enter the sub menu.
  6. Press the ▲ or ▼ button to select the sub menu and press the ENTER to confirm your selection.
  7. Repeat steps 3-5 for other menus.
- Note: Press ◀ to return the previous menu.

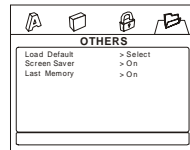

### **Load Default:**

This will return the unit to the default settings.

Note: The password doesn't change.

### **Screen Saver:**

\*On: screen saver enabled      \*Off: screen saver disabled

### **Last Memory:**

If you open the disc cover during playback and then close the disc cover with the (Memory: ON) function enabled playback will resume from the point where you stopped.

Note:

If the POWER switch is set to the OFF position, the memory recall function is disabled.

**Specifications:**

Model Number: FPE1078

**Ver: 00**

UPC number: 0-44476-02741-3

**Display Features**

Display type	TFT-LCD
Screen Size	7.7" (diagonal)
Aspect Ratio	16:9
Panel Resolution	480x240
Brightness	250 Cd/m <sup>2</sup>
Contrast ratio	200:1
Viewing Angle	110° (H) : 50° (V)
Backlight life	20,000 Hrs

**TV Reception:**

TV System	NTSC M
Channel CATV - UHF/VHF	181 channels
Antenna Impedance	75ohm
Connector type	F

**Audio**

Maximum Audio Output	3watt x 2
Total number of speakers	2

**Video Connections**

NTSC Analog TV Tuner	1
Composite Video Input	1 (Input/Output switchable)
Composite Video Output	1 (Input/Output switchable)

**Video Standards Supported**

Composite Video input	PAL/NTSC
RF	NTSC

**Audio Connections**

RCA Input(Red, White)	1
Headphone:(Variable/Fixed) (3.5mm)	1 (Variable)

## **Playback Media Compatibility**

Audio CD	YES
CD-R	YES
CD-RW	YES
DVD-R	YES
DVD-RW	YES
DVD-Video	YES
Picture CD	YES
VCD	YES
SVCD	YES
SD/MMC	YES*

## **Playable Format (Codec)**

MP3	YES 32 - 320Kbps
CD-DA	YES
VCD 1.1	YES
VCD 2.0	YES

## **Features**

Built-in DVD Player  
NTSC 181 Channel Cable/AIR tuner  
Removable Tilt/Swivel stand  
12VDC input for Car use  
User friendly remote and On Screen Display (OSD)  
Built-in Secure Digital (SD) and Multi-Media Card (MMC)\*  
MP3 playback on Disc and SD/MMC  
Photo Show on Disc and SD/MMC

## **Accessories in the box**

7.7" LCD/DVD unit  
1xRCA AV Cable  
1xAC/DC Adapter  
1x12V Car Adapter  
1x Remote Control  
Owners manual

\* - 512MB Max



**Power Requirements**

Power Source	100-240 VAC 50/60Hz 0.7~0.3A
Unit input power	12VDC 2.5A
Power ON consumption	13W

**Dimension (WxHxD)**

Unit W/stand	10.75 x 8.5 x 4.6 (in)
Unit W/O stand	10.75 x 7 x 3 (in)

**Weight (N.W.)**

Unit W/stand	4.2 (lb)
Unit W/O Stand	3.7 (lb)

**Warranty**

Parts & Labor	90 day
---------------	--------

**Environment**

Operating Temperature	41 - 95°F
Operating Humidity	10% - 95%



**AUDIOVOX**  
ELECTRONICS CORP.

## 90 DAY LIMITED WARRANTY

*Applies to Audiovox Video Products*

AUDIOVOX ELECTRONICS CORP. (the Company) warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within ninety (90) days from the date of original purchase, such defect(s) will be repaired or replaced with reconditioned product (at the Company's option) without charge for parts and repair labor. A game controller, if supplied, is similarly warranted for ninety (90) days.

To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address shown below.

This Warranty does not extend to the elimination of externally generated static or noise, to correction of antenna problems, to costs incurred for installation, removal or reinstallation of the product, or to damage to digital memory cards, discs, speakers, accessories, or electrical systems.

This Warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

U.S.A. : AUDIOVOX ELECTRONICS CORPORATION, 150 MARCUS BLVD., HAUPPAUGE,  
NEW YORK 11788 • 1-800-645-4994

CANADA : CALL 1-800-645-4994 FOR LOCATION OF WARRANTY STATION SERVING YOUR AREA

© 2005 Audiovox Electronics Corporation

128-5556E



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>