

 


**AUDIOVOX®**  
**ELECTRONICS CORP.**

# Operating Instructions

**Model FPE1087**

**8" LCD TV/DVD Player**

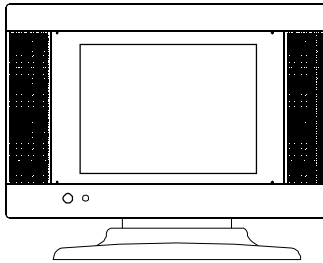

**For assistance, please call: 1-800-645-4994**

**Or Visit us at <http://www.audiovox.com>**



For Customer Service  
Visit Our Website At  
**[www.audiovox.com](http://www.audiovox.com)**  
Product Information, Photos,  
FAQs, Owner's Manuals

**128-7934**

*Thank you. . .*

*. . . for choosing this tablet DVD player. For your own safety and in order to learn all about the functions available, please read this manual and keep it for future reference.*

**Note:**

*An LCD panel and/or video monitor may be installed in a motor vehicle and visible to the driver if the LCD panel or video monitor is used for vehicle information, system control, rear or side observation or navigation. If the LCD panel or video monitor is used for television reception, video or DVD play, the LCD panel or video monitor must be installed so that these features will only function when the vehicle is in "park" or when the vehicle's parking brake is applied.*

*An LCD panel or video monitor used for television reception, video or DVD play that operates when the vehicle is in gear or when the parking brake is not applied must be installed to the rear of the driver's seat where it will not be visible, directly or indirectly, to the operator of the motor vehicle.*

**Note:**

*This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.*

## Table of Contents

A. Cautions and Warnings.....	04
B. Antistat Mat.....	05
C. Desktop Installation.....	08
D. Mount the unit on the wall.....	09
E. Prior to Operation.....	10
F. Remote Control.....	12
G. DVD Player.....	13
H. Power Supplies.....	14
I. Connections.....	15
J. Receiving TV Programs.....	16
K. Reading SD (Secure Digital) and MMC (Multimedia) Card . . . . .	16
L. Playing DVDs . . . . .	17
M. DVD Menu . . . . .	18
N. DVD Display . . . . .	18
O. Playing Audio CDs.....	20
P. Playing MP3 Disc.....	22
Q. Setup DD.....	24
R. Setup IV.....	27
S. Specifications.....	33

## A. Cautions and Warnings

All operation and maintenance instructions must be followed and warnings adhered to.

- Do not expose the unit to excessive moisture.
- Do not place objects filled with liquids, such as vases, on the unit.
- Do not use the unit where there are temperature extremes (below 41°F, 5°C or exceeding 95°F, 35°C).
- Adjust the volume to prevent damage to speakers.
- Sudden changes in the ambient temperature may cause condensation to form on the optical lens inside the unit. If this happens, remove the disc, and allow about 2 hours to pass and then proceed with normal operation.
- To ensure proper ventilation and proper operation, never cover or block the slots and openings with a cloth or other material.
- Keep the unit away from strong magnets, heating sources, sunlight, and excessive dust.
- Never allow objects of any kind or liquids to be pushed/spilled into the unit openings as they may come into contact with dangerous voltages.
- Unplug the unit from the wall outlet before cleaning. Do not use liquid or aerosol cleaners.
- Do not use accessories not recommended in this manual as they may be hazardous.
- Power cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Pay particular attention to plugs and the point from which the cord exits the unit.
- Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage points or other hazards. Refer all servicing to qualified service personnel.

- When replacement parts are required, be sure the service technician has used replacement parts that are specified. Unauthorised substitutions may result in fire, electric shock or other hazards.
- Upon completion of any service or repairs to the unit, ask the service technician to perform operational checks to determine that the product is operating correctly.

## **Handling the LCD panel**

Do not press hard or jolt the LCD panel. It may cause the LCD panel glass to break and injury may occur.

If the LCD panel is broken, **do not** touch liquid in the panel.

Also, if the liquid gets in your eyes or touches your skin, consult with your doctor after rinsing for at least 15 minutes or longer with clean water.

1. 1 x 8" LCD Monitor & DVD Player
2. 1 x RCA AV Cable
3. 1 x AC To DC Adapter
4. 1 x Vehicle DC Power Adapter
5. 1 x Remote Control
6. 1 x Base

## B. About This Manual

The operations described mainly refers to the use of the remote control. Buttons with same or similar marking on the main unit have the same function as those on the remote control.

If the symbol (Ⓜ) occurs on the screen during operation, the function requested is not supported by the media type inserted in the DVD player. The unit will play the following:

DVD-Video	<input checked="" type="checkbox"/>	DVD+RW	<input checked="" type="checkbox"/>
CD-R	<input checked="" type="checkbox"/>	DVD+R	<input checked="" type="checkbox"/>
CD-RW	<input checked="" type="checkbox"/>	DVD-ROM	<input type="checkbox"/>
CD Audio	<input checked="" type="checkbox"/>	MP3	<input checked="" type="checkbox"/>
Photo CD	<input checked="" type="checkbox"/>	DVD-RAM	<input type="checkbox"/>
DVD-RW	<input checked="" type="checkbox"/>	CD-G	<input type="checkbox"/>
DVD-R	<input checked="" type="checkbox"/>	HDCD	<input checked="" type="checkbox"/>

= YES     = NO

**Note:** Usually the unit plays CD-R, CD-RW and MP3 discs. But due to the variety of disc types, recording computers, operating systems and software for burning we cannot guarantee that every CD-R, CD-RW or DVD is playable within this unit.

### Please be aware of the following:

- This instruction manual explains the basic instruction of this unit.
- Some DVD discs have different functions that may not be explained in this instruction manual. You may need extra instructions. In this case, please follow the instructions displayed on the screen or jacket or case of the disc.
- The disc information takes priority in various settings.

- In this manual, the language in the on-screen display is English. If you change the language, please follow the selected language in the on-screen display.
- The screen shown as an example in this manual may be different from the actual screen.
- On-screen displays subject to change without notice.


Note: The types of functions and operations that can be used for a particular disc vary depending on the features of that disc. In some cases, these functions and operations may differ from the descriptions given in this Owner's Manual. In this event, follow the instructions given on the screen and on the sleeve of the disc.


## Region Management Information


This DVD player is designed and manufactured to respond to the region management information that is recorded on a DVD disc. If the region number described on the DVD disc does not correspond to the Region number of this DVD player, this DVD player cannot play this disc. The region number for this DVD player is '1'.




Please note that the program of a DVD may be divided into several 'titles' (e.g. main movie, bonus material, interviews etc.). Each of these titles can be divided into 'chapters'. The program of audio CD's is divided into "tracks".

 Multiple languages

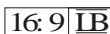
 Multi-aspect

 Multi-language subtitles

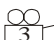 Multi-angle

 Closed caption

## C. Desktop Base Installation

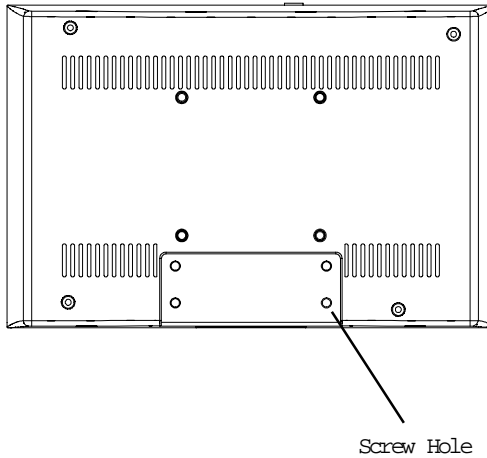 


### Unit Base

1. Place the tablet DVD player base on flat surface.
2. Align the thumb screw with the hole on the back of the DVD player .
3. Thread the thumb screw into the hole on the back of the DVD player and turn the thumb screw clockwise to tighten the base to the DVD player .
4. While holding the DVD player and the base , adjust the unit 's swivel angle for a comfortable viewing position.



## D. Mount the unit on the wall

 The unit can be easily be mounted on the wall. You will need an optional VESA75 Wall Mount Bracket. The VESA75 Wall Mount Bracket can be purchased at most local electronic retailers. The rear of the unit contains four screw holes (Refer to figure below). The VESA75 Wall Mount Bracket is attached to the back of the unit with four screws (M4x6 or M4x8). Follow the instructions supplied with the VESA75 Wall Mount Bracket to complete the installation.

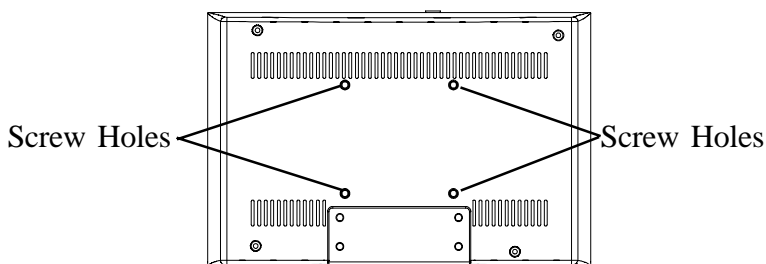

## E. Prior to Operation

### Place in Position

- For setting up the unit please choose a location with sufficient air circulation to prevent overheating.
- The product must be positioned horizontally only.
- Do not place heavy objects on its housing.
- To protect the laser unit avoid dusty surroundings. If necessary, please use a cleaning disc carefully following its operating instructions.

 
 
### Moisture Condensation

In some cases water may condense on the laser lens causing a malfunction:

- The unit was suddenly brought from a cold to a warm surrounding.  
=> Please take out the disc and wait for about an hour, until the unit has warmed up.
- The unit was operated in a very humid surrounding.  
=> Please choose a location with lower humidity.

### Handling Disc's

- In order to keep the disc clean, never touch the shiny surface.
- Never place a sticker or adhesive label on the disc.

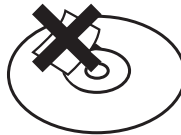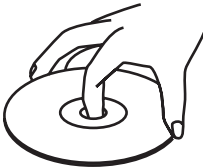

- Don't expose discs to direct sunlight or other heat sources.
- Please store the discs only in their sleeves.

## Cleaning a Disc

 
To clean a disc use a soft cloth without any cleaning agents. Only wipe from the center hole towards the outer edge, **never** in toward the center.




## Using the Remote Control Handset

1. The remote control uses a pre-installed Li-ion type battery. To prevent the battery from discharging, we've inserted an insulating strip. Please pull it out prior to first use.

If the remote control should begin to operate unreliably replace the battery with a new battery of the same type. To replace the battery open the battery compartment. Push the retention clip in the direction of arrow and pull out the battery mounting.

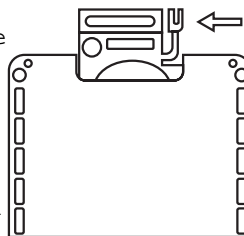

 
2. Before you remove the battery, remember the battery position. The '+' marking must face upwards, otherwise the remote control will not work and may be damaged. Replace the cover.

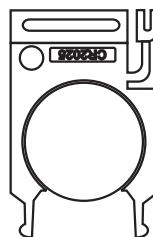

3. Please point the remote control towards the main unit when operating the buttons. Obstacles between the remote control and infrared sensor will adversely affect operation of the remote control.

- **Batteries should be disposed in an environmentally correct manner. Never throw batteries into fire.**
- If the remote control is not to be used for an extended period of time, please remove the battery from the compartment to prevent damage by battery leakage.
- When replacing the battery, please observe the polarity. The '+' must face upwards.


## F. The Remote Control

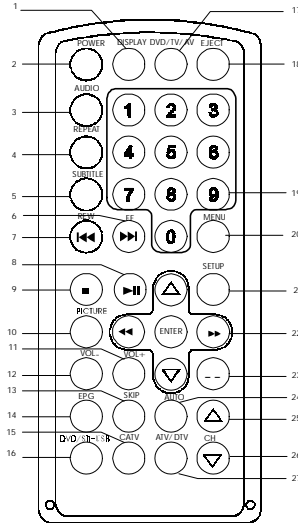 

- |                |  |
|----------------|--|
| 1. DISPLAY     | Provides the elapsed playing time, subtitle, audio   |
| 2. POWER       | Turns the unit on or off   |
| 3. AUDIO       | Toggles DVD audio language   |
| 4. REPEAT      | Activates repeat mode  |
| 5. SUBTITLE    | Toggles the subtitle languages available   |
| 6. NEXT        | Go to the next chapter, track or scene during play back  |
| 7. PREVIOUS    | Go back to the previous chapter, track or scene during play back   |
| 8. PLAY/PAUSE  | Starts play or pauses the playback   |
| 9. STOP        | Stops DVD playback   |
| 10. PICTURE    | Selects the picture adjust setting   |
| 11. VOL+       | The Volume up  |
| 12. VOL-       | The Volume down  |
| 13. SKIP       | Skips channels that the user wishes not to view  |
| 14. EPG        | The electronic programming guide displays the list of available channels and the corresponding channel information (start time, end time, program title, program description) in the digital mode. |
| 15. CATV       | Switch between the ATV AIR and ATV CABLE-STD/SRC/IRC   |
| 16. DVD/SD-USB | Selects signal from DVD or SD-USB  |
| 17. DVD/TV/AV  | Selects signal from DVD, TV, AV.   |
| 18. EJECT      | Ejects the disc  |
| 19. 0-9        | Numeric Buttons  |
| 20. MENU       | Brings up the DVD player's menu  |
| 21. SETUP      | Accesses the menus for basic setup   |
| 22. ENTER ▲ ▼  | Navigation keys to operate the menu. Speeds up playback forwards or backward by 2x, 4x, 8x, 16x up to 32 times normal speed (DVD), Enter confirms the selection                                    |
| ◀▶▶▶           |  |

- 23. -- In the analog mode, Press -- Button to select the (-/--/---)mode, then press number button to select the channel you liked. In the digital mode, If you want to select 5-2 channel, you can press 5,--,2 buttons in order.
- 24. AUTO Search for channels automatically.
- 25. CH+ Selects next channel while in TV mode
- 26. CH- Selects previous channel while in TV mode
- 27. ATV/DTV Switch between the DTV and ATV.

## G. DVD Player

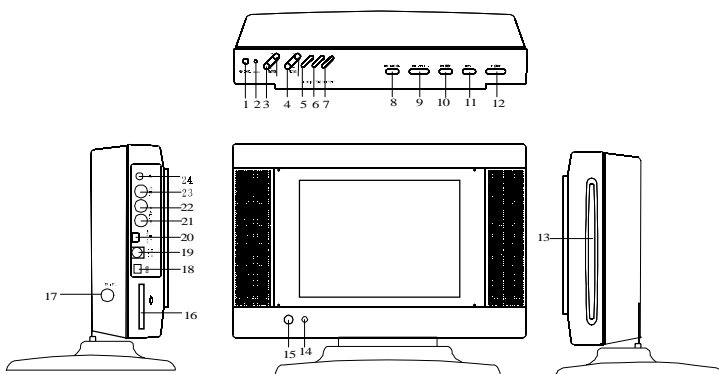 

- |                       |                             |
|-----------------------|-----------------------------|
| 1. Power Button       | 13. Disk Slot               |
| 2. Program Button     | 14. Power Indicated LED     |
| 3. Channel +/- Button | 15. IR Remote Sensor        |
| 4. Volume +/- Button  | 16. SD Slot                 |
| 5. Picture Button     | 17. Cable Antenna Connector |
| 6. TV/AV/DVD Button   | 18. USB Jack                |
| 7. DTV/ATV Button     | 19. DC 12V Input Jack       |
| 8. Previous Button    | 20. AV In/Out Switch        |
| 9. Play/Pause Button  | 21. Audio Right Jack        |
| 10. Next Button       | 22. Audio Left Jack         |
| 11. Stop Button       | 23. Video Jack              |
| 12. Eject Button      | 24. Headphone Jack          |


## H. Power Supplies
 
### a. Using AC adaptor

Connect the supplied AC adaptor.

INPUT: AC 100 ~ 240V, 50/60Hz, 0.4A

OUTPUT: DC 12V, 1.7A

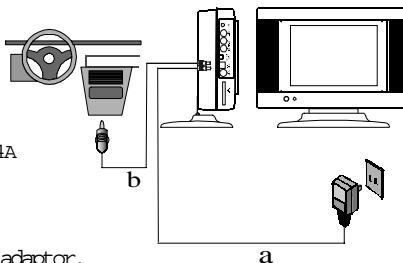

- Use this unit only the **supplied** AC adaptor.

Use with other AC adaptors may damage the unit.

- Do not touch the AC adaptor with wet hands. Doing so is dangerous, as this could result in an electric shock.
- Do not use with a voltage other than the voltage displayed. Improper voltage could cause fire, electrical shock, or damage.

### b. Using cigarette lighter adaptor

Connect the supplied DC power adaptor to vehicle power outlet.

#### Vehicle DC Power Adaptor

INPUT: DC 12-14V

OUTPUT: DC 12-14V

#### Caution on the cigarette lighter adaptor:

- Use only the supplied DC power adaptor. Using other DC power adaptors could damage the unit.
- After use, disconnect the cigarette lighter adaptor plugs from both this unit and the vehicle power socket.
- The DC power adaptor may cause interference with reception from the car radio or another radio inside the vehicle. If this is the case, disconnect the DC power adaptor from the vehicle power socket, or use the radio located at a further distance from the vehicle power socket.

#### Traffic safety:

- Do not use while operating a motorized vehicle. It may create a traffic hazard and is illegal in many areas.

**After connecting the unit to power**, press "POWER" button, and the logo picture will appear on the screen and the LED power indicator located on lower left front of the unit will be light.

## I. Connections

 
 
Although this unit has its own screen, you can connect it to an external television set as well.

### 1. Playing a Video Game


- 1) Slide the AV in/out switch to the "In" position.
- 2) Plug the AV output from your game system into the Audio L+ R and video input jack on the left side of the unit with corresponding color:

(Audio Left= White, Audio Right= Red, Video=yellow).

- 3) Press "DVD/TV/AV" until the word "AV" appears on the top right; Adjust the volume control and the brightness control on the top of the unit to your individual preference.

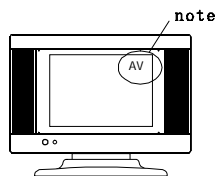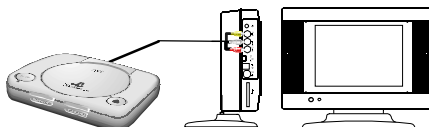

### 2. Connecting to a TV or another monitor

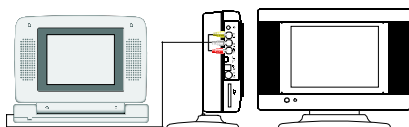 

You can also connect the DVD player to a TV or monitor to enjoy high quality stereo.

- Slide the AV in/out switch to the "Out" position
- Insert each cable firmly into its designated jack.
- If your antenna uses 300-ohm twin lead cables, do not coil the cables. Also, keep the twin lead cables away from audio/video cables.

- 1) Connect the supplied AV (RCA) cables into the Audio L+ R and video jack on the left side of the unit following the corresponding colors: (Audio Left= White, Audio Right= Red, Video=yellow).
- 2) Connect the supplied AV cables on the other end to your TV. Match the cable by color code.

## J. Receiving TV Programs

1. Connect the External antenna to the Cable Antenna Connector on the left side of the unit.

2. Press "TV/AV/DVD" until the word "TV" appears on the top right.

2. Press "AUTO", the unit will search TV channels automatically.

 
3. Press DIV/ATV button to select the mode what you want.

4. Press "AUTO" in remote control or "Program" on the unit, the unit will search TV channels automatically.

5. After the channels are searched, you can use CH▲ or ▼ to choose the channel you like.

Note:

- a. The picture and audio are not visible when searching channels.
- b. If you don't like a channel, press "SKIP SEARCH". The channel will not appear when you press "CH▲ or ▼".

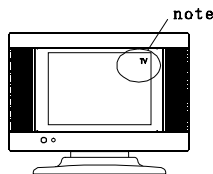

## K. Reading SD (Secure Digital) and MMC (Multimedia) Card/MS

You can enjoy high-quality pictures, music and cinema stored in an SD card.

Note:

The maximum card size is 2GB.

 
 
1. Press "TV/AV/DVD" until the word "DVD" appears on the top right.
2. Insert the SD card (with the label side faced to you) into the SD slot on the left side of the unit and the unit will read it automatically.
3. Press "DVD/SD-USB" button to switch between SD screen and DVD screen.
4. Press the▲ and▼ button to switch between Music and Photo.
5. Then pull out the SD card for exit.



# I. Playing DVDs

## DVD Playback


1. Press "TV/AV/DVD" until the word "DVD" appears on the top right of the screen. ;
2. Insert the disk in the right side of the unit with label facing to you. Then the disk will be pulled into the unit and play will begin automatically.

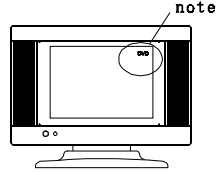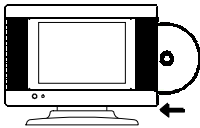


DVD discs will usually show a menu to choose from. Use the navigation buttons ◀▶▲▼ on the remote control.

Highlight the desired menu item and press the **ENTER** button to activate it. This starts the playback of the selected item.

 To stop playback press the **STOP** button once. The screen shows "Press Play key to continue". The player will recall the location where playback was stopped. Press the **PLAY** button to resume playback there. But if you press the **STOP** button again the unit will stop and not recall the last position of playback. The "resume play" is not supported by all discs.

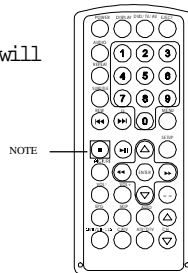

 If this symbol appears on the screen during operation, the function requested is not supported by the media type inserted.

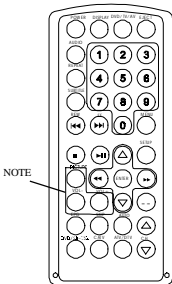

### PICTURE ADJUSTMENT

Picture: Cycle through picture adjustments  
Brightness, Contrast, Tint, Color, Sharpness  
and Recall.

Vol - : Decrease picture adjustment

Vol + : Increase picture adjustment

**NOTE:** Button located on Remote and top of unit

 
## M. Menu

A DVD is divided into sections called titles and chapters. When you play a DVD, a root menu of the disc will appear on the screen of your TV or Monitor. The contents of the menu vary from disc to disc. Press MENU during playback to display the menu. Some DVDs only allow you to select disc playback options using the DVD root menu.

## N. Display

### 1. PLAYING TIME AND REMAINING TIME

During playback press the 'DISPLAY' button to display the following:

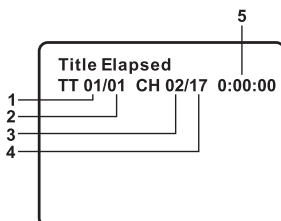

### Title, Chapter Number, and Time Screen Display

 
Title Elapsed: The elapsed time of the title

Title Remain: The remaining time of the title

Chapter Elapsed: The elapsed time of the chapter


Chapter Remain: The remaining time of the chapter

Display Off: The DVD's time information will not be displayed.



## 2. SUBTITLE

 During disc playback press 'SUBTITLE' to select the subtitle language you desire\*, with the current Subtitle Language Number (1) and the total Number of Subtitle Languages (2) displayed. If there are multiple languages press 'SUBTITLE' again to select another subtitle language. To turn subtitles OFF, press the 'SUBTITLE' button until 'Subtitle Off' is displayed. The Subtitle display will disappear automatically if the 'SUBTITLE' button is not pressed again within 3 seconds.

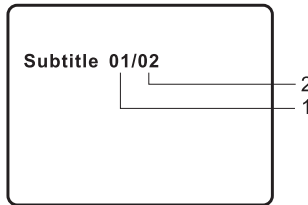


**Subtitle Screen Display**

\* Some DVDs only allow access to this function through the DVD menu

## 3. AUDIO

 During playback press 'AUDIO' to select the audio language you desire\*, with the current Audio Channel Number (1) and the total number of Audio Channels (2) displayed. Press AUDIO again to select another audio language. The audio display will disappear automatically if the 'AUDIO' button is not pressed within for 3 seconds.

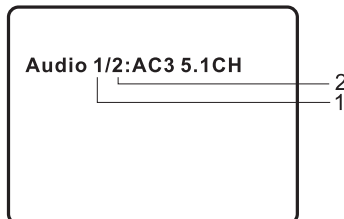

**Audio Language Screen Display**

\* Some DVDs only allow access to this function through the DVD menu.

#### 4. REPEAT

 
During playback each time 'REPEAT' is pressed, the following modes will become available.

Chapter: Repeat the current chapter


Title: Repeat the current title

All: Repeat all chapters and titles

Off: Resume normal playback

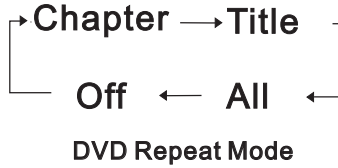

 
The 'Chapter' repeat display shows below for example:

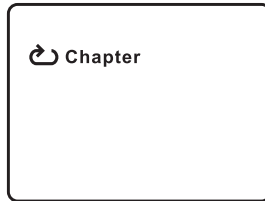

Chapter Repeat Screen Display

## O. Playing Audio CDs

 When playing an audio CD press the DISPLAY button repeatedly on the remote to view time information. The options below appear on screen display circularly to show you what information is available using this function.



### CD Display Mode

Single Elapsed: The current track playing and playing time of that track will display on the screen.

 
Single Remain: The current track playing and the amount of time left.

Total Elapsed: The current track playing and the total time that the CD has been playing.

Total Remain: The current track playing and the amount of time remaining on the CD.

Display Off: The CD time Information will not be displayed.

Take 'Single Elapsed' display as a example:

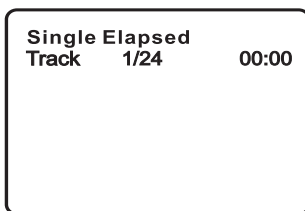

**Single Elapsed Screen Display**

#### **USING THE REPEAT FEATURE**

 
The default mode for the Repeat feature is OFF. Pressing 1/ALL REPEAT consecutively changes the repeat options:

- *Track*- repeats the track that is playing.
- *All*- repeats the disc that is playing.
- *Off*

As you toggle through the options, the repeat option changes. The selected repeat option loops repeatedly until you turn it off.

## P. Playing MP3 Discs

MP3 is a format for storing digital audio. An audio CD-quality song is compressed into the MP3 format with very little loss of audio quality (192Kbps min) while taking up much less disc space. CD-R /RW discs that have been encoded in MP3 format are compatible with this system.

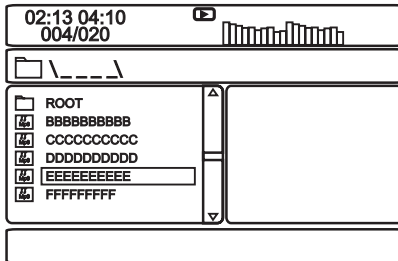

**MP3 MENU Screen Display**

When an MP3 disc is inserted into the unit, the menu screen appears automatically. You can use the menu screen to select your desired folders and songs or the system plays the songs in the order they were burned onto the disc.

1. Press the **▲** or **▼** button to choose a folder from the folder list on the left side of the screen.
2. Press **ENTER** to select the highlighted folder. The songs available under the folder will be listed.
3. Use **▲** or **▼** button to choose a song from the list. Press **ENTER** to select and begin playback of the highlighted song.

4. Use the **▶▶** ( NEXT ) button to move to the next song. Press the **◀◀** (PREVIOUS) button to move to the beginning of the previous song.

#### USING THE REPEAT FEATURE

The default mode for the Repeat feature is OFF. Pressing REPEAT consecutively changes the repeat options:

- Repeat One (repeat playback of a song)
- Repeat Folder (repeat playback of a specific folder)
- Repeat Off (normal playback)

As you toggle through the options, the repeat mode changes. The selected repeat mode loops repeatedly until you turn it off.

#### NOTICE

- " " icon in front of a file name indicates that this is a folder, not an MP3 file.
- "MP3" icon in front of a file name indicates that this is an MP3 file.

#### Note:

Due to the company's policy of constant improvement and technical refinement, the company reserves the right to change or alter software.

## Q. Setup DVD

### 1. General Setup Page

- 1) With no disc inside the player, press 'SETUP' to display the Main screen of the Setup Menu. The "General Setup Page" will also appear. At the same time, "General Setup" is highlighted. Press 'SETUP' again to exit the Setup Menu.
- 2) Press the ENTER button, "TV Display" is highlighted.
- 3) Press the ▲ or ▼ button to select the other menus in general setup page.
- 4) Press ►► to enter the sub menu.
- 5) Press the ▲ or ▼ button to select the sub menu and press the ENTER to confirm your selection.
- 6) Repeat steps 3-5 for other menus.

Note: Press ◀◀ to return the previous menu.

#### a) TV Display

- \* Normal/PS: When the player outputs signal to a normal TV, a normal picture is shown on the full screen.
- \* Normal/LB: When the player outputs signal to a normal TV, a normal picture is shown on the screen with a black strip at both the top and bottom of the screen.
- \* Wide: When the player outputs signal to a wide screen TV, a wide picture is shown on the full screen.

#### b) Angle Mark

- \* On: The screen will show the angle mark icon. (\*If an angle option is available).
- \* Off: The screen will not display the Angle Mark

**NOTE:** Not all discs contain above features. The above features are disc dependent.



c) **Screen Saver**

\*On: Enables screen saver


**\*NOTE:** The DVD player will enter the Screen Saver mode after approximately five minutes if the same image remains on the screen. \*Off: Disables screen saver (off)

d) **Last Memory**

\*On: The unit will return to the last position on the disc.

\*Off: The unit will not return to the last position on the disc.


## 2. Password

In Setup menu, Press the ◀◀ or ▶▶ button to select "Password Setup Page" and  is highlighted. Press ENTER to enter the password page.

Press ENTER twice to enter the Password Change Page. Input the Old Password or the Default Password, the New Password, and Confirmed the New Password. Press ENTER to confirm the change.

**Note:** The default password is 3308.

#### 4. Preference Page

- 1) In Setup menu, Press the ◀◀ or ▶▶ button to select "Preference Page" and  is highlighted. Press ENTER to enter the preference page.
- 2) Press the ENTER button, "Audio" is highlighted.
- 3) Press the ▲ or ▼ button to select the other menus in preference page.
- 4) Press ▶▶ to enter the sub menu.
- 5) Press the ▲ or ▼ button to select the sub menu and press the ENTER to confirm your selection.
- 6) Repeat steps 3-5 for other menus.

Note: Press ◀◀ to return the previous menu.

##### a) Audio

##### b) Subtitle

##### c) Disc Menu

**Note:** Language and subtitle selection is only available for discs that are recorded in the above listed languages. If the selected language is not available, the player will play and display on the screen the original recorded language contained in the disc.

##### d) Parental

Select 'Parental' using the ▲ and ▼ button, then press ▶▶ to enter the submenu. Select the parental level you desire using ▲ and ▼ the button for discs with lock-out function or multiple rating levels. These are listed from the lowest level (1 Kid Safe) to the highest level (8 Adult). Press ENTER and input 4 digit password, then press ENTER again to confirm the parental level setting.

**NOTE:** The level of 8 Adult is the factory default.

##### e) Default

Select 'Default' using the ▲ and ▼ button, then press ▶▶ to enter the submenu. Press ENTER to make the setting return to the factory set mode.

**NOTE:** The parental setting is not affected by the default reset function.

**NOTE:** The Default Password is **3308**. This password is always effective even after you have selected your own password and changed it. To avoid the possibility of others using the default password to set the parental level and change the password, you can record this default password in another area and delete it from this manual. Some discs can be limited depending on the age of users while some discs cannot.

## R. Setup TV

Power on the TV and press the menu button to display the setup menu. The menu will automatically disappear after being inactive for ten seconds. Press menu button to exit setup menu.

### Screen Format

Using Up/Down button to select the Screen Format item and press Enter button to select Auto mode and 16:9 mode

MENU	
Screen Format	Auto ...
Time	<input checked="" type="checkbox"/>
Closed Caption	<input checked="" type="checkbox"/>
V-Chip	<input checked="" type="checkbox"/>
Transparent	on ...

### Time

Using the Up/Down button to select the Time item and press Enter to access Time menu.

MENU	
Time Zone	Mountain ...
Sleep	Off ...

Time zone: Press enter button select from Hawaii, Atlantic, Eastern, Central, Mountain, Pacific, Alaska.

Sleep: Press enter button to choose the 10minutes, 20 minutes, 30minutes, 60 minutes, 120 minutes and off selection.

For example: When you select the 10 minutes, the TV will automatically power off after 10 minutes.

Note: Press left button once to return to the setup menu, twice to exit setup menu.

## Closed Caption

Using the Up/Down button to select the Closed Caption item and press Enter to access Closed Caption.

Caption: You can select the Caption ON/OFF/ON MUTE for the TV Program.

MENU	
<u>Caption</u>	On Mute ...
Mode	<input checked="" type="checkbox"/>
Options	<input checked="" type="checkbox"/>

Note: The Caption Function is helpful for those people with hearing difficulties.

Mode: Displays the menu in an analog or digital manner.

MENU	
<u>Analog Type</u>	Text2 ...
Digital Type	Service1 ...

 
Options: Option include (font size, font style, fore color, back color, fore opacity, back opacity). Press the Up/Down button to select the option, then press Enter button to access the option.

MENU	
Font Size	Standard ...
Font style	Style4 ...
Fore Color	Red ...
Back Color	Red ...
Fore Opacity	Flashing ...
Back Opacity	Translucent ...

Note: Press ◀ button once to return to the setup menu, twice to exit setup menu.

## V-Chip

Using the Up/Down button to select the V-Chip item and press Enter to access V-Chip. Then input the 0000 password to Enter the V-Chip lock Menu. (The default password is 0000).

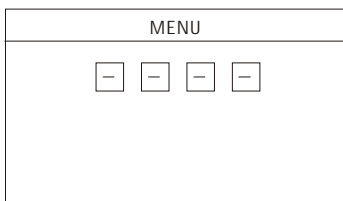

MENU	
V-Chip Lock	On ...
Parent Guide	<input checked="" type="checkbox"/>
MPAA Rating	<input checked="" type="checkbox"/>
Canadian English C ...	
Canadian French G ...	
Change PIN	<input checked="" type="checkbox"/>

## V-Chip Lock

You can press ▶▶ button to select the V-Chip Lock ON or OFF.

## Parent Guide

Press the ►► button to enter the Parent Guider Menu. You can lock the TV Program in this menu. Press the Left/Right /Up/Down button to select the rating that you want to lock or unlock and press Enter to confirm.

 
MENU	
	ALL FV D L S V
TV-Y	<input type="checkbox"/>
TV-Y7	<input type="checkbox"/>
TV-G	<input type="checkbox"/>
TV-PG	<input type="checkbox"/>
TV-14	<input type="checkbox"/>
TV-MA	<input type="checkbox"/>

TV-Y	All children
TV-Y7	Directed to older children
TV-G	General audience
TV-PG	Parental guidance suggested
TV-14	Parents strongly cautioned
TV-MA	Mature audience only

ALL	All Content
FV	Fantasy Violence
D	Sexually Suggestive Dialog
L	Adult Language
S	Sexual Situation
V	Violence

## MPAA Rating

Press the ►► button to enter the MPAA Rating Menu. You can lock the movie Program in this menu. Press the Up/Down button to select the rating that you want to lock or unlock and press Enter to confirm.

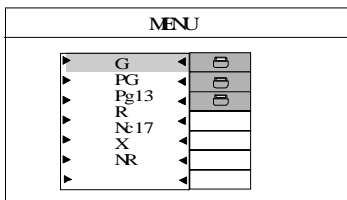

G	General audience
P G	Parental guidance suggested
PG-13	Parents strongly cautioned
R	Restricted
NC17	No one 17 and under admitted
X	Adult audience only
NR	Not available

## Canadian Ratings

You can use the ►► button to select the Lock rating in Canadian English as below:

C	Children
C8+	Children over 8 years
G	General
P G	Parental Guidance
14+	Over 14 year
18+	Adults
NA	Not Available

## Canadian Ratings

You can use the ►► button to select the Lock rating according to Canadian standards as shown below:

G	General
8ANS+	General but inadvisable for young children
13ANS+	Over 13 years
16ANS+	Over 16 years
18ANS+	Over 18 years
NA	Not Available

## Change PIN

Enter the old (or default) password, then enter the new password in the spaces provided. The default password is 0000.

Note: Press left button once to return to the setup menu, twice to exit setup menu.

## Transparent

Using the Up/Down button to select the Transparent item and press Enter button to select between on/off selection. The menu display will change between the transparent and opaque.



**P. Specifications:**

**TV Reception**

TV System	NTSC M/ATSC
Channel CATV - UHF/VHF	181 channels
Antenna Impedance	75ohm
Connector type	F

**Audio**

Maximum Audio Output	1.5watt x 2
Total number of speakers	2

**Video Connections**

	<b>Quantity</b>
NTSC Analog TV Tuner	1
Composite Video Input	1 (Input/Output switchable)
Composite Video Output	1 (Input/Output switchable)
Not Available for Internal DVD	switchable)

**Video Standards Supported**

Composite Video input	NTSC
RF	NTSC

**Audio Connections**

	<b>Quantity</b>
RCA Input ( <b>Red, White</b> )	1
Headphone: ( <b>Variable/Fixed</b> ) (3.5mm)	1 (Variable)

### **Playback Media Compatibility**

Audio CD	YES
CD-R	YES
CD-RW	YES
DVD-R	YES
DVD-RW	YES
DVD-Video	YES
Picture CD	YES
VCD	N O
SVCD	N O
SD/MMC/MS	YES (2GB)

### **Playable Format (Codec)**

MP3	(@ 32 - 320Kbps, 44kHz)
CD-DA	YES
VCD 1.1	N O
VCD 2.0	N O
JPG	NO

### **Features**

Built-in DVD Player

Removable stand

12VDC input for car use

User friendly remote and On Screen Display (OSD)

Built-in Secure Digital (SD) and Multi-Media Card (MMC)/MS

MP3 playback on Disc and SD/MMC/MS

Photo Show on Disc and SD/MMC/MS

Receive the DIV/ATV

### **Accessories in the box**

8" LCD/DVD unit

1x RCA AV Cable

1x AC/DC Adapter

1x 12V Car Adapter

1x Remote Control

1x Owner's Manual

**Power Requirements**

Power Source	100-240 VAC 50/60Hz
Unit input power	12VDC 1.7A
Power ON consumption	1.2W

**Dimension (WxHxD)**

Unit W/stand	10.63 x 8.31 x 6.38 (in)
Unit W/O stand	10.63 x 7.05 x 2.77(in)

**Weight (N.W.)**

Unit W/stand	3.88(lb)
Unit W/O Stand	3.31 (lb)

**Warranty**

Parts & Labor	90 day
---------------	--------

**Environment**

Operating Temperature	41 – 95°F
Operating Humidity	30% – 80%

\*Designs and specifications are subject to change without notice.



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.



For Customer Service  
Visit Our Website At  
**[www.audiovox.com](http://www.audiovox.com)**  
Product Information, Photos,  
FAQ's Owner's Manuals

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>