



1 - Main Housing	LX6.0-001	15 - Spool Spring Washer (2 req.)	LX6.0-015	31 - Dog	LX6.0-031	46 - Drive Washer	LX6.0-046	59 - Knob Washer (optional)	LX6.0-059
2 - Gear cover	LX6.0-002	16 - Spool Spring	LX6.0-016	32 - Dog Cover Screw (2 req.)	LX6.0-032	47 - Preset Washer	LX6.0-047	60 - Spring Washer	LX6.0-060
3 - Cover Screw (2 req.)	LX6.0-003	17 - Brake Bearing	LX6.0-017	33 - Dog Cover	LX6.0-033	48 - Preset Sprin	LX6.0-048	61 - Lock Washer	LX6.0-061
4 - Spool Shaft	LX6.0-004	18 - Brake Disk	LX6.0-018	34 - Stop Pin (2 req.)	LX6.0-034	49A - Preset Knob Detent	LX6.0-049A	62 - Nut	LX6.0-062
4A-Shaft Shoulder	LX6.0-004A	20 - Antireverse Gear	LX6.0-020	35 - Pin Screw (2 req.)	LX6.0-035	49 - Preset Knob	LX6.0-049	63 - Knob Cap	LX6.0-063
4B-Shaft Pin	LX6.0-004B	21 - Disk Ring	LX6.0-021	36 - Handle Knob	LX6.0-036	50 - Crank Arm	LX6.0-050	64 - Knob Cap Screws (2 req.)	LX6.0-064
5 - Belleville Washers (4 req.)	LX6.0-005	22 - Pinion Gear	LX6.0-022	37 - Knob Screw	LX6.0-037	51 - Crank Arm Washer	LX6.0-051	65 - Clicker Pin	LX6.0065
6 - Pusher Bushing	LX6.0-006	23 - Pinion Bearing	LX6.0-023	38 - End Housing Screw (3 req.)	LX6.0-038	52 - Acorn Nut	LX6.0-052	66 - Pin Support	LX6.0-066
7 - Spool Bearing	LX6.0-007	24 - Drive Shaft	LX6.0-024	39 - Drive Shaft Tube	LX6.0-039	53 - Locking Plate	LX6.0-053	67 - Pin Washer	LX6.0-067
8 - Spool Tube	LX6.0-008	25 - Connection Arm	LX6.0-025	40 - Drive Shaft Washer	LX6.0-040	54 - Locking Plate Screws (2 req.)	LX6.0-054	68 - Clicker Spring (2 req.)	LX6.0-068
9 - Clicker Gear Retainer Ring	LX6.0-009	26 - Friction Ring	LX6.0-026	41 - Male Cam	LX6.0-041	55A - Handle Shaft Washer	LX6.0-055A	69 - Clicker Arm	LX6.0-069
10 - Clicker Gear	LX6.0-010	27 - Friction Washer	LX6.0-027	42 - Male Cam Pin (2 req.)	LX6.0-042	55 - Handle Knob Shaft	LX6.0-055	70 - Pin E Clip	LX6.0070
11 - Spool	LX6.0-011	28 - Drive Gear	LX6.0-028	43 - Female Cam	LX6.0-043	56 - Handle Shaft Bearing	LX6.0-056	71 - Reel Foot	LX6.0-071
12 - Brake Pad	LX6.0-012	29 - Drive Shaft Bearing (2 req.)	LX6.0-029	44 - Lever Arm	LX6.0-044	57 - Handle Knob	LX6.0-057	72 - Reel Foot Screw	LX6.0-072
14 - Spool Bearing	LX6.0-014	30 - End Housing	LX6.0-030	45 - Teflon Washer (2 req.)	LX6.0-045	58 - Knob Bearing	LX6.0-058	73 - Clamp	LX6.0-073
								74 - Clamp Screws (2 req.)	LX6.0-074

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>