



1 - Main Housing	MXL5.8-001	15 - Spool Spring Washer (2 req.)	MXL5.8-015	31 - Dog	MXL5.8-031	46 - Drive Washer	MXL5.8-046	59 - Knob Washer (optional)	MXL5.8-059
2 - Gear cover	MXL5.8-002	16 - Spool Spring	MXL5.8-016	32 - Dog Cover Screw (2 req.)	MXL5.8-032	47 - Preset Washer	MXL5.8-047	60 - Spring Washer	MXL5.8-060
3 - Cover Screw (2 req.)	MXL5.8-003	17 - Brake Bearing	MXL5.8-017	33 - Dog Cover	MXL5.8-033	48 - Preset Sprin	MXL5.8-048	61 - Lock Washer	MXL5.8-061
4 - Spool Shaft	MXL5.8-004	18 - Brake Disk	MXL5.8-018	34 - Stop Pin (2 req.)	MXL5.8-034	49A - Preset Knob Detent	MXL5.8-049A	62 - Nut	MXL5.8-062
4A-Shaft Shoulder	MXL5.8-004A	20 - Antireverse Gear	MXL5.8-020	35 - Pin Screw (2 req.)	MXL5.8-035	49 - Preset Knob	MXL5.8-049	63 - Knob Cap	MXL5.8-063
4B-Shaft Pin	MXL5.8-004B	21 - Disk Ring	MXL5.8-021	36 - Handle Knob	MXL5.8-036	50 - Crank Arm	MXL5.8-050	64 - Knob Cap Screws (2 req.)	MXL5.8-064
5 - Belleville Washers (4 req.)	MXL5.8-005	22 - Pinion Gear	MXL5.8-022	37 - Knob Screw	MXL5.8-037	51 - Crank Arm Washer	MXL5.8-051	65 - Clicker Pin	MXL5.8-065
6 - Pusher Bushing	MXL5.8-006	23 - Pinion Bearing	MXL5.8-023	38 - End Housing Screw (3 req.)	MXL5.8-038	52 - Acorn Nut	MXL5.8-052	66 - Pin Support	MXL5.8-066
7 - Spool Bearing	MXL5.8-007	24 - Drive Shaft	MXL5.8-024	39 - Drive Shaft Tube	MXL5.8-039	53 - Locking Plate	MXL5.8-053	67 - Pin Washer	MXL5.8-067
8 - Spool Tube	MXL5.8-008	25 - Connection Arm	MXL5.8-025	40 - Drive Shaft Washer	MXL5.8-040	54 - Locking Plate Screws (2 req.)	MXL5.8-054	68 - Clicker Spring (2 req.)	MXL5.8-068
9 - Clicker Gear Retainer Ring	MXL5.8-009	26 - Friction Ring	MXL5.8-026	41 - Male Cam	MXL5.8-041	55A- Handle Shaft Washer	MXL5.8-055A	69 - Clicker Arm	MXL5.8-069
10 - Clicker Gear	MXL5.8-010	27 - Friction Washer	MXL5.8-027	42 - Male Cam Pin (2 req.)	MXL5.8-042	55 - Handle Knob Shaft	MXL5.8-055	70 - Pin E Clip	MXL5.8-070
11 - Spool	MXL5.8-011	28 - Drive Gear	MXL5.8-028	43 - Female Cam	MXL5.8-043	56 - Handle Shaft Bearing	MXL5.8-056	71 - Reel Foot	MXL5.8-071
12 - Brake Pad	MXL5.8-012	29 - Drive Shaft Bearing (2 req.)	MXL5.8-029	44 - Lever Arm	MXL5.8-044	57 - Handle Knob	MXL5.8-057	72 - Reel Foot Screw	MXL5.8-072
14 - Spool Bearing	MXL5.8-014	30 - End Housing	MXL5.8-030	45 - Teflon Washer (2 req.)	MXL5.8-045	58 - Knob Bearing	MXL5.8-058	73 - Clamp	MXL5.8-073
								74 - Clamp Screws (2 req.)	MXL5.8-074

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>