



1 - Main Housing	MXL6/4-001	16 - Spool Spring	MXL6/4-016	32 - Washer RT	MXL6/4-032	47 - Pin Screw (2 req.)	MXL6/4-047	61 - Crank Arm	MXL6/4-061	76 - Knob Washer (optional)	MXL6/4-076
2 - Gear cover	MXL6/4-002	17 - Brake Bearing	MXL6/4-017	33 - Fork	MXL6/4-033	48 - End Housing Screw (3 req.)	MXL6/4-048	62 - Crank Arm Washer	MXL6/4-062	77 - Spring Washer	MXL6/4-077
3 - Cover Screw (2 req.)	MXL6/4-003	18 - Brake Disk	MXL6/4-018	34 - Fork Spring	MXL6/4-034	49 - Drive Shaft Tube	MXL6/4-049	63 - Push Knob E-Clip	MXL6/4-063	78 - Lock Washer	MXL6/4-078
4 - Spool Shaft	MXL6/4-004	19 - Antireverse Gear	MXL6/4-019	35 - Pusher	MXL6/4-035	50 - Drive Shaft Washer	MXL6/4-050	64 - Crank Arm Nut	MXL6/4-064	79 - Nut	MXL6/4-079
4A-Shaft Shoulder	MXL6/4-004A	20 - Disk Ring	MXL6/4-020	36 - Pusher Spring	MXL6/4-036	51 - Male Cam	MXL6/4-051	65 - Push Knob	MXL6/4-065	80 - Knob Cap	MXL6/4-080
4B-Shaft Pin	MXL6/4-004B	22 - Large Pinion Gear	MXL6/4-022	37 - Drive Shaft	MXL6/4-037	51A-Male Cam Pin (2 req.)	MXL6/4-051A	66 - Lock Plate	MXL6/4-066	81 - Knob Cap Screws	MXL6/4-081
5 - Belleville Washers (4 req.)	MXL6/4-005	23 - Small Pinion Gear	MXL6/4-023	38 - Pusher Washer	MXL6/4-038	52 - Lever Arm	MXL6/4-052	67 - Release Arm Spring	MXL6/4-067	82 - Clicker Pin	MXL6/4-082
6 - Pusher Bushing	MXL6/4-006	24 - Pinion Bearing	MXL6/4-024	39 - Pusher E-Clip	MXL6/4-039	53-Female Cam	MXL6/4-053	68 - Spring Pin	MXL6/4-068	83 - Pin Support	MXL6/4-083
7 - Spool Bearing	MXL6/4-007	25 - Drive Shaft Stop Nut	MXL6/4-025	40 - Drive Shaft Bearing (2 req.)	MXL6/4-040	54 - Handle Knob	MXL6/4-054	69 - Release Arm	MXL6/4-069	84 - Pin Washer	MXL6/4-084
8 - Spool Tube	MXL6/4-008	25A-Stop Nut Pin	MXL6/4-025A	41 - End Housing	MXL6/4-041	55 - Knob Screw	MXL6/4-055	70 - Push Knob Cover	MXL6/4-070	85 - Clicker Spring (2 req.)	MXL6/4-085
9 - Clicker Gear Retainer Ring	MXL6/4-009	26 - Connection Arm	MXL6/4-026	41A-Dog Pin	MXL6/4-041A	56 - Teflon Washer (2req.)	MXL6/4-056	71 - Cover Screws (2 req.)	MXL6/4-071	86 - Clicker Arm	MXL6/4-086
10 - Clicker Gear	MXL6/4-010	27 - Friction Ring	MXL6/4-027	42 - Dog Washer	MXL6/4-042	57 - Drive Washer	MXL6/4-057	72A- Handle Shaft Washer	MXL6/4-072A	87 - Pin-E-Clip	MXL6/4-087
11 - Spool	MXL6/4-011	28 - Washer LF	MXL6/4-028	43 - Dog	MXL6/4-043	58 - Preset Washer	MXL6/4-058	72-Handle Knob Shaft	MXL6/4-072	88 - Rod Mount	MXL6/4-088
12 - Brake Pad	MXL6/4-012	29 - Drive Gear SML	MXL6/4-029	44 - Dog Cover Screw (2 req.)	MXL6/4-044	59 - Preset Spring	MXL6/4-059	73 - Handle Shaft Bearing	MXL6/4-073	89 - Rod Mount Screws	MXL6/4-089
14 - Spool Bearing	MXL6/4-014	30 - Washer MDL	MXL6/4-030	45 - Dog Cover	MXL6/4-045	60A- Preset Knob Detent	MXL6/4-060A	74 - Handle Knob	MXL6/4-074	90 - Rod Mount Clamp	MXL6/4-090
15 - Spool Spring Washer (2 req.)	MXL6/4-015	31 - Drive Gear LRG	MXL6/4-031	46 - Stop Pin (2 req.)	MXL6/4-046	60- Preset Knob	MXL6/4-060	75 - Handle Tube	MXL6/4-075	91 - Clamp Screws	MXL6/4-091

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>