

AVISTART 6501

Remote Engine Starter
& Security System

Owner's Manual



AVITAL

A DIVISION OF  **CLIFFORD ELECTRONICS**

 **WARNING** 

- ! Always exercise caution and common sense when operating your AviStart system.**
- ! This product is intended for vehicles with fuel-injection and automatic transmissions only. NEVER attempt to remote start a vehicle with a manual (stick shift) transmission. Serious injury may occur with improper use.**
- ! NEVER attempt to remote start the engine while anyone (including pets) is in the vehicle.**
- ! NEVER attempt to remote start the engine while the vehicle is in an enclosed area without sufficient ventilation.**
- ! NEVER attempt to remote start the engine while the keys are in the ignition.**
- ! Always be sure the gearshift selector is in "Park" and the emergency brake is on before attempting to remote start the vehicle.**
- ! Keep your AviStart remote controls out of the reach of children.**
- ! Whenever the vehicle is being serviced or valet parked, place the system in Protected Valet Mode to prevent accidental or unauthorized remote starting. See "Protected Valet Mode" on page 6.**

Table of Contents

AviStart 6501	2
Lifetime Warranty	2
Remote Controls	2
Stealth Coding™ Technology.	3
Electronic Scan Prevention (ESP).	3
Instant Remote Control Code Deletion.	3
One-Step Remote Control Code Learning	3
Valet Switch.	3
Operating Your AviStart	4
To Arm The System	4
Remote-Controlled Silent Arm/Disarm	4
User-Programmable Long-Term Silent Arm/Disarm	4
Two-Stage Unlock Capability	5
Remote Panic with Safety Locks™	5
Interior Light Illumination	5
User-Programmable Passive Door Lock	5
User-Programmable Ignition-Controlled Door Lock/Unlock	5
User-Programmable RPM Door Lock	6
Protected Valet Mode	6
Remote-Controlled Valet.	6
LED System Status Indicator.	7
Remote-Controlled Trunk Release Capability	7
Remote-Controlled Accessory Outputs	7
Zone ² ™ Impact Sensor	7
Remote-Controlled Sensor Bypass	8
Previous Intrusion Alert	8
Specific Zone Intrusion Identification	8
User-Programmable Door Ajar Indication	8
User-Programmable Siren Duration	9
Alarm State Memory	9
Automatic Malfunction Override	9
Remote Engine Start - Safety and Counter-Theft	10
Remote Engine Start - Operation	11
User-Programmable Temperature-Controlled Starting.	12
Pit Stop Mode	13
User-Programmable Features	14
Programming Table for System Features	15
Programming Table for Remote Controls	16

AviStart 6501

Congratulations! You have just purchased the AviStart 6501, a remote engine starter and security system manufactured by Avital Technologies, Inc. You are about to experience the convenience and luxury of being able to start your vehicle engine from the comfort of your home, office, department store or other remote location.

To fully benefit from the capabilities of your AviStart system, we encourage you to read the Owner's Manual thoroughly before using the system. If you have any problems or questions regarding your AviStart system, consult the dealer from whom you purchased this product. To locate an authorized Avital dealer, contact Customer Service directly at 1-800-824-3208 (toll-free within the U.S.) or 1-818-709-7551.

Lifetime Warranty

Avital guarantees the operation of your AviStart control unit and remote controls for as long as you own your car. (Please refer to back of this manual for complete information.)

Remote Controls

Included with your AviStart system are two AviGlo™ 4-button/9-channel remote controls. Once exposed to light, the AviGlo remote control buttons will glow, making the buttons visible in the dark.

The remote control (remote) is a miniature transmitter powered by a small +12 volt battery. The RangeMaster™ super-heterodyne receiver (installed in your vehicle) allows your remote to command your system from up to ¼ mile away. Obstructions, electrical or radio interference, weather conditions, window tint or a weak battery can reduce this range. Your remote is the key to your AviStart system and can be used to arm and disarm your alarm, lock and unlock your doors, "pop" your trunk, start your engine and control optional accessories.

The AviStart system can accept up to four Avital remote controls. Additional remote controls and remote control batteries can be purchased from any authorized Avital dealer, or by calling Customer Service at 1-800-824-3208 (toll-free within the U.S.) or 1-818-709-7551.

Stealth Coding™ Technology

Stealth Coding technology offers the most advanced protection available against "code-grabbing" devices which thieves may use to record the digital code transmitted by your remote control. When you leave the area, thieves can then play back the code to unlock the doors and deactivate your system. Avital's remote controls with Stealth Coding randomly change the code every time you use them, and your system will not respond if any code is retransmitted. This technology makes code-grabbing devices useless.

Electronic Scan Prevention (ESP)

Your AviStart system also includes ESP, which blocks electronic scanner codes preventing unauthorized operation of your system.

Instant Remote Control Code Deletion

In the event of a lost or stolen remote control, all remote controls can be erased from the system's memory preventing unauthorized system operation. (See the "Programming Table for Remote Controls" on page 16).

One-Step Remote Control Code Learning

The AviStart system allows you to add new remote controls in one step. (See the "Programming Table for Remote Controls" on page 16).

Valet Switch

The valet switch is a small hidden toggle switch which allows you to control all of the system's programmable features. (See "User-Programmable Features" on page 14). This switch can only be controlled with the use of your ignition key.


NOTE: Be sure to have your dealer show you where the valet switch is located.

Operating Your AviStart

To Arm The System

The alarm can be programmed for active or passive arming. Active arming means the alarm can only be armed by the remote control. Passive arming means the alarm will automatically arm itself. See the "Programming Table for System Features" on page 15.


Active Arming

Press the  button on your remote control for 1-2 seconds. The siren will chirp twice, the parking lights will flash twice, the doors will lock, the LED will flash slowly and the starter will be disabled.


Passive Arming

Turn the ignition key "OFF," exit the vehicle and close the doors. When the interior lights turn off, the LED will begin flashing rapidly to indicate the alarm is passive arming. After 30 seconds, the siren will chirp twice, the parking lights will flash twice, the LED will flash slowly and the starter will be disabled (at any time during passive arming, the alarm can be actively armed).

To Disarm the System

Press the  button for 1-2 seconds. The siren will chirp once, the parking lights will flash once, the doors will unlock, the interior lights will turn on, the LED will turn off and the starter will be enabled.

Remote-Controlled Silent Arm/Disarm

Press the  button for 1-2 seconds to *arm or disarm* your system without the usual siren chirps.

Silent Arm Indications

The parking lights will flash twice, the doors will lock, the starter will be disabled and the LED will flash slowly.

 
 


Silent Disarm Indications

The parking lights will flash once, the doors will unlock, the starter will be enabled and the LED will turn off.

User-Programmable Long-Term Silent Arm/Disarm

This feature allows you to completely disable the arm/disarm siren chirps until you decide to restore them. (See the "Programming Table for System Features" on page 15.)


Two-Stage Unlock Capability

If the optional Two-Stage Unlock feature was installed, press the  or  button for 1-2 seconds and only the driver door will unlock. Within 3 seconds, press the  or  button again and the passenger doors will unlock (may require an optional relay).


Remote Panic with Safety Locks™

In a threatening situation, you can activate Remote Panic with Safety Locks. When activated, the siren will sound and the parking lights will flash. If you are inside your vehicle and the ignition key is "ON," the doors will lock. If you are outside the vehicle with the ignition key "OFF," the doors will unlock.

To Activate

1. Press the  button for 3-4 seconds.
2. The siren will sound and the parking lights will flash.
3. If the ignition key is "OFF," the doors will unlock. If the ignition key is "ON," the doors will lock.

To Deactivate

1. Press the  button for 1-2 seconds.
2. The siren will shut off and the parking lights will stop flashing.

Interior Light Illumination

When the alarm system is remotely disarmed, the vehicle interior light(s) will turn on for 30 seconds or until the ignition key is turned on.

User-Programmable Passive Door Lock

The system will not automatically lock the doors when the alarm passively arms to prevent the keys and remote from being locked in the vehicle. If you prefer, you can easily program the alarm to automatically lock the doors every time the alarm passively arms. (See the "Programming Table for System Features" on page 15.)

User-Programmable Ignition-Controlled Door Lock/Unlock

For the ultimate in security and convenience, the AviStart is programmed to automatically lock your doors when the ignition key is turned "ON" or the engine is started, and will unlock when the ignition key is turned "OFF." This feature can be programmed ON or OFF. (See the "Programming Table for System Features" on page 15.)

User-Programmable RPM Door Lock

The system can be programmed to automatically lock the doors when the engine reaches the factory preset RPM level. (See the "Programming Table for System Features" on page 15). When you begin driving, your vehicle doors will automatically lock. When you turn the ignition key off, the doors will automatically unlock.

NOTE: Ignition-Controlled Door Lock feature must be programmed OFF.

Protected Valet Mode

You should place your system in Protected Valet Mode whenever your vehicle is being serviced by mechanics, car wash personnel or driven by valet parking attendants. While in the Protected Valet Mode, all remote starter and alarm functions are bypassed to prevent unauthorized or accidental operation. If a remote start is attempted, the parking lights will flash 4 times and the vehicle will not start. Remote-controlled door lock/unlock, trunk release and all optional accessories will still operate.

To Turn on Protected Valet Mode

1. Turn the ignition key to the "ON" position or start the engine.
2. Flick the valet switch to the "ON" position.
3. The LED will turn on solid red to indicate the system is in the Protected Valet Mode.
4. Turn the ignition key to the "OFF" position.

To Turn off Protected Valet Mode



1. Turn the ignition key to the "ON" position or start the engine.
2. Flick the valet switch to the "OFF" position.
3. The LED will turn off to indicate the system is no longer in the Protected Valet Mode.
4. Turn the ignition key to the "OFF" position.

Remote-Controlled Valet



For your convenience, the system can be put into Valet Mode via the remote control. While in Remote-Controlled Valet, all alarm functions are bypassed. Remote start, remote-controlled lock/unlock and all optional accessories will still operate.

NOTE: The system must be disarmed in order to activate the Remote-Controlled Valet feature.

To Activate Remote-Controlled Valet

1. Press the  and  buttons at the same time for 1-2 seconds.
2. The parking lights will flash 4 times, and the LED will turn on solid red.

To Deactivate Remote-Controlled Valet


1. Press the  and  buttons at the same time for 1-2 seconds.
2. The parking lights will flash 3 times and the LED will turn off.

LED System Status Indicator

The LED on your vehicle dashboard or center console will inform you of the system status.

LED	Status
Off	System is disarmed
On solid	In Protected Valet Mode
Slow flash	System is armed
Flashing in cycles	See "Specific Zone Intrusion Identification" on page 8
Rapid flash	Passive arming

Remote-Controlled Trunk Release Capability

If you had the optional Trunk Release feature installed, simply press the  button for 1-2 seconds to activate your vehicle electronic trunk release. The trunk will "pop" open. This feature will only work if your system is disarmed (may require an optional relay).

Remote-Controlled Accessory Outputs

These outputs allow you to add optional remote-controlled accessories to your system such as a window roll-up, garage door opener or fuel door release. To activate your optional accessories, see the "Programming Table for Remote Controls" on page 16.

Zone²™ Impact Sensor

The Zone² Impact Sensor has two individual vibration/impact sensing zones.

Zone #1:

If a less threatening vibration or impact is detected, the siren will issue 2 warn-away chirps. A second violation will also issue 2 warn-away chirps. If within 45 seconds a third violation is detected, the sensor will automatically trigger the alarm. The siren will sound and the lights will flash.

Zone #2:

If a more threatening vibration or impact is detected at any time, the siren and lights will activate instantly.

Remote-Controlled Sensor Bypass

You can bypass the system sensor(s) at any time. The alarm system will still provide full perimeter protection.

To Bypass the Sensor(s):

1. Press remote ☀ and 🚗 buttons at the same time.
2. The siren will chirp twice...pause...chirp twice...pause...chirp twice.
3. The sensor(s) is now bypassed until you remotely disarm and then rearm your system.

Previous Intrusion Alert

If the vehicle had been tampered with and the alarm has been triggered, the siren will chirp 3 times upon remote disarm instead of the usual 1 chirp.

Specific Zone Intrusion Identification

If the alarm had been triggered in your absence, the siren will chirp 3 times upon remote disarm (Previous Intrusion Alert). When you enter the vehicle and turn the ignition "ON," the LED will flash in cycles to specifically identify which zone triggered the alarm.

LED	Zone
1 flash...1 flash...	Impact sensor / optional sensor input
2 flashes...2 flashes...	Hood trigger
3 flashes...3 flashes...	Door trigger
4 flashes...4 flashes...	Trunk trigger

User-Programmable Door Ajar Indication

When you remotely arm the alarm system and a door is ajar (not closed), the siren will chirp 2 times, then chirp 3 times and the parking lights will flash 3 times. This feature provides audible and visual indication to prevent battery drain. (See "Programming Table for System Features" on page 15.)

NOTE: If your vehicle has factory delayed lighting, this feature will be turned OFF.

User-Programmable Siren Duration

Upon activation, the siren can be programmed to run for 30 or 60 seconds before it will shut off and instantly rearm. (See the "Programming Table for System Features" on page 15.)

Alarm State Memory

If your vehicle battery is disconnected and later reconnected, the system will automatically return to its last state before power was removed, whether it was armed, disarmed or in a valet mode. For example, if a mechanic disconnects the battery while the alarm is disarmed or in a valet mode, he won't trigger the alarm when he reconnects the battery. If a thief removes power while the alarm is armed, and reconnects it, the alarm will instantly sound, the parking lights will flash and the starter will be disabled.

Automatic Malfunction Override

In the event of a faulty sensor or alarm input trigger zone, the alarm, when remotely armed, will alert you by a series of chirps and parking light flashes.

How to Interpret the Chirps and Parking Light Flashes

When you press the remote control buttons, the system will respond with chirps and flashes of the parking lights to indicate the system status. An explanation of these chirp/flash acknowledgments is listed below and on the following page.

Number of chirps and flashes	Explanation
1 chirp, 1 flash	Disarming of the alarm.
2 chirps, 2 flashes	Arming of the alarm.
2 chirps and flashes, then 3 more chirps and flashes	Armed and a door is ajar.
2 chirps and flashes, then 4 more chirps and flashes	Armed and there is a sensor malfunction (automatically bypassed).
3 chirps, 3 flashes	Disarmed and there was an intrusion attempt.
4 chirps, 4 flashes	Armed and there is a trigger malfunction (automatically bypassed).
0 chirps, 1 flash	Remote start attempt and a fault was detected.
0 chirps, 2 flashes	Remote start attempt and all zones are OK. The vehicle will start.

Number of chirps and flashes	Explanation
2 three-second flashes or 1 three-second flash	Remote automatic temperature-controlled starting. 2 = activation, 1 = deactivation.
0 chirps, 4 light flashes	Remote valet activation.
0 chirps, 3 light flashes	Remote valet deactivation.
6 chirps, 0 light flashes	Remote sensor bypass.
2 chirps and flashes, then 3 more chirps and flashes	Armed and a door is open or ajar.
0 chirps, 4 light flashes	Remote start attempt and system is in Protected Valet Mode.

Remote Engine Start - Safety and Counter-Theft




CAUTION: Be sure to read the "WARNING" bulletin on the inside cover of this manual before attempting to operate remote start.

Automatic Safety and Counter-Theft Features

Before remote starting your engine, the AviStart system will automatically perform a safety check to ensure the following conditions have been met:

- Brake pedal is not depressed.
- Engine and ignition are turned "OFF."
- Hood is closed.

After remote starting your engine, the AviStart system will shut off the engine immediately if the ignition is "OFF" and any of the following occurs:

- The hood is opened.
- The brake pedal is pressed.
- The alarm is triggered.
- The remote control  button is pressed.
- The 20 or 30 minute programmable run time expired.


Visual Fault Indication

The AviStart has a built-in fault detection system that automatically scans all of the safety zones, prevents the system from remote starting and provides a visual indication if a fault is detected. The parking lights will flash 1 time if the hood is opened or if the brake pedal is depressed and will not allow the engine to start. If this occurs, bring your vehicle to your authorized Avital dealer for service.

Remote Engine Start - Operation

Your AviStart system will start your vehicle engine with a touch of a button on your AviGlo™ remote control. To cool or warm the interior of your vehicle before you enter, set the climate control to your preference (heater, defrost or air conditioning) before remote starting. Set the fan to a medium speed (**not maximum**). Ensure the vehicle is in "Park" and the key is not in the ignition. We strongly recommend that you arm the alarm system at all times, especially if you are going to remote start the vehicle.


To Remote Start the Engine:

1. Press the remote control  button for 1-2 seconds, 10-15 minutes before you enter your vehicle (this will allow the climate control time to heat or cool the interior.) The parking lights will flash 2 times, the engine will start and the parking lights will remain on as a visual indication that the engine is running. Five seconds after the engine starts, the doors will automatically lock. If you do not want the doors to automatically lock upon remote start, this feature (Security Start Locks™) can be programmed OFF. (See the "Programming Table for Systems Features" on page 15.)


If you have a diesel engine, the AviStart will be programmed to start 15 seconds after the parking lights flash 2 times or after the vehicle glow plug light has turned off. This will allow time for the glow plugs to heat up. The alarm system will remain armed.

2. If the engine does not remote start, the AviStart system will attempt to start the engine two additional times.
3. If the vehicle is left unattended, the engine will run for 20 minutes and then shut off automatically. You can also program the system to run the engine for 30 minutes. (See the "Programming Table for System Features" on page 15.)

To Operate the Vehicle While Remote Started:

1. If the alarm system is armed, press the remote  button for 1-2 seconds. The alarm will disarm and the doors will unlock.
2. Enter the vehicle (do not touch the brake pedal), turn the ignition key to the "ON" position and then press the brake pedal. Pressing the brake pedal will shut off the remote start and parking lights but the engine will remain running.
3. You can now drive the vehicle.

To Shut Off Remote Start:

At any time while the engine is remote started, you can shut off the engine with the remote control by pressing the remote control  button for 1-2 seconds. The engine and parking lights will shut off.



User-Programmable Temperature-Controlled Starting



CAUTION: Do not activate Temperature-Controlled Starting while the vehicle is in an enclosed area.



The AviStart system can be programmed to automatically start the vehicle engine whenever the temperature inside the vehicle reaches or drops below the preprogrammed temperature level. The AviStart will monitor the air temperature every 2.5 hours and will only start the engine during extreme cold temperatures. There are three temperature levels to choose from. (This feature is programmed OFF from the factory and must be programmed ON to operate.) (See the "Programming Table for System Features" on page 15).

To Activate:

Press the remote control  and  buttons at the same time. The parking lights will turn on for 3 seconds, shut off for 1 second, turn on for 3 seconds and shut off. This will be your visual indication that you have activated the Temperature-Controlled Starting feature.

When the temperature inside the vehicle reaches the preprogrammed temperature level, the parking lights will flash 2 times, the vehicle will start and the parking lights will turn on. The vehicle will run for 10 minutes and then shut off. This will allow the engine to warm up and charge the battery.

To Deactivate:

Press the remote control  and  buttons at the same time for 1-2 seconds. The parking lights will turn on for 3 seconds and then turn off. This will be your visual indication that you have deactivated the Temperature-Controlled Starting feature.

NOTE: At any time, if the ignition key is turned on or the vehicle is remote started, the Temperature-Controlled Starting feature will deactivate.


 
Pit Stop Mode




CAUTION: Do not leave passengers or pets in the vehicle while the system is in Pit Stop Mode.

The Pit Stop Mode allows you to park the vehicle for short-term stops, remove the ignition key and leave the engine running.

To Activate:

1. While the vehicle engine is running with the ignition key turned "ON," press the remote control  button for 1-2 seconds. The parking lights will flash 2 times and then stay on and the doors will unlock. (Make sure the vehicle is in "Park" and set the emergency parking brake.)
2. Turn the ignition key "OFF" and the engine will stay running.
3. Remove the ignition key and remote control and exit the vehicle. Remember to keep the ignition key and remote control in your possession.
4. Press the remote control  button for 1-2 seconds to secure your vehicle.

To Deactivate:

1. When you return to the vehicle, press the remote control  button for 1-2 seconds. The doors will unlock.
2. Enter the vehicle (do not touch the brake pedal), turn the ignition key to the "ON" position and then press the brake pedal. The parking lights will shut off and you will now be able to drive the vehicle.

User-Programmable Features

All AviStart system and remote control programmable features are accomplished by turning the ignition key "ON" (or starting the engine) and flicking the valet switch on and off a preset number of times.

The AviStart also allows you to add new remote controls in one step, delete lost or stolen remote controls or rearrange the factory preset remote control functions.

1. Remove the system from Protected Valet Mode. Programming cannot be accessed while the system is in Protected Valet Mode indicated by the LED on solid red.
2. Select the feature you wish to program from the "Programming Table for System Features" or the "Programming Table for Remote Controls" on pages 15 & 16. Note the number of chirps associated with that feature.
3. Turn the ignition key to the "ON" position.
4. Within 10 seconds, begin flicking the valet switch on and off. The siren will chirp once each time you flick the switch on then off.
5. Continue flicking the switch on and off, counting the number of chirps.
NOTE: Stop when you reach the number of chirps associated with your chosen feature.
6. Follow the "Secondary Action." You will hear a number of chirps to confirm that you have changed the setting of that feature.
7. Turn the ignition key to the "OFF" position.
8. Repeat steps 1-7 for any other feature you wish to program.

Programming Table for System Features

Feature	Factory Setting	No. of Chirps	Secondary Action
Active/Passive Arming	Passive	4	Wait 3 seconds, the siren will chirp once for active, twice for passive
Passive Door Lock	OFF	5	Wait 3 seconds, the siren will chirp once for OFF, twice for ON
Passive Arming Chirp/Light Flash Confirmation	ON	6	Wait 3 seconds, the siren will chirp once for OFF, twice for ON
Remote Arming Siren Chirps	ON	7	Wait 3 seconds, the siren will chirp once for OFF, twice for ON
Siren Duration 30-60 Seconds	30	8	Wait 3 seconds, the siren will chirp once for 60, twice for 30
Ignition-Controlled Door Lock/Unlock	ON	12	Wait 3 seconds, the siren will chirp once for OFF, twice for ON
RPM Door Lock	OFF	14	Wait 3 seconds, the siren will chirp once for OFF, twice for ON
Door Ajar Indication	ON	17	Wait 3 seconds, the siren will chirp once for OFF, twice for ON
Remote Start Run Time 20 or 30 Minutes	20	19	Wait 3 seconds, the siren will chirp once for 30 minutes, twice for 20 minutes
Temperature-Controlled Starting OFF or 5°F (-15°C)	OFF	21	Wait 3 seconds, the siren will chirp once for OFF, twice for 5°F (-15°C)
-7°F (-20°C) or -22° F (-30°C)	-	22	Wait 3 seconds, the siren will chirp once for -7°F (-20°C), twice for -22°F (-30°C)
Security Start Locks™	ON	23	Wait 3 seconds, the siren will chirp once for OFF, twice for ON

Programming Table for Remote Controls

Feature	Factory Setting	No. of Chirps	Secondary Action
Arm/Disarm	Button	24	Press Button, the siren will chirp 1 time.
Remote-Controlled Trunk Release	Button	25	Press Button, the siren will chirp 2 times.
Remote Start	Button	26	Press Button, the siren will chirp 3 times.
Silent Arm/Disarm	Button	27	Press Button, the siren will chirp 4 times.
Remote-Controlled Valet	+ Buttons	28	Press + Buttons, the siren will chirp 5 times.
Channel 6 Remote Controlled Accessory Output	+ Buttons	29	Press + Buttons, the siren will chirp 6 times.
Remote-Controlled Sensor Bypass	+ Buttons	30	Press + Buttons, the siren will chirp 7 times.
Temperature-Controlled Start Active/Inactive	+ Buttons	31	Press + Buttons, the siren will chirp 8 times.
Channel 9 Remote-Controlled Accessory Output	+ Buttons	32	Press + Buttons, the siren will chirp 9 times.
One Step Remote Code Learning	Button	33	Press Button, the siren will chirp 1 time.
Instant Remote Control Code Deletion		34	Wait 3 seconds, the siren will chirp twice, all codes are erased out of memory.

Life time Limited Factory Warranty - Terms and Conditions

Avital vehicle security systems and accessories require professional installation by an Authorized Avital Dealer. Unless the system is sold and installed by an Authorized Avital Dealer, all product warranties are void. As the manufacturer, Avital Technologies warrants to the original consumer purchaser, the system control unit and remote controls to be free from defects in material and workmanship for as long as you own the vehicle in which the system was originally installed. All other parts of the system and accessories to the system are warranted to be free from defects in material and workmanship for one (1) year from the date of purchase. Avital Technologies will repair or replace, at its option and free of charge during the warranty period, any system component that proves defective in material or workmanship under normal installation, use, and service, provided the product is returned to our factory by an Authorized Avital Dealer, transportation charges pre-paid. Products returned to our factory must be accompanied by a photo copy of the purchase receipt. In the absence of such purchase receipt, the warranty period shall be one (1) year from the date of manufacture. Any damage to the product(s) as a result of mis use, abuse, neglect, accident, incorrect wiring, improper installation, destruction or alteration of the serial number, repair or alteration outside our factory, or any use violative of instructions furnished by us will void the warranty. This warranty is limited to defective parts and specifically excludes any incidental or consequential damages connected therewith. This warranty is not transferable. Avital Technologies makes no warranty against theft. This warranty is not to be construed as an insurance policy against loss. Warranty on installation labor, removal and reinstallation charges are not the responsibility of Avital Technologies, Inc.

Theft Protection Guarantee - Terms and Conditions

In the event that your automobile is stolen and not recovered within 30 days, Avital Technologies, Inc. will refund to you, the original purchaser of the Avital system, your insurance theft deductible up to \$3,000 (USA and Canada only) of the theft claim not covered by the theft deductible of your vehicle insurance. This guarantee applies only to the owner of the vehicle in which the Avital system was originally installed and only if you were the owner of this same vehicle when it was stolen. This guarantee is valid only in the USA and Canada and only if:

- (1) Installation of the Avital vehicle security product was performed by an Authorized Avital dealer.
- (2) Avital window stickers are adhered to both the driver's-side and curb-side windows and are clearly visible on both sides from outside the vehicle.
- (3) At the time of the theft, the Avital system was fully functional, armed and not in "valet mode."
- (4) Your insurance company and the police have been notified and a written stolen vehicle report was issued by the Police Department.
- (5) No less than thirty (30) days **after** the police report was issued, you mail to Avital Technologies clear photocopies of the following documents:
 - I. The stolen vehicle police report noting the location and phone number of the police station that issued the report.
 - II. A dated declaration signed by you, the owner of the vehicle, attesting that the vehicle has been stolen for more than thirty (30) days and has not been recovered.
 - III. A photocopy of the payment you received from your insurance company for the loss of your vehicle.
 - IV. A photocopy of your insurance policy showing your name and the theft deductible.

This guarantee is effective for one year from the date of purchase as indicated by your purchase receipt, is limited to one claim and is valid only when the entire vehicle was stolen and not recovered. This guarantee is not transferable and specifically excludes any other consideration, including, but not limited to, damage caused to the vehicle, theft of parts or contents, or any consequential damages. Once Clifford Electronics verifies the above listed requirements have been met, a payment will be made to you in accordance with the above stated provisions.

ONLINE REGISTRATION: For your convenience, we now provide online registration for your Avital purchase. Within 10 days of purchase, register at www.clifford.com/register. By registering online, you will have access to a copy of your Owner's Manual, as well as information on product updates or special promotions.

Your system serial number is:

Place serial number sticker here

© 1999 Avital Technologies, Inc., A Division of Clifford Electronics
Part Number: 31-6501/AviStart6501OM/0999

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>