




## DE 2541 F Programme Chart and Quick Reference Guide

Before starting, it is essential that you carefully read right through the Installation & Operation Instruction booklet before plugging in to the mains socket.

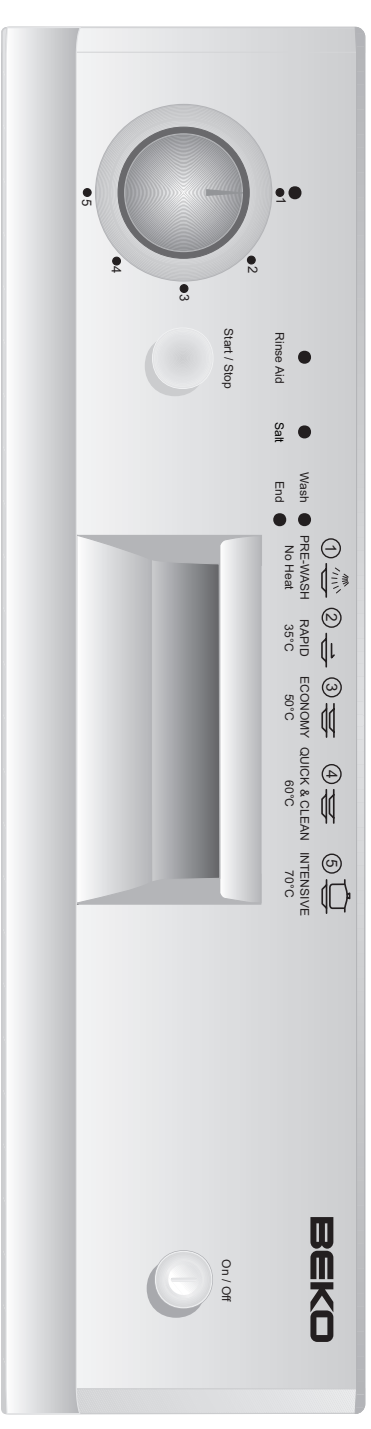

### Operating the dishwasher


- Turn the water tap on. Open the door of the machine.
- Check that the upper and lower arms can rotate freely.
- Pour (Put in) the detergent.
- Close the door of the machine.



Salt  
Salt indicator light



Rinse Aid  
Rinse-aid indicator light

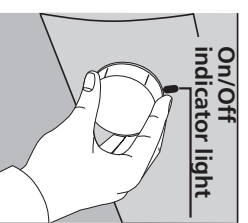

On/Off  
indicator light

- Push in the on/off button and check that the on/off indicator light comes on.
- Check the salt and rinse aid level indicator lights before you start the machine. If necessary add salt and rinse aid.
- Select the required programme by referring to the programme chart.
- Select the desired programme by turning the selector knob.
- Press start / stop button and check that the wash indicator light comes on.
- ! Do not open the dishwasher door whilst the appliance is in operation. However, in case the door is opened while the machine is working, then a safety mechanism ensures the machine immediately stops. Water may be very hot, so be careful.
- ! Care must be taken if opening the door, as steam and water will escape.
- Press the on/off button after the programme is completed. The indicator light will go off.
- Turn off the water tap, unload the baskets.

### Programme Sequence

While the dishwasher operates, "Wash" indicator light will be on. When the programme selected is completed, "Wash" indicator light will go off and "End" indicator light will come on.

### How to cancel the washing programme

- To cancel a programme while the machine is operating:
  - Press and hold start/stop button for 3 seconds. The wash indicator light will start flashing. The machine will drain the water inside the machine for 45 seconds.
  - The programme is cancelled when wash indicator light goes off. Then, you can choose and start a new programme.
  - ! Depending on the stage of the programme you have cancelled, there may be detergent residue or rinse aid inside the machine and on the load. Make sure the items in the dishwasher are not used before washing properly.



Progress  
indicator lights



Start / Stop  
Start/Stop Button

### How to change the washing programme

- To change the programme selection while the machine is operating:
  - Press start/stop button. The wash indicator light will go off.
  - Select the new programme. Press start/stop button. The wash indicator light will be on and new programme will start.
  - ! The new programme will NOT start right from the beginning. It will start from the stage last carried out by the previous programme selection.

Programme symbols and temperatures	Programme selection	Detergent compartment A=25 cm <sup>3</sup> / 15 cm <sup>3</sup> / B=5 cm <sup>3</sup>	Programme sequence	Consumption figures* Water (litres) Energy (kWh) Duration (min)
① <b>PRE-WASH</b> No Heat	Pre-wash to rinse and loosen residue - awaiting full load - then select a Programme	-	Prewash ▼ End	3,6 - 15
② <b>RAPID</b> 35°C	Lightly soiled dishes 30 minute programme	A	35 °C wash ▼ Cold rinse ▼ Hot rinse ▼ End	10,2 0,75 30
③ <b>ECONOMY</b> 50°C	Most economic programme for normally soiled dishes	A+B	Prewash ▼ 50 °C wash ▼ Cold rinse ▼ Hot rinse ▼ Drying ▼ End	13 1,01 140
④ <b>QUICK &amp; CLEAN</b> 60°C	Soiled dishes	A+B	60 °C wash ▼ Cold rinse ▼ Hot rinse ▼ Drying ▼ End	10,6 1,15 58
⑤ <b>INTENSIVE</b> 70°C	Heavily soiled dishes requiring Hot pre-wash	A+B	50°C Prewash ▼ 70 °C wash ▼ Cold rinse ▼ 50 °C rinse ▼ Drying ▼ End	14,4 1,30 115

\* Values declared on the product or in the operating instruction booklet / programme chart and quick reference card supplied with the product are obtained in tests performed under controlled laboratory conditions and these tests are as defined in relevant standards. These figures may vary depending on how soiled the dishes are, the water hardness level and other factors. Temperature changes exceeding 15°C may also effect these figures.

\*\* Reference programme for the Testing Institute and energy labelling. Testing program: Eco 50°C as compliant to EN 50242 international norms.

\*\*\* Due to continual improvement through research & design, specifications and design may change without prior notice.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>