

BKMF - 4B

Mini Oven

BEKO

English version of the 185.6125.04
booklet (15.12.2005)



**This product ,
is produced in modern facilities
which are respectful to
environment,without giving harm
to the nature**

Dear Customer,

It is our ultimate desire that you achieve the best performance from our product, which has been passed through meticulous quality control checks and is manufactured in modern facilities.

To this effect, we recommend that you read the entire guide carefully before operating the product and keep it as a reference.

BEKO

www.beko.com.tr

This product has 10 years life span.

It means that said period is time interval to stock its spare parts to keep this product functional.



Contents

1 **Technical specifications** **Page 2**

2 **Safety precaution and important items** **Page 3**

3 **Using of the cooker** **Page 5**

Introducing the control panel	5
Using of the cooker	6
Transport	11

4 **Maintenance and cleaning** **Page 9**

 
1 Technical specification

External dimensions

Width	: 500 mm
Depth	: 350 mm
Height	: 265 mm
Grill power	: 2000 W
Oven power	: 1000 W
Max power	: 2000 W
Thermostat	: Electrical adjustable up to 300°C
Minute minder (available)	: Electrical adjustable to 100 minute
Against risk of fire class	: A



The datas and values about this product are obtained in laboratory test conditions therefore these values can be changed according to the usage and working conditions.

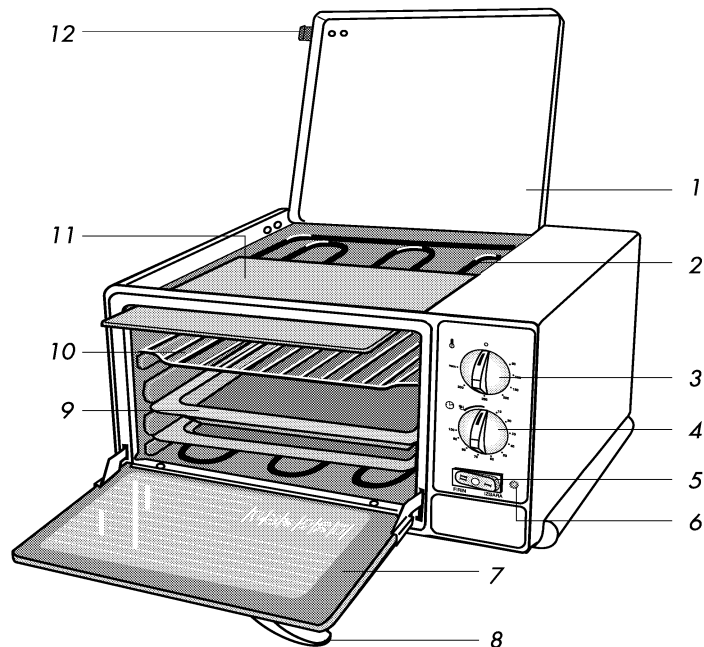

- | | |
|--------------------------|----------------------|
| 1. Top lid | 8. Front door handle |
| 2. Grill heating element | 9. Tray |
| 3. Thermostat knob | 10. Grill shelf |
| 4. Minute minder knob | 11. Reflector |
| 5. Switch | 12. Handle |
| 6. Thermostat lamp | |
| 7. Front door | |

2 Safety precaution and important items

! This product has been designed for only homes.

- * The current value of the fuse in your home shall be suitable to the current drawn by your cooker.
 - * Before your appliance is connected to the mains electricity supply, check to ensure that the voltage and the frequency shown in the data plate corresponds with your power supply.
 - * Our company shall not held responsible for any damage caused by the utilisation of the cooker without ground cabling.
- This appliance must be earthed.**
- * The mains lead must not come in contact with any part of the appliance which is hot during operation.
 - * During operation of this appliance the door and outer surfaces will get hot. Take care not to touch hot surfaces during use.
 - * The appliance must not be put on heat-sensitive surfaces (i.e. refrigerator, dishwasher or other pastic surfaces) because, during operation of appliance it can damage such surfaces.
 - * Thermostat signal lamp can light be on slightly when the appliance is connected to the mains electricity, and while it doesn't run. If you change the plug position (i.e. make it upside-down), this light be off. This has no effect on product safety.
 - * Before cleaning your cooker, plug off power cable from mains electricity supply.
 - * Location of cooker can be changed when cooker is cold.
 - * Pull stainless steel reflector tray in with two sides upside down when you close upper door of cooker.
 - * When your cooker is hot, don't drop any water droplet onto door glass. If so glass can crack.



 
* Keep your children away from the parts are heated while grilling or when the oven is on. Before using your product take the packaging materials out.

The packaging materials can cause danger for the children.




- * **A perceptible odor is going to emit from the insulation materials and heating elements. In order to burn off the protective coating remove shelf and baking tray and turn the oven control knob to 200°C and run the oven for approximately 30 minutes again fumes will be emitted as the protective coating is burnt off but this is quite normal.**
- * **Never touch the appliance with wet hands. If there is a water spillage, water droplets or condensation on the appliance, switch the appliance off and wipe it dry thoroughly.**
- * **Always use oven gloves when removing the grill rack and dishes from inside the oven when in use.**
- * **Always switch off the appliance from the mains when the appliance is not in use, before cleaning or in the unlikely event of a product failure becoming apparent.**

3 Using of the oven

Introduction of control panel and using of the oven

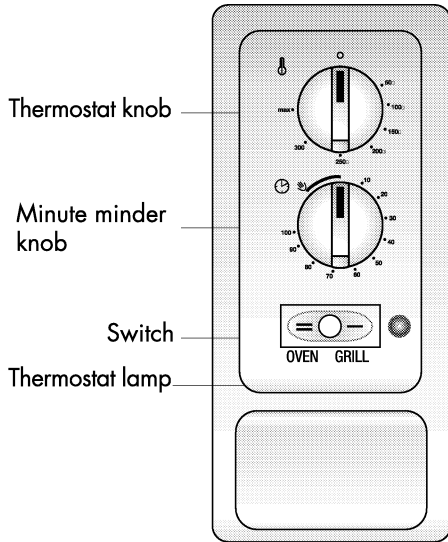

   The heating elements do not operate unless both the minute minder, heating control knob and the switch are on.

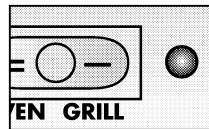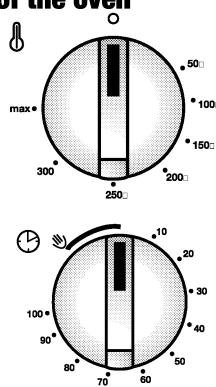


Thermostat knob

Adjustment by temperature in the oven by using this knob.

Minute minder

It is a mechanical timer that adjust the cooking time up to 100 minutes.

The knob is brought to the desired position by turning to the right. When the adjusted time terminates a signal sound “**CHINN**” is heard and the electrical current is cut automatically.

Bring the knob to the manual “” position. If you have to operate your oven more than 100 minutes or if you wanted to adjusted time by yourself.

Switch

It has 3 positions and controls the heating elements

0 : Off positions

I : Grill heating element is on

II : The upper and lower heating elements are on

Thermostat lamp

When the temperature inside the oven is reached to the pre-set value, the thermostat will make the system and the light be off.

When the temperature drops below the pre-set value, the thermostat makes the system and the light be on again.

Operating the oven and grill

Adjust the minute minder and select Grill or oven position.

Then bring the thermostat knob to the proper position.

The heating elements will not be ON unless minute-minder and thermostat knob together selector switch are adjusted.

The reflector tray must be in the right position while cooking.

To cook on oven position

- ☛ Plug the cord to earthed socket.
- ☛ Adjust the minute-minder.
- ☛ Select the **“oven”** position by the selector switch.
- ☛ Bring the thermostat knob to the position as recommended in the cooking table.
- ☛ Pre-heat for 10 minutes.
- ☛ After pre-heating, put your cook on the shelf position as recommended.
- ☛ When the timer reached its adjusted time the time will ring and the current will be off automatically.
- ☛ Control your cook and then bring the selector switch to **“0”** position.

Do not use two tray at the same time while cooking.


cooking table

Food	Cooking temperature (degrees°C)	Cooking time (min)	Shelf position From bottom
Beef	250	40-50	2-3
Bread	200-220	20-30	2-3
Casseroles	150-170	20-30	2-3
Chicken	230	25-35	2-3
Fish	230	25-35	2-3
Lamb	230	25-30 (1)	2-3
Meringues	100-120	25-30	2-3
Milk pudding	140-160	20-25	2-3
Pastry	160-170	20-30	2-3
Pork	190-210	40-50	2
Quiches/Flans	160-180	35-45	2
Rich fruit cake	160-180	20-30	2-3
Scones	190-220	25-35	2-3
Sponge cake	160-180	30-40	1-2
Yorkshire pudding	200-220	20-30	2-3

(1) Suitable for 500 gr

Note: The values on the cooking table are the results we got in our laboratory.

 The cooking table may be changed according to the quantity of products. You can find different tastes suitable for your harmony according to your cooking and using habits.

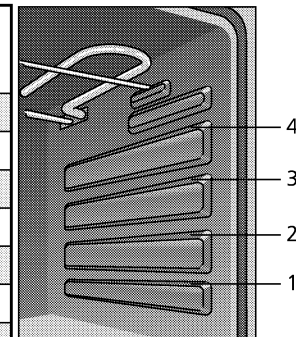

Shelf positions

Ensure you stand back from the appliance when opening the oven door to allow any build up of steam heat to escape.

Oven temperature chart (for guidance only) we recommend you follow manufactures recommendations whenever available

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>