

Package Contains:

1 x	Flame Fixture	1 x	Simulated Flame Cloth	1 x	Blue MR11 12v 20w
6 x	Screws		with Magnets		
1 x	Chain for Hanging	3 x	Orange MR11 12v 20w		

Troubleshooting

- If the unit is not functional – check main power supply is 'on' and check fuses.
- If the unit is functional but lamp does not light - lamp may require replacing.
- If after trying this solution you still have a problem contact your dealer or CHAUVET.

Contact Chauvet

USA

Technical Assistance: 1-800-762-1084 (954) 929-1115

E-Mail tech@chauvetlighting.com

Europe

Technical Assistance: (0113) 276-0755

E-Mail eurosales@chauvetlighting.com

Caution

Do not obstruct the air vents.

Do not touch unit or lamps while hot.

Never put any objects through the air grill on the top of the unit.

No user serviceable parts inside, please refer to CHAUVET for service.

Power Connections

The unit is supplied with a power plug appropriate to its voltage and destination. Should any other connections be required they must be carried out with the following configuration.

Earth = Green/Yellow cable

Neutral = Blue cable

Live = Brown cable

In the USA & Europe, it is required that all plugs are 3-pin type i.e. with Earth/Ground connection.

In the UK, it is required that all mains plugs are fitted with 5A fuses.

Technical Specifications

Power	120V~60Hz AC	230V~50Hz AC
Fuse	20mm Glass 1A Fast Blow	20mm Glass 0.6A Fast Blow
Lamps	4 x 12V 20W Part No MR11 12v 20W	4 x 12V 20W Part No MR11 12v 20W
Dimensions	279mm x 279mm x 160mm / 11in x 11in x 6.3in	279mm x 279mm x 160mm / 11in x 11in x 6.3in
Weight	5kg / 11lbs	5kg / 11lbs

User Information

 (Please complete for your records)

Date Purchased: / /

Serial No: _____

Dealer Stamp

Model: CH-BOB FLAME LIGHT



Bob Flame Light

CH-BOB

User Guide

Please read these instructions carefully before use

World-wide Headquarters:

3000 North 29th Ct., Hollywood, Florida, USA, FL 33020

Tel: +1-954-929-1115 Fax: +1-954-929-5560


European Office:

Unit 18, Hunslet Trading Estate, Leeds, UK

LS10 1BL

Tel: (0113) 276-0755 Fax: (0113) 277-6675

www.ChauvetLighting.com

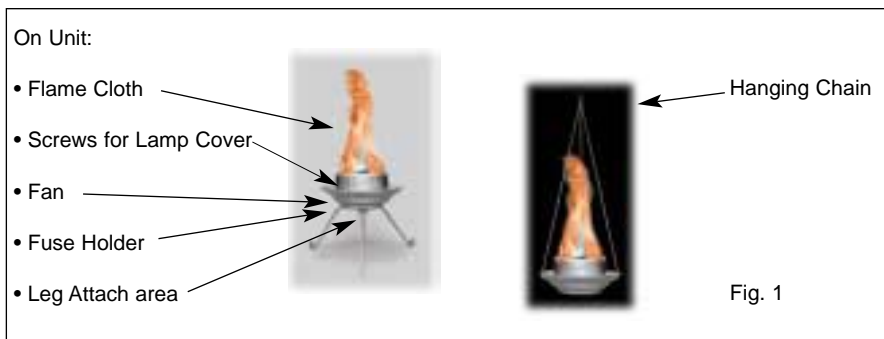

Introduction

Congratulations on the purchase of your new CHAUVET lighting effect. We are confident you will enjoy many trouble free hours with this unit. To assist with the care and use of the product we have prepared this short guide.

Operation

Before connecting this unit to the mains power supply for the first time you must first install the lamps. (See 'Replacing Lamps' for details) and the simulated flame cloth.

This lighting effect has been designed to function on a mains power supply of either 120V~60Hz or 230V~50Hz and has been fitted with a suitable power plug for use with your local voltage. Check the label and voltage selector switch (if fitted) on the unit and the power plug for the correct voltage.

When connected to the mains power supply the unit should illuminate. The fan will also start to blow.

Due to the high operating temperature of halogen lamps it is advisable that the effect be used in well ventilated areas taking care not to obstruct the air vents. After use allow time to 'cool' for safety and to ensure lamp life before moving or touching.

The simulated flame cloth has two magnets attached. The magnets should be affixed to the two metal plates above the air grill.

Installation / Mounting

This unit is designed to be used either standing on three legs or hanging. The three legs attach easily to the bottom of the unit by means of two screws each. The screws will be found separately in a plastic bag.

Alternatively, you can hang the unit by means of the included chain. The chain affixes to the unit by means of tree clips. Be careful to properly secure the chain when hanging the unit.

Use in a well-ventilated area without obstruction to air vents.

Replacing Lamps

1. Disconnect from main power supply before attempting to replace either lamps or fuse.
2. Ensure that the unit is sufficiently cool, before removing blown lamps.
3. Never touch new lamps with your fingers; use a tissue or a cloth.

In order to replace the lamps, disconnect from main power supply first, and unscrew the three screws on the side of the unit, which are highlighted on the diagram (fig.1). Only use the appropriately rated lamps as use of any other lamp type may cause the unit to be non-operational.

Due to the nature of halogen lamps it is vitally important that you do not touch the new replacement lamp with your fingers, as this will reduce lamp life considerably. Once again a tissue or cloth can be used for fitting the replacement lamp.

Finally before using, check that the lamps are housed correctly in the lamp holder and that the top has been screwed back into place.

If after replacement of the lamp, the unit is still not working then please contact your dealer or CHAUVET for servicing.

Replacing Fuses

If the unit does not function at all when connected to the main power supply i.e. the fan does not blow, then it is highly likely that the fuse has blown.

Disconnect from main power supply before attempting to replace either lamps or fuse.

In order to replace the fuse, disconnect from the main power supply first, and then unscrew the fuseholder cover to reveal the fuse. The unit has a label attached which indicates the correct fuse rating and you will also find this listed as part of the specifications for the unit later in this guide. It is most important that replacement fuses are of the correct rating. Failure to use the correct fuse could damage the lighting effect beyond economic repair.

The fuse should simply be placed inside the holder and the screw cap replaced, when this is done connect to the main power supply to check. If the unit is still not working then please contact your dealer or CHAUVET for servicing.

Cleaning

The body of the unit should be cleaned with a soft damp cloth. We recommend internal cleaning be carried out by a fully qualified technician.

Maintenance & Servicing

Work on internal parts should be carried out by a qualified technician. Removal of covers other than to replace the lamps or the fuseholder is considered a breach of warranty and will not be covered under any such agreement unless authorized first by the company.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>