

BLACK+DECKER

USA/Canada 1-800-231-9786

Accessories/Parts 1-800-738-0245

Register your product at www.prodprotect.com/applica

12-CUP PROGRAMMABLE COFFEEMAKER

1. One-piece cover
2. Showerhead
- † 3. Removable filter basket (Part # DCM2160B-01)
4. Water reservoir
5. Water windows (on both sides) with cup level markings
6. Sneak-A-Cup™ feature
- † 7. Carafe lid (Part # DCM2160W-03(w)) (Part # DCM2160B-03 (b)) (Part # DCM2160R-03 (r))
- † 8. Duralife™ Carafe (Part # DCM2160W-02(w)) (Part # DCM2160B-02 (b)) (Part # DCM2160R-02 (r))
9. Cord storage (inside of unit)
10. Nonstick "Keep Hot" carafe plate
11. Control panel

Note: † indicates consumer replaceable/removable parts

MODEL ○ DCM2160B ○ DCM2160W ○ DCM2160R


Please Read and Save this Use and Care Book.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock and injury to persons do not immerse cord, plugs or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact Consumer Support at the number listed in the warranty section.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, turn any control to OFF (0), then remove plug from wall outlet.
- Do not use this appliance for other than intended use.
- Keep lid on the carafe when in use.
- Scalding may occur if the lid is removed during the brewing cycles.
- The carafe is designed for use with this appliance. It must never be used on a range top.
- Do not set a hot carafe on a wet or cold surface.
- Do not use a cracked carafe or a carafe having a loose or weakened handle.
- Do not clean carafe with cleansers, steel wool pads or other abrasive material.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory

Product may vary slightly from what is illustrated.

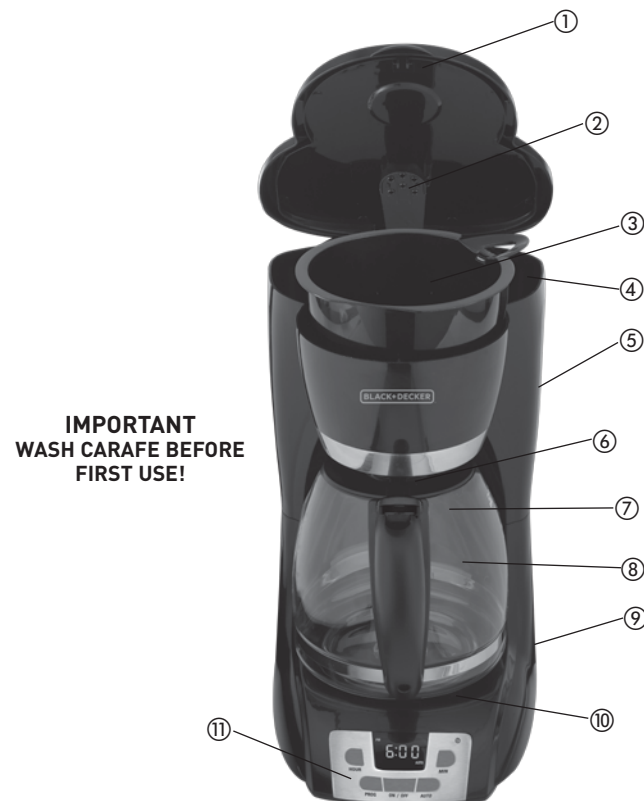

IMPORTANT
WASH CARAFE BEFORE
FIRST USE!

or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.

SAVE THESE INSTRUCTIONS.

This product is for household use only.

POLARIZED PLUG (120V Models Only)

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

TAMPER-RESISTANT SCREW

Warning: This appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel.

ELECTRICAL CORD

- a) A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- b) Longer extension cords are available and may be used if care is exercised in their use.
- c) If an extension cord is used,
 - 1) The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance,
 - 2) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord, and
 - 3) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

Note: If the power supply cord is damaged, it should be replaced by qualified personnel or in Latin America by an authorized service .

How to Use

This product is for household use only.

GETTING STARTED

- Remove packing materials, any stickers, and the plastic band around the power plug.
- Please register your product at www.prodprotect.com/applica
- Wash removable parts as instructed in CARE AND CLEANING.
- Open one-piece cover and pour fresh cold water up to 12 MAX mark.
- Place 8 -12 cup basket-style paper filter into removable filter basket. Place basket into filter basket holder.
- Close one-piece cover. Place carafe lid on the carafe.

- Place empty carafe on "Keep Hot" carafe plate.
- Plug cord into standard electrical outlet.
- Brew water through appliance without adding coffee grounds. This removes any dust or residue that may remain in the system during the manufacturing process.
- Discard water and paper filter.
- Turn off appliance, unplug and allow it to cool down.

SETTING THE CLOCK

1. Plug appliance into standard electrical outlet.
2. The digital clock display flashes 12:00.
3. To set the time: Press HOUR button until correct time appears on display. Small dot in top left corner of digital display indicates P.M.
4. Press MIN button to select minutes.

Note: If unit is unplugged or power is interrupted even momentarily, the time will need to be reset.

BREWING COFFEE

1. Open one-piece cover. Fill water reservoir with cold tap water. Use water markings on the side of reservoir as a guide. Do not fill with more than 12 cups of water.

Important: If too much water is added it will leak from the back of the coffeemaker.

2. Place basket-style paper filter into filter basket. Add ground coffee (we suggest 1 heaping tablespoon per cup). Place filter basket in place.
3. To close carafe lid, place lid with tab over arrow to right of the handle. Turn clockwise until tab is over the handle.

Note: Coffee may overflow if lid is not properly aligned.

4. Place empty carafe on carafe plate.
5. Plug cord into an outlet. Press ON/OFF button and brewing begins.
6. When coffee grounds are cool, carefully remove and discard used grounds and filter. Close one-piece cover. The coffeemaker will keep brewed coffee hot for 2 hours and then turn off automatically.
7. To turn off coffeemaker at any time press ON/OFF button.
8. Unplug appliance when not in use.

SNEAK-A-CUP™ FEATURE

Remove the carafe and brewing is paused. Carafe must be placed back on the carafe plate in 30 seconds to prevent overflow. Brewing begins again.

SETTING AUTO BREW TIME

1. Press PROG button. The AUTO light flashes several times. Digital clock displays 12:00.
2. Quickly press HOUR button then MIN button to select the time you would like automatic brewing to begin (for example, 7:15 A.M. Make sure the P.M. light is not on.)
3. Press PROG button again. Auto Brew time is set.
4. Press AUTO button, holding it down until the AUTO light stops flashing. The digital display changes to time of day.
5. To check preset auto time, press PROG button and preset auto time is displayed. The AUTO indicator light blinks until you press AUTO button.
6. To cancel Auto Brew function, press ON/OFF button twice. All lights turn off.

Care and Cleaning

This product contains no user serviceable parts. Refer service to qualified service personnel.

CLEANING

Important: Make sure your coffeemaker is unplugged and cool.

1. Remove filter basket. Discard used paper filter and coffee grounds.
2. Wash filter basket, carafe and lid in dishwasher (top-rack) or by hand in hot, soapy water.
3. Wipe outside of coffeemaker, control panel and carafe plate with a soft, damp cloth.
- Note:** Do not use abrasive cleansers or scouring pads. Never immerse the coffeemaker in water.
4. To clean the inside of the cover, open the cover and leave in the open position. Pull showerhead, wipe with a damp cloth then place under the guide and close the cover.

CLEANING WITH VINEGAR

Note: With regular use, minerals and hard water can clog your coffeemaker. A full cleaning with vinegar is recommended once a month.

1. Pour white vinegar into water reservoir up to the 6-cup mark on the water window. Add cold water up to the 10-cup mark.
2. Put a paper filter in filter basket and close cover. Set empty carafe on the carafe plate.
3. Turn on coffeemaker. Let half the cleaning mixture brew into carafe (until level is around 5). Turn off coffeemaker and let it soak for at least 15 minutes.
4. Turn on coffeemaker again and brew remaining cleaning mixture into carafe. Turn off coffeemaker; empty carafe and discard paper filter.
5. Fill reservoir with cold water to 11-cup line; replace carafe on carafe plate and then turn on coffeemaker for a complete brewing cycle to flush out remaining cleaning solution. You may want to repeat this step to completely eliminate the vinegar smell/taste.
6. Wash filter basket and carafe as instructed in CLEANING.

WARNING

RISK OF FIRE OR ELECTRIC SHOCK. DO NOT OPEN.

The lightning symbol refers to "dangerous voltage"; the exclamation symbol refers to maintenance instructions. See below.

Warning: To reduce the risk of fire or electric shock, do not remove the cover of the coffeemaker. There are no user-serviceable parts inside. Repair should be done by authorized service personnel only.

NEED HELP?

For service, repair or any questions regarding your appliance, call the appropriate 800 number in front of this sheet. Please **DO NOT** return the product to the place of purchase. Also, please **DO NOT** mail product back to manufacturer, nor bring it to a service center. You may also want to consult the website listed on the cover of this manual.

TWO-YEAR LIMITED WARRANTY

(Applies only in the United States and Canada)

What does it cover?

- Any defect in material or workmanship provided; however, Spectrum Brands, Inc.'s liability will not exceed the purchase price of product.

For how long?

- Two years from the date of original purchase with proof of such purchase.

What will we do to help you?

- Provide you with a reasonably similar replacement product that is either new or factory refurbished.

How do you get service?

- Save your receipt as proof of date of sale.

- Visit the online service website at www.prodprotect.com/applica, or call toll-free 1-800-231-9786, for general warranty service.

- If you need parts or accessories, please call 1-800-738-0245.

What does your warranty not cover?

- Damage from commercial use
- Damage from misuse, abuse or neglect
- Products that have been modified in any way
- Products used or serviced outside the country of purchase
- Glass parts and other accessory items that are packed with the unit
- Shipping and handling costs associated with the replacement of the unit
- Consequential or incidental damages (Please note, however, that some states do not allow the exclusion or limitation of consequential or incidental damages, so this limitation may not apply to you.)

How does state law relate to this warranty?

- This warranty gives you specific legal rights. You may also have other rights that vary from state to state or province to province.

975 W 120 V~ 60 Hz

Código de fecha / Date Code

Sello del Distribuidor:

Fecha de compra:

Modelo:

Comercializado por:
Rayovac de México S.A de C.V
Autopista México Querétaro
No 3069-C Oficina 004
Colonia San Andrés Atenco, Tlalnepantla
Estado de México, C.P. 54040
Mexico.

Tel: (55) 5831 – 7070

Servicio y Reparación
Art. 123 No. 95
Col. Centro, C.P. 06050
Deleg. Cuauhtemoc

Servicio al Consumidor,
Venta de Refacciones y Accesorios
01 800 714 2503

Importado por / Imported by:

RAYOVAC ARGENTINA S.R.L.
Humboldt 2495 Piso# 3
(C1425FUG) C.A.B.A. Argentina.
C.U.I.T No. 30-70706168-1

Importado por / Imported by:
Rayovac de México S.A de C.V
Autopista México Querétaro
No 3069-C Oficina 004
Colonia San Andrés Atenco, Tlalnepantla
Estado de México, C.P. 54040
Mexico.

Tel: (55) 5831-7070
Para atención de garantía marque:
01 (800) 714 2503

Importado por / Imported by:
Spectrumbrands
En Chile, Household Products Chile Ltda
Av. Del Valle 570, Ofic. 704
Ciudad Empresarial, Huechuraba
Santiago - Chile
Fono: (562) 2571 3700

Importado por / Imported by:
Spectrumbrands S.A.
Carrera 17 No.89-40
Bogotá, Colombia
Línea de atención al cliente: 018000510012

BLACK+DECKER and the BLACK+DECKER logo are trademarks of The Black & Decker Corporation and are used under license. All rights reserved.

BLACK+DECKER y el logo tipo BLACK+DECKER son marcas registradas de The Black & Decker Corporation y son utilizados bajo licencia. Todos los derechos reservados.

Made and Printed in People's Republic of China.

Fabricado e Impreso en la República Popular de China.

© 2015 The Black & Decker Corporation and Spectrum Brands, Inc.

T22-5002819
14111-00 E/S

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>