

10-cup
coffeemaker
owner's manual

SAVE THIS USE AND CARE BOOK



MGD300

Crown

 **BLACK & DECKER**®

Please call 1-800-231-9786 with questions.

IMPORTANT SAFEGUARDS

When using electrical appliances, in order to reduce the risk of fire, electric shock, and/or injury, basic safety precautions should always be followed, including the following:

PLEASE READ ALL INSTRUCTIONS.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, or injury, do not place cord, plug or Coffeemaker base in water or other liquid.
- **WARNING:** To reduce the risk of fire or electric shock, do not remove the bottom cover from the Coffeemaker. There are no user-serviceable parts inside. Repairs should be done by authorized personnel only.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug when Coffeemaker is not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the Coffeemaker.
- Do not operate Coffeemaker without water in the reservoir before brewing.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. If the product requires attention within the warranty period, call the toll-free number listed on the cover of this manual for information on examination, repair, or electrical or mechanical adjustment.
- To avoid an electrical overload, do not operate another high-wattage appliance on the same circuit with this Coffeemaker.
- The use of an accessory not approved for operation with this Coffeemaker may result in fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over the edge of table or counter, or come in contact with hot surfaces.
- Do not store anything directly on top of the appliance surface.
- Keep the lid on the serving carafe when in use.
- Do not place carafe on or near a hot gas or electric range top burner or in a heated oven.
- Use the "Keeps Hot" plate only. Do not heat the carafe on a range top or in a microwave oven.
- Do not set a hot carafe down on a wet or cold surface.
- Do not use the carafe if the glass is cracked or has a loose or weakened handle.
- Allow basket to cool before removing it from the Coffeemaker.
- Do not clean the carafe with cleansers, steel wool, or other abrasives.
- Do not use this Coffeemaker for anything other than its intended use.
- Do not pour liquid other than water or the cleaning solution specified in this manual into the water reservoir.

- Remember to place the carafe on the “Keeps Hot” plate before brewing and when using the automatic timer on clock models.
- Do not operate any electric appliance in the presence of explosive and/or flammable fumes.
- This product is intended for household use ONLY and not for commercial or industrial use. Use for anything other than intended will void the warranty.

SAVE THESE INSTRUCTIONS

POLARIZED PLUG

This appliance has a polarized plug—one blade is wider than the other. As a safety feature, this plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse it and try again. If it still does not fit, contact an electrician. **Do not attempt to defeat this safety feature.**

SOFT-GRIP HANDLES

NOTE: The rubberized handles are free of natural rubber and latex. They are safe for use by individuals allergic or sensitive to these materials.

TAMPER-RESISTANT SCREW

This appliance is equipped with a tamper-resistant screw to prevent removal of the bottom cover. To reduce the risk of fire or electric shock, **do not attempt to remove the bottom cover.** There are no user serviceable parts inside. Repair should be done only by authorized service personnel.

ELECTRICAL CORD

The cord length of this Coffeemaker was selected to reduce safety hazards that may occur with a longer cord. If more cord length is needed, an extension cord with a polarized plug may be used. It should be rated not less than 10 amperes, 120 Volts, and have Underwriters Laboratories listing. When using a longer cord, be sure it does not drape over a working area or dangle where it could be pulled on or tripped over. Handle cord carefully for longer life; avoid jerking or straining it at outlet and appliance connections.



 
WARNING

RISK OF FIRE OR ELECTRIC SHOCK. DO NOT OPEN.

The lightning symbol refers to “dangerous voltage;” the exclamation symbol refers to maintenance instructions. See below.

WARNING: To reduce the risk of fire or electric shock, do not remove the cover of the coffeemaker. There are no user-serviceable parts inside. Repair should be done by authorized service personnel only.

COFFEEMAKER PARTS

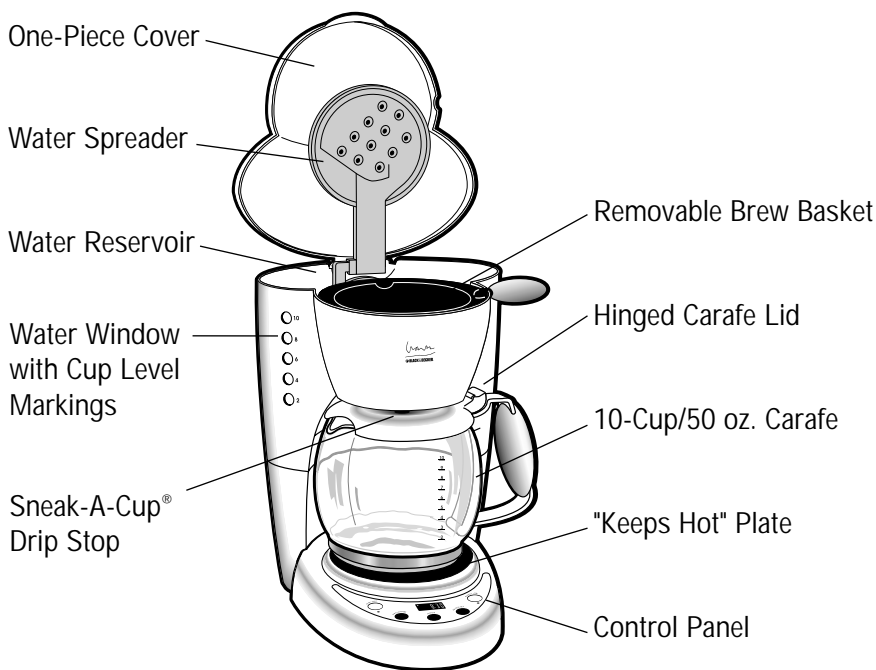

HOW TO USE

IMPORTANT: WASH CARAFE BEFORE FIRST USE!

1. Before first use, remove all stickers, packing material, and literature.
2. Wash the Carafe, Filter Basket, and Lid in hot, sudsy water—rinse thoroughly—or in a dishwasher, top rack.
3. Pour cold water up to the 8-cup level mark into the Water Reservoir and brew it through as instructed in BREWING COFFEE, but do not add coffee grounds. When done, turn the Coffeemaker off and discard the water from the Carafe.

BREWING COFFEE

1. Lift the one-piece Cover and use the Carafe to fill the Water Reservoir with cold water to your desired level (watch for the level in the Water Windows).
2. Place a paper filter into the Brew Basket, add coffee to the desired level (about one heaping tablespoon for every 2 cups—adjust to your taste) and close the Cover.
3. Sit the Carafe with its Lid on the "Keeps Hot" plate and plug the unit in.
4. Press "On/Off" and the light under it will come on. Or for delayed brewing, see "Setting the Clock Timer." You don't have to set the clock if you want to brew coffee right away.

5. Replace the Carafe on the "Keeps Hot" plate when not serving to keep coffee hot.
6. Press "On/Off" when done. The Coffeemaker will keep coffee warm for 2 hours before it shuts off automatically.

SNEAK-A-CUP®

 
The Sneak-a-Cup® Interrupt Feature lets you pour a cup of coffee before brewing is done. There is an automatic drip stop that lets you remove the Carafe to "sneak-a cup" without leaking from the Filter Basket.

NOTE: The Carafe must be replaced under the Filter Basket within one minute to prevent the Basket from overflowing.

SETTING THE CLOCK/TIMER & AUTO BREWING

When you plug in the unit, the clock will flash 12:00 a.m. until the correct time is set. The Coffeemaker will work without setting the clock.

1. To set the current time of day: press the HOUR button until you reach the correct hour. Watch for the little dot in the top left corner of the display that indicates "p.m." time. Press the MINUTES button to set the correct minutes. (A) Once set, the clock will continue to keep time unless the Coffeemaker is unplugged or there is a power failure. If not set, the clock will continue flashing 12:00 a.m.

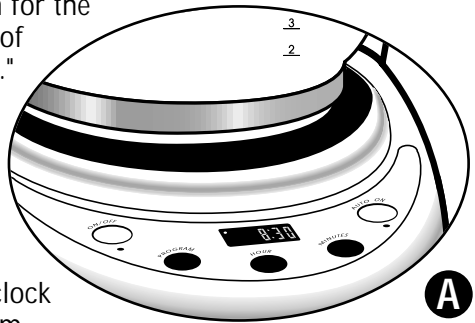

2. To set the auto on time: press the PROGRAM button and the light under the AUTO ON button will start flashing indicating it is being programmed. Press the HOUR, then MINUTES buttons to set the time you'd like coffee to automatically begin brewing (for example 7:15 a.m.). Watch for the "p.m." indicator dot at the top left of the digital display. When you're done, press the AUTO ON button. The AUTO ON light will stop flashing and remain on to show the timer is activated. Your AUTO ON time (7:15 a.m.) will be set.
3. Prepare the Coffeemaker for brewing as instructed in BREWING COFFEE.
4. To check your pre-set auto time, press PROGRAM and it will display with a light flashing under AUTO ON. When the light stops flashing, the clock will return to the current time of day. Press AUTO ON to reactivate the timer. To automatically brew coffee again at the same pre-set auto-on time the next day, prepare your Coffeemaker for brewing again and press the AUTO ON button.

Note: The auto-on function can be canceled at any time by pressing the AUTO ON button a second time. The AUTO ON light will go out.

 
CLEANING YOUR COFFEEMAKER

1. To clean your Coffeemaker, be sure the unit is OFF and cooled. Open the Cover, remove the Brew Basket, and discard the paper filter/grounds. Clean as follows:

Clean as follows:

- Filter Basket, Carafe, and Lid are all top rack dishwasher-safe; or they may be hand washed in hot, sudsy water.
- The Coffeemaker's exterior, Control Panel area and "Keeps Hot" plate may be cleaned with a soft damp cloth or sponge. Do not use abrasive cleansers or scouring pads. Never immerse the Coffeemaker in water.

2. To clean inside the Reservoir Cover, pull the Water Spreader down (B), wipe the surfaces with a damp cloth, and snap the Water Spreader back into place.

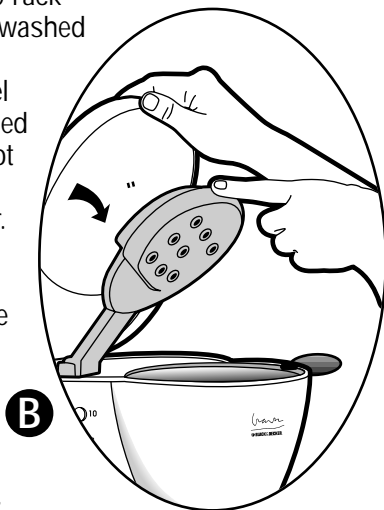

CARING FOR YOUR CARAFE

A damaged Carafe may result in possible burns from a hot liquid. To avoid breaking:

- Do not allow all liquid to evaporate from the Carafe while on the "Keeps Hot" plate or heat the Carafe when empty.
- Discard the Carafe if chipped, cracked, or damaged in any manner.
- Never use abrasive scouring pads or cleansers, they will scratch and weaken the glass.
- Do not place the Carafe on or near a gas or electric burner, in a heated oven, or in a microwave oven.
- Avoid rough handling and sharp blows.

NOTE: TO ORDER A REPLACEMENT OR ADDITIONAL CARAFE, CALL 1-800-258-6003.

MINERAL DEPOSITS AND CLOGGING

Mineral deposits left by hard water can clog your Coffeemaker. Excessive steaming or a prolonged brewing cycle are signs that a cleaning is needed. The frequency of flushing out deposits is affected by your usage and water hardness. During cleaning, more steaming occurs than when brewing coffee and there may be some spitting.

1. Pour white vinegar into the Water Reservoir up to the 4-cup level on the Water Window. Add cold water up to the 10-cup mark.
2. Put a paper filter in the Filter Basket and close the Cover. Set the empty Carafe on the "Keeps Hot" Plate.

3. Turn the Coffeemaker on and let half the cleaning solution brew into the Carafe (till water level goes down to around "2"). Turn the Coffeemaker off and let it soak for at least 15 minutes to soften the deposits.
4. Turn the Coffeemaker on and brew the remaining cleaning solution into the Carafe.
5. Turn the Coffeemaker off; empty the Carafe and discard the soiled filter.
6. Fill the Reservoir with cold water to the 10-cup line, replace the empty Carafe, then turn on the Coffeemaker for a complete brew cycle to flush out the remaining cleaning solution. You may have to repeat this to eliminate the vinegar smell/taste.
7. Wash the Filter Basket and Carafe as instructed in "Cleaning Your Coffeemaker."

SERVICE OR REPAIR

Need Help?

For service, repair, a replacement Carafe, or any questions regarding your appliance, call the "800" number on the cover of this book. Do NOT return the product to the place of purchase. Do NOT mail the product back to the manufacturer nor bring it to a service center. You may also want to consult the website listed on the cover of this manual.


FULL ONE-YEAR WARRANTY

Applica warrants this product against any defects that are due to faulty material or workmanship for a one-year period after the original date of consumer purchase. This warranty does not include damage to the product resulting from accident, misuse, or repairs performed by unauthorized personnel. If the product should become defective within the warranty period, or you have questions regarding warranty or service, call Consumer Assistance and Information toll free at: 1-800-231-9786.

 
This warranty gives you specific legal rights and you may also have other rights which vary from state to state.



Listed by Underwriters Laboratories, Inc.
Copyright © 2000 Applica Consumer Products, Inc.
Pub No. 175557-00-RV00
Printed in People's Republic of China

*  **BLACK&DECKER** is a trademark of The Black & Decker Corporation, Towson, Maryland, U.S.A.

10-cup coffeemaker

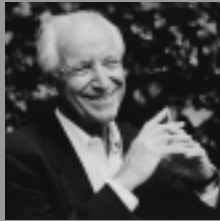

Michael Graves

The highly acclaimed work of designer Michael Graves has restored a sense of humanity to modern architecture. Graves, one of the most noted architects of our time, has designed buildings for such clients as Disney™ including the company's corporate headquarters and the Walt Disney™ World Swan and Dolphin Hotels. Gifted in design at every scale, Michael Graves has created products for the home that carry labels such as Alessi, FAO Schwarz, and Steuben. His work has been recognized with scores of awards, including the 1999 National Medal of Arts presented by the National Endowment for the Arts.

The Michael Graves Collection provides an inspired balance of form and function. Sensible and sublime, practical and whimsical, the objects envisioned by this world-renowned architect infuse our daily lives with joy.

A handwritten signature in white ink, appearing to read "Graves", with a horizontal line underneath it.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>